

Service Hints

O5, O6 Outer Rear View Mirror (LH, RH)

6—Ground : Approx. 12 volts with the rear window defogger SW on

2—Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A12	44 (LHD)	J28	55 (RHD)	R10	47 (LHD)
	54 (RHD)	O5	48 (LHD)		57 (RHD)
J3 A	45 (LHD)		58 (RHD)	R11	47 (LHD)
J16	45 (LHD)	O6	48 (LHD)		57 (RHD)
J27 B	55 (RHD)		58 (RHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
5	28	Fuse Block (Lower Finish Panel)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
DC	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DM	33	Floor Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	64 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
	74 (RHD)	
ID2	64 (LHD)	
	74 (RHD)	
IE2	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
	74 (RHD)	
IE3	64 (LHD)	
	74 (RHD)	
IK1	66 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
	76 (RHD)	
IK2	66 (LHD)	
	76 (RHD)	

▽ : Ground Points

Code	See Page	Ground Points Location
II	64 (LHD)	Left Kick Panel
	74 (RHD)	
IM	64 (LHD)	Right Kick Panel
	74 (RHD)	