

System Outline

Audio system display shows navigation. When the navigation system is ON, an arrow shows driving direction in regular drive. Close-up of intersection is displayed when approaching the intersection or turning point.

Service Hints

R5 (A) Radio Receiver Assembly

(A) 4-Ground : Always approx. 12 volts

(A) 3-Ground : Approx. 12 volts with the engine start/stop SW at ACC ON or IG ON position

(A) 7-Ground : Always continuity

N3 (A) Navigation ECU

(A) 5-Ground : Always approx. 12 volts

(A) 13-Ground : Approx. 12 volts with the engine start/stop SW at ACC ON or IG ON position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B1	50 (*3)	J23		S5	A 53 (*4)
	52 (*4)	N3	A		51 (*3)
C14	54 (RHD)	N4	B		53 (*4)
J11	55 (RHD)	R5	A	S28	59 (RHD)
J12	55 (RHD)	R8	D	T18	57 (RHD)
J17	A 55 (RHD)	R9	E		
J18	B 55 (RHD)	S5	A		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
5	28	Fuse Block (Lower Finish Panel)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CA	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CB		
CF		
CH	37 (RHD)	
CJ		
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DB		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA8	74 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
ID2	74 (RHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IJ1	76 (RHD)	Engine Wire and Instrument Panel Wire (Behind the Glove Box)

▽ : Ground Points

Code	See Page	Ground Points Location
IL	74 (RHD)	Instrument Panel Brace RH
IM	74 (RHD)	Right Kick Panel

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV