

## Service Hints

### HTR NO1 Relay

3—Ground : Always approx. 12 volts

2—Ground : Always continuity

### HTR NO2 Relay

3—Ground : Always approx. 12 volts

2—Ground : Always continuity

## ○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A8		42 (*2)		E4	A	45 (LHD)		J19	45 (LHD)		
A10		42 (*2)		E5	B	45 (LHD)		P8	46 (LHD)		
A11	B	44 (LHD)		E7	D	45 (LHD)		T13	47 (LHD)		
A12	A	44 (LHD)		I8		45 (LHD)		T16	47 (LHD)		
B7		44 (LHD)		J4		45 (LHD)		W1	43 (*2)		
B8		44 (LHD)		J13		45 (LHD)					
C14		44 (LHD)		J17		45 (LHD)					

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	Engine Room R/B No.3 (Left Side of the Suspension Tower)
5	28	Fuse Block (Lower Finish Panel)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CA	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
CF		
CH	37 (LHD)	
CJ		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EH1	62 (*2)	Engine Wire and Engine No.4 Wire (Near the Starter)
IA8	64 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Behind the Combination Meter)
IE2	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IJ2	66 (LHD)	Engine Wire and Instrument Panel Wire (Behind the Glove Box)

## ▽ : Ground Points

Code	See Page	Ground Points Location
EH	62 (*2)	Near the Starter
IM	64 (LHD)	Right Kick Panel

## ○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I9	66 (LHD)	Engine Wire			

\* 1 : LHD 1ZZ-FE, 3ZZ-FE   \* 2 : LHD 1CD-FTV   \* 3 : RHD 1ZZ-FE, 3ZZ-FE   \* 4 : RHD 1CD-FTV   \* 5 : 1ZZ-FE, 3ZZ-FE   \* 6 : 1CD-FTV