

Service Hints

P7 Power Point Socket

2-Ground : Approx. 12 volts with the engine start/stop SW at ACC ON or IG ON position

1-Ground : Always continuity

○ : Parts Location

Code		See Page	Code	See Page	Code	See Page
J3	A	45 (LHD)	P7	46 (LHD)		
J23	B	55 (RHD)		56 (RHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	30	R/B No.7 (Instrument Panel Center)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CJ	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DB		

▽ : Ground Points

Code	See Page	Ground Points Location
II	64 (LHD)	Left Kick Panel
	74 (RHD)	
IJ	64 (LHD)	Behind the Combination Meter
	74 (RHD)	
IM	64 (LHD)	Right Kick Panel
	74 (RHD)	