

Power Source

Service Hints

I8 Ignition Control ECU

- 12, 33—Ground : Always approx. 12 volts
- 11—Ground : Approx. 12 volts with the engine start/stop SW at ACC ON or IG ON position
- 34, 35—Ground : Approx. 12 volts with the engine start/stop SW at IG ON position
- 6—Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
E8	45 (LHD)	J8	B	J22	55 (RHD)
	55 (RHD)			J28	55 (RHD)
I8	45 (LHD)	J16		R10	47 (LHD)
	55 (RHD)				57 (RHD)
J7	45 (LHD)	J19			
	55 (RHD)				
		J21			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24 (*5)	Engine Room R/B No.1 (Engine Compartment Left)
	25 (*6)	
2	26	Engine Room R/B No.2 (Near the Radiator Fan)
3	26	Engine Room R/B No.3 (Left Side of the Suspension Tower)
4	27	Engine Room R/B No.4 (Left Side of the Suspension Tower)
5	28	Fuse Block (Lower Finish Panel)
6	29	R/B No.6 (Instrument Panel Center)
7	30	R/B No.7 (Instrument Panel Center)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24 (*5)	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment Left)
	25 (*6)	Engine Wire and Engine Room J/B No.1 (Engine Compartment Left)
1B	24 (*5)	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment Left)
	25 (*6)	Engine Wire and Engine Room J/B No.1 (Engine Compartment Left)
4A	27	Engine Room Main Wire and Engine Room J/B No.4 (Left Side of the Suspension Tower)
4B		
4C		
4D		
5A	28	Instrument Panel Wire and J/B No.5 (Lower Finish Panel)
CJ	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DF		
DH		
DM	33	Floor Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DN	33	Engine Room Main Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DP		

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EE1	62 (*2)	Engine Wire and Engine Room Main Wire (Left Side of the Suspension Tower)
	72 (*4)	
IA2	64 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Behind the Combination Meter)
	74 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
IA4	64 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Behind the Combination Meter)
IA5		
IA6		
IA9	74 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
IA10		
IE3	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
	74 (RHD)	

 : **Ground Points**

Code	See Page	Ground Points Location
ED	60 (*1)	Engine Compartment Left
	70 (*3)	
II	64 (LHD)	Left Kick Panel
	74 (RHD)	
IJ	64 (LHD)	Behind the Combination Meter
	74 (RHD)	
IM	64 (LHD)	Right Kick Panel
	74 (RHD)	

 : **Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I1	66 (LHD)	Instrument Panel Wire	I3	66 (LHD)	Instrument Panel Wire
	76 (RHD)			76 (RHD)	

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV