

## Service Hints

### O3 Outer Mirror SW

8—Ground : Approx. 12 volts with the engine start/stop SW at ACC ON or IG ON position

7—Ground : Always continuity

8—6 : Continuity with the operation SW at RIGHT or DOWN position

6—7 : Continuity with the operation SW at LEFT or UP position

### ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
J3	A	45 (LHD)	O3	56 (RHD)	O6
J23	B	55 (RHD)	O5	48 (LHD)	48 (LHD)
O3		46 (LHD)		58 (RHD)	58 (RHD)

### □ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CC	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CD	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CJ	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CK	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DB	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

### □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	64 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
	74 (RHD)	
IK1	66 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
	76 (RHD)	

### ▽ : Ground Points

Code	See Page	Ground Points Location
IM	64 (LHD)	Right Kick Panel
	74 (RHD)	