

System Outline

The system controls the radiator fan motor in two steps HIGH or LOW, according to the engine coolant temperature and A/C operation condition.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A2	42 (*2)	D4	45 (LHD)	R1	43 (*2)
	52 (*4)		55 (RHD)		53 (*4)
A11	B	E4	45 (LHD)	W2	43 (*2)
			55 (RHD)		53 (*4)
A12	A	J1	43 (*2)		
			53 (*4)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	25 (*6)	Engine Room R/B No.1 (Engine Compartment Left)
2	26	Engine Room R/B No.2 (Near the Radiator Fan)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	25 (*6)	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment Left)
DL	33	Engine Room Main Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	64 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Behind the Combination Meter)
	74 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
IA8	64 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Behind the Combination Meter)
	74 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
EB	62 (*2)	Engine Compartment Right
	72 (*4)	
EC	62 (*2)	Left Side of the Suspension Tower
	72 (*4)	

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	62 (*2)	Engine Room Main Wire	E4	72 (*4)	Engine Room Main Wire

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV