

Service Hints

RR FOG Relay

5-3 : Closed with the light control SW at TAIL or HEAD position and the fog light SW at REAR position

○ : Parts Location

Code	See Page	Code		See Page	Code		See Page
C14	44 (LHD)	J4		45 (LHD)	J30	B	48 (LHD)
	54 (RHD)			55 (RHD)			58 (RHD)
C15	44 (LHD)	J29	A	48 (LHD)	R13		49 (LHD)
	54 (RHD)			R14		59 (RHD)	

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	Engine Room R/B No.3 (Left Side of the Suspension Tower)
8	31	R/B No.8 (Instrument Panel Center)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
4B	27	Engine Room Main Wire and Engine Room J/B No.4 (Left Side of the Suspension Tower)
4D		
CF	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CJ	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DB		
DM	33	Floor Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DN	33	Engine Room Main Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EE1	62 (*2)	Engine Wire and Engine Room Main Wire (Left Side of the Suspension Tower)
	72 (*4)	
IE1	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
	74 (RHD)	

▽ : Ground Points

Code	See Page	Ground Points Location
IJ	64 (LHD)	Behind the Combination Meter
	74 (RHD)	
IM	64 (LHD)	Right Kick Panel
	74 (RHD)	
BO	68 (LHD)	Lower Back Panel Left
	78 (RHD)	

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV