

Service Hints

S11 Seat Heater SW

5→Ground : Approx. 12 volts with the engine start/stop SW at IG ON position

4→Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
J16	45 (LHD)	S11	47 (LHD)	S19	49 (LHD)
J21	45 (LHD)	S18	49 (LHD)		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	Engine Room R/B No.3 (Left Side of the Suspension Tower)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
4B	27	Engine Room Main Wire and Engine Room J/B No.4 (Left Side of the Suspension Tower)
4D		
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DM	33	Floor Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DN	33	Engine Room Main Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EE1	62 (*2)	Engine Wire and Engine Room Main Wire (Left Side of the Suspension Tower)
IE3	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IL1	66 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
II	64 (LHD)	Left Kick Panel
IJ	64 (LHD)	Behind the Combination Meter
BN	68 (LHD)	Left Center Pillar
BP	68 (LHD)	Right Center Pillar

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV