

Service Hints

S17 Stop Lamp SW

2-1 : Closed with the brake pedal depressed

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C19	48 (LHD)	J31	A	R14	49 (LHD)
	58 (RHD)				59 (RHD)
J29	48 (LHD)	J32	B	S17	47 (LHD)
	58 (RHD)				57 (RHD)
J30	48 (LHD)	R13			
	58 (RHD)				

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DM	33	Floor Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	64 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Behind the Combination Meter)
IO1	76 (RHD)	Instrument Panel Wire and Switch Wire (Right Side of the Instrument Panel)
BC2	68 (LHD)	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
	78 (RHD)	
BF1	68 (LHD)	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Left)
	78 (RHD)	

▽ : Ground Points

Code	See Page	Ground Points Location
BO	68 (LHD)	Lower Back Panel Left
	78 (RHD)	
BR	68 (LHD)	Right Side of the Back Door
	78 (RHD)	