

Service Hints

C15 Combination SW

14-16 : Closed with the light control SW at TAIL or HEAD position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C3	40 (*1)	J1	41 (*1)	J32	48 (LHD)
	42 (*2)		43 (*2)		58 (RHD)
	50 (*3)		51 (*3)	L1	48 (LHD)
	52 (*4)		53 (*4)		58 (RHD)
C4	40 (*1)	J4	45 (LHD)	L2	48 (LHD)
	42 (*2)		55 (RHD)		58 (RHD)
	50 (*3)	J29	48 (LHD)	R13	49 (LHD)
	52 (*4)		58 (RHD)		59 (RHD)
C14	44 (LHD)	J30	48 (LHD)	R14	49 (LHD)
	54 (RHD)		58 (RHD)		59 (RHD)
C15	44 (LHD)	J31	48 (LHD)		
	54 (RHD)		58 (RHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	Engine Room R/B No.3 (Left Side of the Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
4B	27	Engine Room Main Wire and Engine Room J/B No.4 (Left Side of the Suspension Tower)
4D		
CF	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CJ	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DB		
DL	33	Engine Room Main Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DM	33	Floor Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DN	33	Engine Room Main Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EE1	62 (*2)	Engine Wire and Engine Room Main Wire (Left Side of the Suspension Tower)
	72 (*4)	
IE1	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
	74 (RHD)	
BC2	68 (LHD)	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
	78 (RHD)	
BF1	68 (LHD)	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Left)
	78 (RHD)	
BG1	68 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)
	78 (RHD)	

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV



: Ground Points

Code	See Page	Ground Points Location
EB	60 (*1)	Engine Compartment Right
	62 (*2)	
	70 (*3)	
	72 (*4)	
ED	60 (*1)	Engine Compartment Left
	62 (*2)	
	70 (*3)	
	72 (*4)	
IJ	64 (LHD)	Behind the Combination Meter
	74 (RHD)	
IM	64 (LHD)	Right Kick Panel
	74 (RHD)	
BN	68 (LHD)	Left Center Pillar
	78 (RHD)	
BO	68 (LHD)	Lower Back Panel Left
	78 (RHD)	
BR	68 (LHD)	Right Side of the Back Door
	78 (RHD)	

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV