

Turn Signal and Hazard Warning Light

Service Hints

T17 Turn Signal Flasher

4-Ground : Always approx. 12 volts

1-Ground : Approx. 12 volts with the engine start/stop SW at IG ON position

7-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B8	44 (LHD)	J29	A	58 (RHD)	51 (*3)
	54 (RHD)	J30	B	48 (LHD)	53 (*4)
C14	44 (LHD)			58 (RHD)	41 (*1)
	54 (RHD)	R13		49 (LHD)	43 (*2)
C15	44 (LHD)			59 (RHD)	51 (*3)
	54 (RHD)	R14		49 (LHD)	53 (*4)
H10	45 (LHD)			59 (RHD)	41 (*1)
	55 (RHD)	T7		41 (*1)	43 (*2)
J3	A			43 (*2)	51 (*3)
J18	45 (LHD)			51 (*3)	53 (*4)
	55 (RHD)			53 (*4)	47 (LHD)
J23	B	T8		41 (*1)	57 (RHD)
J29	A			43 (*2)	

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24 (*5)	Engine Room R/B No.1 (Engine Compartment Left)
	25 (*6)	

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CA	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CB	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CC	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CF	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CJ	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CK	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DB		
DL	33	Engine Room Main Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DM	33	Floor Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	64 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Behind the Combination Meter)
IA9	74 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
IE2	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
	74 (RHD)	

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV

**: Ground Points**

Code	See Page	Ground Points Location
EA	60 (*1)	Engine Compartment Right
	62 (*2)	
	70 (*3)	
	72 (*4)	
EB	60 (*1)	
	62 (*2)	
	70 (*3)	
	72 (*4)	
EC	60 (*1)	Left Side of the Suspension Tower
	62 (*2)	
	70 (*3)	
	72 (*4)	
ED	60 (*1)	Engine Compartment Left
	62 (*2)	
	70 (*3)	
	72 (*4)	
IM	64 (LHD)	Right Kick Panel
	74 (RHD)	
BO	68 (LHD)	Lower Back Panel Left
	78 (RHD)	

**: Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	60 (*1)	Engine Room Main Wire	E4	60 (*1)	Engine Room Main Wire
	62 (*2)			62 (*2)	
	70 (*3)			70 (*3)	
	72 (*4)			72 (*4)	

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV