

J POWER SOURCE (Current Flow Chart)

Engine Room R/B No.1 (1ZZ-FE, 3ZZ-FE) (See Page 24)

Fuse		System	Page
7.5A	ALT-S	Charging	108
7.5A	AM2 NO.2	Cruise Control (1ZZ-FE, 3ZZ-FE)	216
		Engine Control (1ZZ-FE, 3ZZ-FE)	116
		Ignition	112
		Multi-mode Manual Transmission	208
		Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
10A	ETCS	Cruise Control (1ZZ-FE, 3ZZ-FE)	216
		Engine Control (1ZZ-FE, 3ZZ-FE)	116
10A	HAZARD	Turn Signal and Hazard Warning Light	170
15A	HORN	Horn	324
20A	EFI	Cruise Control (1ZZ-FE, 3ZZ-FE)	216
		Engine Control (1ZZ-FE, 3ZZ-FE)	116
20A	IG2	Engine Control (1ZZ-FE, 3ZZ-FE)	116
		Ignition	112
		Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
20A	STR LOCK	Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
30A	AM2 NO.1	Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
40A	HTR	Air Conditioner (Automatic A/C)	396
		Air Conditioner (Manual A/C)	404
		Heater	412
40A	RDI	Radiator Fan (1ZZ-FE, 3ZZ-FE)	382
50A	AMT	Multi-mode Manual Transmission	208
50A	MAIN	Headlight Cleaner	196
		Headlight (w/ Daytime Running Light)	152
		Headlight (w/o Daytime Running Light)	158

Engine Room R/B No.1 (1CD-FTV) (See Page 25)

Fuse		System	Page
7.5A	ALT-S	Charging	108
7.5A	AM2 NO.2	Cruise Control (1CD-FTV)	226
		Engine Control (1CD-FTV)	130

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
7.5A	AM2 NO.2	Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
10A	HAZARD	Turn Signal and Hazard Warning Light	170
15A	HORN	Horn	324
20A	EFI	Cruise Control (1CD-FTV)	226
		Engine Control (1CD-FTV)	130
20A	STR LOCK	Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
25A	ABS	ABS	246
25A	F-HTR	Fuel Heater	146
25A	VSC	VSC	236
30A	AM2 NO.1	Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
30A	CDS	Radiator Fan and Condenser Fan (1CD-FTV)	384
30A	H/CLN	Headlight Cleaner	196
40A	ABS	ABS	246
40A	HTR	Air Conditioner (Automatic A/C)	396
		Air Conditioner (Manual A/C)	404
		Heater	412
40A	RDI	Radiator Fan and Condenser Fan (1CD-FTV)	384
50A	MAIN	Headlight Cleaner	196
		Headlight (w/ Daytime Running Light)	152
		Headlight (w/o Daytime Running Light)	158
50A	VSC	VSC	236

Engine Room R/B No.2 (See Page 26)

Fuse		System	Page
10A	H-LP HI LH	Headlight (w/ Daytime Running Light)	152
		Headlight (w/o Daytime Running Light)	158
10A	H-LP HI RH	Combination Meter	374
		Headlight (w/ Daytime Running Light)	152
		Headlight (w/o Daytime Running Light)	158
15A	H-LP LH	Headlight (w/ Daytime Running Light)	152
		Headlight (w/o Daytime Running Light)	158
15A	H-LP RH	Headlight (w/ Daytime Running Light)	152
		Headlight (w/o Daytime Running Light)	158

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Engine Room R/B No.3 (See Page 26)

Fuse		System	Page
30A	RFGHTR	Power Heater (Hot Gas Type)	386
50A	HTR NO1	Power Heater (Electrical Type)	392
50A	HTR NO2	Power Heater (Electrical Type)	392
80A	GLOW	Engine Control (1CD-FTV)	130
140A	ALT	Charging	108
		Front Fog Light	162
		Headlight Beam Level Control	192
		Illumination	178
		Key Reminder and Light Reminder	198
		Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
		Rear Fog Light	164
		Seat Heater	340
		Taillight	166

Engine Room R/B No.4 (See Page 27)

Fuse		System	Page
7.5A	EFI NO.2	Engine Control (1ZZ-FE, 3ZZ-FE)	116
10A	EFI NO.1	Cruise Control (1ZZ-FE, 3ZZ-FE)	216
		Engine Control (1ZZ-FE, 3ZZ-FE)	116
25A	ABS	ABS	246
25A	VSC	VSC	236
30A	H-LP CLN	Headlight Cleaner	196
40A	ABS	ABS	246
50A	VSC	VSC	236
100A	ALT	Charging	108
		Front Fog Light	162
		Headlight Beam Level Control	192
		Illumination	178
		Key Reminder and Light Reminder	198
		Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
		Rear Fog Light	164
		Seat Heater	340
		Taillight	166

* These are the page numbers of the first page on which the related system is shown.

Fuse Block (See Page 28)

Fuse		System	Page
5A	MET	ABS	246
		Air Conditioner (Automatic A/C)	396
		Air Conditioner (Manual A/C)	404
		Audio System (w/ Navigation Map Type) and Navigation System (Map Type)	364
		Charging	108
		Combination Meter	374
		Cornering Assist Monitor	342
		Cruise Control (1CD-FTV)	226
		Cruise Control (1ZZ-FE, 3ZZ-FE)	216
		Double Locking	284
		Engine Control (1CD-FTV)	130
		Engine Control (1ZZ-FE, 3ZZ-FE)	116
		Illumination	178
		Interior Light	186
		Key Reminder and Light Reminder	198
		Multi-mode Manual Transmission	208
		Navigation System (Turn by Turn Type)	360
		Power Heater (Electrical Type)	392
		Power Heater (Hot Gas Type)	386
		Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
		Seat Belt Warning	204
		Sliding Roof	308
		SRS	253
		TOYOTA Parking Assist (Back Guide Monitor)	348
		TOYOTA Parking Assist (Clearance Sonar)	354
		VSC	236
7.5A	DEF I/UP	Engine Control (1ZZ-FE, 3ZZ-FE)	116
		Rear Window Defogger	332
7.5A	DOME	ABS	246
		Air Conditioner (Automatic A/C)	396
		Air Conditioner (Manual A/C)	404
		Audio System (w/ Navigation Map Type) and Navigation System (Map Type)	364
		Charging	108
		Combination Meter	374
		Cornering Assist Monitor	342
		Cruise Control (1CD-FTV)	226
		Cruise Control (1ZZ-FE, 3ZZ-FE)	216
		Double Locking	284
		Engine Control (1CD-FTV)	130

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
7.5A	DOME	Engine Control (1ZZ-FE, 3ZZ-FE)	116
		Illumination	178
		Interior Light	186
		Key Reminder and Light Reminder	198
		Multi-mode Manual Transmission	208
		Navigation System (Turn by Turn Type)	360
		Power Heater (Electrical Type)	392
		Power Heater (Hot Gas Type)	386
		Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
		Seat Belt Warning	204
		Sliding Roof	308
		SRS	253
		TOYOTA Parking Assist (Back Guide Monitor)	348
		TOYOTA Parking Assist (Clearance Sonar)	354
		VSC	236
7.5A	ECU-B NO.1	Multi-mode Manual Transmission	208
7.5A	ECU-B NO.2	Air Conditioner (Automatic A/C)	396
		Air Conditioner (Manual A/C)	404
		Back Door Opener	292
		Door Lock Control (LHD)	260
		Door Lock Control (RHD)	266
		Double Locking	284
		Headlight Cleaner	196
		Headlight (w/ Daytime Running Light)	152
		Heater	412
		Interior Light	186
		Key Reminder and Light Reminder	198
		Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
		TOYOTA Parking Assist (Back Guide Monitor)	348
		Wireless Door Lock Control (LHD)	272
		Wireless Door Lock Control (RHD)	278
10A	A/C	Air Conditioner (Manual A/C)	404
		Power Heater (Hot Gas Type)	386
10A	MIR HTR	Mirror Heater	336
15A	RAD NO.2	Audio System (w/ Navigation Map Type) and Navigation System (Map Type)	364
		Audio System (w/o Navigation Map Type)	370
		Cornering Assist Monitor	342

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
15A	RAD NO.2	Navigation System (Turn by Turn Type)	360
		TOYOTA Parking Assist (Back Guide Monitor)	348
20A	FL P/W	Power Window (LHD)	296
		Power Window (RHD)	302
20A	FR P/W	Power Window (LHD)	296
		Power Window (RHD)	302
20A	RL P/W	Power Window (LHD)	296
		Power Window (RHD)	302
20A	RR P/W	Power Window (LHD)	296
		Power Window (RHD)	302
25A	ACC	Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98

Instrument Panel J/B (See Page 32)

Fuse		System	Page
7.5A	AM1 NO.2	Cruise Control (1CD-FTV)	226
		Cruise Control (1ZZ-FE, 3ZZ-FE)	216
		Engine Control (1CD-FTV)	130
		Engine Control (1ZZ-FE, 3ZZ-FE)	116
		Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
7.5A	ECU-IG	ABS	246
		Charging	108
		Fuel Heater	146
		Radiator Fan and Condenser Fan (1CD-FTV)	384
		Radiator Fan (1ZZ-FE, 3ZZ-FE)	382
		VSC	236
7.5A	GAUGE NO.2	Audio System (w/ Navigation Map Type) and Navigation System (Map Type)	364
		Back-Up Light	176
		Cornering Assist Monitor	342
		Multi-mode Manual Transmission	208
		Navigation System (Turn by Turn Type)	360
		TOYOTA Parking Assist (Back Guide Monitor)	348
		TOYOTA Parking Assist (Clearance Sonar)	354
		Turn Signal and Hazard Warning Light	170
7.5A	OBD2	Engine Control (1CD-FTV)	130
		Engine Control (1ZZ-FE, 3ZZ-FE)	116
7.5A	PANEL	Air Conditioner (Manual A/C)	404
		Back Door Opener	292
		Front Fog Light	162

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
7.5A	PANEL	Illumination	178
		Interior Light	186
		Key Reminder and Light Reminder	198
		TOYOTA Parking Assist (Clearance Sonar)	354
7.5A	RAD NO.1	Audio System (w/ Navigation Map Type) and Navigation System (Map Type)	364
		Audio System (w/o Navigation Map Type)	370
		Cornering Assist Monitor	342
		Headlight (w/ Daytime Running Light)	152
		Navigation System (Turn by Turn Type)	360
		Power Outlet	330
		Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
		Remote Control Mirror	338
		TOYOTA Parking Assist (Back Guide Monitor)	348
7.5A	RR FOG	Rear Fog Light	164
10A	GAUGE NO.1	ABS	246
		Automatic Glare-Resistant EC Mirror	326
		Back Door Opener	292
		Cornering Assist Monitor	342
		Cruise Control (1CD-FTV)	226
		Cruise Control (1ZZ-FE, 3ZZ-FE)	216
		Headlight Cleaner	196
		Headlight (w/ Daytime Running Light)	152
		Interior Light	186
		Key Reminder and Light Reminder	198
		Mirror Heater	336
		Power Window (LHD)	296
		Power Window (RHD)	302
		Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
		Rear Window Defogger	332
		Seat Belt Warning	204
		Sliding Roof	308
		SRS	253
		TOYOTA Parking Assist (Back Guide Monitor)	348
		TOYOTA Parking Assist (Clearance Sonar)	354
		VSC	236
10A	HTR	Air Conditioner (Automatic A/C)	396
		Air Conditioner (Manual A/C)	404
		Heater	412

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
10A	HTR	Power Heater (Hot Gas Type)	386
		Seat Heater	340
10A	IGN	Cruise Control (1CD–FTV)	226
		Cruise Control (1ZZ–FE, 3ZZ–FE)	216
		Engine Control (1CD–FTV)	130
		Engine Control (1ZZ–FE, 3ZZ–FE)	116
		Multi–mode Manual Transmission	208
		Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
		Seat Belt Warning	204
10A	TAIL	SRS	253
		Combination Meter	374
		Engine Control (1ZZ–FE, 3ZZ–FE)	116
		Headlight Beam Level Control	192
		Key Reminder and Light Reminder	198
		Rear Fog Light	164
15A	CIG	Taillight	166
		Cigarette Lighter	328
15A	FR FOG	Front Fog Light	162
15A	P/POINT	Power Outlet	330
15A	STOP	ABS	246
		Cruise Control (1CD–FTV)	226
		Cruise Control (1ZZ–FE, 3ZZ–FE)	216
		Engine Control (1CD–FTV)	130
		Engine Control (1ZZ–FE, 3ZZ–FE)	116
		Multi–mode Manual Transmission	208
		Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
20A	RR WIP	Stop Light	174
		VSC	236
20A	S–HTR	Rear Wiper and Washer	320
20A	S/HTR	Seat Heater	340
20A	S/ROOF	Sliding Roof	308
25A	DOOR	Back Door Opener	292
		Door Lock Control (LHD)	260
		Door Lock Control (RHD)	266
		Double Locking	284
		Headlight (w/ Daytime Running Light)	152
		Interior Light	186
		Key Reminder and Light Reminder	198

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
25A	DOOR	Push Button Start System (LHD) and Engine Immobilizer System (LHD) and Steering Lock System (LHD)	88
		Push Button Start System (RHD) and Engine Immobilizer System (RHD) and Steering Lock System (RHD)	98
		Wireless Door Lock Control (LHD)	272
		Wireless Door Lock Control (RHD)	278
25A	WIP	Front Wiper and Washer (w/ Auto Wiper System)	312
		Front Wiper and Washer (w/o Auto Wiper System)	316
		Headlight Cleaner	196
30A	RR DEF	Mirror Heater	336
		Rear Window Defogger	332

* These are the page numbers of the first page on which the related system is shown.