

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Compressor	90980-11156	C 7	Crankshaft Position Sensor (1CD-FTV)	90980-12028
A 2	A/C Condenser Fan Motor	90980-10928		Crankshaft Position Sensor (1ZZ-FE, 3ZZ-FE)	90980-10947
A 3	A/C Magnetic Valve	90980-11003	C 8	Cigarette Lighter	90080-98182
A 4	A/C Pressure Sensor	90980-10845	C 9	Cigarette Lighter Illumination	90080-98112
A 5	Air Flow Meter	90980-11317	C10	Circuit Opening Relay	82660-05010
A 6	Airbag Sensor (Front LH)	90980-11856	C11	Clearance Warning Buzzer	90980-12341
A 7	Airbag Sensor (Front RH)		C12	Clearance Warning ECU	90980-12153
A 8	Alternator	90980-11964	C13	Clutch Start SW	90980-10825
A 9	Alternator (1CD-FTV)	90980-09213	C14	Combination Meter	90980-12169
	Alternator (1ZZ-FE, 3ZZ-FE)	90980-09212	C15	Combination SW	90980-11672
A10	Ambient Temp. Sensor	90980-11030	C16	Combination SW	90980-11594
A11	A/C Amplifier	90980-12200	C17	Cornering Assist Monitor Main SW	90980-10996
A12	A/C Control Assembly	90980-12259	C18	Cruise Control Clutch SW (LHD)	90980-11299
A13	A/C Control Assembly	90980-12200		Cruise Control Clutch SW (RHD)	90980-10825
A14	A/C Room Temp. Sensor	90980-11918	C19	Center Stop Lamp	90980-11148
A15	A/C Solar Sensor		C20	Curtain Shield Airbag Squib (LH)	90980-12242
A16	A/C SW	90980-10631	C21	Curtain Shield Airbag Squib (RH)	
A17	A/C Thermistor No.1	90980-11918	D 1	Damper Servo Motor (Air Inlet)	90980-11987
A18	Accelerator Position Sensor	90980-11144	D 2	Damper Servo Motor (Air Mix)	90980-11909
A19	Air Inlet Control SW	90980-12113	D 3	Damper Servo Motor (Air Vent Mode)	
A20	Airbag Cut Off SW	90980-12063	D 4	Diode (Fan) (1CD-FTV)	90980-11071
A21	Airbag Sensor Assembly Center	82824-50160		Diode (Fan) (1ZZ-FE, 3ZZ-FE)	90980-11608
A22	Airbag Sensor Assembly Center	90980-11872	D 5	DLC3	90980-11978
A23	Airbag Sensor Assembly Center	82824-50150	D 6	Door Control Receiver	90980-12366
A24	Airbag Squib (Front Passenger's Airbag Assembly)	90980-12224	D 7	Door Courtesy SW (Driver's Side)	90980-10871
A25	Airbag Squib (Front Passenger's Airbag Assembly)	90980-12219	D 8	Door Courtesy SW (Front Passenger's Side)	
A26	Airbag Squib (Steering Wheel Pad)	90980-12160	D 9	Door Courtesy SW (Rear LH)	
A27	Antenna Amplifier	90980-11097	D10	Door Courtesy SW (Rear RH)	
B 1	Back-Up Lamp SW	90980-11250	D11	Door Lock Assembly (Driver's Side)	90980-12226
B 2	Brake Fluid Level Warning SW	90080-98001	D12	Door Lock Assembly (Front Passenger's Side)	
B 3	Brake Vacuum Warning SW	90980-11252	D13	Door Lock Assembly (Rear LH)	
B 4	Blower Motor	90980-10214	D14	Door Lock Assembly (Rear RH)	
B 5	Blower Motor Control	90980-11676	E 1	EGR Valve Control Motor	90980-11144
B 6	Blower Resistor	90980-11136	E 2	Engine Oil Level Sensor	90980-11235
B 7	Blower SW	90980-11279	E 3	Engine Oil Pressure SW	90980-11363
B 8	Body ECU	90980-11915	E 4	Engine ECU	90980-12142
B 9	Back Door Lock Assembly	90980-10795	E 5	Engine ECU	90980-12146
B10	Back Door Opener SW	90980-11967	E 6	Engine ECU	90980-12145
C 1	Camshaft Position Sensor	90980-10947	E 7	Engine ECU	90980-12144
C 2	Camshaft Timing Oil Control Valve	90980-11162	E 8	Engine Start/Stop SW	90980-11989
C 3	Clearance Lamp (Front LH)	90980-11156	F 1	Fog Lamp (Front LH)	90980-11096
C 4	Clearance Lamp (Front RH)		F 2	Fog Lamp (Front RH)	
C 5	Clutch Actuator	90980-11410	F 3	Fuel Heater	90980-10928
C 6	Clutch Stroke Sensor	90980-12303			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
F 4	Fuel Injector (No.1)	90980-11875	J 9	Junction Connector	90980-12339
F 5	Fuel Injector (No.2)		J10	Junction Connector	
F 6	Fuel Injector (No.3)		J11	Junction Connector	
F 7	Fuel Injector (No.4)		J12	Junction Connector	
F 8	Fuel Pressure Sensor	90980-11194	J13	Junction Connector	90980-12346
F 9	Fuel Sedimentary Level Warning SW	90980-11002	J14	Junction Connector	90980-10976
F10	Fuel Temp. Sensor	90980-10737	J15	Junction Connector	90980-11915
F11	Front Seat Inner Belt (Driver's Side)	90980-10942	J16	Junction Connector	90980-12346
F12	Front Seat Inner Belt (Front Passenger's Side)	90980-11918	J17	Junction Connector	90980-12339
F13	Front Seat Outer Belt (LH)	90980-12253	J18	Junction Connector	
F14	Front Seat Outer Belt (RH)		J19	Junction Connector	90980-11915
F15	Fuel Sender Gage	90980-11077	J20	Junction Connector	90980-12346
F16	Fuel Suction Pump and Gage Assembly		J21	Junction Connector	
G 1	Glow Plug	99141-13006	J22	Junction Connector	90980-10799
G 2	Glow Plug Relay	90980-11569	J23	Junction Connector	90980-11915
G 3	Glove Box Lamp	90980-11098	J24	Junction Connector	90980-12346
H 1	Headlamp Cleaner Control Relay	90980-10939	J25	Junction Connector	90980-12339
H 2	Headlamp Cleaner Motor	90080-98116	J26	Junction Connector	
H 3	Headlamp (LH High)	90980-11659	J27	Junction Connector	90980-10803
H 4	Headlamp (LH Low)	90980-11096	J28	Junction Connector	90980-10799
H 5	Headlamp (RH High)	90980-11659	J29	Junction Connector	90980-11661
H 6	Headlamp (RH Low)	90980-11096	J30	Junction Connector	
H 7	Headlamp Leveling Motor (LH)	90980-11016	J31	Junction Connector	
H 8	Headlamp Leveling Motor (RH)		J32	Junction Connector	
H 9	Horn	90980-10619	K 1	Knock Control Sensor	90980-11875
H10	Hazard Warning Signal SW Assembly	90980-11911	K 2	Key Slot	90980-12366
H11	Hazard Warning Signal SW Assembly	90980-12063	K 3	Key Slot	90980-12092
H12	Headlamp Cleaner SW	90980-10601	K 4	Kick Down SW	90980-11156
H13	Headlamp Leveling SW	90980-10789	K 5	Knee Airbag Squib	90980-12253
I 1	Ignition Coil (No.1)	90980-11885	L 1	License Plate Lamp (LH)	90980-11148
I 2	Ignition Coil (No.2)		L 2	License Plate Lamp (RH)	
I 3	Ignition Coil (No.3)		M 1	Multi-mode Manual Transmission ECU	90980-12146
I 4	Ignition Coil (No.4)		M 2	Multi-mode Manual Transmission ECU	90980-12145
I 5	Injector Driver (EDU)	90980-11592	M 3	Multi-mode Manual Transmission ECU	90980-11362
I 6	Injector Driver (EDU)	90980-11593	M 4	Map Lamp	90980-11950
I 7	Inlet Air Temp. Sensor	90980-11025	N 1	Neutral Start SW	90980-11025
I 8	Ignition Control ECU	90980-12388	N 2	Noise Filter (Ignition)	90980-10843
I 9	Inner Rear View Mirror	90980-11794	N 3	Navigation ECU	82824-52070
J 1	Junction Connector	90980-10803	N 4	Navigation ECU	90980-10799
J 2	Junction Connector		N 5	Navigation Receiver Assembly	90980-10997
J 3	Junction Connector	90980-11915	N 6	Navigation Receiver Assembly	90980-10996
J 4	Junction Connector		N 7	Navigation Receiver Assembly	90980-12259
J 5	Junction Connector	90980-11661	N 8	Navigation Receiver Assembly	90980-11909
J 6	Junction Connector	90980-12339	N 9	Navigation Receiver Assembly	90980-11923
J 7	Junction Connector	90980-11742	N10	Noise Filter (Rear Window Defogger No.1)	90980-10825
J 8	Junction Connector		N11	Noise Filter (Rear Window Defogger No.2)	

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
O 1	Oil Pressure Sensor	90080-98200	S 6	Speed Sensor (Front LH)	90980-11003
O 2	Oxygen Sensor (Bank 1 Sensor 1)	90980-10869	S 7	Speed Sensor (Front RH)	
O 3	Outer Mirror SW	90980-11657	S 8	Starter (1CD-FTV)	90980-09507
O 4	Oxygen Sensor (Bank 1 Sensor 2)	90980-10794		Starter (1ZZ-FE, 3ZZ-FE)	90980-09463
O 5	Outer Rear View Mirror (LH)	90980-11452	S 9	Starter	90980-11400
O 6	Outer Rear View Mirror (RH)		S10	Suction Control Valve	90980-11285
P 1	Power Steering Oil Pressure SW	90980-11428	S11	Seat Heater SW	90980-12344
P 2	Pressure Discharge Valve	90980-11285	S12	Shift Lever Position Sensor	90980-11911
P 3	Parking Brake SW	90980-12340	S13	Spiral Cable	90980-12183
P 4	Parking Brake SW Resistor	90980-11608	S14	Steering Lock Actuator	90980-10799
P 5	Pattern Select SW	90980-11471	S15	Steering Sensor (Back Guide Monitor)	90980-12162
P 6	Power Heater SW	90980-10996	S16	Steering Sensor (VSC)	90080-98241
P 7	Power Point Socket	90080-98182	S17	Stop Lamp SW	90980-11118
P 8	PTC Heater	90980-11685	S18	Seat Heater (LH)	82824-12260
P 9	Power Window Master SW	90980-12200	S19	Seat Heater (RH)	
P10	Power Window Regulator Motor (Front LH)	90980-12349	S20	Side Airbag Sensor (LH)	90980-12225
P11	Power Window Regulator Motor (Front RH)		S21	Side Airbag Sensor (Rear LH)	90980-12352
P12	Power Window Regulator Motor (Rear LH)	90980-12344	S22	Side Airbag Sensor (Rear RH)	
P13	Power Window Regulator Motor (Rear RH)		S23	Side Airbag Sensor (RH)	90980-12225
P14	Power Window SW (Front Passenger's Side)	90980-12113	S24	Side Airbag Squib (LH)	90980-11864
P15	Power Window SW (Rear LH)		S25	Side Airbag Squib (RH)	
P16	Power Window SW (Rear RH)		S26	Sliding Roof Control ECU	82824-05030
			S27	Sliding Roof SW	90980-10795
R 1	Radiator Fan Motor	90980-10928	S28	Speaker (Front Door LH)	90980-10935
R 2	Radiator Fan Resistor		S29	Speaker (Front Door RH)	
R 3	Rear Washer Motor	90080-98117	S30	Speaker (Rear Door LH)	
R 4	Refrigerant Heater	90980-11288	S31	Speaker (Rear Door RH)	
R 5	Radio Receiver Assembly	90980-10997	S32	Speed Sensor (Rear LH)	90980-11060
R 6	Radio Receiver Assembly	90980-10996	S33	Speed Sensor (Rear RH)	
R 7	Radio Receiver Assembly	90980-12259	T 1	Television Camera (Front)	90980-10941
R 8	Radio Receiver Assembly	90980-12221	T 2	Throttle Body Assembly	90980-11858
R 9	Radio Receiver Assembly	90980-12183	T 3	Throttle Control Motor	90980-11144
R10	Rear Window Defogger Relay	82660-05020	T 4	Throttle Position SW	90980-11038
R11	Rear Window Defogger SW	90980-10789	T 5	Transmission Revolution Sensor	90980-11075
R12	Rain Sensor	90080-98309	T 6	Turbo Pressure Sensor	90980-10845
R13	Rear Combination Lamp (LH)	90980-10964	T 7	Turn Signal Lamp (Front LH)	90980-11019
R14	Rear Combination Lamp (RH)		T 8	Turn Signal Lamp (Front RH)	
R15	Rear Window Defogger	90980-11258	T 9	Turn Signal Lamp (Front Side LH)	90980-11162
R16	Rear Wiper Motor Assembly	90980-10908	T10	Turn Signal Lamp (Front Side RH)	
R17	Room Lamp (Center)		T11	Television Camera Controller	90980-12169
R18	Room Lamp (Luggage)	90980-11148	T12	Television Camera Controller	90980-10997
S 1	Select Actuator	90980-11410	T13	Temp. Control SW (Max Hot)	90980-12341
S 2	Select Stroke Sensor	90980-12303	T14	Traction Control SW	90980-10801
S 3	Shift Actuator	90980-11410	T15	Transmission Shift Main SW	90980-12221
S 4	Shift Stroke Sensor	90980-12303	T16	Transponder Key ECU	90980-12404
S 5	Skid Control ECU with Actuator (w/ VSC)	90080-98278	T17	Turn Signal Flasher	90980-10799
	Skid Control ECU with Actuator (w/o VSC)	90980-WB001			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
T18	Tweeter (LH)	90980-12304	V 4	Vanity Lamp (LH)	90980-11918
T19	Tweeter (RH)		V 5	Vanity Lamp (RH)	
T20	Television Camera (Rear)	90980-12211	W 1	Water Temp. Sensor	90980-10737
U 1	Ultrasonic Sensor No.1 (Front LH)	90980-11246	W 2	Water Temp. SW	90980-11235
U 2	Ultrasonic Sensor No.1 (Front RH)		W 3	Windshield Washer Motor	90080-98117
U 3	Ultrasonic Sensor No.1 (Rear LH)		W 4	Windshield Wiper Motor	90980-11599
U 4	Ultrasonic Sensor No.1 (Rear RH)		W 5	Windshield Wiper Relay	90080-98318
U 5	Ultrasonic Sensor No.2 (LH)		Y 1	Yaw Rate Sensor	90080-98249
U 6	Ultrasonic Sensor No.2 (RH)		Z 1	Option Connector (Engine Hood Courtesy SW)	90980-11051
V 1	VRV (EGR)	90980-11162	Z 2	Option Connector (TVSS ECU)	90980-10802
V 2	VSV (EVAP)	90980-11156	Z 3	Option Connector (TVSS Siren)	90980-11349
V 3	VSC Warning Buzzer	90980-10906			