

20 COROLLA VERSO

Power Source	Horn	Fuel Heater	
1	2	3	4

* 1: 1ZZ-FE, 3ZZ-FE
* 2: 1CD-FTV

The diagram illustrates the electrical system for the 20 Corolla Verso, divided into three main sections: Power Source, Horn, and Fuel Heater. The Power Source section (1) includes the battery, main fuse (FL MAIN 3.0W), and various relays and switches (SSW1, SSW2, AM1, IG1D, 140A ALT, 25A F-HTR, 15A HORN, 7.5A ECU-IG, 7.5A AM1 NO.2, IG1 Relay, 4B, 4A, 1A). The Horn section (2) shows the horn relay, horn switch (Horn SW), and horn (H 9 Horn). The Fuel Heater section (3) includes the fuel heater (F3), fuel heater relay (F-HTR), and fuel heater switch (F-HTR). The diagram also shows the location of the engine compartment left (ED) and near the starter (EH) components. The diagram is labeled with various wire colors and terminals, and includes a legend for the engine types (1ZZ-FE, 3ZZ-FE) and the transmission type (1CD-FTV).

