



- B 1 Air Flow Meter
- B 2 VSV (Purge)
- B 3 Throttle Body Assembly
- B 4 Water Temp. Sensor
- B 5 Engine Oil Pressure SW
- B 6 Camshaft Position Sensor
- B 7 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 8 Noise Filter (Ignition)
- B 9 Ignition Coil (No.4)
- B 10 Ignition Coil (No.3)
- B 11 Ignition Coil (No.2)
- B 12 Ignition Coil (No.1)
- B 13 Fuel Injector (No.4)
- B 14 Fuel Injector (No.3)
- B 15 Fuel Injector (No.2)
- B 16 Fuel Injector (No.1)
- B 17 Camshaft Timing Oil Control Valve
- B 18 Knock Control Sensor (Bank 1)
- B 19 Heated Oxygen Sensor (Bank 1 Sensor 2)
- B 20 Alternator
- B 21 Alternator
- B 22 Crankshaft Position Sensor
- B 23 A/C Compressor
- B 24 Transmission Revolution Sensor (Counter Gear)
- B 25 Back-Up Light SW
- B 26 Starter
- B 28 Park/Neutral Position SW
- B 29 ECT Solenoid
- B 30 Transmission Revolution Sensor (Turbine)
- B 31 Battery Current Sensor
- B 32 Engine ECU

- C 1 Starter

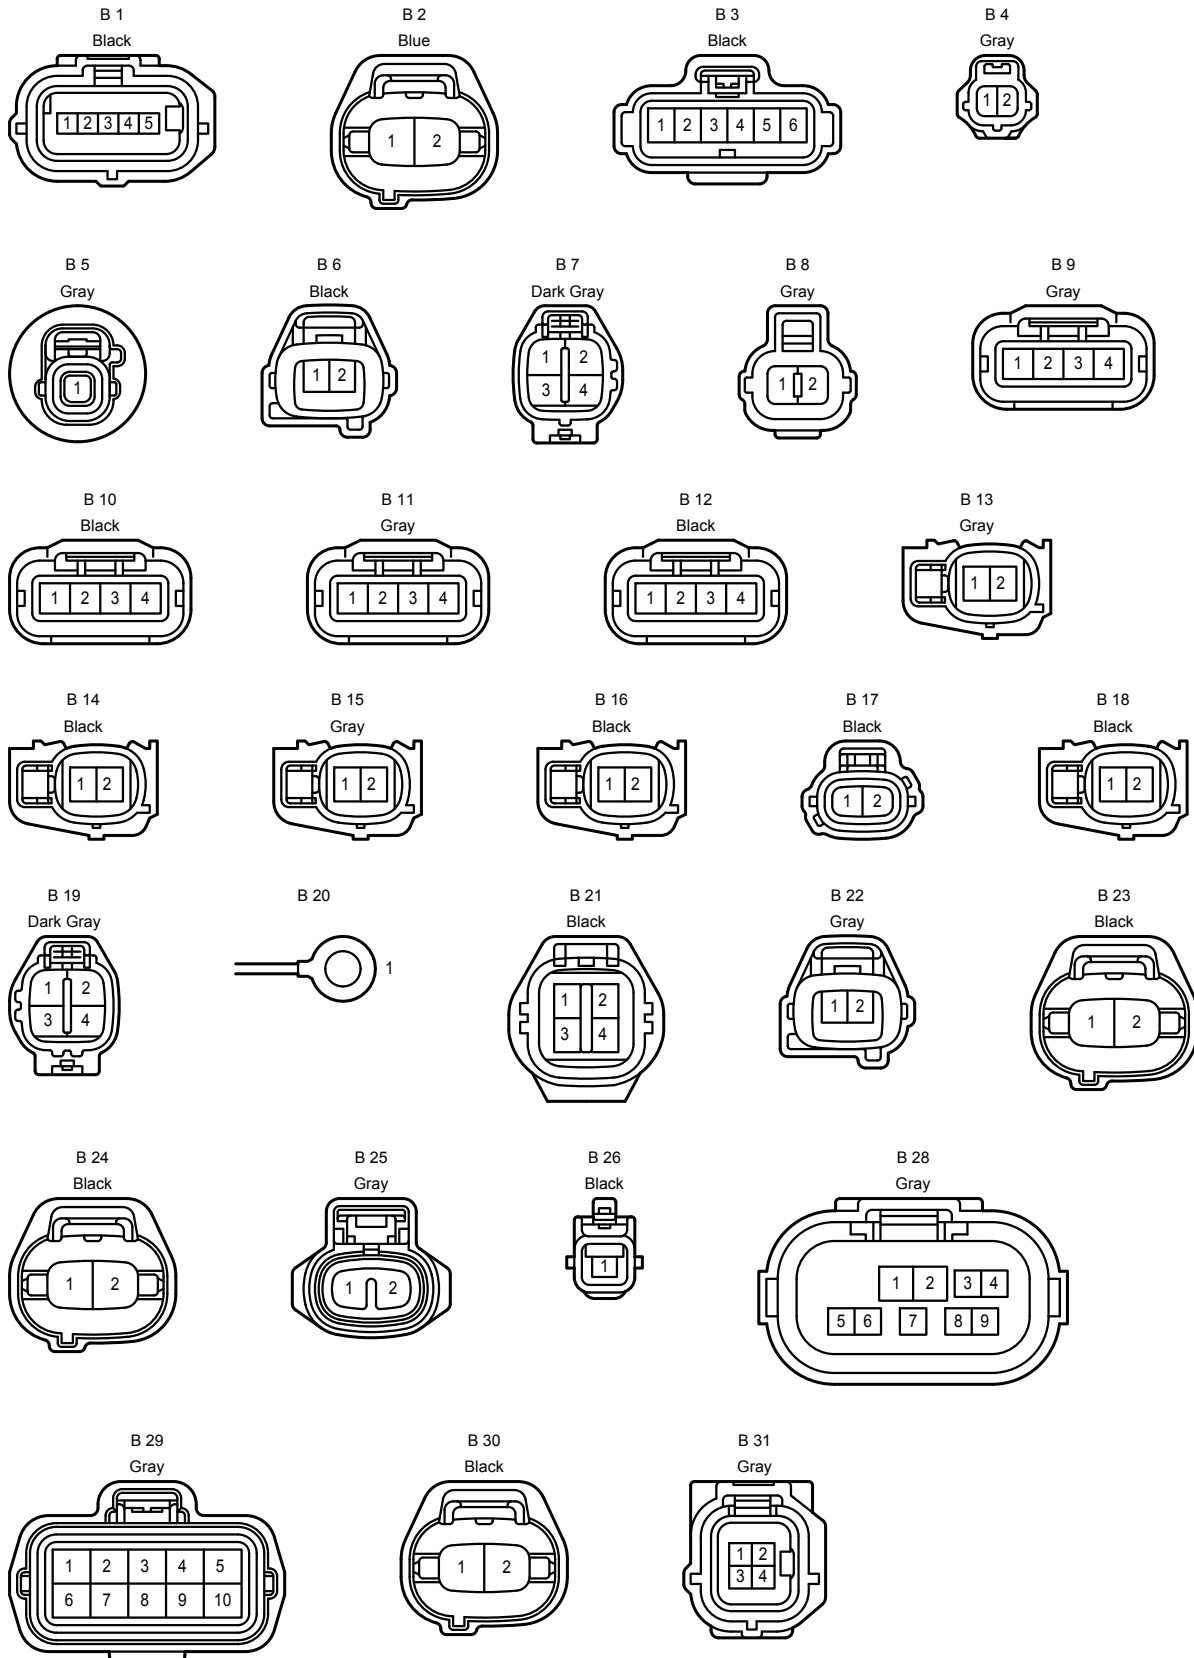

Position of Parts in Engine Compartment <RHD 2AZ-FE, 1AZ-FE>

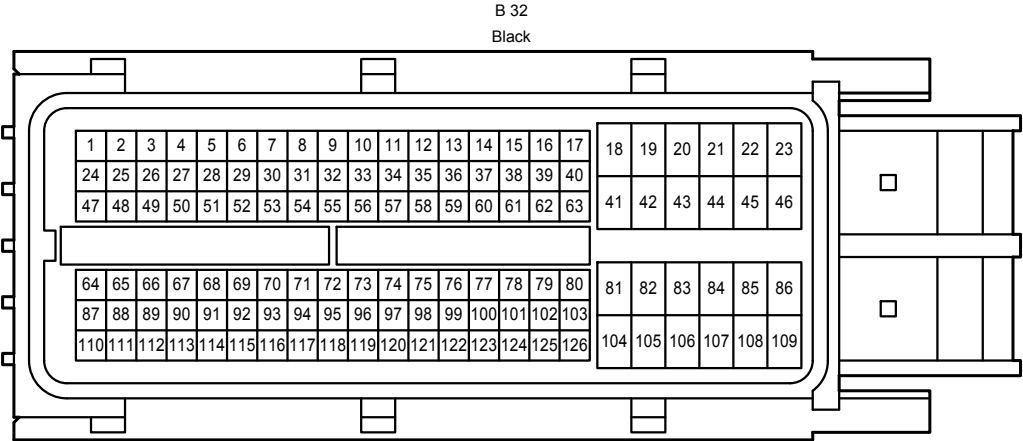

C 1

