


| | |
|------|--|
| E 41 | A/C Amplifier |
| E 42 | A/C Amplifier |
| E 43 | A/C Amplifier |
| E 44 | Shift Lock Control ECU |
| E 45 | Transmission Control SW |
| E 46 | Parking Brake SW |
| E 47 | Outer Mirror SW |
| E 48 | Power Outlet Socket (Front) |
| E 49 | Airbag Sensor Assembly Center |
| E 50 | Transponder Key ECU |
| E 51 | ID Code Box |
| E 52 | Navigation Receiver Assembly |
| E 53 | Navigation Receiver Assembly |
| E 54 | Navigation Receiver Assembly |
| E 55 | Antenna Amplifier |
| E 56 | Navigation Receiver Assembly |
| E 57 | Navigation Receiver Assembly |
| E 58 | 4WD Control SW |
| E 60 | Blower Motor |
| E 61 | Blower Motor |
| E 62 | Blower Resistor |
| E 63 | Certification ECU |
| E 64 | Tire Pressure Warning ECU and Receiver |
| E 65 | Tire Pressure Warning ECU and Receiver |
| E 66 | Auto Wiper Relay |
| E 67 | 4WD Control ECU |
| E 68 | Airbag Cut Off SW |
| E 69 | A/T Shift Lever Illumination |
| E 70 | Air Inlet Control Servo Motor |
| E 71 | Short Connector |
| E 72 | Short Connector |
| E 73 | Junction Connector |
| E 77 | Junction Connector |
| E 78 | Diode (Rear Wiper) |
| E 81 | Turn Signal Flasher |
| E 82 | Double Locking ECU |
| E 83 | Theft Warning ECU |
| E 84 | Junction Connector |
| E 85 | Junction Connector |
| E 86 | Junction Connector |
| E 87 | Junction Connector |
| E 88 | Junction Connector |
| E 89 | Junction Connector |
| E 90 | Radio Receiver Assembly |
| E 91 | Radio Receiver Assembly |
| E 92 | Radio Receiver Assembly |


Position of Parts in Instrument Panel <RHD>

E 41
White

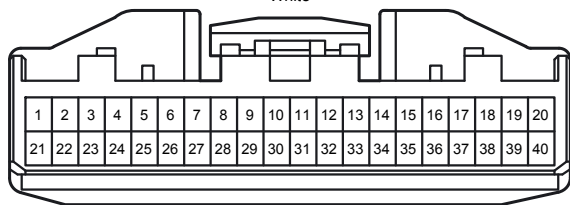


(Automatic A/C)

E 42
White

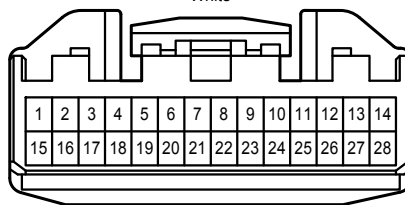


(Manual A/C)


E 43
White

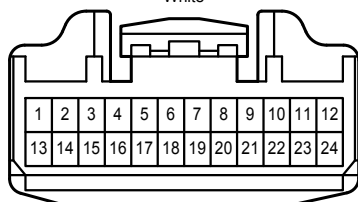

E 44
White

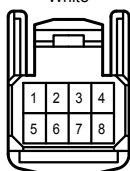


E 45
White

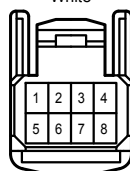


E 46
Black




E 47
White

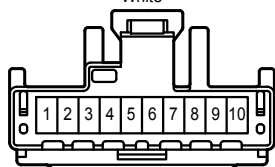


E 48
White

 


E 49
Yellow

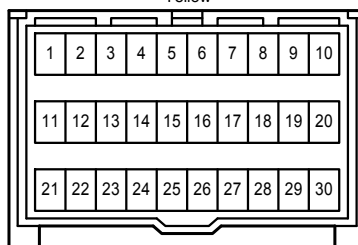


E 50
White

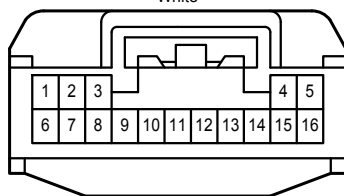

E 51
White

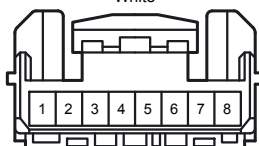


E 52
White

 

E 53
White




E 54
White

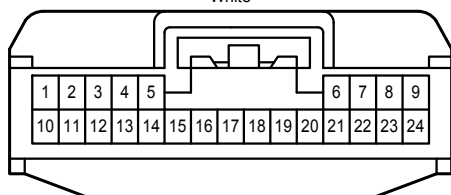


E 55
White




E 56
White

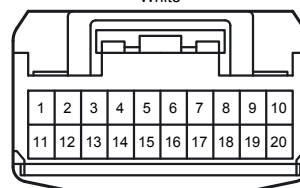


E 57
Gray

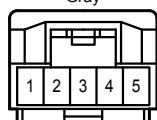


E 58
Black

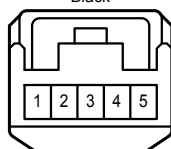


E 60
Black

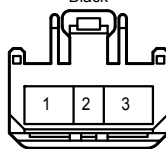
























E 61
Black

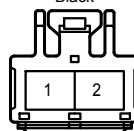

E 62
Black

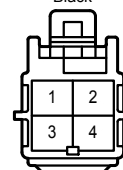

   Position of Parts in Instrument Panel <RHD>

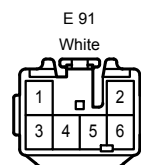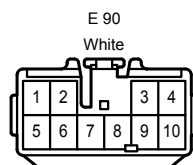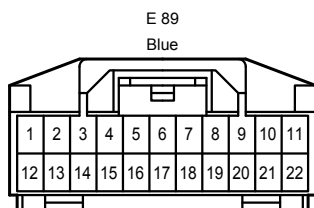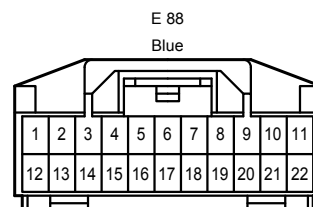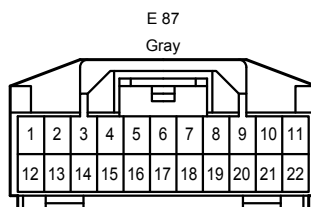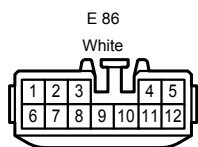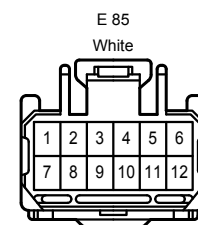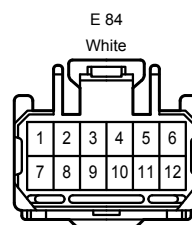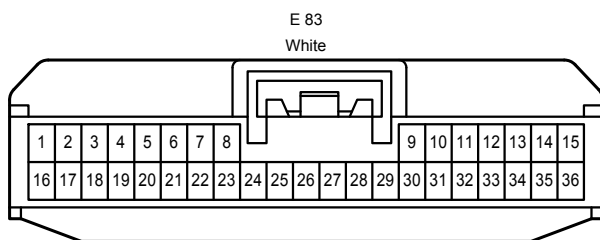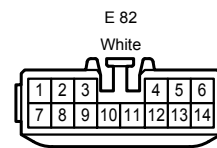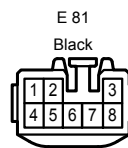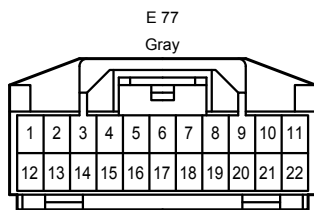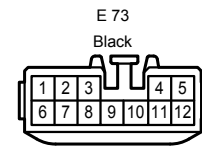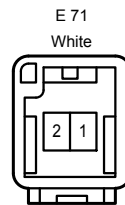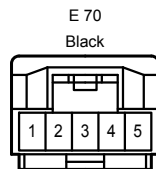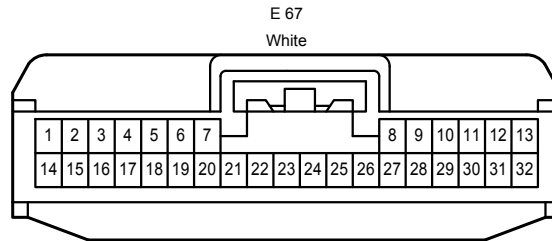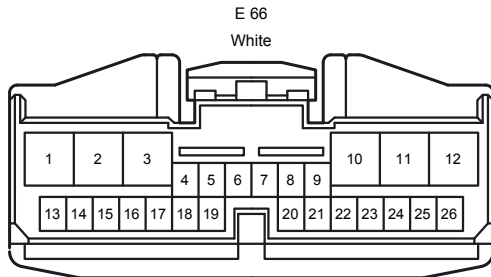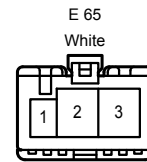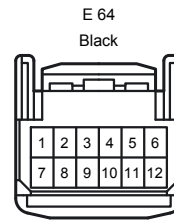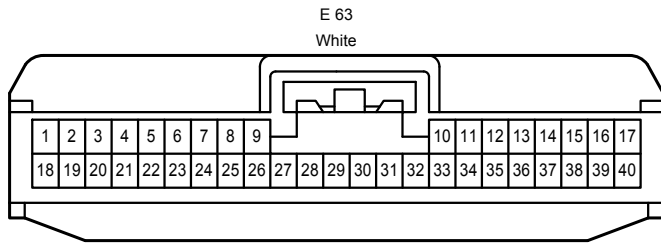

E 92

White

