 
 
 
 


Wireless Door Lock Control <w/o Entry & Start System RHD>

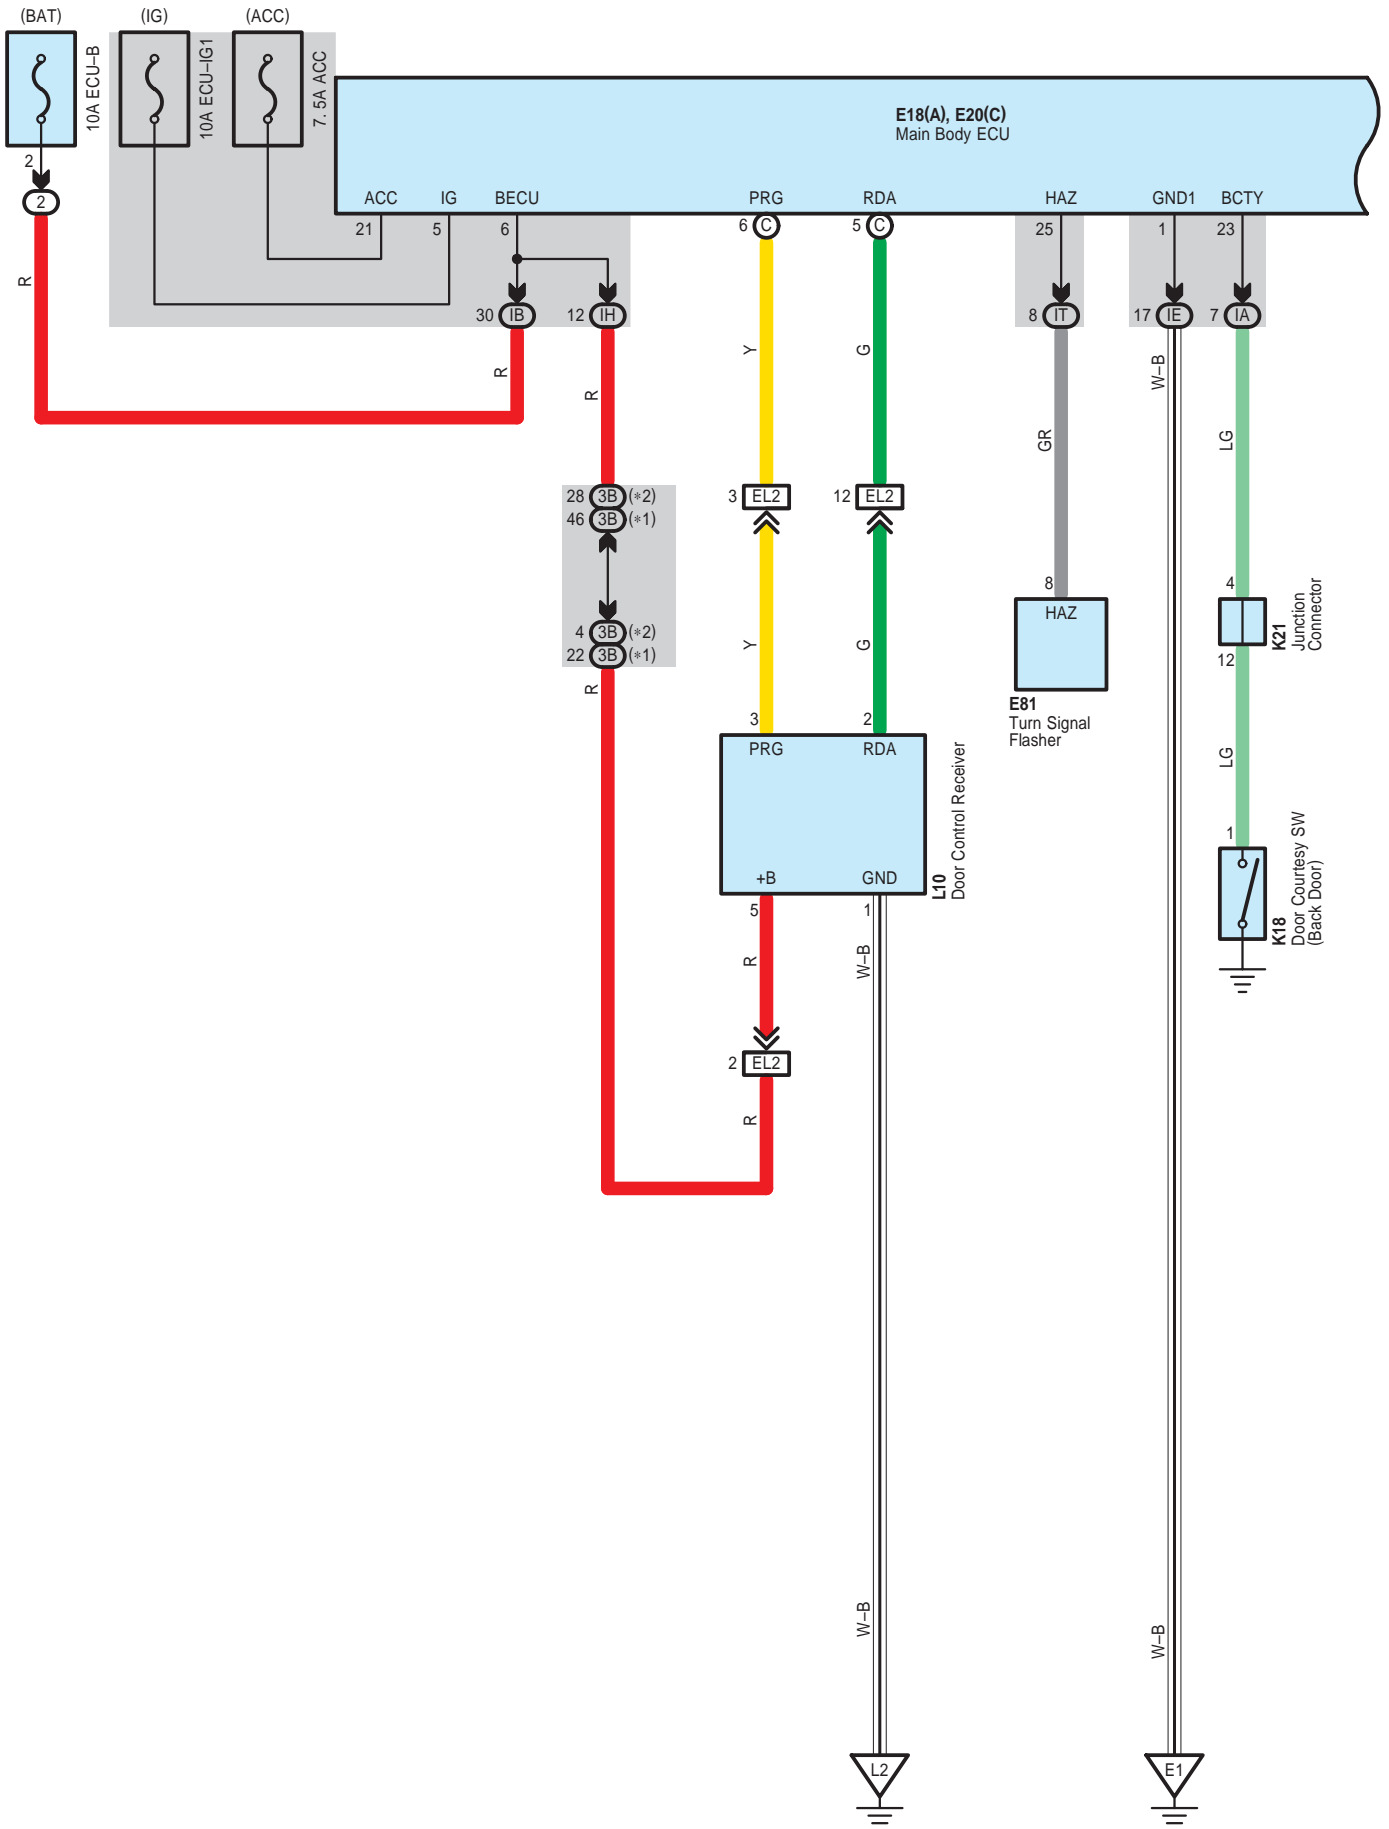 




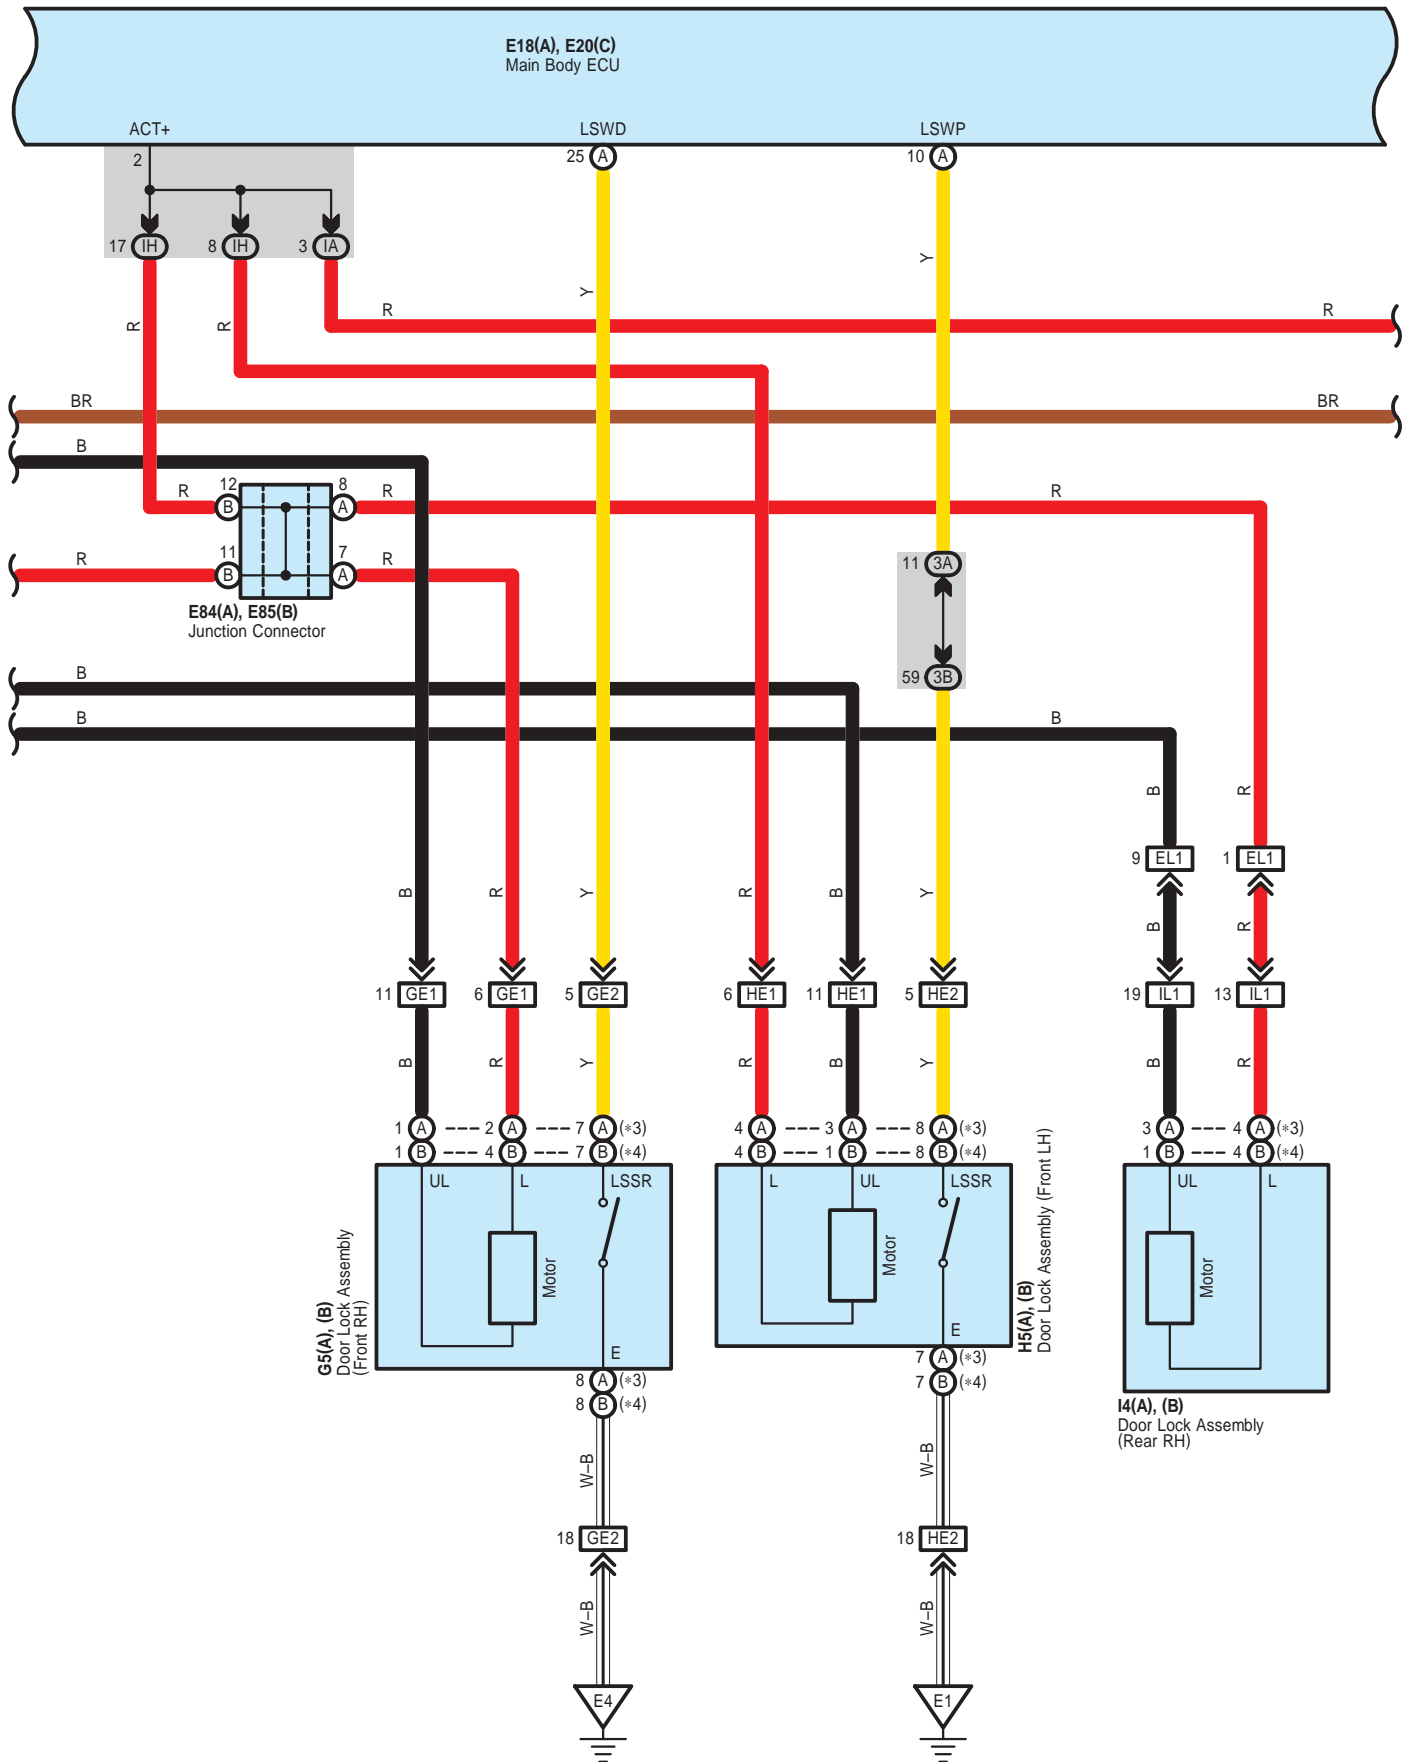

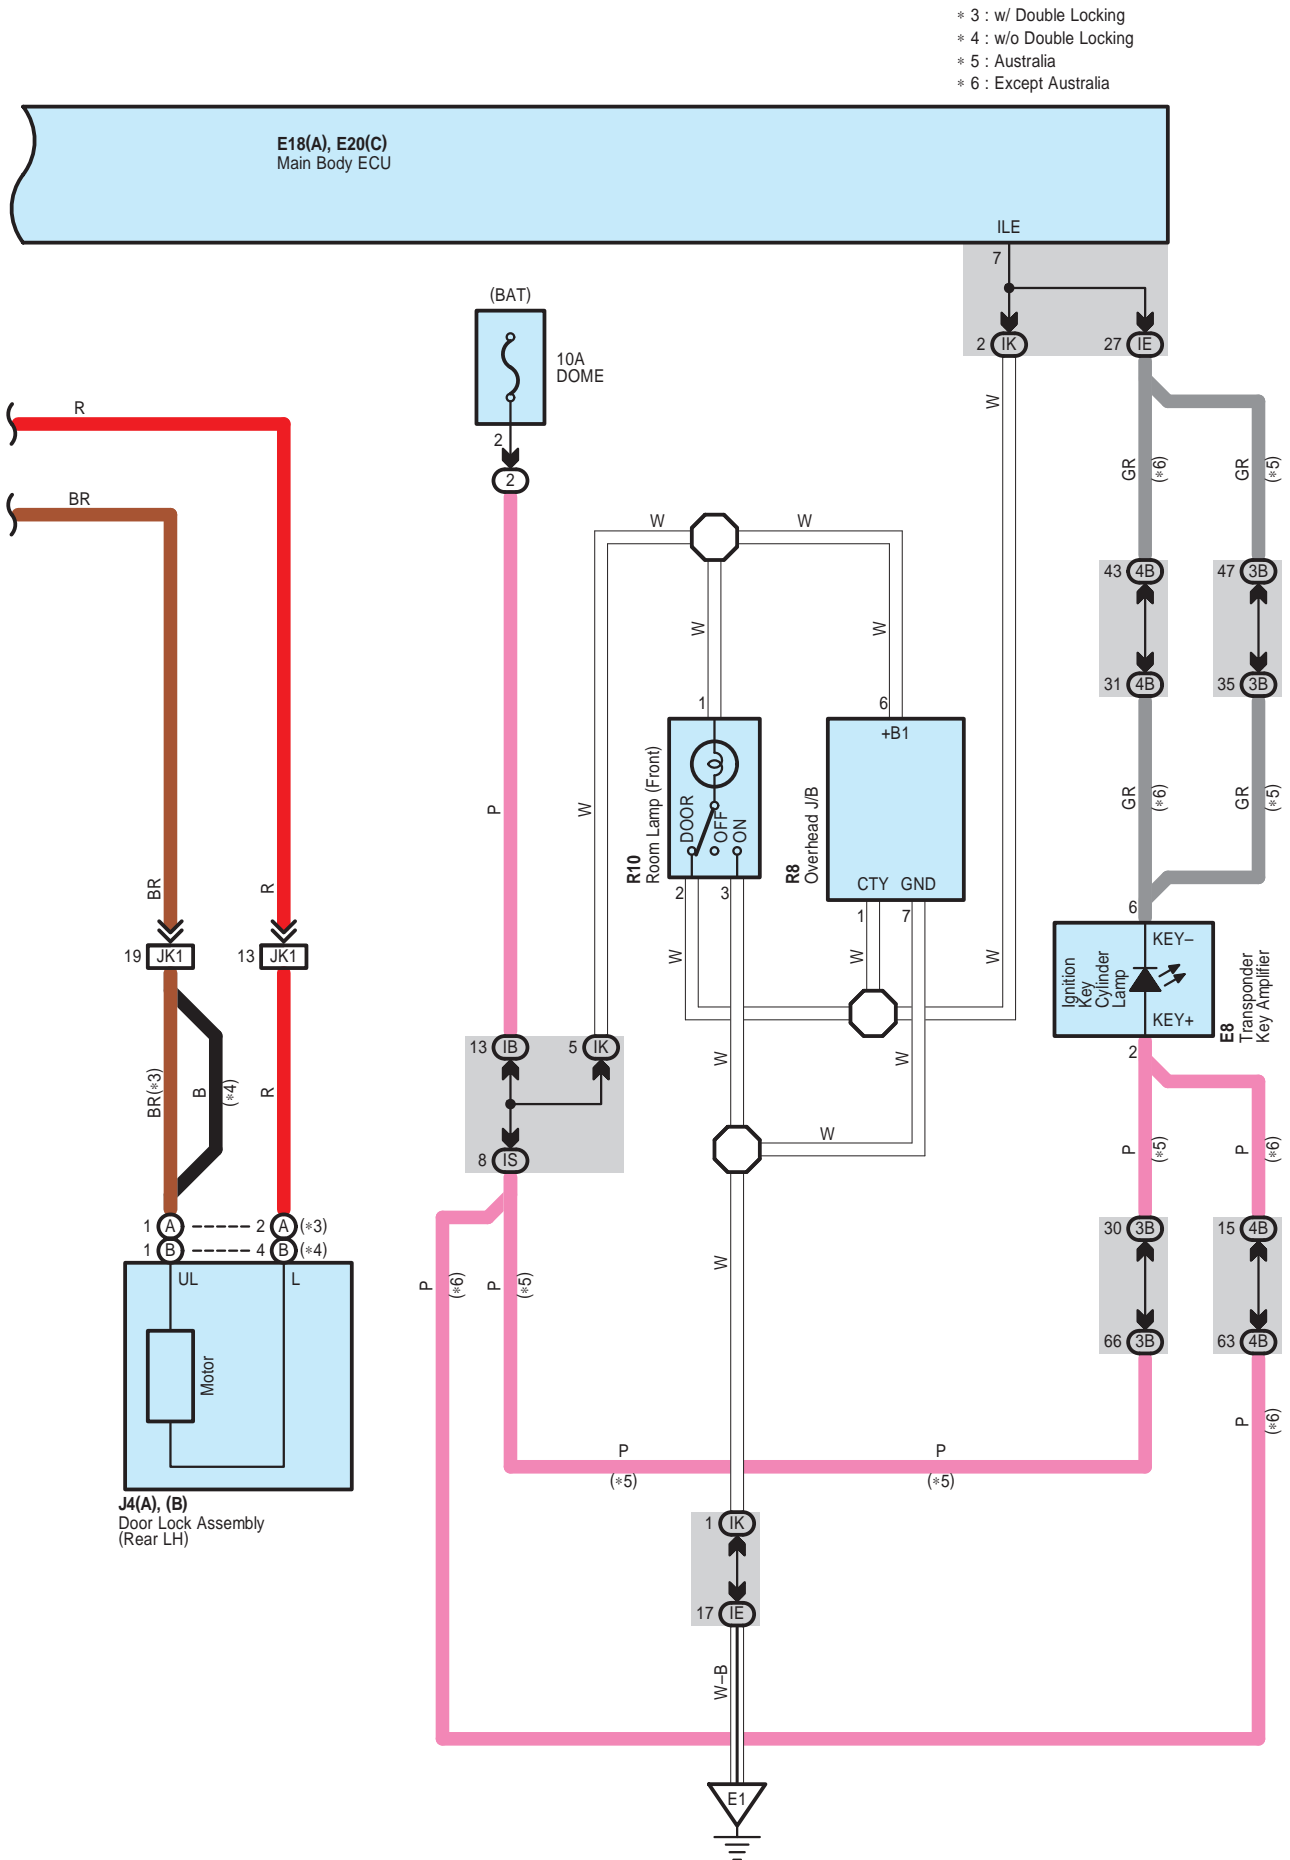


E 8
Black

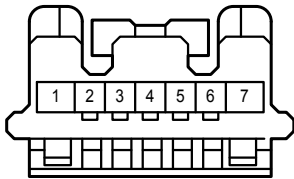


E 9
White



 E 18
White

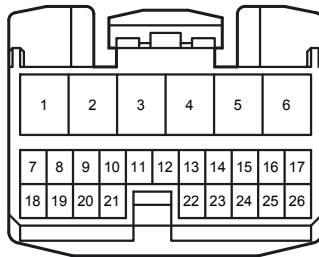


E 20
White

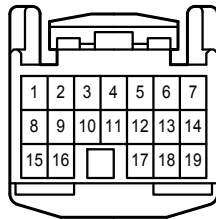 


E 81
Black



 
E 84
White

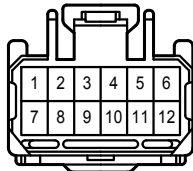


E 85
White

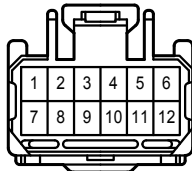 


G 5
White

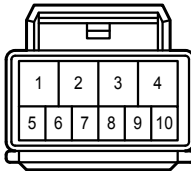 


H 5
White

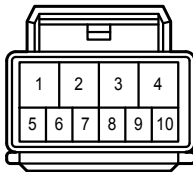 

I 4
White

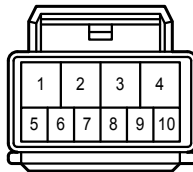 

J 4
White

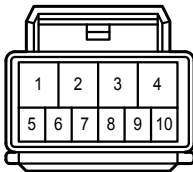 

K 8
White



 
K 11
White



K 18
White



K 21
White

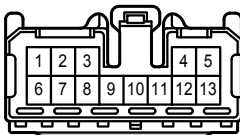


L 4
White




L 7
White



 
L 10
White

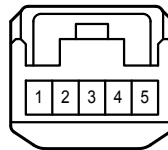

R 8
Black

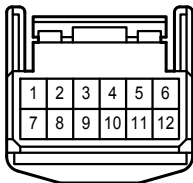 


R 10
Gray

 


S 10
White



 
3A
White

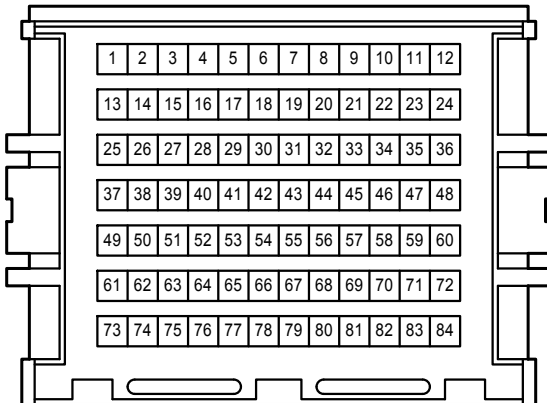


3B
White

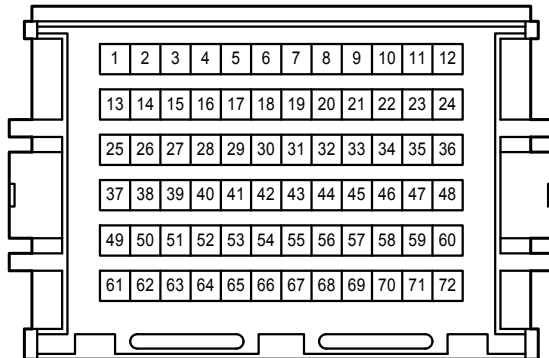 


4A
White

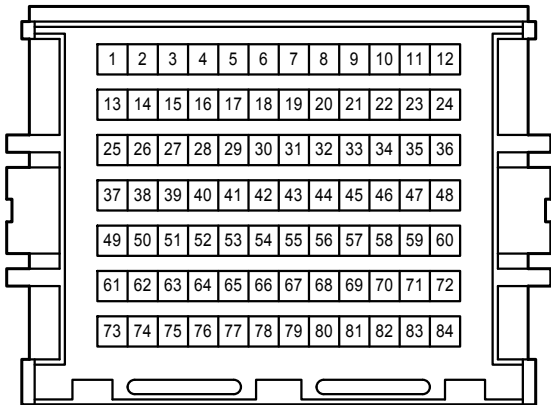 


4B
White

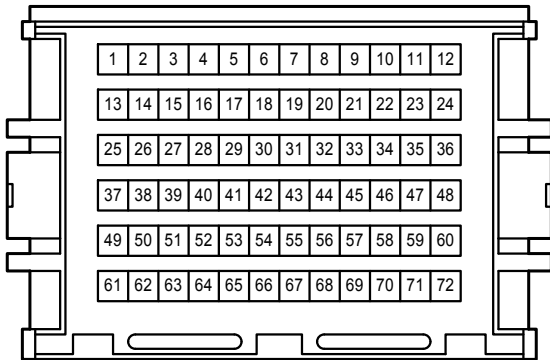 


1A
White

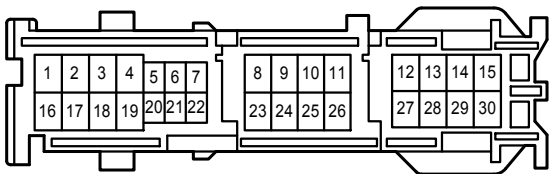 


1B
White

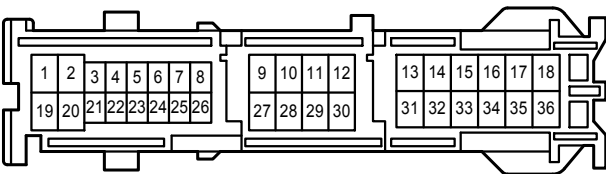 


1C
White

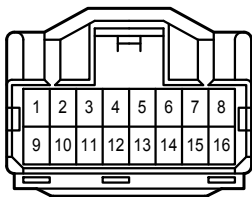 


1D
White

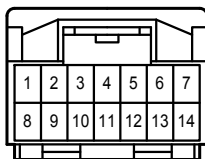 


1E
White

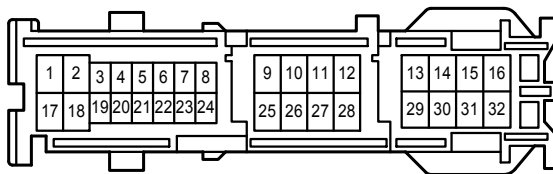 


1H
White

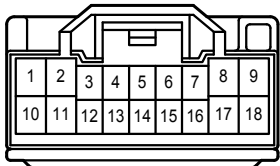 

1K
White

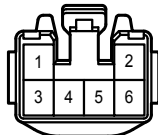 


1S
White

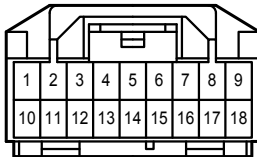 


1T
White



 
EK2
White

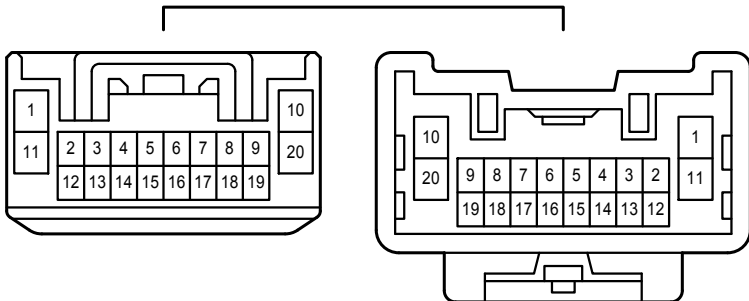


EL1
White

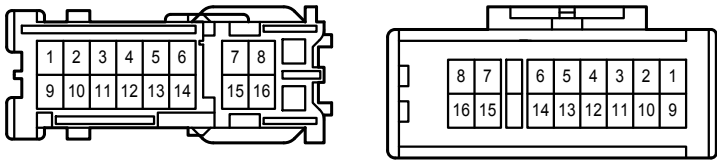 


EL2
White

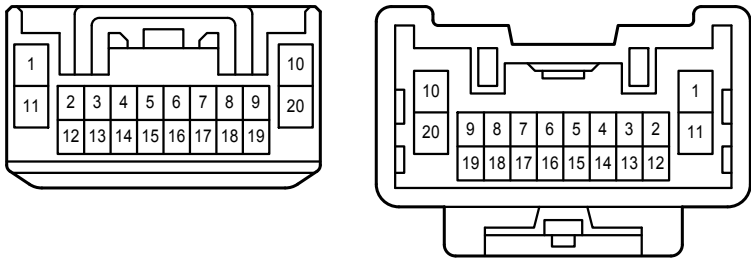 


GE1
White

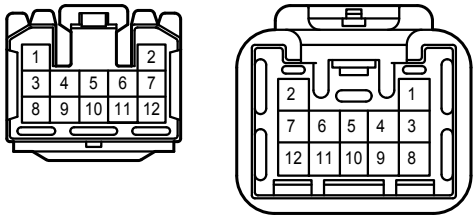 


GE2
White

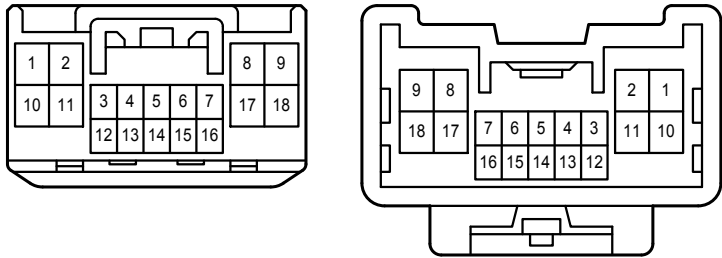 



HE1
White

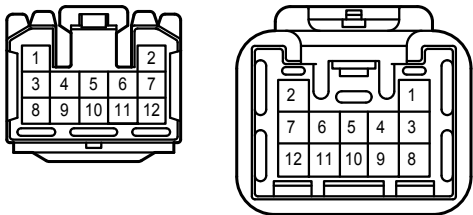 



HE2
White

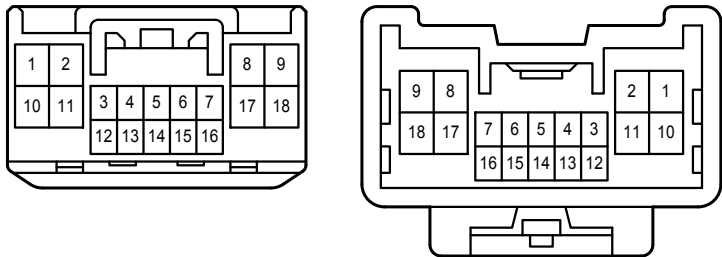 

IL1
White

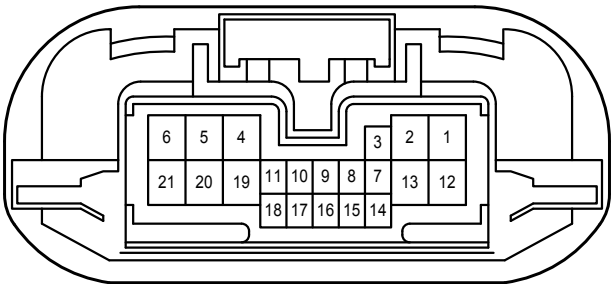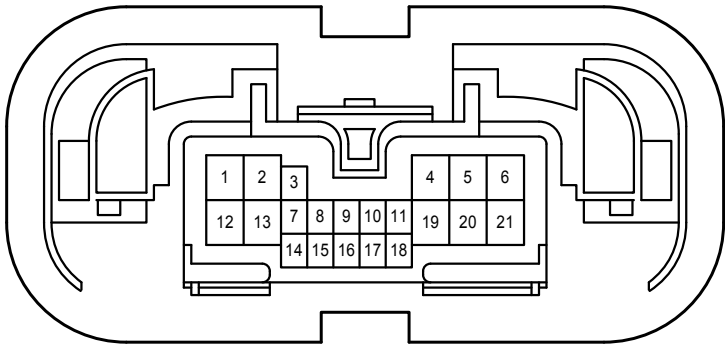  

JK1
White

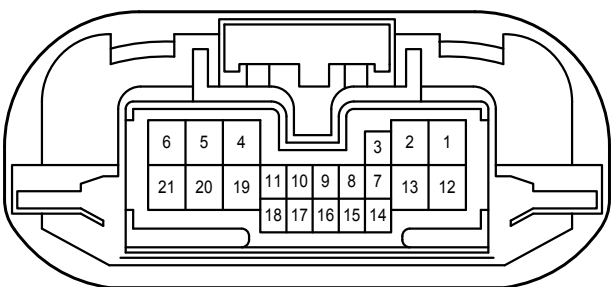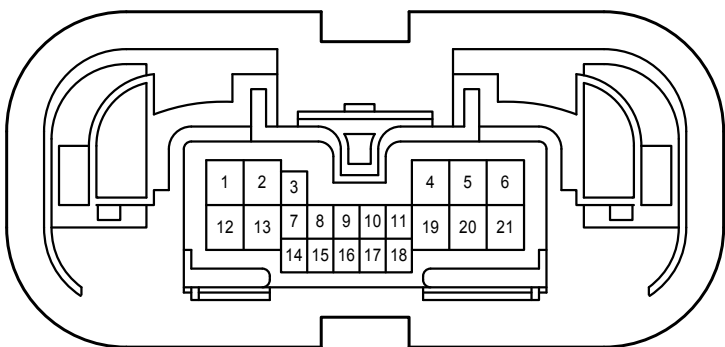  

SL1
White

