

# General Information

## Table of Contents

Before Servicing .....	1-2
Model Identification .....	1-4
General Specifications .....	1-6
Periodic Maintenance Chart .....	1-8
Technical Information – KLEEN (KAWASAKI LOW EXHAUST EMISSION) .....	1-9
Technical Information – Non-Contact Hall IC-Type Speed Sensor .....	1-17
Details:.....	1-17
Construction & Operation:.....	1-17
Speed Sensor Inspection .....	1-18
Technical Information – Alternator made from Rare Magnet .....	1-18
Rare Magnet Material: .....	1-18
Main Characters:.....	1-18
Torque and Locking Agent.....	1-19
Special Tools and Sealant .....	1-23
Cable, Wire, and Hose Routing .....	1-29

## 1-2 GENERAL INFORMATION

### Before Servicing

---

Before starting to service a motorcycle, careful reading of the applicable section is recommended to eliminate unnecessary work. Photographs, diagrams, notes, cautions, warnings, and detailed descriptions have been included wherever necessary. Nevertheless, even a detailed account has limitations, a certain amount of basic knowledge is also required for successful work.

#### **Especially note the following:**

(1) Dirt

Before removal and disassembly, clean the motorcycle. Any dirt entering the engine or other parts will work as an abrasive and shorten the life of the motorcycle. For the same reason, before installing a new part, clean off any dust or metal filings.

(2) Battery Ground

Remove the ground (-) lead from the battery before performing any disassembly operations on the motorcycle. This prevents: (a) the possibility of accidentally turning the engine over while partially disassembled. (b) sparks at electrical connections which will occur when they are disconnected. (c) damage to electrical parts.

(3) Installation, Assembly

Generally, installation or assembly is the reverse of removal or disassembly. But if this Service Manual has installation or assembly procedures, follow them. Note parts locations and cable, wire, and hose routing during removal or disassembly so they can be installed or assembled in the same way. It is preferable to mark and record the locations and routing as much as possible.

(4) Tightening Sequence

Generally, when installing a part with several bolts, nuts, or screws, start them all in their holes and tighten them to a snug fit. Then tighten them evenly in a cross pattern. This is to avoid distortion of the part and/or causing gas or oil leakage. Conversely when loosening the bolts, nuts, or screws, first loosen all of them by about a quarter turn and then remove them. Where there is a tightening sequence indication in this Service Manual, the bolts, nuts, or screws must be tightened in the order and method indicated.

(5) Torque

When torque values are given in this Service Manual, use them. Either too little or too much torque may lead to serious damage. Use a good quality, reliable torque wrench.

(6) Force

Common sense should dictate how much force is necessary in assembly and disassembly. If a part seems especially difficult to remove or install, stop and examine what may be causing the problem. Whenever tapping is necessary, tap lightly using a wooden or plastic-faced mallet. Use an impact driver for screws (particularly for the removal of screws held by a locking agent) in order to avoid damaging the screw heads.

(7) Edges

Watch for sharp edges, especially during major engine disassembly and assembly. Protect your hands with gloves or a piece of thick cloth when lifting the engine or turning it over.

(8) High-Flash Point Solvent

A high-flash point solvent is recommended to reduce fire danger. A commercial solvent commonly available in North America is Stoddard solvent (generic name). Always follow manufacturer and container directions regarding the use of any solvent.

(9) Gasket, O-Ring

Do not reuse a gasket or O-ring once it has been in service. The mating surfaces around the gasket should be free of foreign matter and perfectly smooth to avoid oil or compression leaks.

(10) Liquid Gasket, Non-Permanent Locking Agent

Follow manufacturer's directions for cleaning and preparing surfaces where these compounds will be used. Apply sparingly. Excessive amounts may block engine oil passages and cause serious damage. An example of a non-permanent locking agent commonly available in North America is Loctite Lock'n Seal (Blue).

(11) Press

A part installed using a press or driver, such as a wheel bearing, should first be coated with oil on its outer or inner circumference so that it will go into place smoothly.

(12) Ball Bearing and Needle Bearing

Do not remove a ball bearing or a needle bearing unless it is absolutely necessary. Replace any ball or needle bearings that were removed with new ones, as removal generally damages bearings. Install bearings with the marked side facing out applying pressure evenly with a suitable driver. Only press on the race that forms the press fit with the base component to avoid damaging the bearings. This prevents severe stress on the balls or needles and races, and prevent races and balls or needles from being dented. Press a ball bearing until it stops at the stops in the hole or on the shaft.



## (13) Oil Seal and Grease Seal.

Replace any oil or grease seals that were removed with new ones, as removal generally damages seals.

When pressing in a seal which has manufacturer's marks, press it in with the marks facing out. Seals should be pressed into place using a suitable driver, which contacts evenly with the side of seal, until the face of the seal is even with the end of the hole. Before a shaft passes through a seal, apply a little high temperature grease on the lips to reduce rubber to metal friction.

## (14) Circlip, Retaining Ring, and Cotter Pin

Replace any circlips, retaining rings, and cotter pins that were removed with new ones, as removal weakens and deforms them. When installing circlips and retaining rings, take care to compress or expand them only enough to install them and no more.


## (15) Lubrication

Engine wear is generally at its maximum while the engine is warming up and before all the rubbing surfaces have an adequate lubricative film. During assembly, oil or grease (whichever is more suitable) should be applied to any rubbing surface which has lost its lubricative film. Old grease and dirty oil should be cleaned off. Deteriorated grease has lost its lubricative quality and may contain abrasive foreign particles.

Don't use just any oil or grease. Some oils and greases in particular should be used only in certain applications and may be harmful if used in an application for which they are not intended. This manual makes reference to molybdenum disulfide grease ( $\text{MoS}_2$ ) in the assembly of certain engine and chassis parts. Always check manufacturer recommendations before using such special lubricants.

## (16) Electrical Wires

All the electrical wires are either single-color or two-color and, with only a few exceptions, must be connected to wires of the same color. On any of the two-color wires there is a greater amount of one color and a lesser amount of a second color, so a two-color wire is identified by first the primary color and then the secondary color. For example, a yellow wire with thin red stripes is referred to as a "yellow/red" wire; it would be a "red/yellow" wire if the colors were reversed to make red the main color.

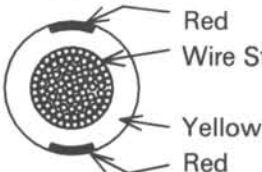Wire (cross-section)	Name of Wire Color
	Yellow/Red

## (17) Replacement Parts

When there is a replacement instruction, replace these parts with new ones every time they are removed. These replacement parts will be damaged or lose their original function once removed.

## (18) Inspection

When parts have been disassembled, visually inspect these parts for the following conditions or other damage. If there is any doubt as to the condition of them, replace them with new ones.

Abrasion	Crack	Hardening	Warp
Bent	Dent	Scratch	Wear
Color change	Deterioration	Seizure	

## (19) Specifications

Specification terms are defined as follows:

"Standards": show dimensions or performances which brand-new parts or systems have.

"Service Limits": indicate the usable limits. If the measurement shows excessive wear or deteriorated performance, replace the damaged parts.

## 1-4 GENERAL INFORMATION


### Model Identification

#### ZX900-C1 (US) Left Side View:



#### ZX900-C1 (US) Right Side View:

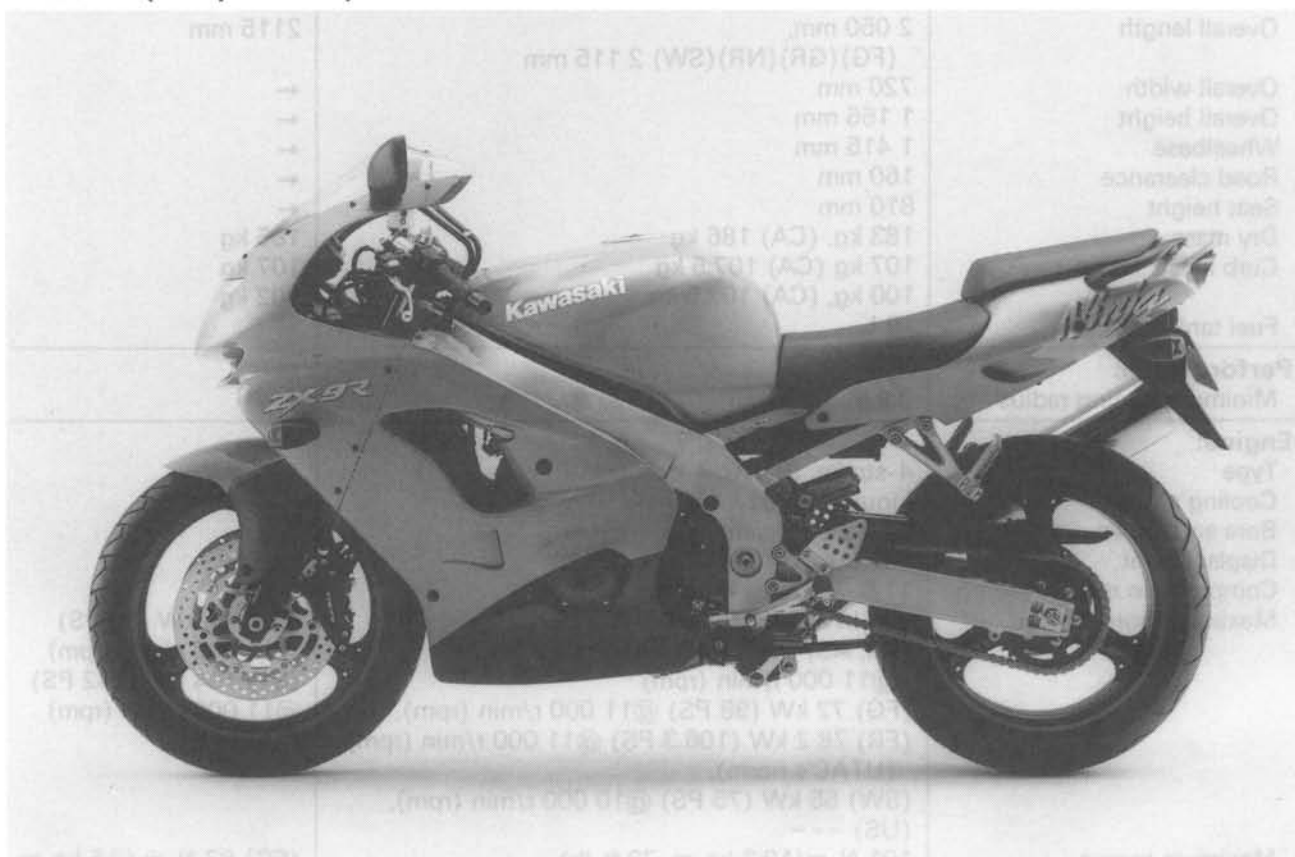

**ZX900-D1 (Europe Model) Left Side View:****ZX900-D1 (Europe Model) Right Side View:**

## 1-6 GENERAL INFORMATION

### General Specifications

Items	ZX900-C1	D1
<b>Dimensions:</b>		
Overall length	2 050 mm, (FG)(GR)(NR)(SW) 2 115 mm	2115 mm
Overall width	720 mm	←
Overall height	1 155 mm	←
Wheelbase	1 415 mm	←
Road clearance	160 mm	←
Seat height	810 mm	←
Dry mass	183 kg, (CA) 186 kg	185 kg
Curb mass: Front	107 kg (CA) 107.5 kg	107 kg
Rear	100 kg, (CA) 102.5 kg	102 kg
Fuel tank capacity	19 L	←
<b>Performance:</b>		
Minimum turning radius	3.2 m	
<b>Engine:</b>		
Type	4-stroke, DOHC, 4-cylinder	←
Cooling system	Liquid-cooled	←
Bore and stroke	75.0 x 50.9 mm	←
Displacement	899 mL	←
Compression ratio	11.5	←
Maximum horsepower	105 kW (143 PS) @11 000 r/min (rpm), (KR, AS) 104 kW (142 PS) @11 000 r/min (rpm) (FG) 72 kW (98 PS) @11 000 r/min (rpm), (FR) 78.2 kW (106.3 PS) @11 000 r/min (rpm) (UTAC's norm), (SW) 55 kW (75 PS) @10 000 r/min (rpm), (US) ---	(FG) 72 kW (98 PS) @11 000 r/min (rpm) (ST) 104 kW (142 PS) @11 000 r/min (rpm)
Maximum torque	101 N-m (10.3 kg-m, 73 ft-lb) @9 000 r/min (rpm), (KR, AS) 100 N-m (10.2 kg-m, 72 ft-lb) @9 000 r/min (rpm) (FG) 83 N-m (8.5 kg-m, 61 ft-lb) @9 000 r/min (rpm), (SW) 79 N-m (8.0 kg-m, 58 ft-lb) @4 000 r/min (rpm), (FR)(UK)(US) ---	(FG) 83 N-m (8.5 kg-m, 61 ft-lb) @6 000 r/min (rpm) (ST) 100 N-m (10.2 kg-m, 72 ft-lb) @9 000 r/min (rpm)
Carburetion system	Carburetors, Keihin CVKD 40 x 4	←
Starting system	Electric starter	←
Ignition system	Battery and coil (transistorized)	←
Timing advance	Electronically advanced(digital igniter)	←
Ignition timing	From 10° BTDC @1 100 r/min (rpm) to 32.5° BTDC @5 000 r/min (rpm)	←
Spark plug	NGK CR9EK or ND U27ETR	←
Cylinder numbering method	Left to right, 1-2-3-4	←
Firing order	1-2-4-3	←
Valve timing:		
Inlet	Open	←
	Close	←
	Duration	←
Exhaust	Open	←
	Close	←
	Duration	←

Items	ZX900-C1	D1
Lubrication system	Forced lubrication (wet sump with cooler)	←
Engine oil:		
Grade	SE, SF or SG class	←
Viscosity	SAE10W-40, 10W-50, 20W-40, or 20W-50	←
Capacity	3.8 L	←
<b>Drive Train:</b>		
Primary reduction system:		
Type	Gear	←
Reduction ratio	1.714 (84/49)	←
Clutch type	Wet multi disc	←
Transmission:		
Type	6-speed, constant mesh, return shift	←
Gear ratios:		
1st	2.571 (36/14)	←
2nd	1.941 (33/17)	←
3rd	1.556 (28/18)	←
4th	1.333 (28/21)	←
5th	1.200 (24/20)	←
6th	1.095 (23/21)	←
Final drive system:		
Type	Chain drive	←
Reduction ratio	2.563 (41/16)	←
Overall drive ratio	4.811 @Top gear	←
<b>Frame:</b>		
Type	Tubular, diamond	←
Caster (rake angle)	24°	←
Trail	93 mm	←
Front tire: Type	Tubeless	←
Size	120/70 ZR17 (58W)	←
Rear tire: Type	Tubeless	←
Size	180/55 ZR17 (73W)	←
Front suspension:		
Type	Telescopic fork	←
Wheel travel	120 mm	←
Rear suspension:		
Type	Swingarm (uni-trak)	←
Wheel travel	130 mm	←
Brake type: Front	Dual disc	←
Rear	Single disc	←
<b>Electrical Equipment:</b>		
Battery	12 V 8 Ah	←
Headlight: Type	Semi-sealed beam	←
Bulb	12V60/55W (quartz-halogen),	←
Tail/brake light	12 V 5/21 W x 2, (CN)(US) 12 V 8/27 W x 2	12 V 5/21 W x 2
Alternator: Type	Three-phase AC	←
Rated output	27 A/ 14 V @5 000 r/min (rpm)	←

Specifications are subject to change without notice, and may not apply to every country.

(AS) : Australian Model  
 (CA) : California Model  
 (FG) : German Model  
 (FR) : French Model  
 (GR) : Greek Model  
 (KR) : Korean Model

(ST) : Swiss Model  
 (SW) : Swedish Model  
 (US) : U.S.A. Model  
 (UK) : U.K. Model  
 (NR) : Norwegian Model

## 1-8 GENERAL INFORMATION

### Periodic Maintenance Chart

The scheduled maintenance must be done in accordance with this chart to keep the motorcycle in good running condition. **The initial maintenance is vitally important and must not be neglected.**

OPERATION	FREQUENCY	Whichever comes first ↓	*ODOMETER READING →							
			Every	1 000 km (600 mile)	6 000 km (4 000 mile)	12 000 km (7 500 mile)	18 000 km (12 000 mile)	24 000 km (15 000 mile)	30 000 km (20 000 mile)	36 000 km (24 000 mile)
Spark plug – clean and gap †				•	•	•	•	•	•	
Valve clearance – check †					•		•		•	
Air suction valve – check †				•	•	•	•	•	•	
Air cleaner element and air vent filter – clean†#					•		•		•	
Throttle grip play – check †			•		•		•		•	
Idle speed – check †			•		•		•		•	
Carburetor synchronization – check †					•		•		•	
Engine oil – change #	6 months		•	•	•	•	•	•	•	
Oil filter – replace			•		•		•		•	
Evaporative emission control system (CA) -check †			•	•	•	•	•	•	•	
Drive chain wear – check † #				•	•	•	•	•	•	
Brake pad wear – check † #				•	•	•	•	•	•	
Brake light switch – check †			•	•	•	•	•	•	•	
Steering – check †			•	•	•	•	•	•	•	
Front fork oil – change	2 years						•			
Rear shock absorber oil leak – check †					•		•		•	
Front fork oil leak – check †					•		•		•	
Tire wear – check †				•	•	•	•	•	•	
Swingarm pivot, Uni-trak linkage – lubricate					•		•		•	
General lubrication – perform					•		•		•	
Nuts, bolts, and fasteners tightness – check †			•		•		•		•	
Drive chain – lubricate #	600 km			•	•	•	•	•	•	
Drive chain slack – check † #	1000 km		•	•	•	•	•	•	•	
Brake fluid level – check †	month		•	•	•	•	•	•	•	
Clutch adjust – check †	month		•	•	•	•	•	•	•	
Radiator hoses, connection – check †			•							
Brake fluid – change	2 years						•			
Brake master cylinder cup and dust seal – replace	4 years									
Coolant – change	2 years						•			
Caliper piston seal and dust seal – replace	4 years									
Steering stem bearing – lubricate	2 years						•			

# : Service more frequently when operating in severe conditions; dusty, wet, muddy, high speed, or frequent starting/stopping.

\* : For higher odometer readings, repeat at the frequency interval established here.

† : Replace, add, adjust, clean, or torque if necessary.

(CA): California Model only




**Technical Information – KLEEN (KAWASAKI LOW EXHAUST EMISSION)**

The ZX900C (California), and the ZX900D (Germany and Switzerland) have catalytic converters.


The secondary air injection system [A] helps Kawasaki keep motorcycle exhaust gases below the established emission regulation limits. This system draws air into the exhaust ports, dilutes and burns harmful ingredients in the exhaust gas in order to reduce them. This allows the carburetor to be set at a reasonable setting position without adjusting it much leaner, so engine performance and actual riding performance are not spoiled.

But, under the trend that the emission regulation becomes more severe, Kawasaki has adopted two catalytic converters [B] in addition to the secondary air injection system. Moreover, a CVKD 40-type carburetor has been adopted from the ZX1100D because of its good balance between cost and performance. As a result, we can reduce the exhaust gas emission below the current standards without hurting the output performance and the actual riding feeling at all. The harmful ingredients in the exhaust gas under LA4 or EC-mode running performance was reduced considerably. As actual examples, carbon monoxide (CO) is reduced about 70%, hydrocarbons (HC) about 60%, nitrogen oxides (NOx) about 10%.

Moreover, in order to improve the reliability of the system, we install fuel cut valves [C] as a catalyst protection system.

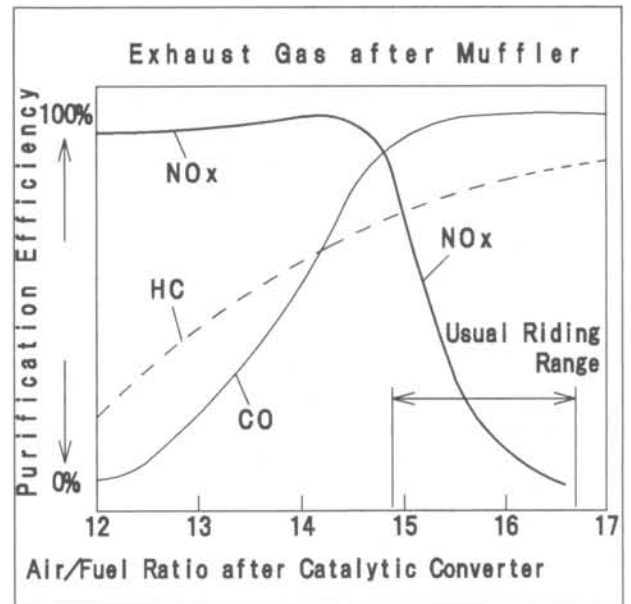

**Kawasaki Low Exhaust Emission System**

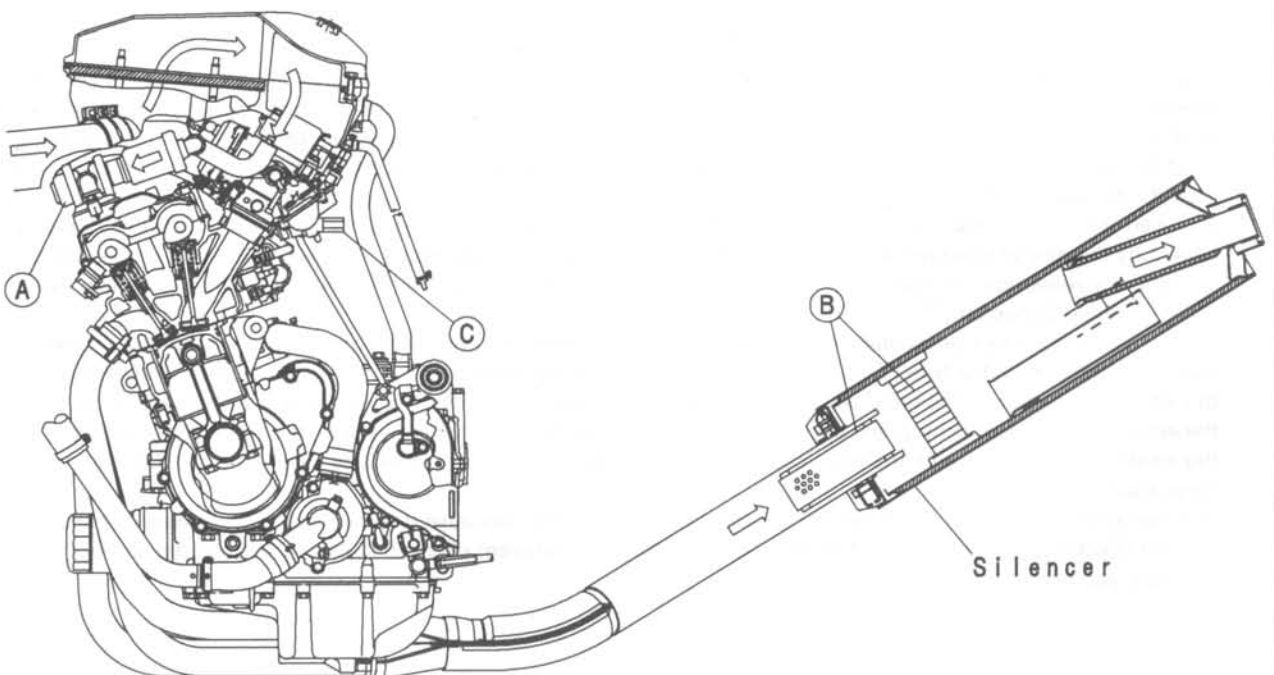


## 1. Exhaust Purification System

The burned gas, which goes out from the combustion chamber, is injected with secondary air (adding necessary oxygen), and is cleaned up while passing through the small precatalytic converter in the joint pipe and the main catalytic converter in the silencer, and then goes out to the atmosphere.

### 1) Secondary Air Injection System

In order to oxidize CO, and HC by the catalysts, the proper amount of oxygen is necessary. As original combustion gas has little remaining oxygen, air is injected in the exhaust ports by the secondary air injection system in order to supply enough oxygen to the combustion gas to purify CO, and HC to a certain extent as well as prepare for activation of the catalysts. As for NOx, as the carburetor is set at rich level [A], NOx is at lower level from the beginning as described in the figure.

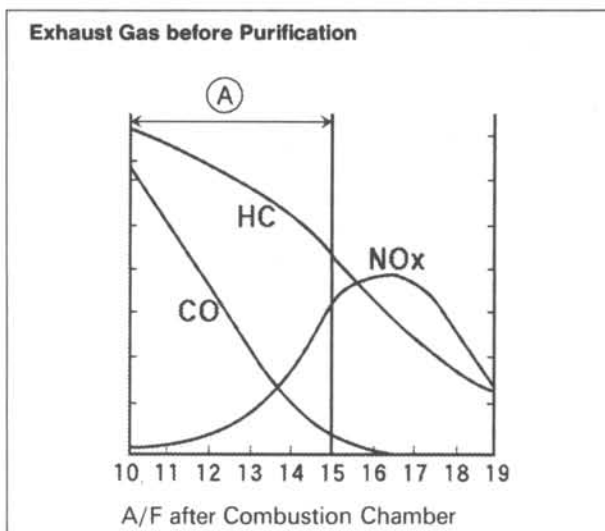

### 2) Precatalytic Converter [A]


A small-size three-way catalytic converter (precatalytic converter) is installed in the pipe ahead at the joint [B] of the silencer. A precatalytic converter is made from a punched metal pipe [C] of stainless steel, and its surface is covered by alumina upon which platinum and rhodium as catalysts are applied. Generally, the temperature of the exhaust gas must be higher than the activation temperature, so we set this precatalytic converter at the upper portion of the main catalytic converter where the temperature of exhaust gas is high. Accordingly, the precatalytic converter will be activated even under low load conditions. Activation of the precatalytic converter makes the passed exhaust gas heated by the heat of reaction and makes its temperature to the main catalytic converter higher, which helps the main catalytic converter operate more efficiently. The precatalytic converter purifies CO, HC, and NOx to a certain extent.

### 3) Main Catalytic Converter [D]

The converter is a three-way catalytic converter upon which platinum and rhodium are applied, and has a cylindrical metallic honeycomb structure [E] made by bending a corrugated sheet and a flat sheet of stainless steel into a spiral of increasing diameter. The main catalytic converter is installed in the first expansion chamber of the silencer. When the exhaust gas passes through the upper portion of the secondary air injection system, the precatalytic converter, and the inside of the honeycomb, the main catalytic converter works efficiently to reduce CO, HC, and NOx. So, we can keep it within regulation.


The honeycomb structure is convenient for the catalytic converter because it has a large surface area but small size to react effectively and low exhaust resistance. In addition, its inherent strength helps resist vibration, and has simple structure welded directly on the silencer.

## Catalytic Converters

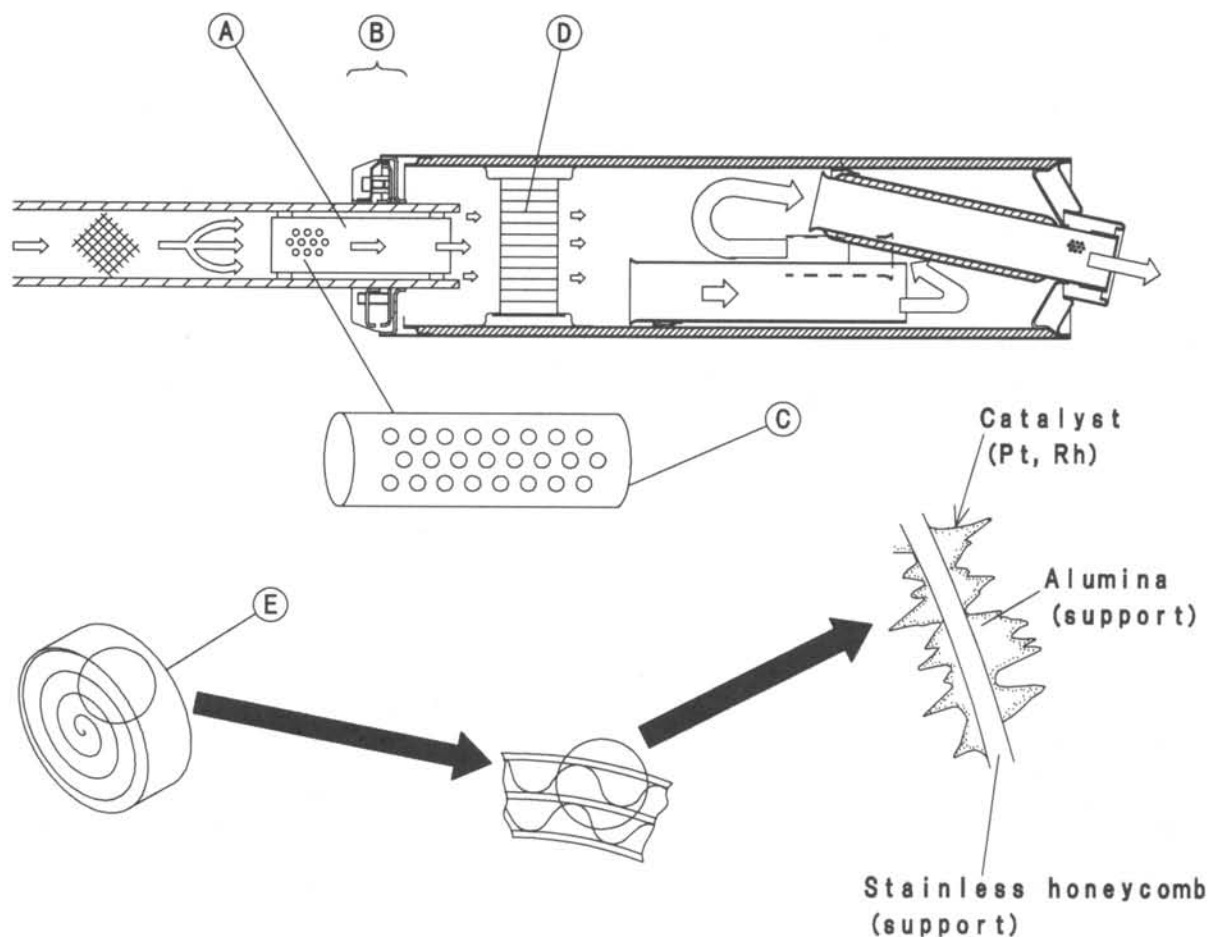

## 2. Catalyst Protection System

When excessive unburned gasoline flows more than the allowable amount into the exhaust gas during running, the temperature of the catalysts rises abnormally because the unburned gasoline reacts with heated catalysts (at the activation temperature or higher). In an excessive case, the problem such as melting-down occurs. Moreover, there is a possibility that the purification performance becomes poorer when it is cool (below the activation temperature.) So, the fuel cut valve [A] as a catalyst protection system is installed on each carburetor float bowl [B]. It runs by the IC Igniter and opens and closes the fuel passage toward a main jet [C]. A catalyst protection system works in the following cases.

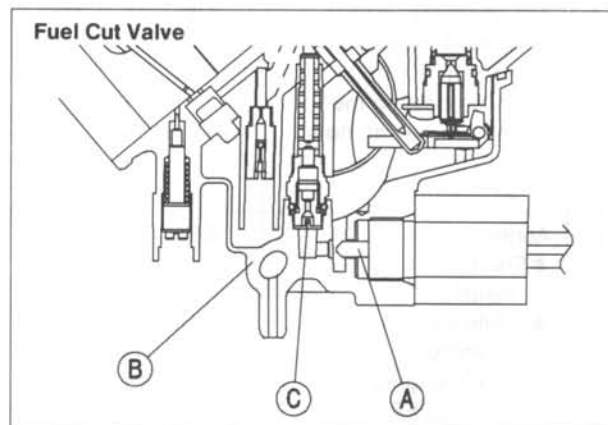

- 1) Prevention of unburned gasoline from flowing when overspeed limiter works.  
The limiter has fuel cut-off and ignition cut-off operations.
- 2) Prevention of unburned gasoline from flowing when the engine stop switch is turned off during running.  
When the engine stop switch is turned off while coasting the motorcycle, fuel is cut off. For example, fuel is cut off under the abnormal running condition that you go down the slope with the engine stop switch OFF.

## 1-12 GENERAL INFORMATION

- 3) Prevention of unburned gasoline from flowing when misfire occurs by cut-off of a primary coil in a stick coil.  
Fuel is cut off when an electric current of a primary coil becomes abnormal because of cut-off the primary coil when the engine running.
- 4) Prevention of solenoid valve lock  
If a driver always runs the engine under the red zone in the tachometer, the IC igniter doesn't operate overspeed limiter and the catalyst protection system doesn't have a chance to work. The old fuel may gum up the fuel cut valves which remain seated in the float bowls. To cope with, the IC igniter test-operates the fuel cut valves when starting the engine and prevents lock of the valves.
- 5) Usage of leaded gasoline is prohibited completely.  
Leaded gasoline harms the purification efficiency of the catalysts. In German model, the shape of the filler cap is modified so that an oil supply nozzle for unleaded gasoline can be installed but for leaded gasoline cannot.

The performance of the catalyst protection system is summed up as follows.

[Performance of Catalyst Protection System]

No	Running condition	Ignition switch	Engine stop switch	Protection system	Fuel cut valve	Remedy (Action)
1	Normal	ON	ON	OFF	OPEN	● Not necessary (Normal condition)
2	Overspeed performance	ON	ON	ON	CLOSE	● Not necessary
3	Abnormal (misfire) ● Defects at the stick coil primary-side	ON	ON	ON	CLOSE	● Inspect the connection at the primary-side of the stick coil.
4	Abnormal (misfire) ● Defects at the stick coil secondary-side ● Battery is dead. ● Spark plug fouling  ● Defects of the pickup coil ● Defects of the IC igniter  ● Defects of the carburetor	ON	ON	OFF	OPEN	● Inspect the stick coil.  ● Charge the battery. ● Clean the spark plug and adjust the gap. ● Inspect and replace the pickup coil. ● Inspect and replace the IC igniter. ● Inspect and adjust the carburetor.
5	Abnormal (no spark) ● Short of the engine stop switch ● While coasting the motorcycle, do not turn the engine stop switch OFF.	ON	OFF	ON	CLOSE	● Inspect and repair the engine stop switch. ● Turn the engine stop switch ON, and run.
6	Abnormal (no spark) ● Short of the ignition switch ● While coasting the motorcycle, do not turn the ignition switch OFF.	OFF	ON or OFF	OFF	OPEN	● Inspect and replace the ignition switch. ● Turn the ignition switch and the engine stop switch ON, and run.

### 3. Maintenance

Special maintenance is not necessary except for the inspection of the air suction valve (which has been described in manuals).

#### 1) Replacement of Muffler Assy

It is impossible to replace only catalytic converters because they are welded in the muffler. So, in the following case, the replacement of the muffler assy is also necessary.

- In case of using not-appointed fuel (leaded gasoline, etc.):

Purification efficiency decreases in a very short period because lead poisons the catalytic converters. Although the appearance of the converter and engine performance are not effected, the replacement of a muffler assy is necessary to secure the purification efficiency of exhaust gas.

- In case catalytic converters melt down by over-heating:

Especially in the case that a lot of unburned gasoline flows into the catalytic converters under the extreme running condition far beyond common sense, there is a possibility that the catalysts overreact and that catalytic converters overheat severely. If they melt down, it causes poor engine performance, deterioration of emission noise level and purification efficiency. So, the muffler assy must be replaced.

#### 2) Durability

It has the same durability as a conventional muffler.

#### 3) Disposal to Waste

As any harmful toxic substance is not used especially, it can be disposed as usual industrial wastes. The body of the muffler is made of stainless steel. The catalytic converter is also made of stainless steel which has alumina on its surface, and the main ingredients of catalysts are platinum and rhodium.

### 4. Handling Precautions

Catalyst protection system against mishandling is applied to a vehicle with catalysts. But, we prohibit depending on the system too much when running.

#### 1) Use only unleaded gasoline:


Usage of leaded gasoline is prohibited completely. Only fuel and additives which are specified in the Owner's manual can be used.

#### 2) Use specified engine oil which is described in the Owner's manual:

In case of some ingredients which give bad effects to the catalysts (such as phosphorus "P", lead "Pb", sulfur "S") are included, the purification efficiency decreases.

#### 3) Coasting (such as cranking while going down a slope) is prohibited with the ignition system OFF:

The engine running without igniting causes a great flow of unburned gasoline and the decreasing of purification efficiency, and melting down of catalysts at the activation temperature or higher.

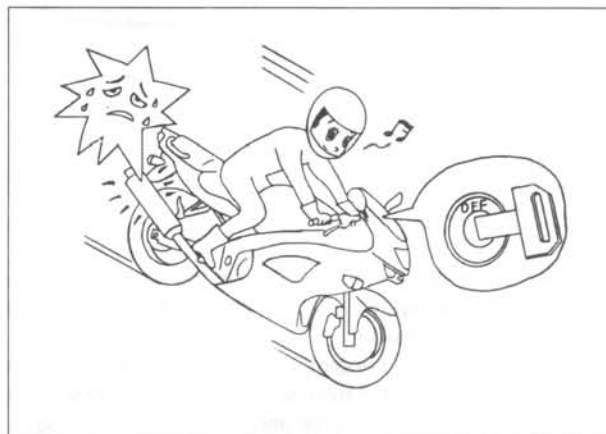


- When the ignition switch [A] is turned off, the fuel cut valves [B] do not work. So, avoid coasting with the ignition switch OFF.

- Do not run the engine nor coast the motorcycle under the misfire which occurs by defects such as a bad connection with the spark plug at the secondary wiring of the stick coil [C].

- Do not coast too much with the engine stop switch [D] OFF. Under the condition that the engine stop switch is turned off during running, the IC igniter [E] closes the fuel cut valves to shut off fuel.

- Do not run the engine nor coast the motorcycle too much under the condition that the primary wiring of the stick coil does not connect completely (misfire). Incomplete connection or cut-off of the primary coil makes the fuel cut valves start to cut fuel. In this case, from the standpoint to protect the catalysts, the fuel for all cylinders is cut off even if one cylinder has been affected.

## Kawasaki Low Exhaust Emission System

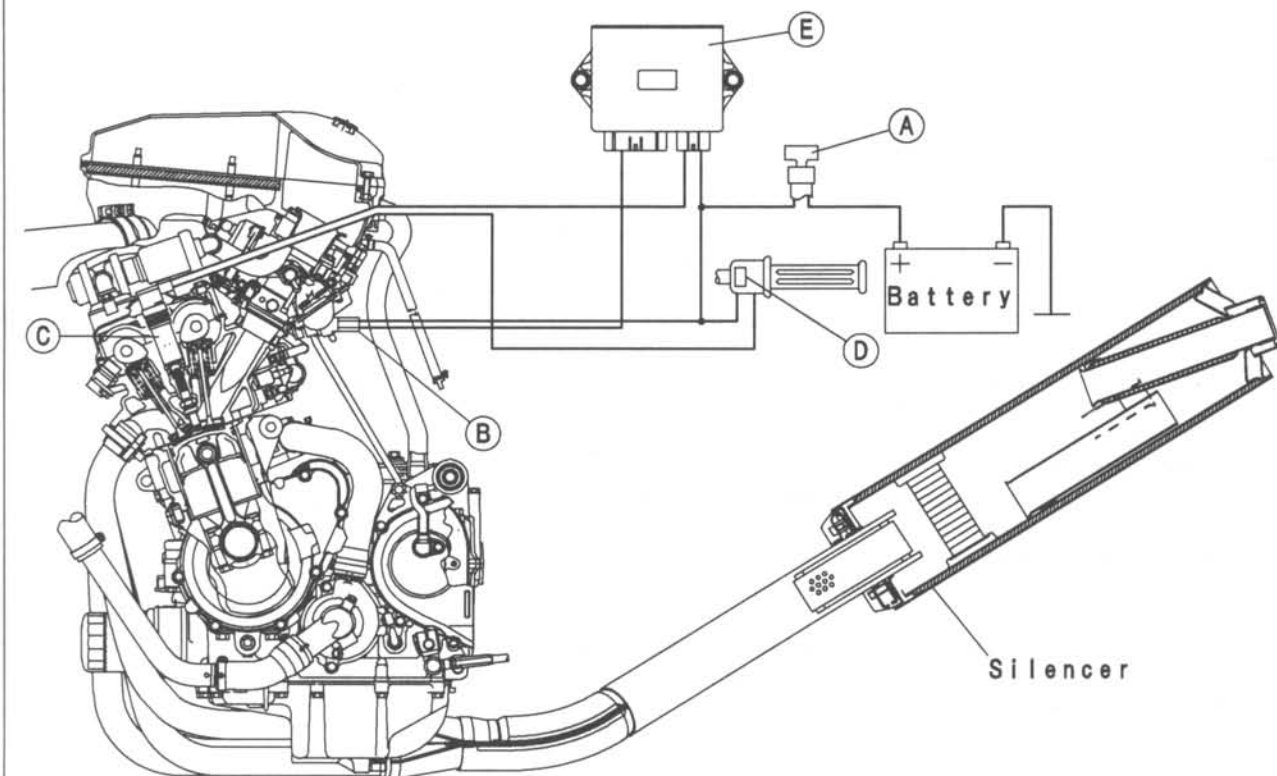


- Do not run overspeed limiter too much from the standpoint to protect the engine. (Overspeed limiter has a protection system that applies ignition cut method and fuel cut method together. Conventional system applies fuel-on method.)
- Do not run the engine under the condition that even if only one cylinder has a misfire or has unstable running. In this case, request the nearest service facility to correct it. If you have no choice but running by yourself, keep engine rpm as low as possible and try to finish running at the shortest period.
- When the battery is dead, do not push-start. Connect another full-charged battery with jumper cables, and start the engine.

## 5. Additional Information
 
### 1) Secondary Air Injection System

The mechanism is simple and power loss is minimum because the system uses the vacuum pressure created by exhaust pulses.

The secondary injection air helps the fuel/air mixture burn more completely. (The primary air means air which flows through the inlet pipe.) As the exhaust valve opens, and the burned fuel passes the exhaust valve, a stream of fresh air is introduced through the air suction valve. This fresh air burns the unburned gas and converts the carbon monoxide (CO) and hydrocarbons (HC) into harmless carbon dioxide (CO<sub>2</sub>) and water (H<sub>2</sub>O).



The secondary air injection system consists of a vacuum switch valve, and two air suction valves. Without using an air pump, the air suction valve can draw fresh air into the exhaust passage near the exhaust valves by vacuum that exhaust pulses generate.



### Air Suction Valves


The air suction valve is a check valve which allows fresh air to flow only from the air cleaner via air hoses into the exhaust port and prevents return flow. Remove and inspect the air suction valves periodically (see Engine Top End chapter). Also, remove and inspect the air suction valves whenever the idle speed is unstable, engine power is greatly reduced, or there are abnormal engine noises.

### Vacuum Switch Valve

Although the vacuum switch valve usually permits secondary air flow, it closes when a high vacuum (low pressure) is developed at the inlet pipe during engine braking. This is to shut off secondary air flow and prevent explosions in the exhaust ports which might be caused by extra unburned fuel in the exhaust during deceleration. These explosions, or backfiring in the exhaust system could damage the air suction valves.

Regular inspection of the vacuum switch valve is not needed. If backfiring occurs frequently in the exhaust system during engine braking or if there are abnormal engine noises, check the vacuum switch valve as described in the text (see Engine Top End chapter).


### Secondary Air Injection System

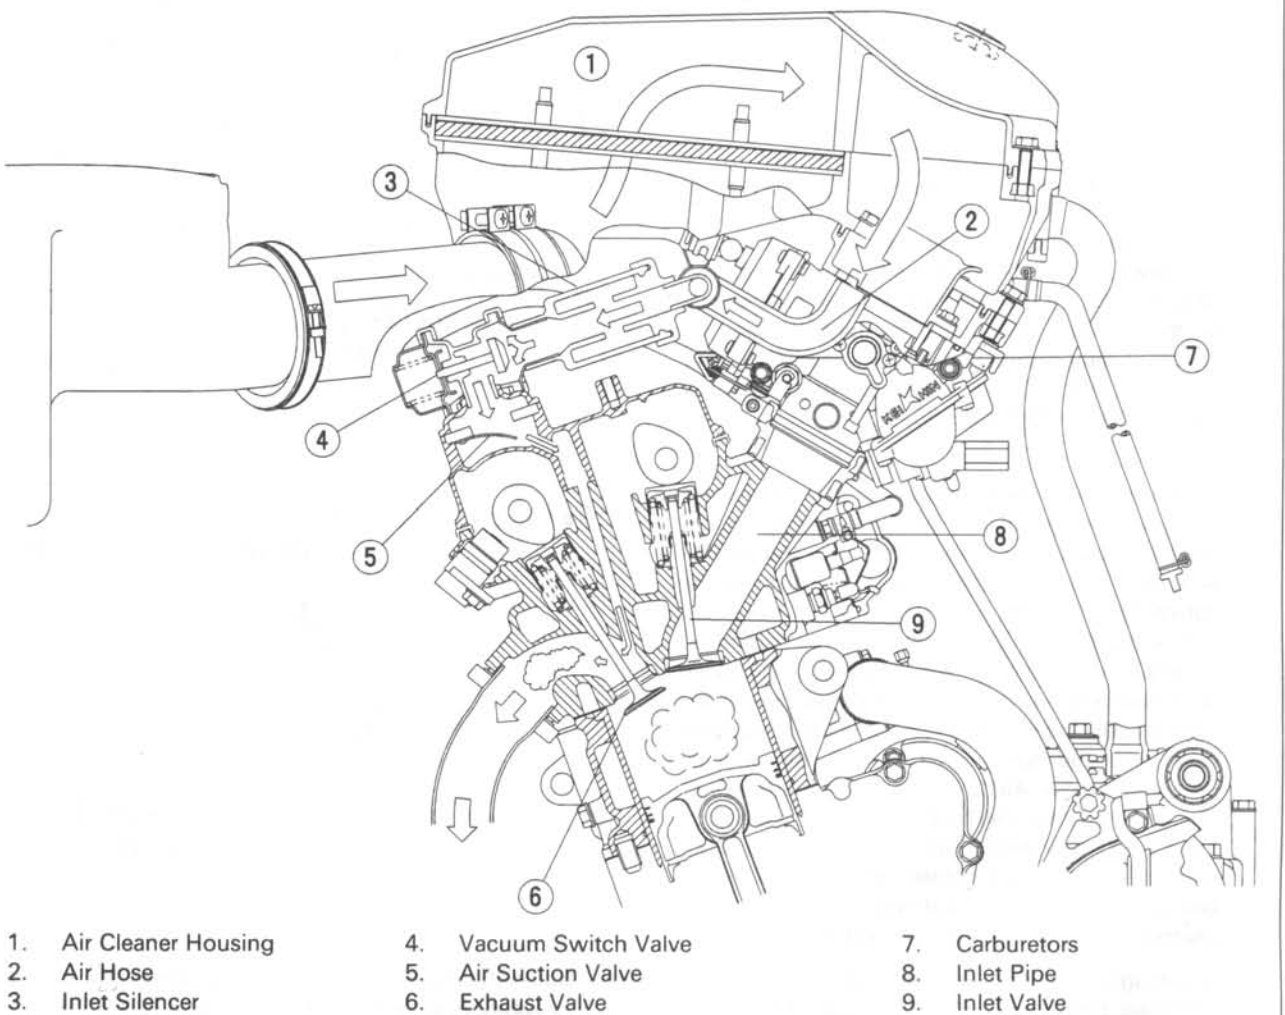

## 2) Operation of Three-way Catalytic Converter

The three-way catalysts are used for the precatalytic converter and the main catalytic converter. These converters can clean up carbon monoxide (CO), hydrocarbons (HC), and nitrogen oxides (NO<sub>x</sub>) at the same time.

 CO and HC are oxidized (O is added) by platinum (Pt) and converted to harmless carbon dioxide gas (CO<sub>2</sub>) and water (H<sub>2</sub>O), and the exhaust gas is cleaned up:



NO<sub>x</sub> is reduced (O is removed) by rhodium (Rh) and converted to harmless nitrogen (N<sub>2</sub>) and oxygen (O<sub>2</sub>), and the exhaust gas is cleaned up.



## 3) Property of Catalyst

Most catalysts are powders of metal or of metallic compounds, and they increase the rate of a chemical reaction. Catalysts are supposed to act in some way to loosen the bonds of the reacting substances. In other words, they lower the energy of activation, thus allowing the reaction to proceed more rapidly. To activate catalysts, the temperature of the exhaust gas must be higher than the activation temperature that is 220° ~ 230°C for new catalysts, and 270° ~ 280°C for used catalysts (after 10000 ~ 20000 km ride).



The catalyst itself undergoes no permanent chemical change, or can be recovered when the chemical reaction is completed. So, the muffler with built-in catalyst has the same durability as the conventional muffler.

The mechanism of catalytic action is supposed to be a surface phenomenon in which reactants are adsorbed onto a small portion of the surface of the catalyst. The catalytic converter is made of stainless steel and the surface is applied by alumina (aluminum oxide Al<sub>2</sub>O<sub>3</sub>). The alumina adheres to the stainless steel wall and the catalyst adheres to the alumina very well. The alumina surface is not uniform and there are corners, edges, dislocations, and grain boundaries. Catalyst is applied on the alumina and this makes the catalyst surface rough.

The rougher the surface is, the more actively the catalyst adsorbs the reactants. If various impurities like lead are adsorbed, they block the small portion of the catalyst surface, preventing adsorption of CO, HC, and NO<sub>x</sub>. This is the reason why leaded fuel poisons the catalyst without any break on the surface and generation of heat.


Catalysts are generally efficient in small quantities. A catalyst can catalyze the reaction of several thousand to a million times its weight in reactants. The three-way catalyst is a blend of platinum (Pt) and rhodium (Rh) which are expensive. But a precatalytic converter uses only about 0.05 gram of Pt and 0.01 gram of Rh and a main catalytic converter uses only about 0.4 gram of Pt and 0.1 gram of Rh.

Main Catalytic Converter

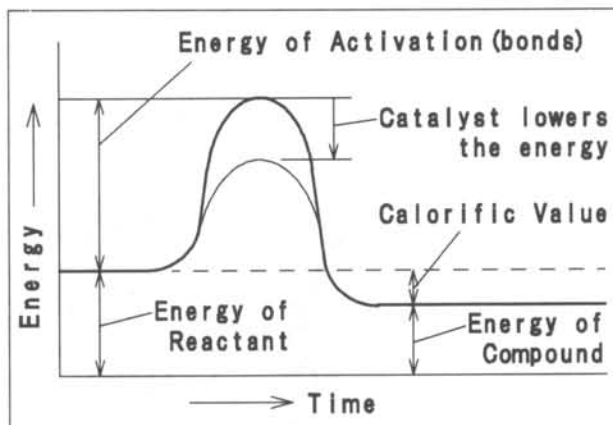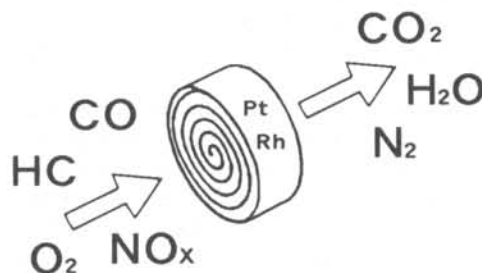

Catalyst (Rt, Rh)

Alumina (Support)

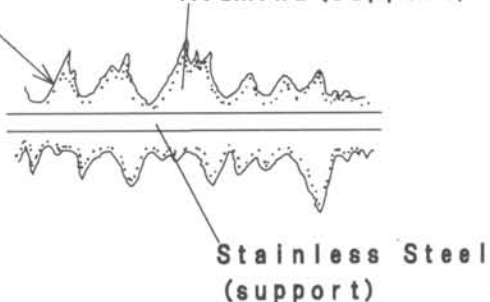


## Technical Information – Non-Contact Hall IC-Type Speed Sensor

### Details:


The electronic combination meter unit, superior to the conventional type in weight and durability is installed on the ZX900-C/D. The hall IC-type speed sensor is installed on the ZX900-C/D together with it, which needs no cable and speedometer gears. Its construction and operation are described as follows;

### Construction & Operation:

- The speed sensor [A] consists of a magnet [B] and the Hall IC [C].

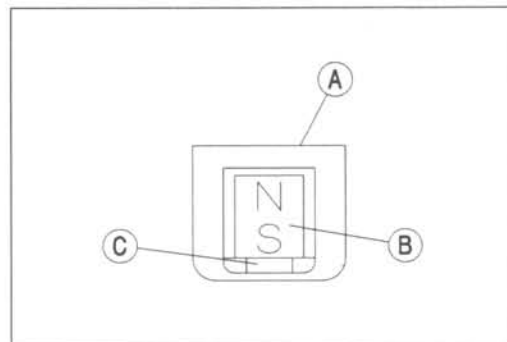

- The Hall IC consists of Hall element [A], the differential amplifier [B], the high pass filter [C], the comparator [D] and the output transistor [E].

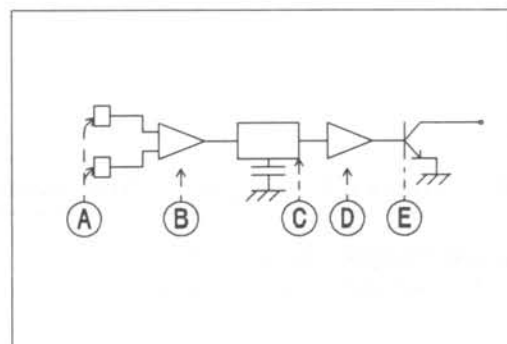

### Hall Element;

The semi-conductors (e.g. CaAs, InAs, InSb) are called as mentioned above. The magnetic induction applied on the two (2) Hall elements will be converted into the voltage, and outputted.

### Differential Amplifier;

This can output the difference between output powers of the two (2) Hall elements.

### High Pass Filter;

Sensitivity of the two (2) Hall elements.

Surface magnetic induction of a magnet.

Relative positions of the Hall element, magnet, and detector gear.



Able to cancel the DC off-set because of scattering of differential output.

### Comparator & Output Transistor;


able to output the square wave in accordance with the magnetic induction alternation with the transistor turning on or off.

- The magnetic induction passing through the Hall element will be changed in accordance with the relative position of both the rotor nut [A] installed on the engine sprocket will be rotated.

amount of magnetic induction

when large [B]

when small [C]

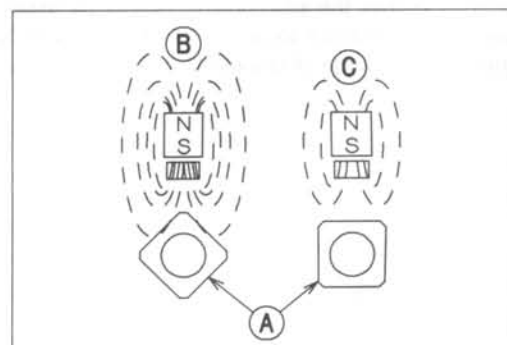

## 1-18 GENERAL INFORMATION

- In the internal system of the Hall IC, the switch is operated in accordance with the magnetic induction alternator. This makes the square wave equal to the pulse of the rotor nut output.

Amount of magnetic induction when large [A]

Amount of magnetic induction when small [B]


Operating point [C]

Returning point [D]

When high voltage [E]

When low voltage [F]

- The vehicle speed is indicated in the speedometer, altering the pulse of this square wave.

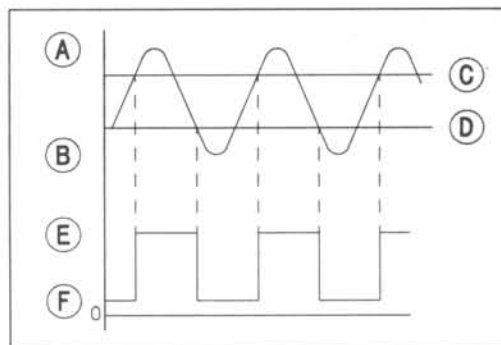

### Speed Sensor Inspection

- Refer to the chapter 15-55.

## Technical Information – Alternator Made from Rare Magnet


### Rare Magnet Material:

Sintered metal made from mainly neodymium (Nd), ferric magnet (Fe), and boron (B).

### Main Characters:

Rare magnet used and assembled in the alternator for the ZX900-C and -D models has six (6) times higher performance than that of the traditional use ferrite magnet.

This allows the alternator to reduce its mass and weight to the large extent. In addition to above mentioned, there's no use to worry about the future lackage of rare magnetic resources such as samarium cobalt.

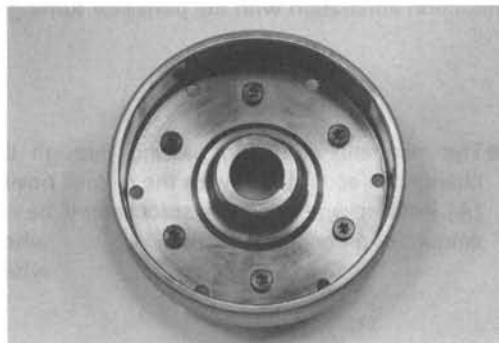

## Torque and Locking Agent

The following tables list the tightening torque for the major fasteners requiring use of a non-permanent locking agent or liquid gasket.

Letters used in the "Remarks" column mean:

- L** : Apply a non-permanent locking agent to the threads.
- LG** : Apply liquid gasket to the threads.
- Lh** : Left-hand threads.
- M** : Apply molybdenum disulfide grease.
- O** : Apply an oil to the threads and seating surface.
- S** : Tighten the fasteners following the specified sequence.
- SS** : Apply silicone sealant.
- St** : Stake the fasteners to prevent loosening.
- R** : Replacement parts

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

**Basic Torque for General Fasteners**

Threads dia. (mm)	Torque		
	N-m	kg-m	ft-lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in-lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in-lb
8	14 ~ 19	1.4 ~ 1.9	10.0 ~ 13.5
10	25 ~ 34	2.6 ~ 3.5	19.0 ~ 25
12	44 ~ 61	4.5 ~ 6.2	33 ~ 45
14	73 ~ 98	7.4 ~ 10.0	54 ~ 72
16	115 ~ 155	11.5 ~ 16.0	83 ~ 115
18	165 ~ 225	17.0 ~ 23.0	125 ~ 165
20	225 ~ 325	23 ~ 33	165 ~ 240

Fastener	Torque			Remarks
	N-m	kg-m	ft-lb	
<b>Fuel System:</b>				
Vacuum Valve Drain Screw	1.0	0.10	9 in-lb	
<b>Cooling System:</b>				
Coolant Hose Clamp Screws (Carburetor)	1.5	0.15	13 in-lb	
Coolant Hose Clamp Screws	2.0	0.20	17 in-lb	
Coolant By-pass Cover Bolts	11	1.1	95 in-lb	L
Coolant Fitting Nozzles	5.4	0.55	48 in-lb	
Coolant Blind Bolt (Cylinder)	5.4	0.55	48 in-lb	
Coolant Blind Bolt (Water Pump)	11	1.1	95 in-lb	
Coolant Drain Plug (Water Pump)	11	1.1	95 in-lb	
Radiator Fan Switch	18	1.8	13.0	
Water Temperature Sensor	7.8	0.80	69 in-lb	SS
Impeller Bolt	9.8	1.0	87 in-lb	
Water Pump Cover Bolts	11	1.1	95 in-lb	
Thermostat Housing Cover Bolts	11	1.1	95 in-lb	
Water Hose Banjo Bolt	11	1.1	95 in-lb	
<b>Engine Top End:</b>				
Spark Plugs	13	1.3	113 in-lb	
Air Suction Valve Cover Bolts	11	1.1	95 in-lb	
Vacuum Blind Bolts	5.4	0.55	48 in-lb	
Vacuum Fittings	5.4	0.55	48 in-lb	
Cylinder Head Cover Bolts	9.8	1.0	87 in-lb	
Pickup Coil Cover Bolts	11	1.1	95 in-lb	
Camshaft Chain Tensioner Mounting Bolts	11	1.1	95 in-lb	
Camshaft Cap Bolts	12	1.2	104 in-lb	
Camshaft Chain Guide Bolts (Upper)	12	1.2	104 in-lb	
Cam Sensor Rotor Bolt	12	1.2	104 in-lb	L
Cylinder Head Bolts: M10 New Bolts	54	5.5	40	S, O (Washer)
M10 Used Bolts	49	5.0	36	S, O (Washer)
M6	12	1.2	104 in-lb	S
Cylinder Head Jacket Plugs	22	2.2	16.0	L

# 1-20 GENERAL INFORMATION

Fastener	Torque			Remarks
	N-m	kg-m	ft-lb	
Camshaft Chain Guide Bolt (Crankcase)	25	2.5	18.0	
Carburetor Holder Bolts	12	1.2	104 in-lb	
Baffle Plate Bolts	11	1.1	95 in-lb	
Muffler and Exhaust Pipe Connection Nuts	34	3.5	25	
<b>Clutch</b>				
Clutch Cover Bolts	11	1.1	95 in-lb	
Clutch Cover Damper Bolts	6.9	0.7	61 in-lb	L
Clutch Spring Bolts	8.8	0.90	78 in-lb	
Clutch Hub Nut	135	14	100	R
<b>Engine Lubrication System:</b>				
Oil Filler Plug	1.0 or Hand-Tight	0.10 or Hand-Tight	9 in-lb or Hand-Tight	
Engine Drain Plug	20	2.0	14.5	
Oil Filter (Cartridge type)	9.8	1.0	87 in-lb	R, O
Oil Cooler Mounting Bolt	78	7.8	56	O
Oil Pan Bolts	11	1.1	95 in-lb	
Oil Pipe Holder Bolts	12	1.2	104 in-lb	L
Oil Pressure Relief Valve	15	1.5	11.0	L
Oil Pressure Switch	15	1.5	11.0	SS
Oil Pressure Switch Terminal Screw	1.5	0.15	13 in-lb	
Impeller Bolt	9.8	1.0	87 in-lb	
<b>Engine Removal/Installation:</b>				
Engine Mounting Bolts and Nuts	44	4.5	33	
Engine Mounting Bracket Bolts	23	2.3	16.5	
Engine Mounting Clamp Bolts	23	2.3	16.5	
<b>Crankshaft/Transmission:</b>				
Breather Plate Bolts	9.8	1.0	87 in-lb	L
Crankcase Damper Cover Bolts	12	1.2	104 in-lb	
Crankcase Bolts $\phi$ 9 L81	42	4.3	30	M, S
$\phi$ 9 L96	47	4.8	35	M, S
$\phi$ 8	27	2.8	20	S
$\phi$ 7	20	2.0	14.5	S
$\phi$ 6	12	1.2	104 in-lb	S
Oil Passage Plugs	20	2.0	14.5	L
Connecting Rod Big End Nuts	in the text	←	←	←
Timing Rotor Bolt	39	4.0	29.0	
Oil Pressure Switch	15	1.5	11.0	SS
Gear Positioning Lever Bolt	12	1.2	104 in-lb	L
Shift Shaft Return Spring Pin (Bolt)	27	2.8	20	L
Neutral Switch	15	1.5	11.0	
Shift Drum Bearing Holder Bolt	12	1.2	104 in-lb	L
Shift Drum Bearing Holder Screw	5.4	0.55	48 in-lb	L
Shift Drum Cam Bolt	12	1.2	104 in-lb	L
<b>Wheels/Tires:</b>				
Front Axle Clamp Bolts	20	2.0	14.5	
Front Axle Nut	110	11.0	80	
Rear Axle Nut	110	11.0	80	




Fastener	Torque			Remarks
	N-m	kg-m	ft-lb	
<b>Final Drive:</b>				
Engine Sprocket Nut	125	13.0	94	O
Engine Sprocket Cover Bolts	11	1.1	95 in-lb	
Engine Sprocket Cover Damper Bolt	6.9	0.7	61 in-lb	L
Rear Sprocket Nuts	74	7.5	54	
Rear Sprocket Studs	-	-	-	L
<b>Brakes:</b>				
Bleed Valves	7.8	0.80	69 in-lb	
Front Brake Hose Joint Bracket Bolts	6.9	0.7	61	
Brake Hose Banjo Bolts	25	2.5	18.0	
Brake Lever Pivot Bolt	1.0	0.10	9 in-lb	
Brake Lever Pivot Bolt Locknut	5.9	0.60	52 in-lb	
Front Brake Reservoir Cap Stopper Screws	1.5	0.15	13 in-lb	
Front Brake Reservoir Bracket Bolt	6.9	0.7	61	
Front Brake Light Switch Screws	1.0	0.10	9 in-lb	
Front Master Cylinder Clamp Bolts	8.8	0.9	78 in-lb	S
Pad Spring Screws (Front Caliper)	2.9	0.30	26 in-lb	
Caliper Mounting Bolts (Front)	34	3.5	25	
Caliper Assembly Bolts (Front)	21	2.1	15.0	
Front Brake Disc Mounting Bolts	23	2.3	16.5	
Rear Brake Disc Mounting Bolts	23	2.3	16.5	
Caliper Mounting Bolts (Rear)	25	2.5	18.0	
Rear Master Cylinder Guard Bolts	23	2.3	16.5	
Rear Master Cylinder Push Rod Locknut	18	1.8	13.0	
<b>Suspension:</b>				
Front Fork Clamp Bolts (Upper)	20	2.0	14.5	
Front Fork Clamp Bolts (Lower)	20	2.0	14.5	
Front Fork Top Plugs	23	2.3	16.5	
Piston Rod Nut	27	2.8	20	
Front Fork Bottom Allen Bolts	39	4.0	29	L
Front Axle Clamp Bolts	20	2.0	14.5	
Rear Shock Absorber Nuts (Upper and Lower)	34	3.5	25	
Swingarm Pivot Shaft Nut	110	11.0	80	
Swingarm Pivot Shaft Lock Nut	98	10.0	72	
Uni-Trak				
Rocker Arm Nut	34	3.5	25	
Tie-Rod Nuts	59	6.0	43	
<b>Steering:</b>				
Steering Stem Head Nut	39	4.0	29	
Steering Stem Nut	4.9	0.50	43 in-lb	
Handlebar Bolts	34	3.5	25	L
Handlebar Holder Bolts	23	2.3	16.5	
Handlebar Holder Position Bolts	9.8	1.0	87 in-lb	L
Handlebar Weight Screws	-	-	-	L
Handlebar Switch Housing Screws	3.4	0.35	30 in-lb	
<b>Frame:</b>				
Footpeg Holder Bolts	34	3.5	25	L
Side Stand Bracket Bolts	49	5.0	36	
<b>Electrical System:</b>				
Spark Plugs	13	1.3	113 in-lb	
Alternator Rotor Bolt	110	11.0	80	
Stator Coil Bolts	11	1.1	95 in-lb	
Alternator Lead Holding Plate Bolts	8.3	0.85	74 in-lb	

## 1-22 GENERAL INFORMATION

Fastener	Torque			Remarks
	N-m	kg-m	ft-lb	
Engine Ground Lead Terminal Bolt	9.8	1.0	87 in-lb	L (1)
Alternator Cover Bolts	11	1.1	95 in-lb	
Pickup Coil Cover Bolts	11	1.1	95 in-lb	
Pickup Coil Bolts	5.9	0.60	52 in-lb	
Timing Rotor Bolt	39	4.0	29.0	L
Starter Motor Mounting Bolts	11	1.1	95 in-lb	
Starter Clutch Bolts	12	1.2	104 in-lb	
Handlebar Switch Housing Screws	3.4	0.35	30 in-lb	
Radiator Fan Switch	18	1.8	13.0	SS
Water Temperature Sensor	7.8	0.80	69 in-lb	
Oil Pressure Switch	15	1.5	11.0	
Oil Pressure Switch Terminal Bolt	1.5	0.15	13 in-lb	
Neutral Switch	15	1.5	11.0	SS
Starter Lockout Switch Screws	1.0	0.10	9 in-lb	

**Special Tools and Sealant**


Piston Ring Pliers: 57001-115

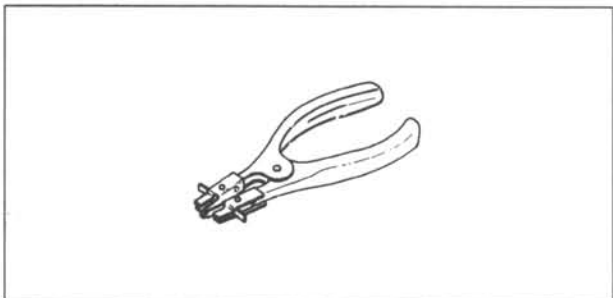


Compression Gauge: 57001-221




Inside Circlip Pliers: 57001-143

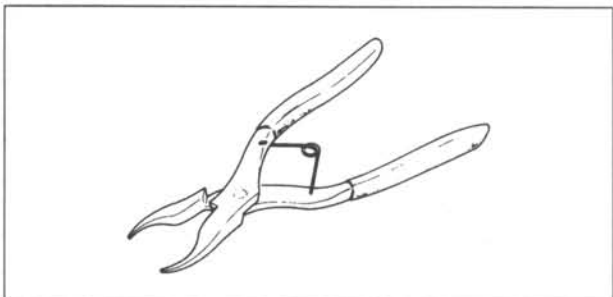


Valve Spring Compressor Assembly: 57001-241

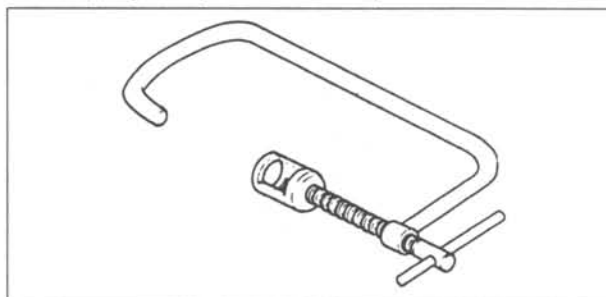


Outside Circlip Pliers: 57001-144

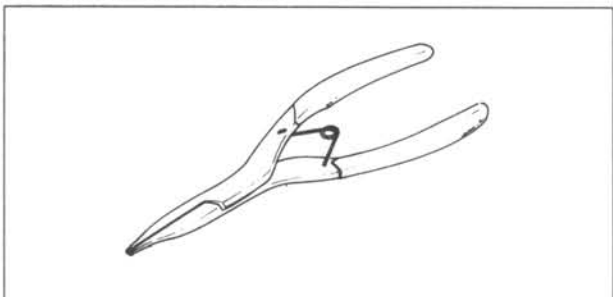

Piston Pin Puller Assembly: 57001-910

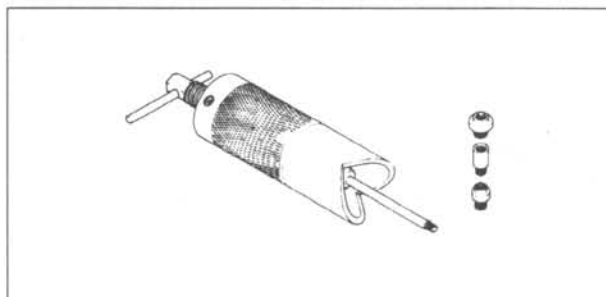


Bearing Puller: 57001-158

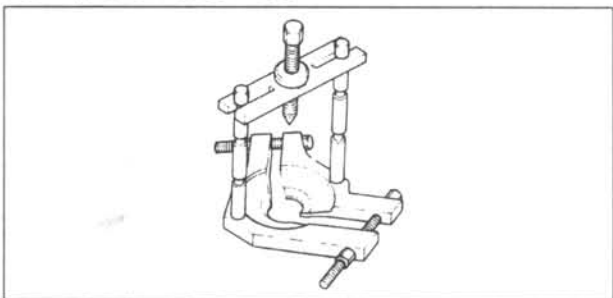

Fuel Level Gauge: 57001-1017


Oil Pressure Gauge, 10 kg/cm<sup>2</sup>: 57001-164

Oil Pressure Gauge Adapter, PT 1/8: 57001-1033

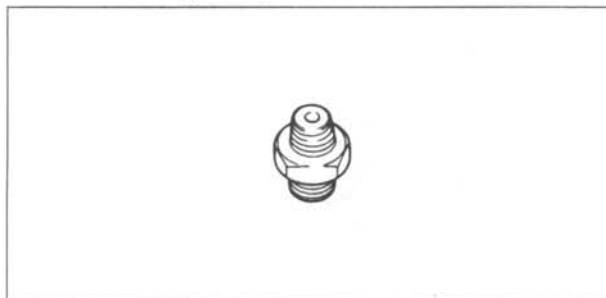


## 1-24 GENERAL INFORMATION


Oil Seal & Bearing Remover: 57001-1058

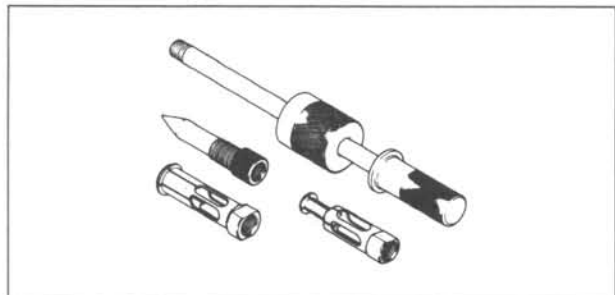


Rim Protector: 57001-1063

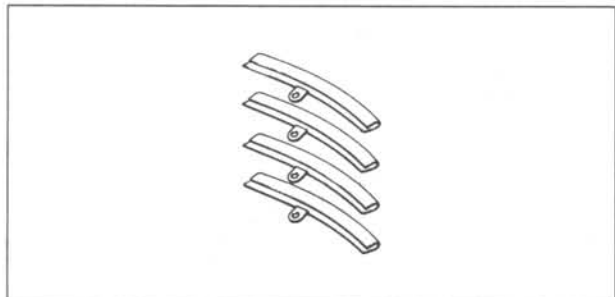


Bead Breaker Assembly: 57001-1072

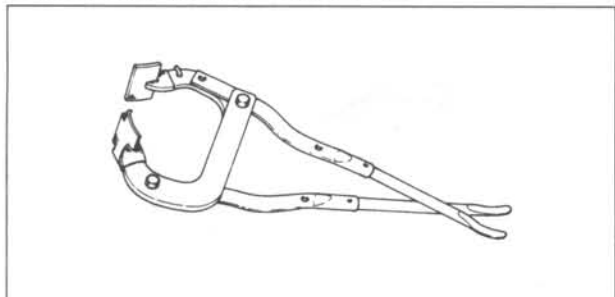


Head Pipe Outer Race Press Shaft: 57001-1075

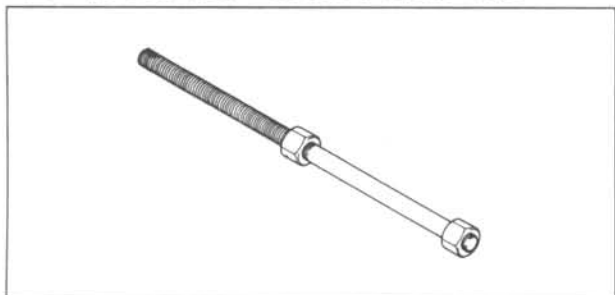


Head Pipe Outer Race Driver: 57001-1077

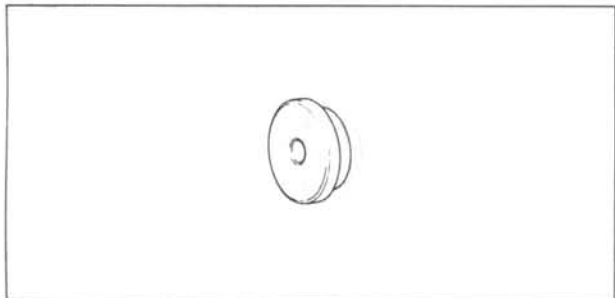


Steering Stem Nut Wrench: 57001-1100

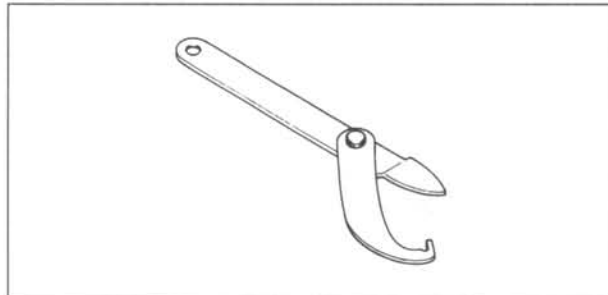


Valve Seat Cutter, 45° -  $\phi 27.5$ : 57001-1114

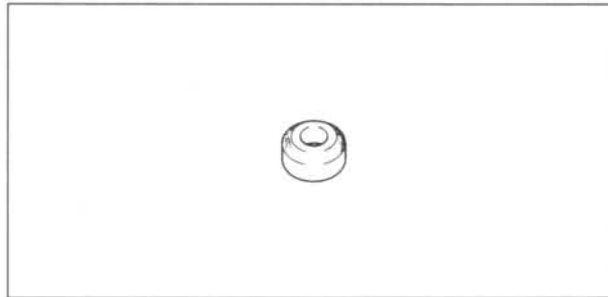


Valve Seat Cutter, 45° -  $\phi 32$ : 57001-1115

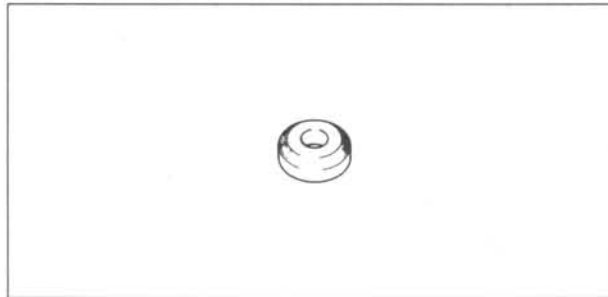


Valve Seat Cutter, 32° -  $\phi 28$ : 57001-1119

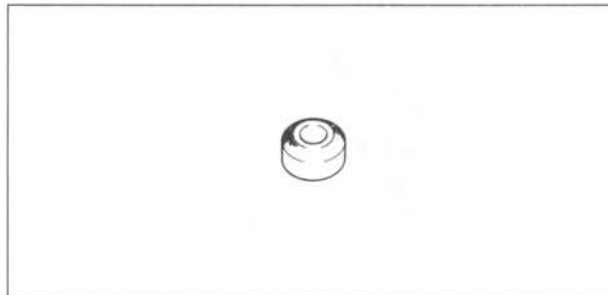


Valve Seat Cutter, 32° -  $\phi 30$ : 57001-1120

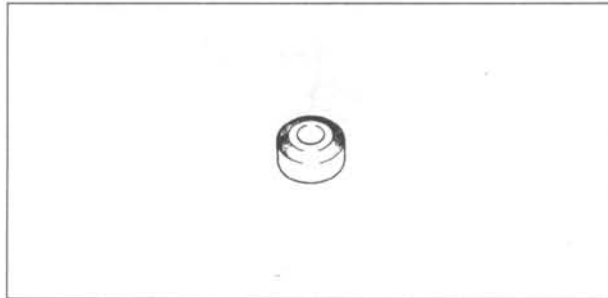

Valve Seat Cutter, 60° -  $\phi 30$ : 57001-1123

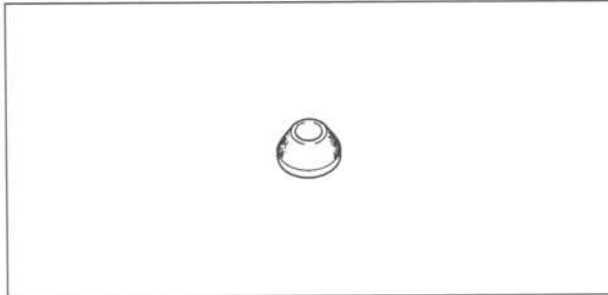


Valve Seat Cutter Holder Bar: 57001-1128

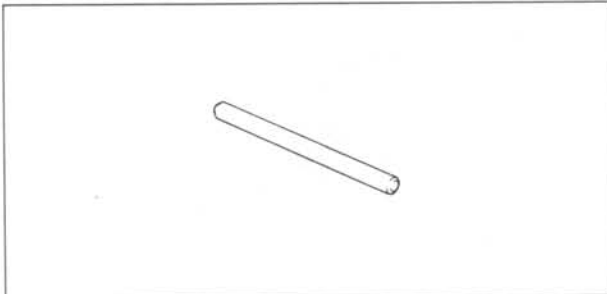


Bearing Driver Set: 57001-1129




Valve Spring Compressor Adapter,  $\phi 22$ : 57001-1202

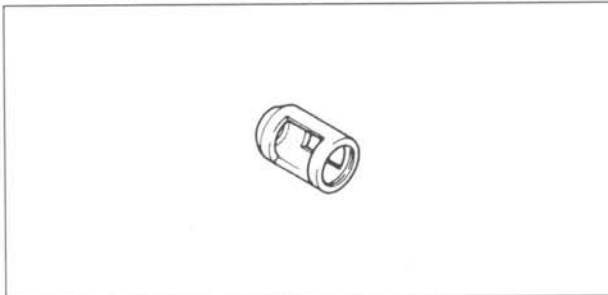


Rotor Puller, M16/M18/M20/M22 x 1.5: 57001-1216

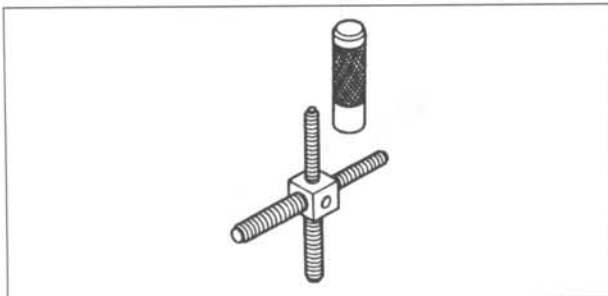


Fork Outer Tube Weight: 57001-1218

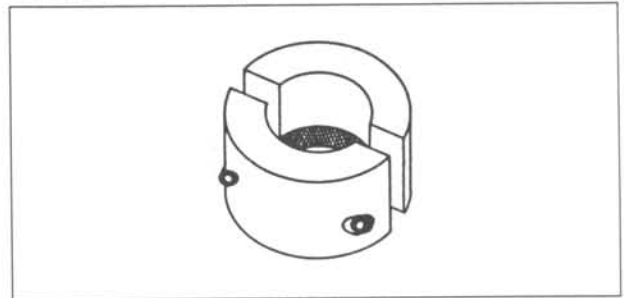


Front Fork Oil Seal Driver: 57001-1219

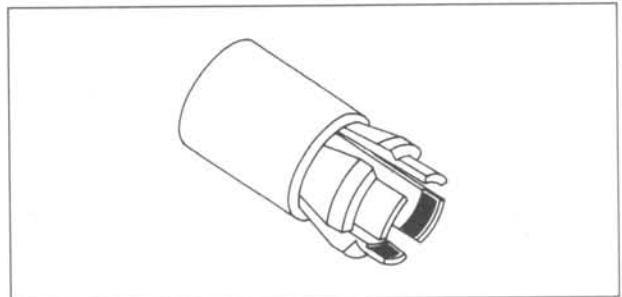


Jack: 57001-1238

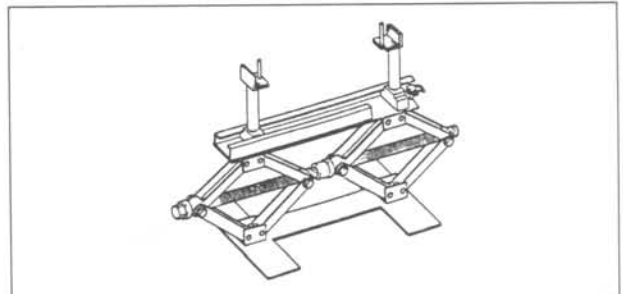

Pilot Screw Adjuster, A: 57001-1239

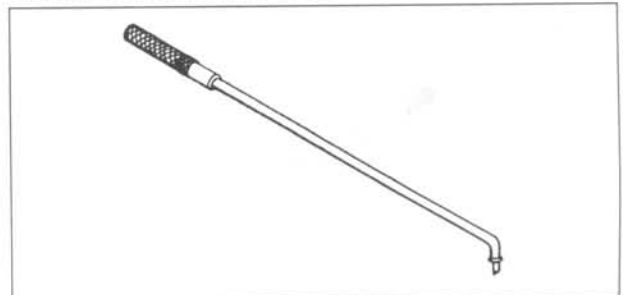


Clutch Holder: 57001-1243

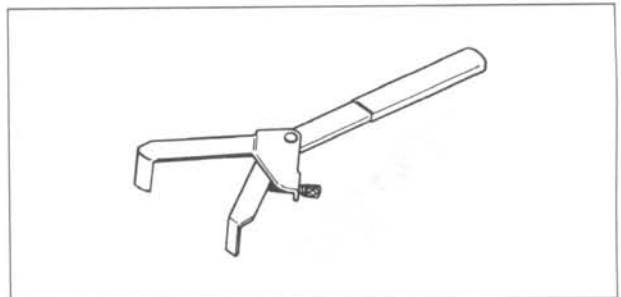


## 1-26 GENERAL INFORMATION


Oil Filter Wrench: 57001-1249

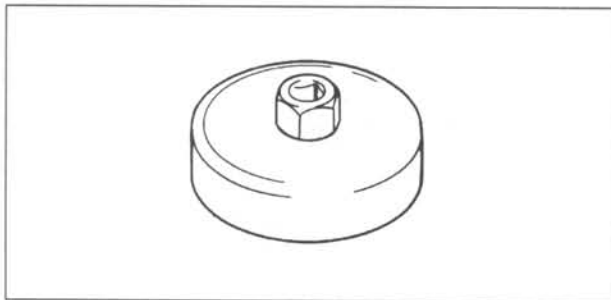


Bearing Remover Head,  $\phi 20 \times \phi 22$ : 57001-1293

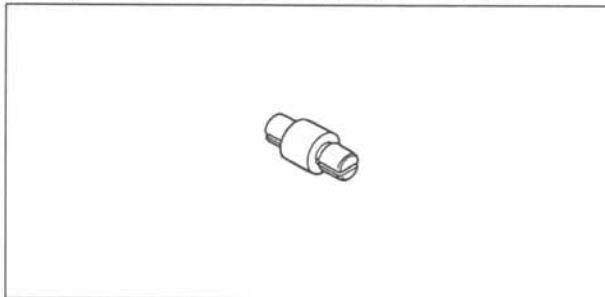


Spark Plug Wrench, Hex 16: 57001-1262

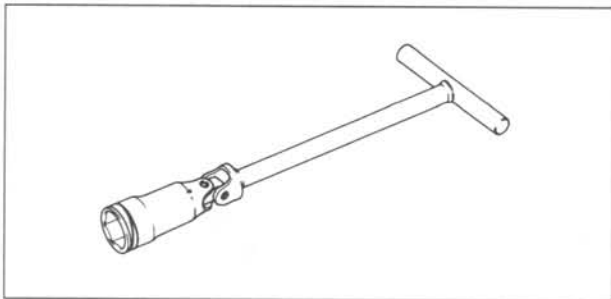


Flywheel Holder: 57001-1313

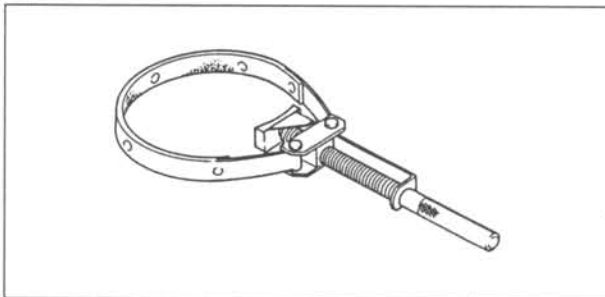


Carburetor Drain Plug Wrench, Hex 3: 57001-1269

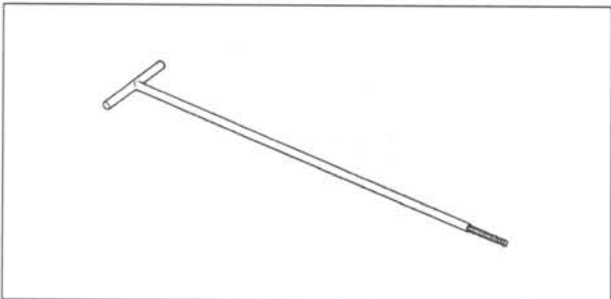


Compression Gauge Adapter, M10 X 1.0: 57001-1317

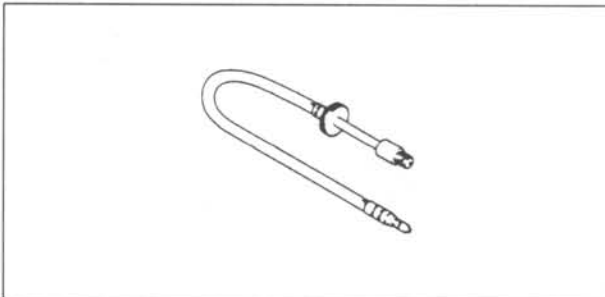


Fork Piston Rod Puller, M12 x 1.25: 57001-1289

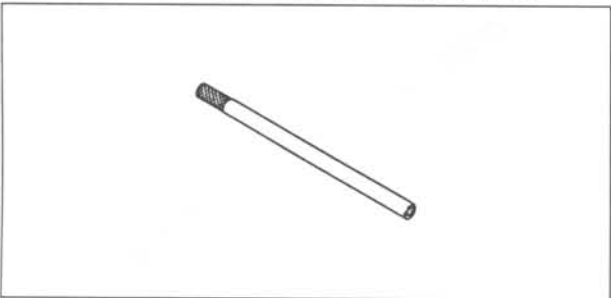

Valve Seat Cutter Holder,  $\phi 4.5$ : 57001-1330

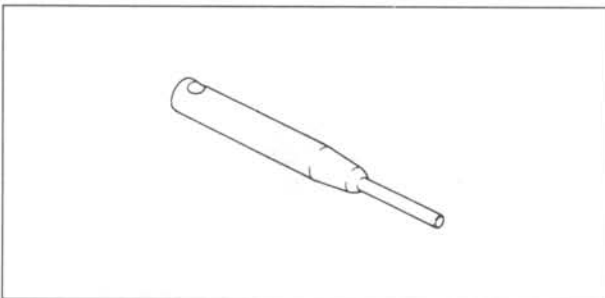

Fork Oil Level Gauge: 57001-1290

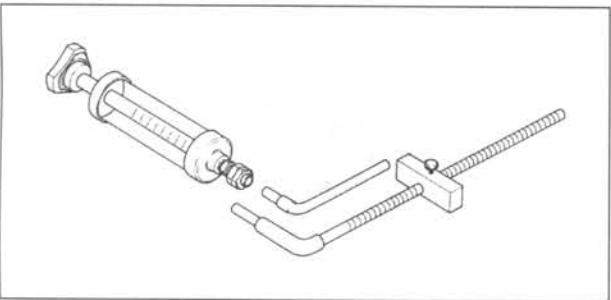

Valve Guide Arbor,  $\phi 4.5$ : 57001-1331







Valve Guide Reamer,  $\Phi 4.5$ : 57001-1333




Vacuum Gauge: 57001-1369

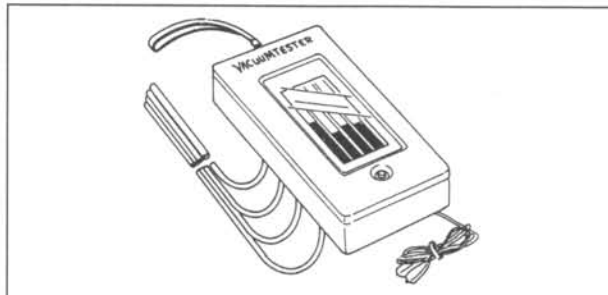


Valve Seat Cutter, 60° -  $\Phi 33$ : 57001-1334

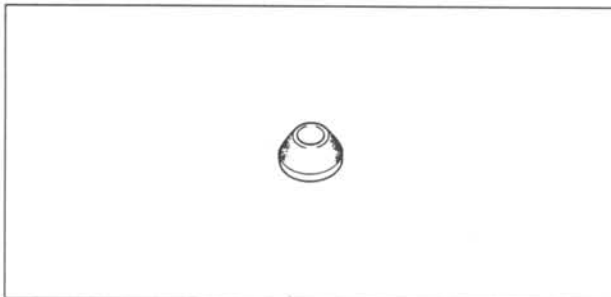


Socket Wrench: 57001-1370

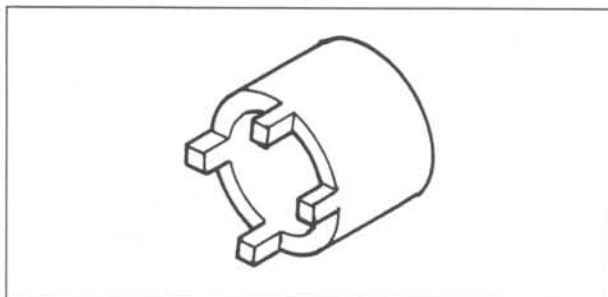


Flywheel & Pulley Holder: 57001-1343

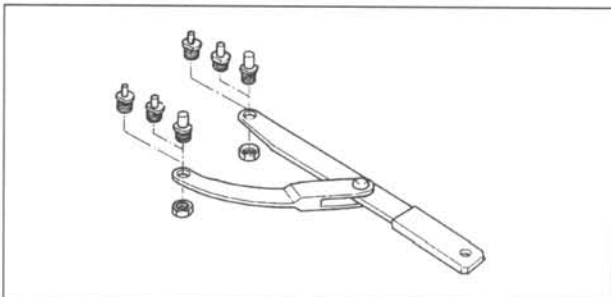


Bearing Remover Shaft,  $\Phi 13$ : 57001-1377

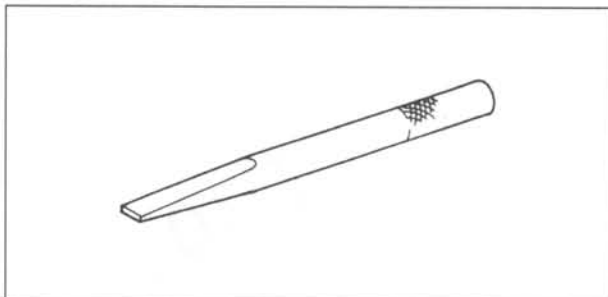


Steering Stem Bearing Driver: 57001-1344

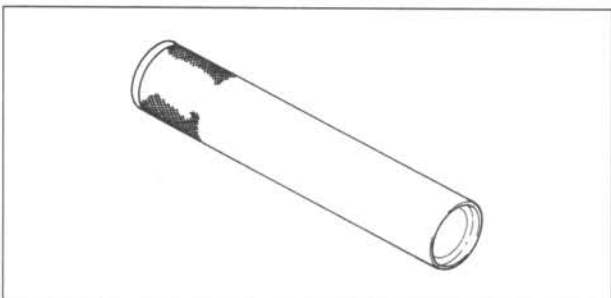


Hand Tester: 57001-1394

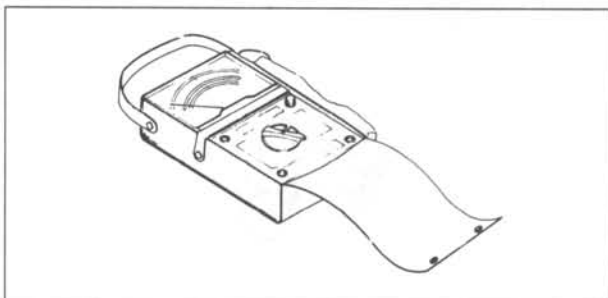

Steering Stem Bearing Driver Adapter: 57001-1345

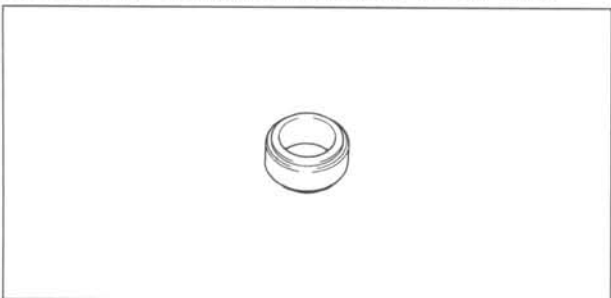


Rotor Puller, M38X1.5: 57001-1405

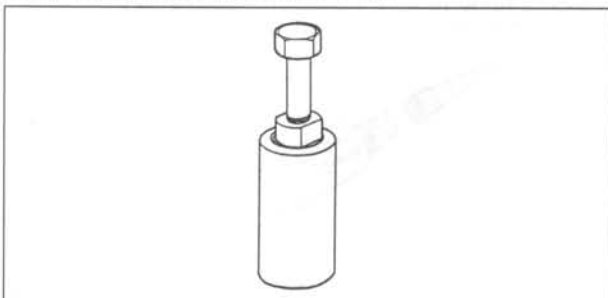


## 1-28 GENERAL INFORMATION

---


Fork Cylinder Holder: 57001-1406

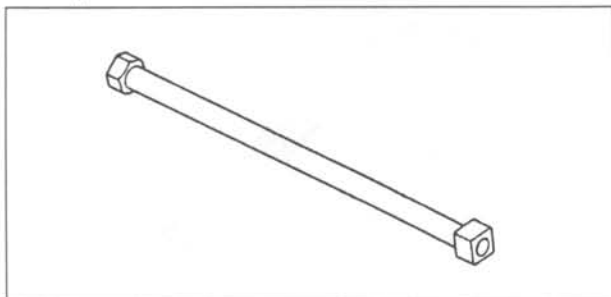


Throttle Sensor Setting Adapter: 57001-1400

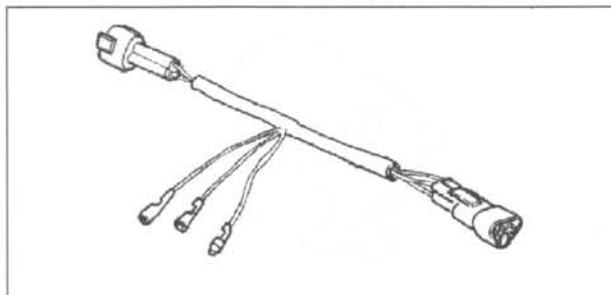


Box Wrench, Hex16 x 140 (Owner's Tool): 92110-1146

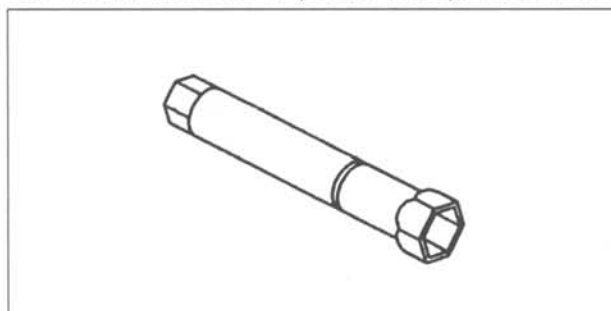


Pressure Cable Luber: k56019-021

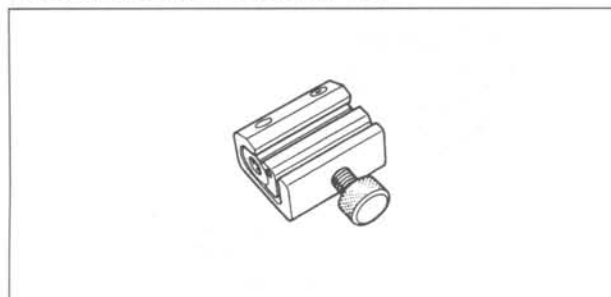


Kawasaki Bond (Silicone Sealant): 56019-120

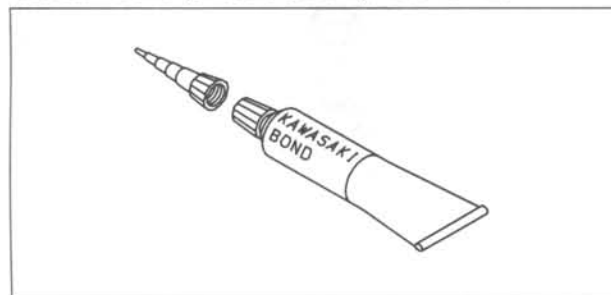


## Cable, Wire, and Hose Routing

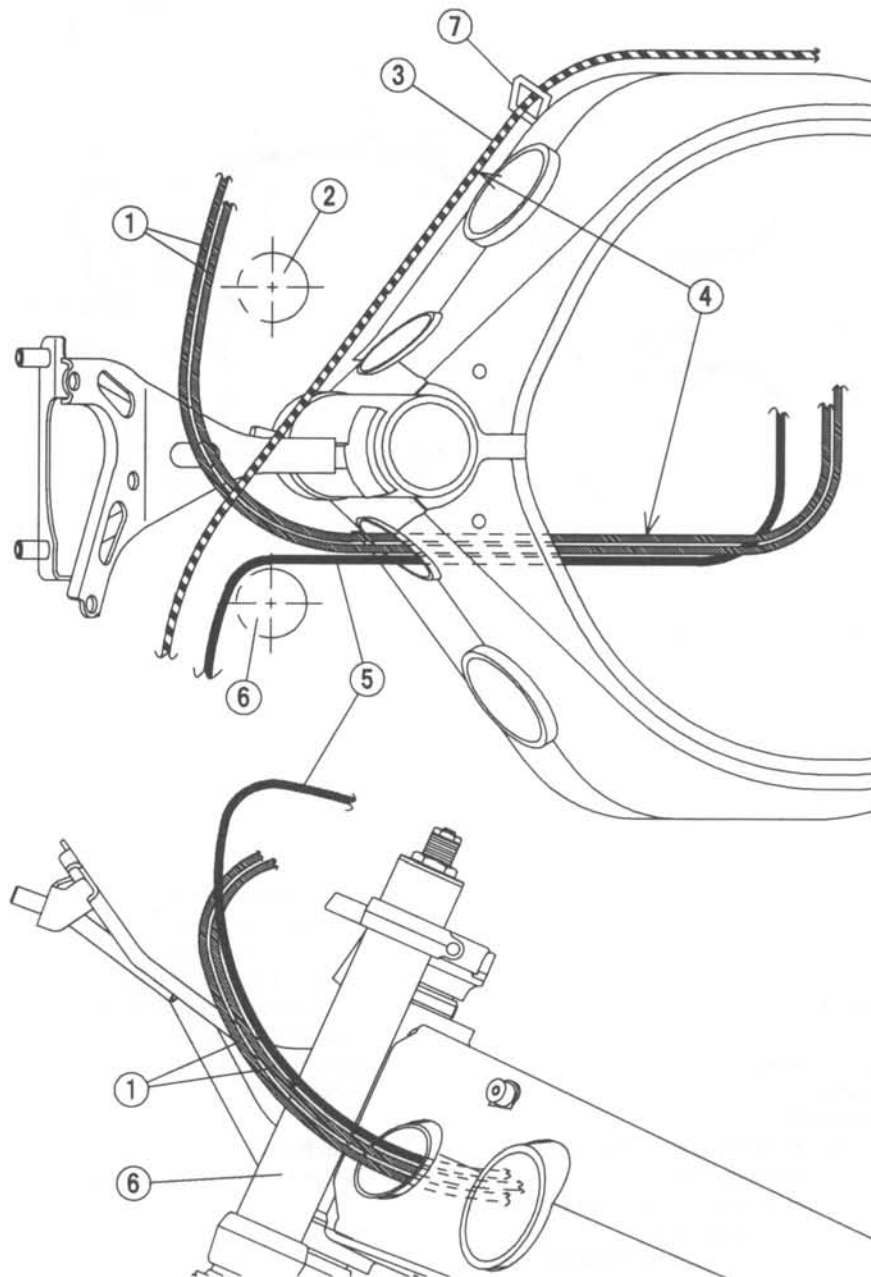



1. Throttle Cables
2. Right Front Fork Inner Tube
3. Clutch Cable
4. Run the speedometer cables under the air intake duct and air cleaner housing.
5. Choke Cables
6. Left Front Fork Inner Tube
7. Clamp Clutch Cable

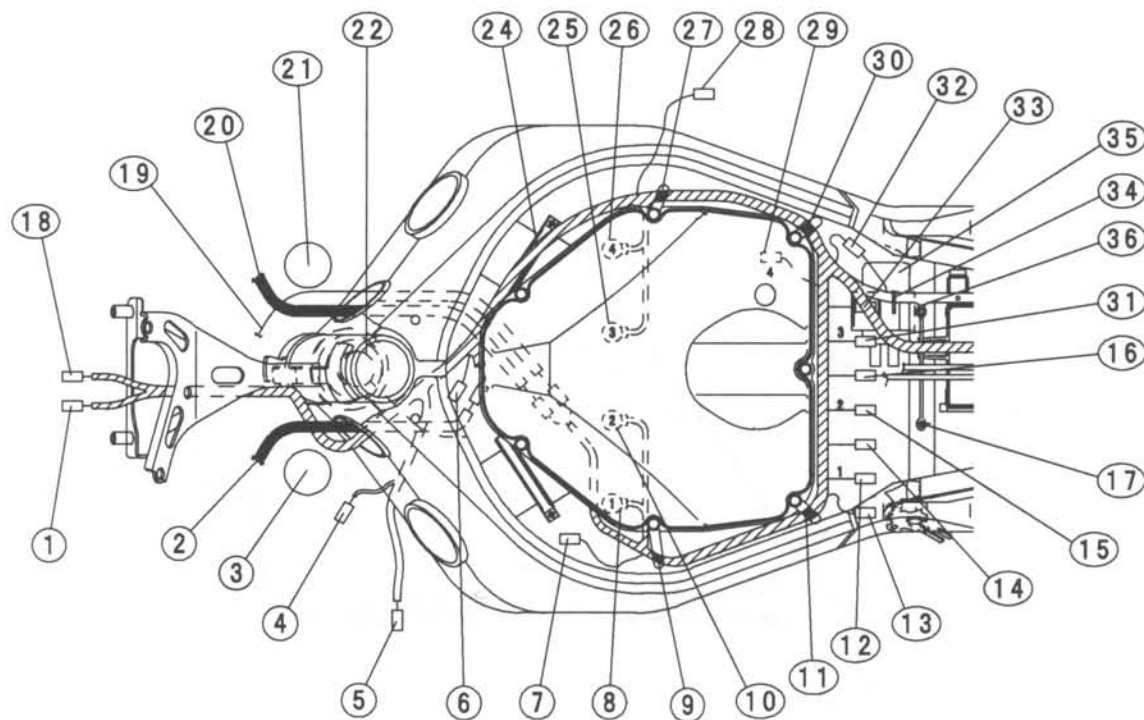


- |                                                                         |                                                         |
|-------------------------------------------------------------------------|---------------------------------------------------------|
| 1. Front Sub Harness Connector                                          | 28. Throttle Sensor Lead                                |
| 2. Left Handlebar Switch Lead                                           | 29. #4, Fuel Cut Valve Connector<br>(CA, D-Type Models) |
| 3. Left Front Fork Inner Tube                                           | 30. Clamp (Position the white tape here)                |
| 4. Horn Lead Connector                                                  | 31. #3, Fuel Cut Valve Connector<br>(CA, D-Type Models) |
| 5. Fan Switch Lead Connector                                            | 32. Fuel Pump Connector                                 |
| 6. Fan Lead Connector                                                   | 33. Pickup Coil, Oil Pressure Switch Lead Connector     |
| 7. Cam Sensor Connector                                                 | 34. Band                                                |
| 8. #1, Stick Coil (Coincident the coil and harness number)              | 35. Fuel Pump                                           |
| 9. Clamp (Position the white tape here)                                 | 36. Water Temperature Sensor                            |
| 10. #2, Stick Coil (Coincident the coil and harness number)             |                                                         |
| 11. Clamp (Position the white tape here)                                |                                                         |
| 12. #1, Fuel cut Valve Connector (CA, D-Type Models)                    |                                                         |
| 13. Sidestand Switch Lead Connector                                     |                                                         |
| 14. Speed Sensor Lead Connector                                         |                                                         |
| 15. #2, Fuel Cut Valve Connector (CA, D-Type Models)                    |                                                         |
| 16. Water Temperature Sensor, Neutral Switch, Alternator Lead Connector |                                                         |
| 17. Frame Ground                                                        |                                                         |
| 18. Meter Unit Connector                                                |                                                         |
| 19. Ignition Switch Lead                                                |                                                         |
| 20. Right Handlebar Switch Lead                                         |                                                         |
| 21. Right Front Fork Inner Tube                                         |                                                         |
| 22. Horn                                                                |                                                         |
| 23. Clamp (Position the white tape here)                                |                                                         |
| 24. Main Harness                                                        |                                                         |
| 25. #3, Stick Coil (Coincident the coil and harness number)             |                                                         |
| 26. #4, Stick Coil (Coincident the coil and harness number)             |                                                         |
| 27. Clamp (Position the white tape here)                                |                                                         |

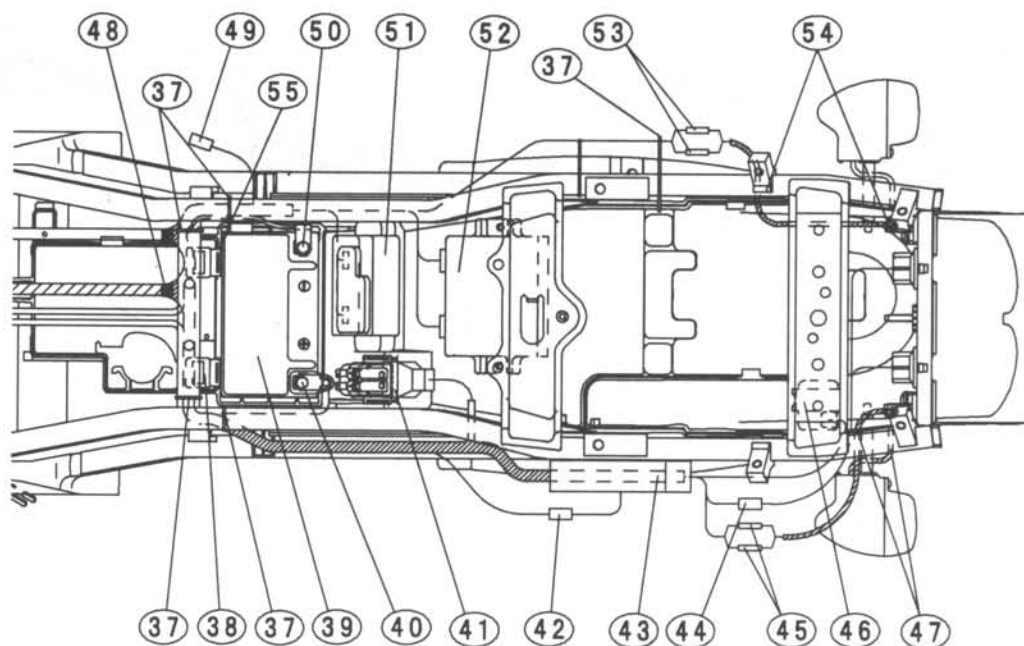


- 37. Bands
- 38. Turn Signal Light Relay
- 39. Battery
- 40. Battery Positive (+) Terminal
- 41. Starter Relay
- 42. Regulator/Rectifier Connector
- 43. Regulator/Rectifier
- 44. Tail/Brake Light Connector
- 45. Left Turn Signal Light Lead Connectors
- 46. Fuel Pump Relay
- 47. Run the Leads through the hole of the fender.
- 48. Position the white tape here.
- 49. Rear Brake Light Switch Lead Connector
- 50. Battery Negative (-) Terminal
- 51. Junction Box
- 52. IC Igniter
- 53. Right Turn Signal Light Lead Connectors
- 54. Run the leads through the hole of the fender.
- 55. Headlight Relay (Other than the US, CA and AS)

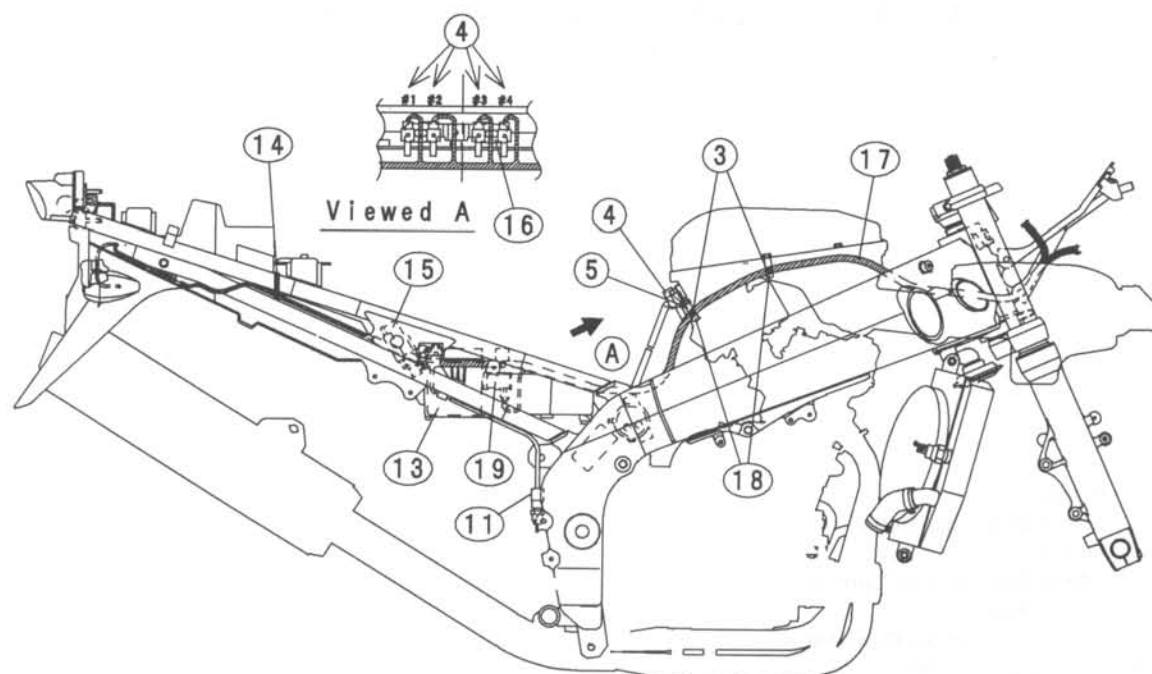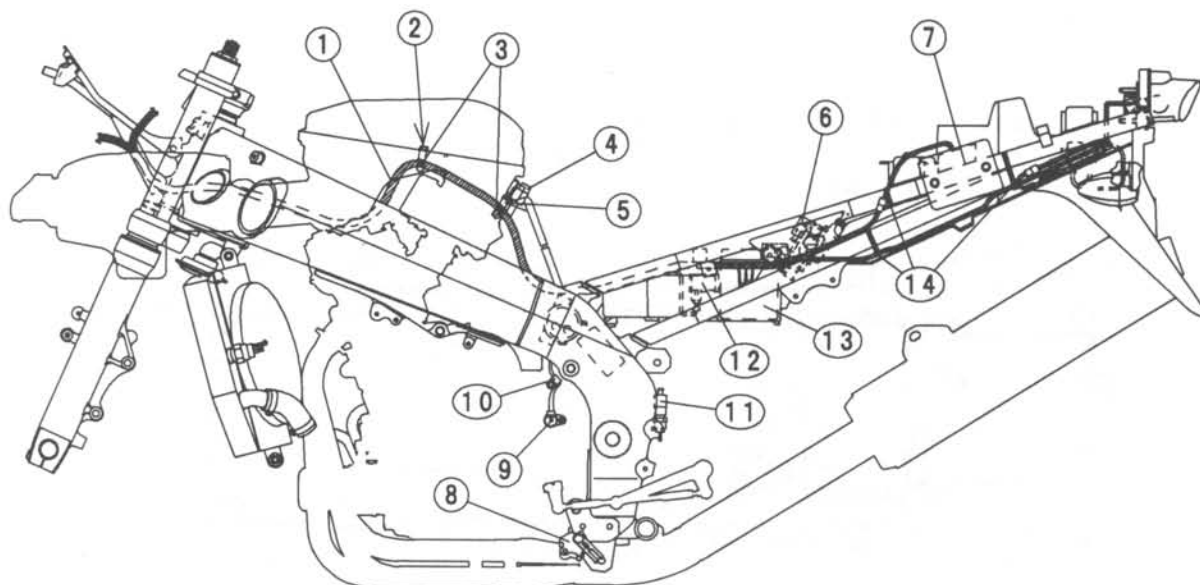

- |                                                          |                                                       |
|----------------------------------------------------------|-------------------------------------------------------|
| 1. Main Harness (Left Diverge Side)                      | 11. Rear Brake Light Switch                           |
| 2. Clamp                                                 | 12. Turn Signal Relay                                 |
| 3. White Tape                                            | 13. Battery                                           |
| 4. Fuel Cut Valve Connector (California and D-type only) | 14. Band                                              |
| 5. Clamp                                                 | 15. Junction Box                                      |
| 6. Starter Relay                                         | 16. Bracket (California and D-type only)              |
| 7. Igniter                                               | 17. Main Harness (Right Diverge Side)                 |
| 8. Side Stand Switch                                     | 18. White Tape                                        |
| 9. Speedo Sensor                                         | 19. Headlight Relay (other than the U.S.A and Canada) |
| 10. Clamp                                                |                                                       |

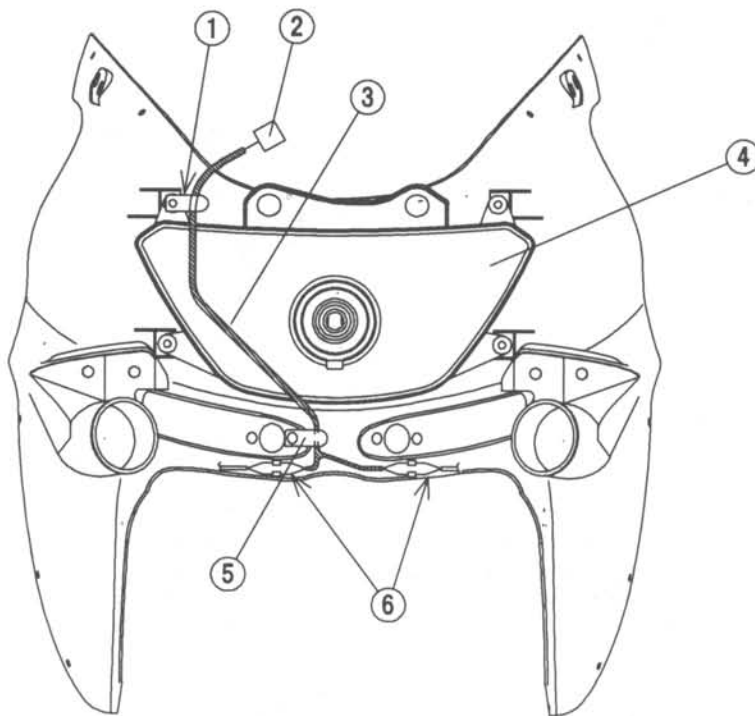


1. Clamp
2. Headlight Connector
3. Sub Harness
4. Headlight
5. Clamp
6. Run the turn signal light leads under the air intake ducts.

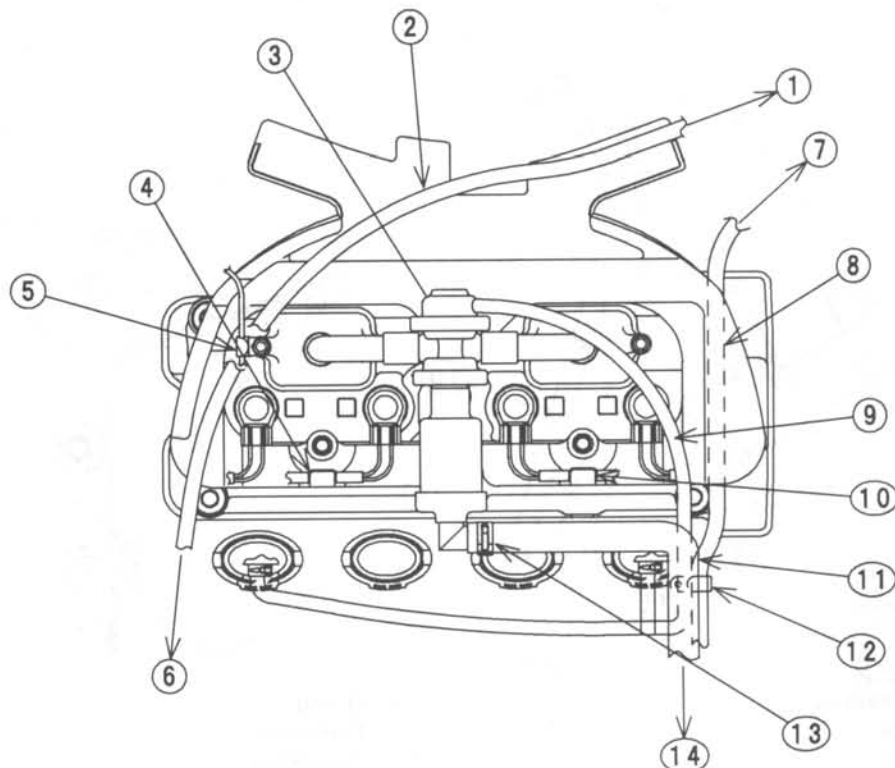

- |                                    |                                                               |
|------------------------------------|---------------------------------------------------------------|
| 1. To Radiator Cap Part            | 8. Coolant Hose (Run the coolant hose under the baffle plate) |
| 2. Coolant Reserve Tank Hose       | 9. Vacuum Hose (to #1,4 Fittings)                             |
| 3. Vacuum Switch Valve             | 10. Through the #3 stick coil lead.                           |
| 4. Through the #2 stick coil lead. | 11. Tube                                                      |
| 5. Clamp (Cam Sensor Lead)         | 12. Clamp (Coolant Hose and Vacuum Hose)                      |
| 6. To Reserve Tank                 | 13. Clamp                                                     |
| 7. To Radiator                     | 14. To Air Cleaner Housing                                    |






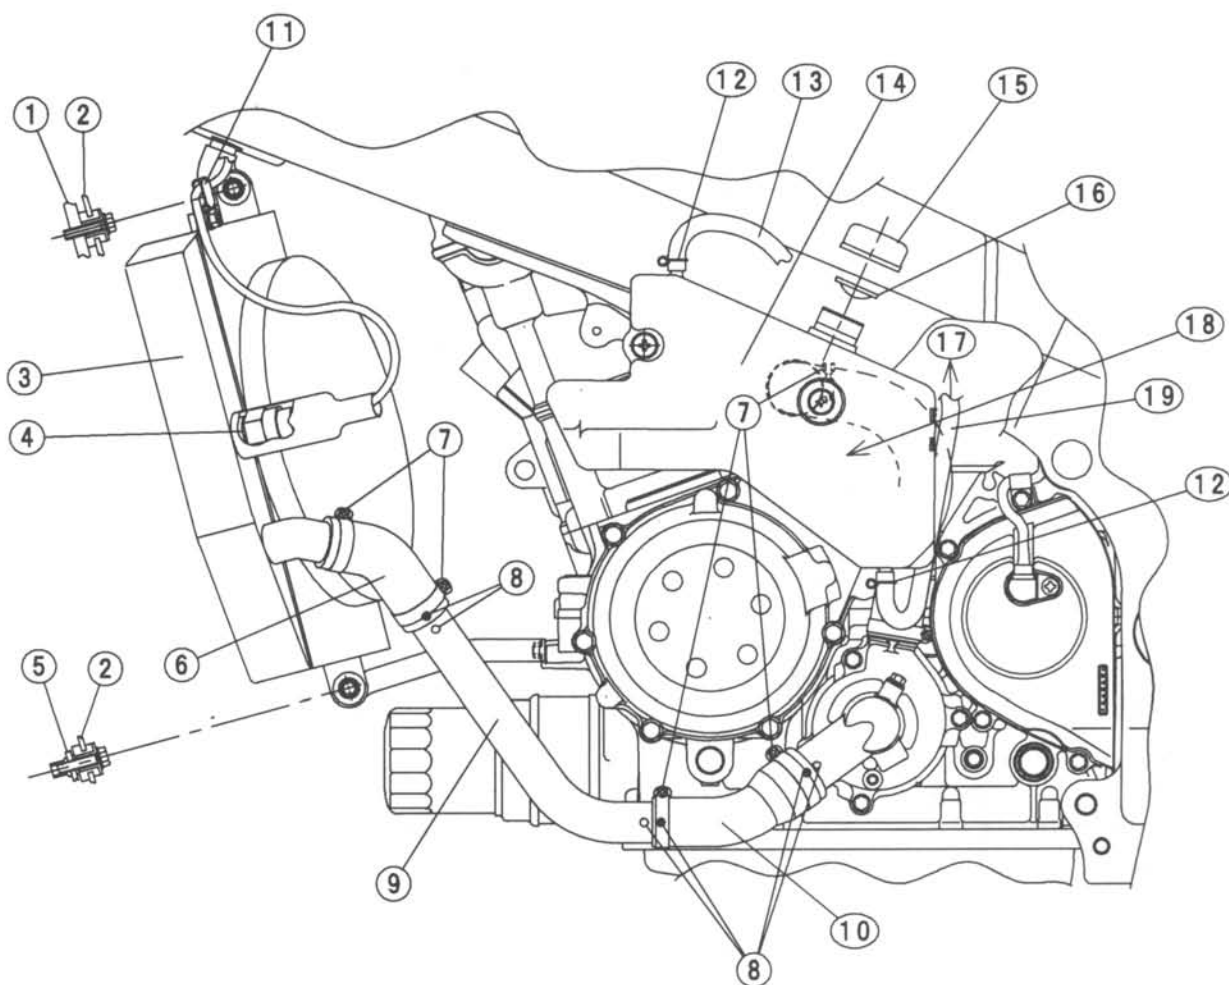


1. Frame
2. Radiator Bracket Part
3. Radiator
4. Radiator Fan Switch
5. Radiator Mount bracket
6. Coolant Hose
7. Install the clamps shown as illustrated.
8. Align the marks.
9. Coolant Pile
10. Coolant Hose

11. Clamp (Radiator Fan Switch Lead)
12. Clamp
13. Coolant Reserve Tank Drain Hose
14. Coolant Reserve Tank
15. Reserve Tank Cap
16. Rubber Seal
17. To Radiator Cap Part.
18. Run the alternator lead between the starter motor and coolant hose.
19. Coolant Hose

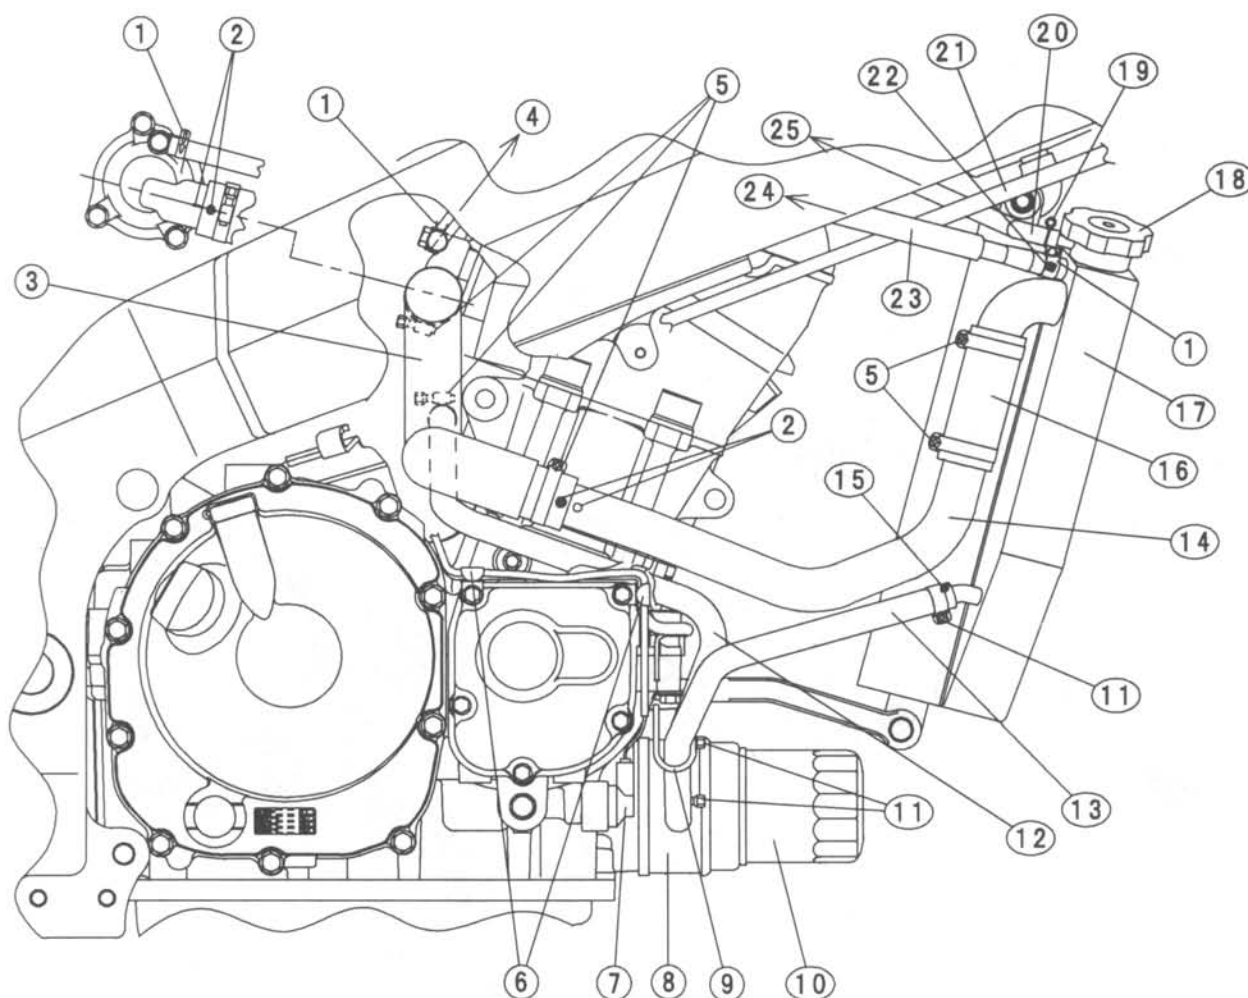


- |                                                         |                                               |                         |
|---------------------------------------------------------|-----------------------------------------------|-------------------------|
| 1. Clamp                                                | 11. Install the clamps shown as illustrated.  | 21. Clutch Cable        |
| 2. Align the mark                                       | 12. Oil Cooler Hose (OUT)                     | 22. Discriminative mark |
| 3. Coolant Hose                                         | 13. Oil Cooler Hose (IN)                      | 23. Coolant Hose        |
| 4. To Radiator                                          | 14. Coolant Pipe                              | 24. To Thermostat       |
| 5. Install the clamps shown as illustrated.             | 15. Install the hose is the mark face upward. | 25. To Reserve Tank     |
| 6. Clamps                                               | 16. Coolant Hose                              |                         |
| 7. Apply a thin coat grease to the oil presser terminal | 17. Radiator                                  |                         |
| 8. Oil Cooler                                           | 18. Radiator Cap                              |                         |
| 9. Clamp (Oil Cooler Hoses)                             | 19. Clamp                                     |                         |
| 10. Oil Filter                                          | 20. Reserve Tank Hose                         |                         |

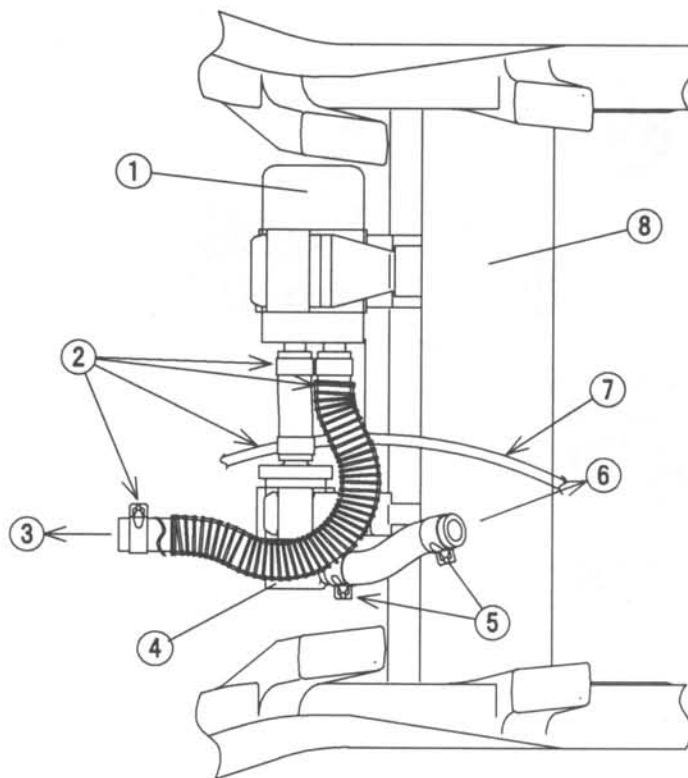

1. Fuel Pump
2. Clamp
3. To Carburetor
4. Fuel Filter
5. Clamp
6. To Fuel Tap
7. Starter Positive (+) Lead
8. Cross Pipe


(AR, FG, FR, IT, KR, NL, ST, UK Models)

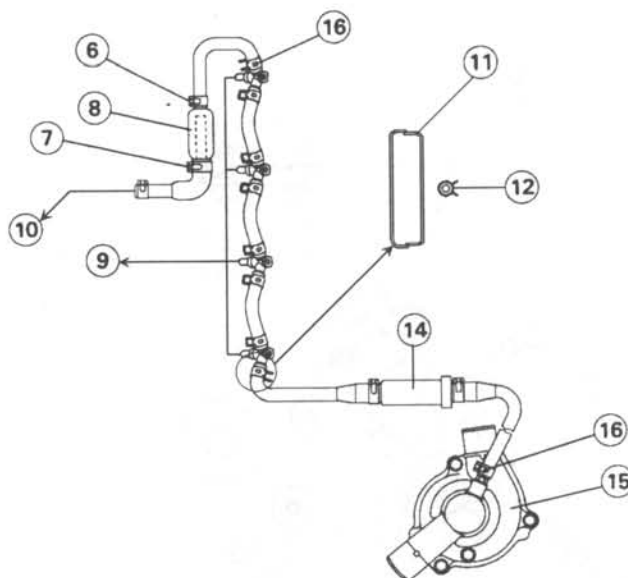


- AR: Austria  
 FG: Germany  
 FR: France  
 IT: Italy  
 KR: Korea  
 NL: Netherlands  
 ST: Switzerland  
 UK: U.K.

1. Tighten the clamp with the radiator right upper bolt.
2. Coolant By-pass Hose
3. Reserve Tank Hose
4. Run the by-pass hose outside the reserve tank hose.
5. Damper
6. Thin Clamp
7. Thick Clamp
8. Water Filter
9. To Carburetor
10. To Cylinder
11. Frame
12. Face the clip of the clamp opposite the spark plug leads.
13. Coolant Valve
14. Water Pump Cover
15. Clamp
16. To Carburetor

### Front Brake System

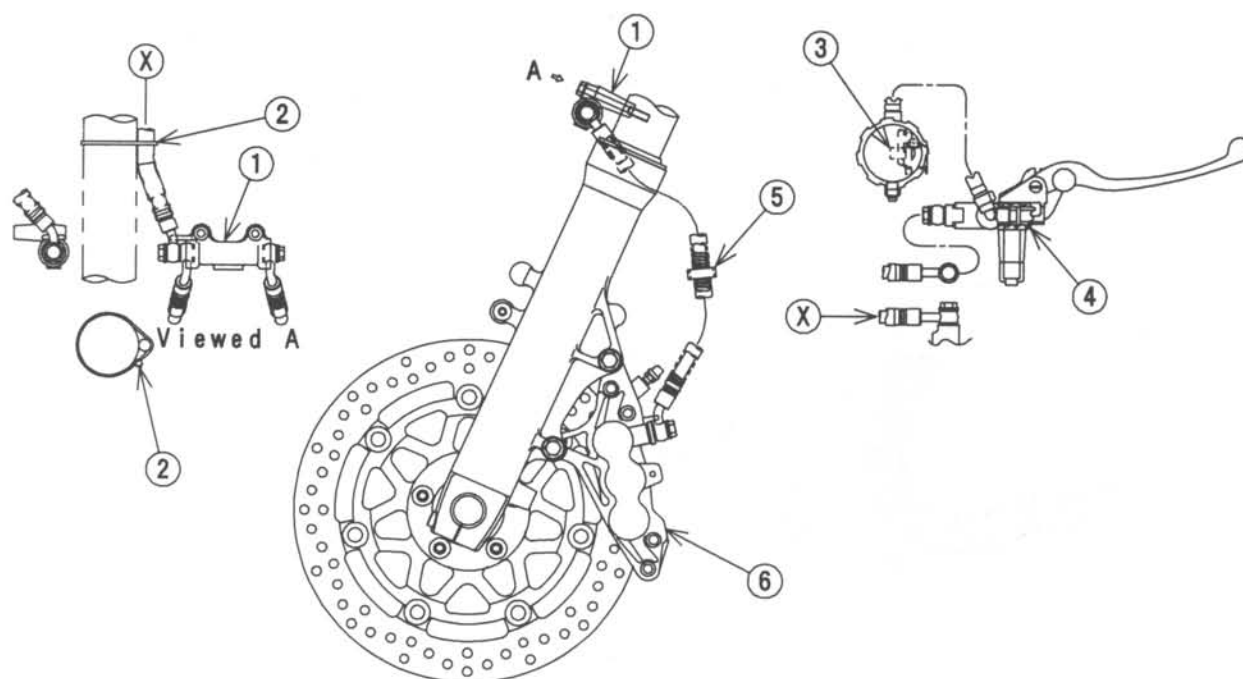


### Rear Brake System

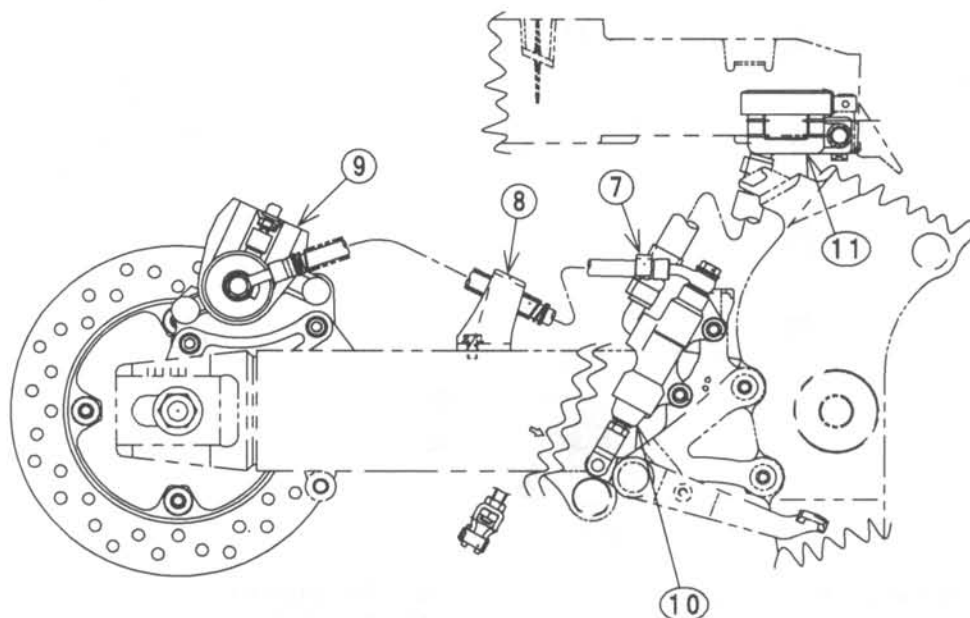


1. Brake Hose Joint
2. Band
3. Front Brake Reservoir
4. Front Brake Master Cylinder
5. Clamp (Installed the front fender)
6. Front Brake Caliper

7. Clamp
8. Clamp
9. Rear Brake Caliper
10. Rear Brake Master Cylinder
11. Rear Brake Reservoir


## Evaporative Emission Control System (California Model)

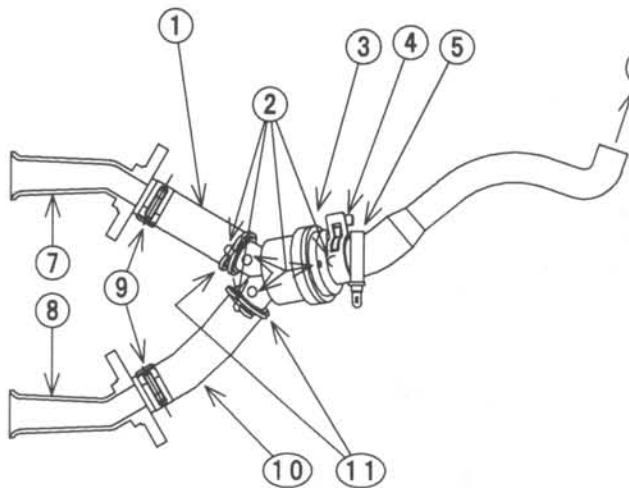


1. Vent Hose (Right)
2. Align the Paint and projection on the air filter.
3. Air Filter
4. Clamp
5. Clamp (Install the meter bracket)
6. To Vacuum Valve
7. Vent Pipe (Right)
8. Vent Pipe (Left)
9. Clamp
10. Vent Hose (Left)
11. Clamp

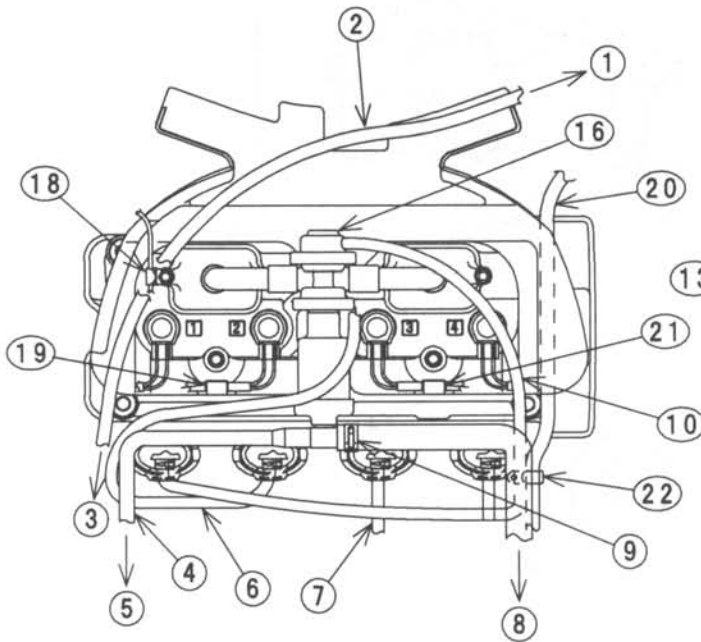

1. To Radiator Cap Part
2. Coolant Reserve Tank Hose
3. To Reserve Tank
4. Purge Hose (Green)
5. To Canister
6. Vacuum Hose (To Vacuum Valve)
7. Vacuum Hose (To separator)
8. To Air Cleaner Housing
9. Clamp (Direction the tab upward)
10. Vacuum Hose (To #1, 4 Fittings)
11. Air Cleaner Housing
12. Clamp
13. To Air Filter
14. Purge Hose (Yellow)
15. Vacuum Valve
16. Vacuum Switch Valve
17. To Canister Fitting
18. Clamp the Cam Sensor Lead
19. Through the #2 Stick Coil Lead
20. Coolant Hose (Run the coolant hose under the baffle plate).
21. Through the #3 Stick Coil Lead
22. Clamp the coolant hose and vacuum hose.

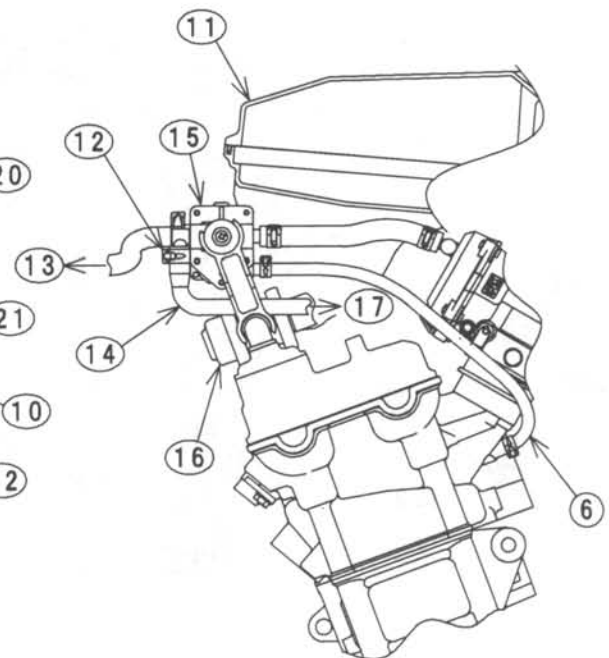

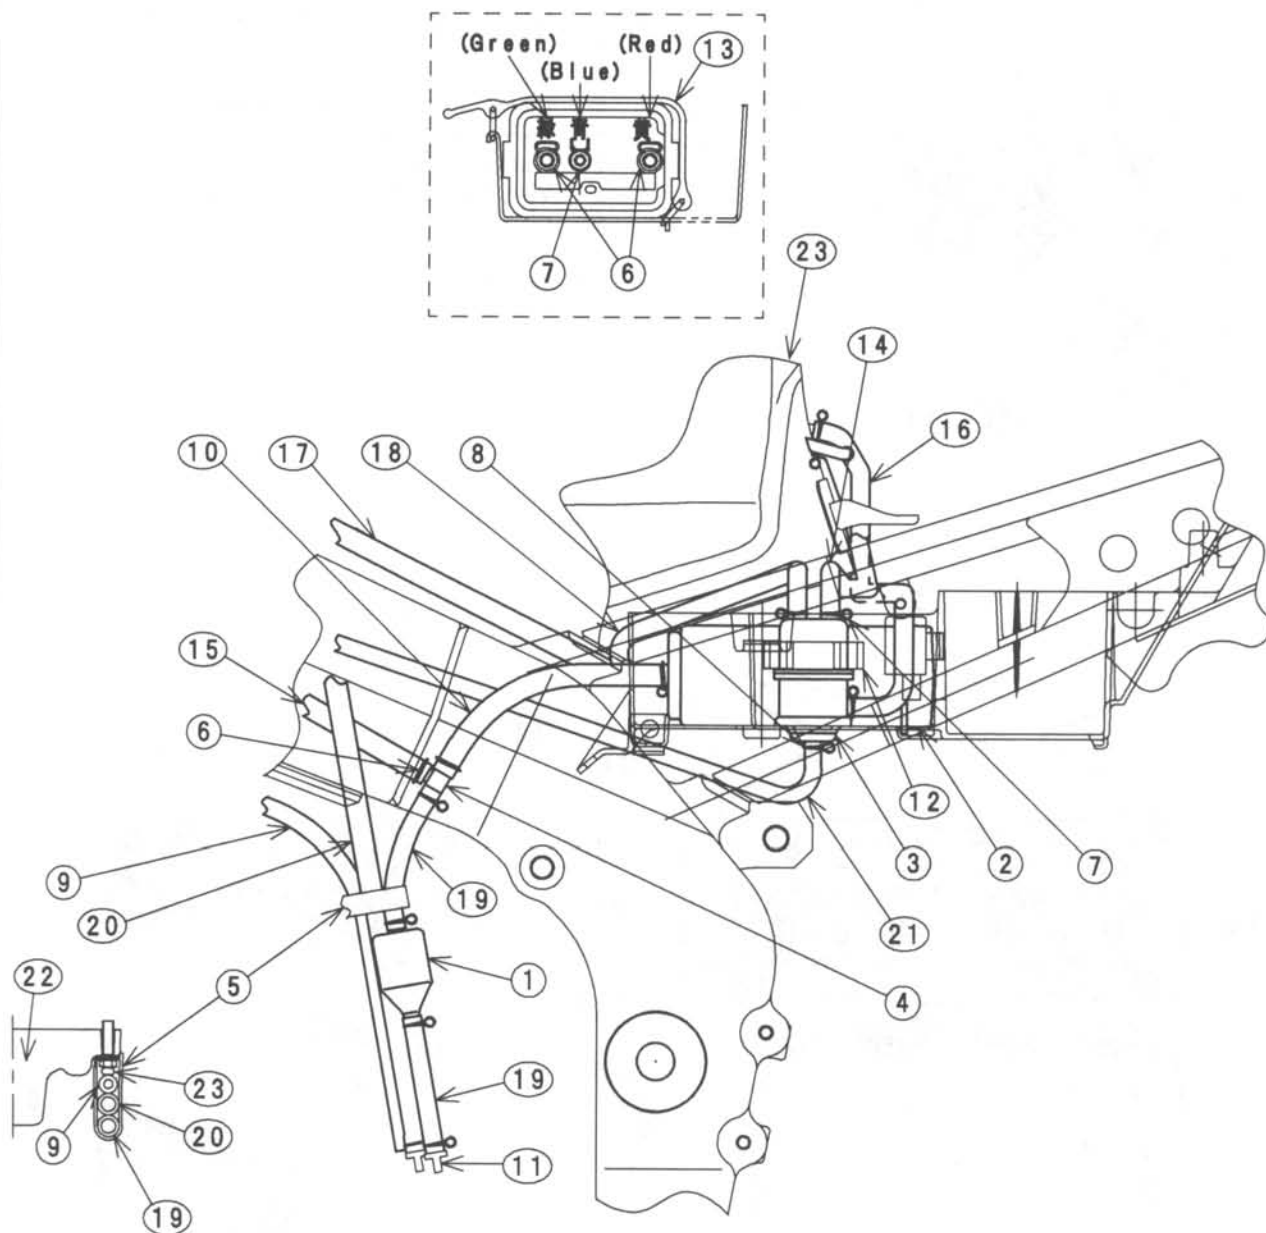

- |                                       |                                      |
|---------------------------------------|--------------------------------------|
| 1. Catch Tank                         | 12. Band                             |
| 2. Canister                           | 13. Band                             |
| 3. Separator                          | 14. Breather Hose (Blue)             |
| 4. Fitting (3 ways)                   | 15. Carburetor Vent Hose (Yellow)    |
| 5. Clamp                              | 16. Return Hose (Red)                |
| 6. Clamp                              | 17. Purge Hose (Green)               |
| 7. Clamp                              | 18. Breather Hose (Blue)             |
| 8. Clamp                              | 19. Drain Hose                       |
| 9. Coolant Reserve Tank Overflow Hose | 20. Drain Hose (Air Cleaner Housing) |
| 10. Carburetor Vent Hose (Yellow)     | 21. Vacuum Hose (White)              |
| 11. Plug                              | 22. Water Pump                       |
|                                       | 23. Side Stand Lead                  |




# Fuel System

## Table of Contents

Exploded View .....	2-2	(US model) .....	2-15
Specifications .....	2-5	Air Cleaner .....	2-16
Throttle Grip and Cables .....	2-6	Air Cleaner Housing Removal .....	2-16
Free Play Inspection .....	2-6	Air Cleaner Housing Installation .....	2-16
Free Play Adjustment .....	2-6	Element Removal .....	2-16
Cable Installation .....	2-6	Element Installation .....	2-17
Cable Lubrication .....	2-6	Element Cleaning and Inspection .....	2-17
Choke Cable .....	2-7	Oil Draining .....	2-17
Free Play Inspection .....	2-7	Fuel Tank .....	2-18
Free Play Adjustment .....	2-7	Fuel Tank Removal .....	2-18
Cable Installation .....	2-7	Fuel Tank Installation .....	2-18
Cable Lubrication .....	2-7	Fuel Tank Inspection .....	2-18
Carburetors .....	2-8	Fuel Tank Cleaning .....	2-19
Idle Speed Inspection .....	2-8	Fuel Tap Removal .....	2-19
Idle Speed Adjustment .....	2-8	Fuel Tap Installation .....	2-19
Synchronization Inspection .....	2-8	Fuel Tap Inspection .....	2-19
Synchronization Adjustment .....	2-9	Fuel Pump, Fuel Filter .....	2-20
Service Fuel Level Inspection .....	2-9	Fuel Pump, Fuel Filter Removal .....	2-20
Service Fuel Level Adjustment .....	2-10	Fuel Pump, Fuel Filter Installation .....	2-20
Fuel System Cleanliness Inspection .....	2-11	Fuel Pump Inspection .....	2-20
Carburetor Removal .....	2-11	Fuel Filter Inspection .....	2-20
Carburetor Installation .....	2-11	Vacuum Valve .....	2-21
Carburetor Disassembly/Assembly .....	2-12	Vacuum Valve Inspection .....	2-21
Carburetor Separation/Assembly .....	2-13	Evaporative Emission Control System	
Carburetor Cleaning .....	2-13	(California Model Only) .....	2-22
Carburetor Inspection .....	2-14	Parts Removal/Installation .....	2-22
Coolant Filter Cleaning (AR, FG, FR,		Hose Inspection .....	2-22
IT, KR, NL, ST, UK Models) .....	2-15	Separator Inspection .....	2-22
Coolant Valve Inspection (AR, FG, FR,		Separator Operation Test .....	2-22
IT, KR, NL, ST, UK Models) .....	2-15	Canister Inspection .....	2-23
High Altitude Performance Adjustment			

## 2-2 FUEL SYSTEM


### Exploded View

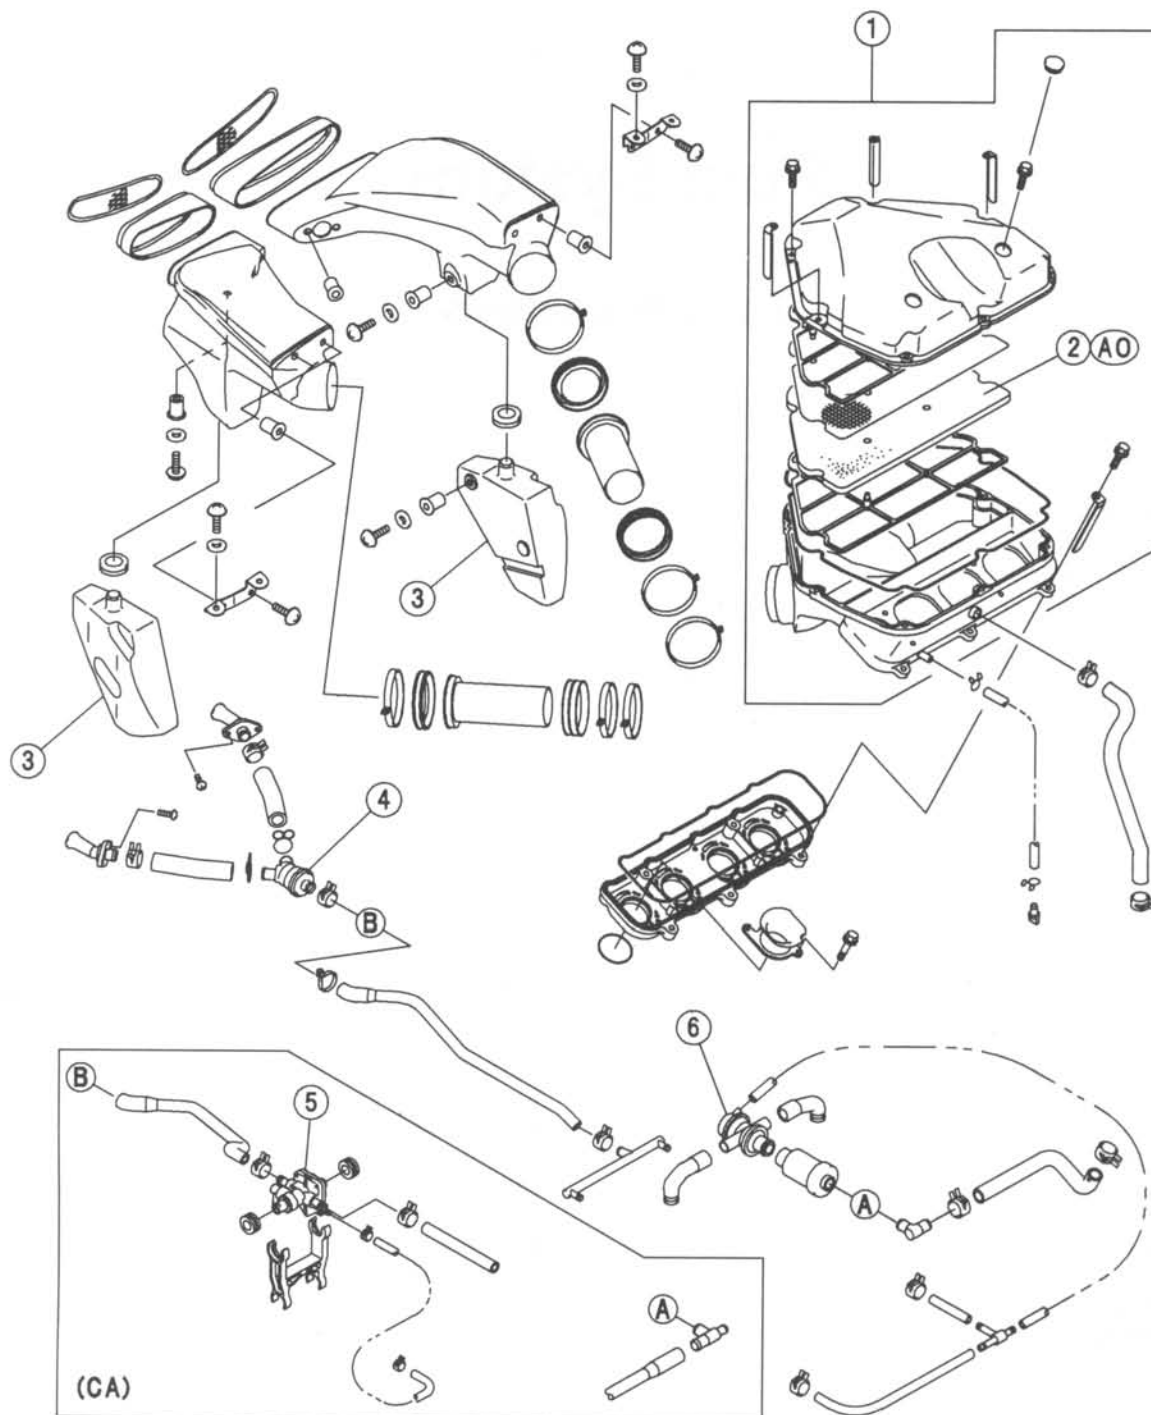


1. Air cleaner Housings
2. Air cleaner Element
3. Resonators
4. Air Vent Filter
5. Vacuum Valve
6. Vacuum Switch Valve

AO: Apply high-quality-form-air-filter oil

CA: California

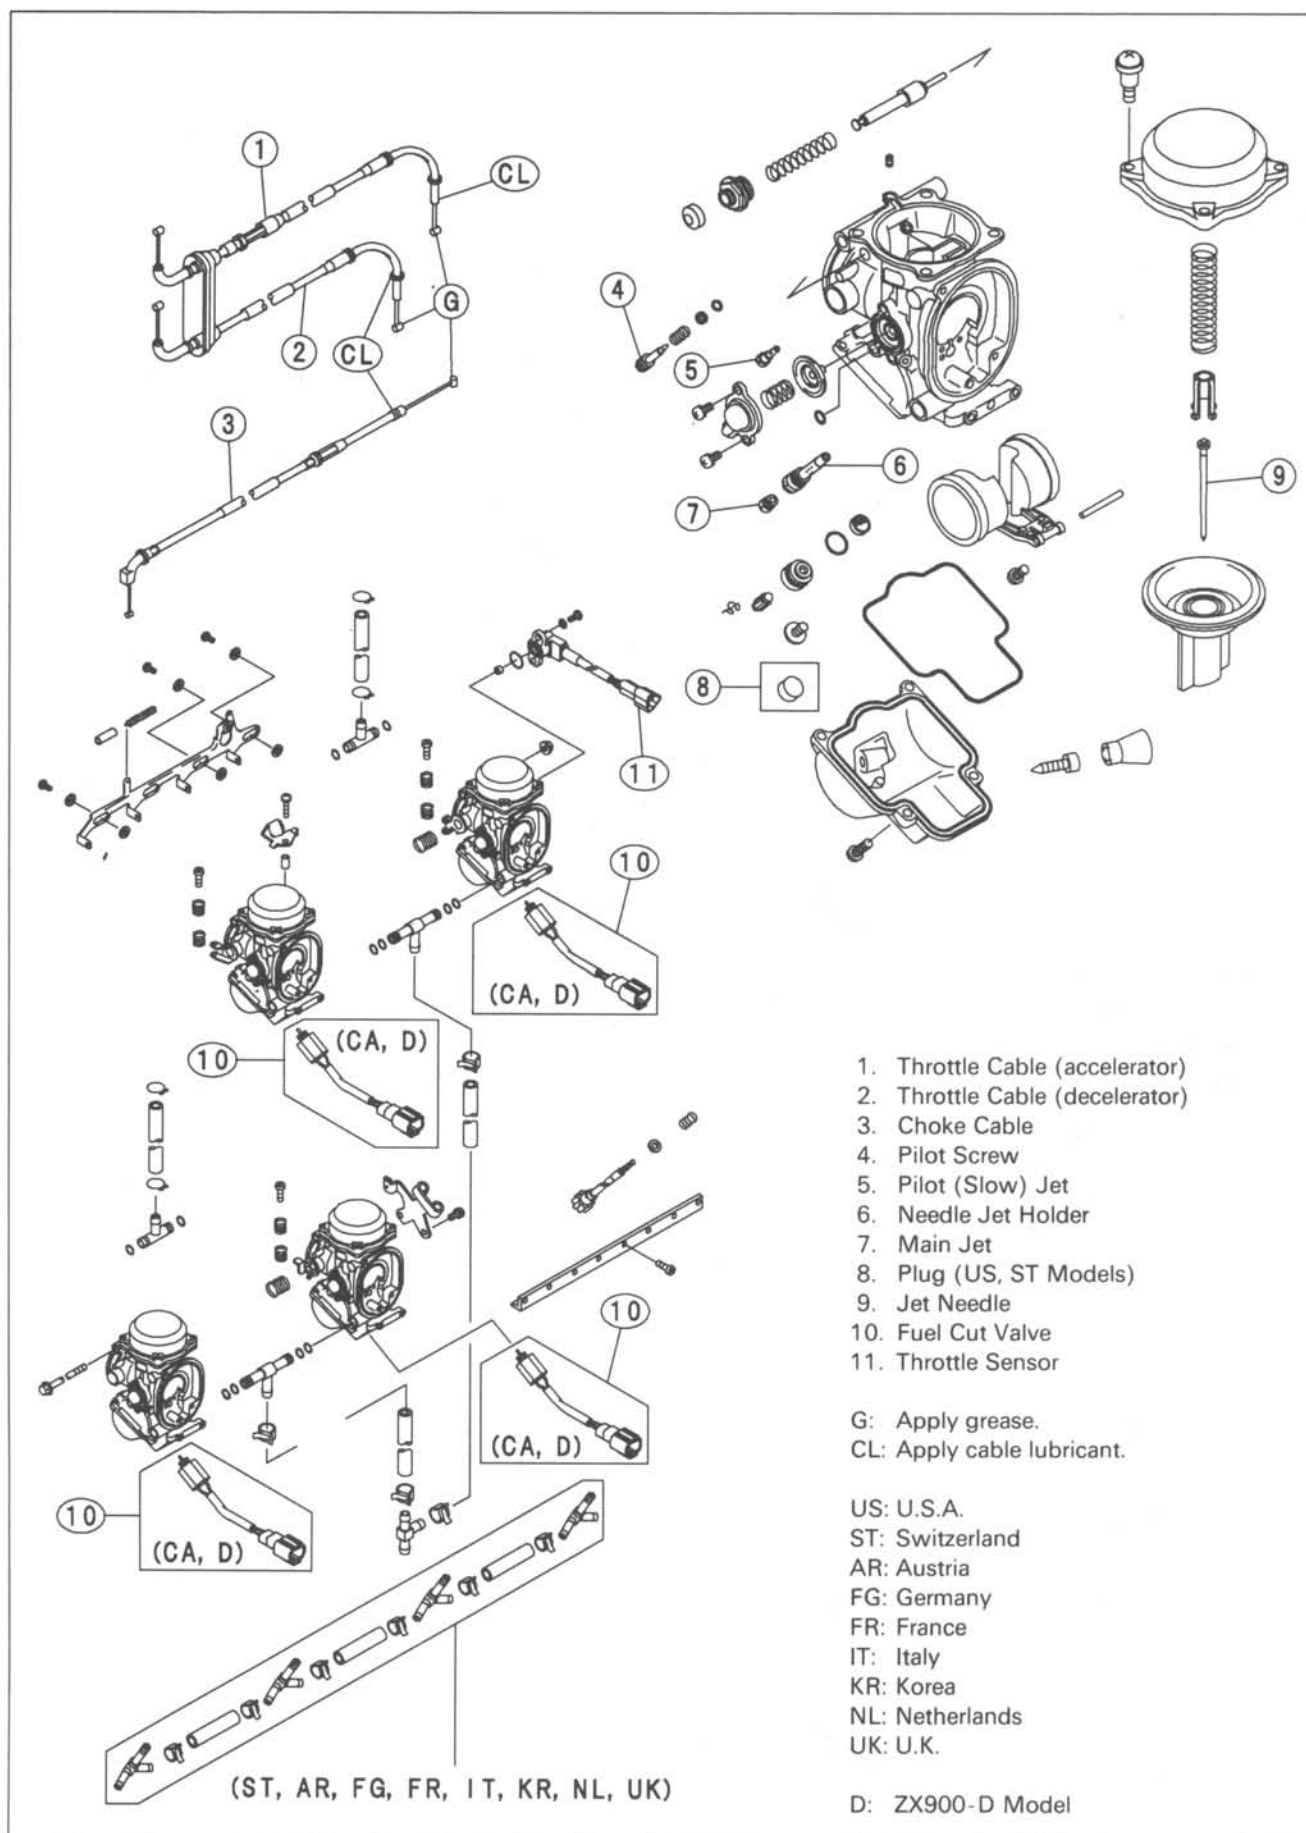

## 2-4 FUEL SYSTEM

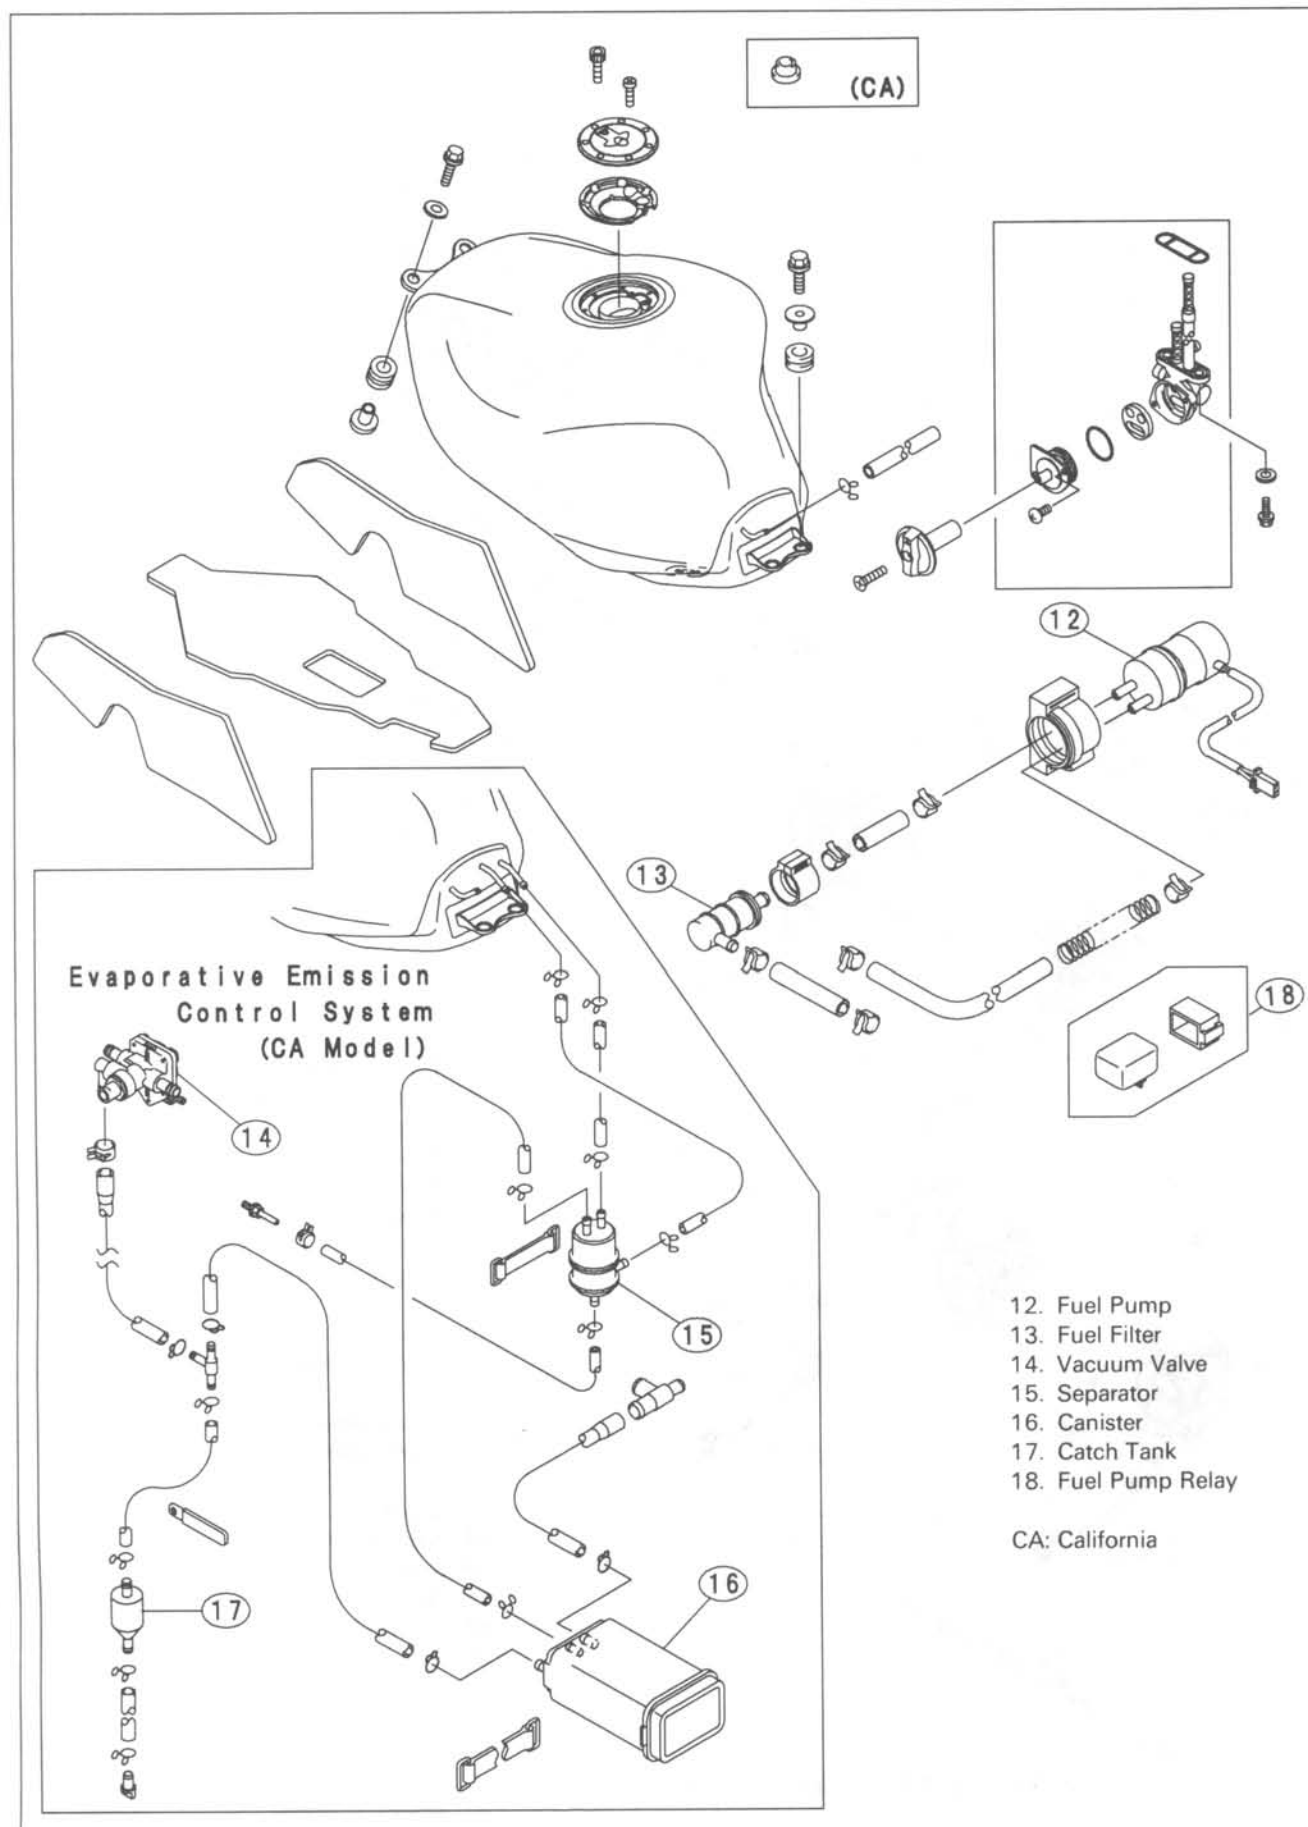

## Specifications

Item	Standard	
	C1	D1
<b>Throttle Grip and Cables:</b> Throttle grip free play	2 ~ 3 mm	←
<b>Choke Cable:</b> Free Play	2 ~ 3 mm	←
<b>Carburetors:</b> Make, type Main jet Main air jet Jet needle Pilot jet (slow jet) Pilot air jet (slow air jet) Pilot screw (turns out) Starter jet Idle speed Carburetor synchronization vacuum  Service fuel level Float height	KEIHIN, CVKD40 × 4 #155 #70 N74V #38 #120 2 turns out #48 1100 ± 50 r/min (rpm), Less than 2.7 kPa (2 cm Hg) difference between any two carburetors 4.5 ± 1 mm below the mark on the carburetor body 13 ± 2 mm	← ← ← ← ← ← ← ← ← ← ← ← ← ← ←

**Special Tools –** Pressure Cable Luber: k56019-021  
 Vacuum Gauge: 57001-1369  
 Carburetor Drain Plug Wrench, Hex 3: 57001-1269  
 Fuel Level Gauge: 57001-1017  
 Fork Oil Level Gauge: 57001-1290  
 (as required)  
 Pilot Screw Adjuster, A: 57001-1239

## 2-6 FUEL SYSTEM


### Throttle Grip and Cables

#### Free Play Inspection

- Check the throttle grip free play [A].
- ★ If the free play is incorrect, adjust the throttle cable.


#### Throttle Grip Free Play

Standard: 2 ~ 3 mm

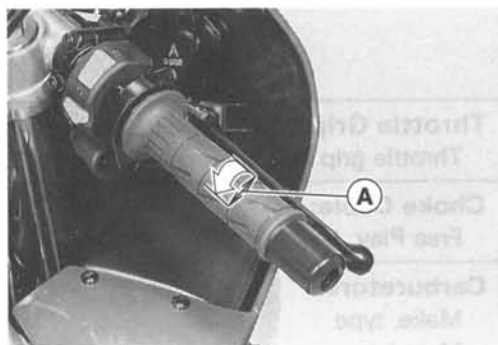


#### Free Play Adjustment

- Loosen the locknut [A].
- Turn the adjuster [B] until the proper amount of throttle grip free play is obtained.
- Tighten the locknut securely.
- ★ If the proper amount of free play cannot be obtained by using the adjuster only, use the adjusters at the carburetors side.
- Loosen the locknut, and screw the adjuster near the upper end of the accelerator cable all the way in.
- Tighten the locknut securely.

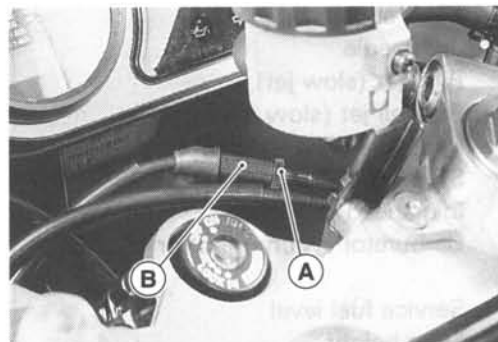

- Remove the fuel tank and air cleaner housing (see Fuel Tank Removal and Air Cleaner Housing Removal).
- Loosen the locknuts.
- Screw both throttle cable adjuster to give the throttle grip plenty of play.
- With the throttle grip completely closed, turn out the decelerator cable adjuster [A] until the inner cable just becomes tight.
- Tighten the decelerator cable locknut [B] securely.
- Turn the accelerator cable adjuster [C] until the correct throttle grip free play is obtained.
- Tighten the accelerator cable locknut [D] securely.
- ★ If the proper amount of free play can not be obtained in the adjustable range of the adjuster, use the adjuster at the upper end of the accelerator cable again.

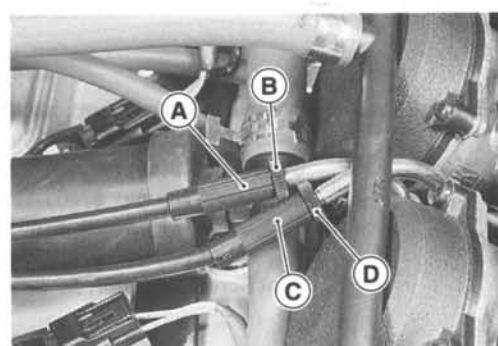

#### Cable Installation

- Install the throttle cables in accordance with Cable Routing section in General Information chapter.
- Install the lower ends of the throttle cables in the cable bracket on the carburetor after installing the upper ends of the throttle cables in the grip.
- After installation, adjust each cable properly.

#### ⚠ WARNING


Operation with incorrectly routed or improperly adjusted cables could result in an unsafe riding condition.

#### Cable Lubrication

Whenever the cable is removed, lubricate the throttle cable as follows:

- Apply a thin coating of grease to the cable lower ends.
- Lubricate the cable with a penetrating rust inhibitor.

Special Tool – Pressure Cable Luber: k56019-021 [A]

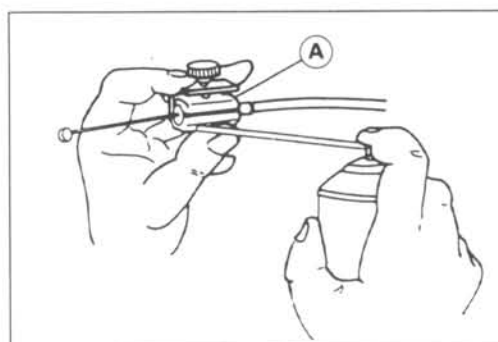



## Choke Cable

### Free Play Inspection

- Push the choke lever [A] all the way to the front.
- Check choke cable free play [B].
- Determine the amount of choke cable play at the choke lever. Pull the choke lever until the starter plunger lever [C] at the carburetor touches the starter plunger [D]; the amount of choke lever lower end travel is the amount of choke cable play.
- ★ If the free play is incorrect, adjust the choke cable.


### Choke Cable Free Play

Standard: 2 ~ 3 mm

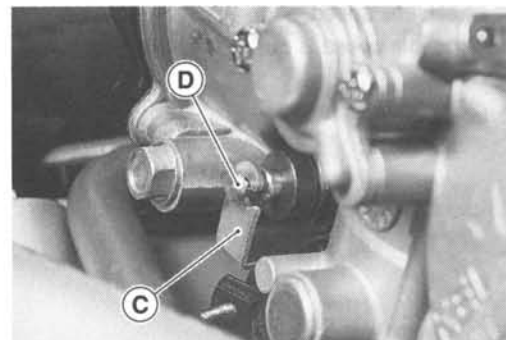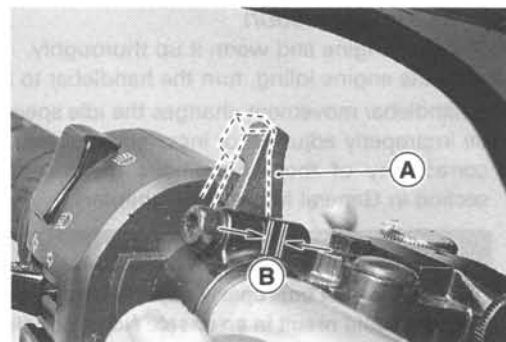

### Free Play Adjustment

- Remove the fuel tank and air cleaner housing (see Fuel Tank Removal and Air Cleaner Housing Removal).
- Loosen the locknut [A], and turn the adjuster [B] until the cable has the proper amount of free play.
- Tighten the locknut securely.

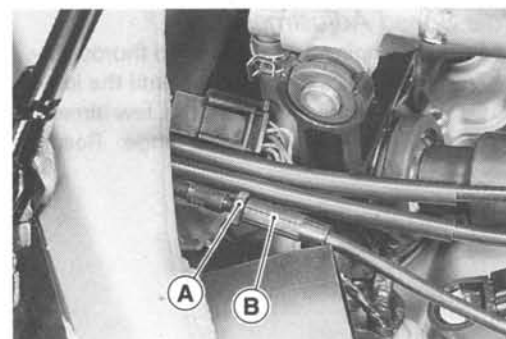

### Cable Installation

- Install the choke cable in accordance with Cable Routing section in General Information chapter.
- After installation, adjust the cable properly.

### ⚠ WARNING

Operation with an incorrectly routed or improperly adjusted cable could result in an unsafe riding condition.

### Cable Lubrication


Whenever the choke cable is removed, lubricate the choke cable as follows:

- Apply a thin coating of grease to the cable upper end.
- Lubricate the cable with a penetrating rust inhibitor.

**Special Tool – Pressure Cable Luber: k56019-021 [A]**

- Check that the choke inner cable slides smoothly by moving the choke lever to the front and rear.

★ If there is any irregularity, check the choke cable and routing.

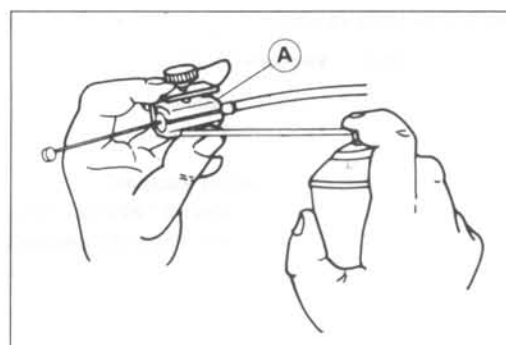



## 2-8 FUEL SYSTEM

### Carburetors

#### Idle Speed Inspection

- Start the engine and warm it up thoroughly.
- With the engine idling, turn the handlebar to both sides.
- ★ If handlebar movement changes the idle speed, the throttle cables may be improperly adjusted or incorrectly routed, or damaged. Be sure to correct any of these conditions before riding (see Cable Routing section in General Information chapter).

#### ⚠ WARNING

Operation with improperly adjusted, incorrectly routed, or damaged cables could result in an unsafe riding condition.


- Check idle speed.
- ★ If the idle speed is out of the specified range, adjust it.

#### Idle Speed

Standard: 1,100 ± 50 r/min (rpm)


#### Idle Speed Adjustment

- Start the engine and warm it up thoroughly.
- Turn the adjusting screw [A] until the idle speed is correct.
- Open and close the throttle a few times to make sure that the idle speed is within the specified range. Readjust if necessary.

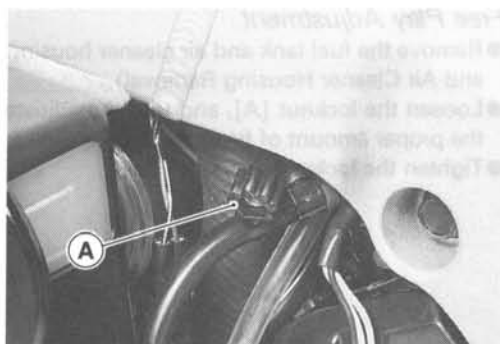

#### Synchronization Inspection

- Start the engine and warm it up thoroughly.
- Check idle speed (see Idle Speed Inspection).
- Remove the fuel tank and air cleaner housing (see Fuel Tank Removal and Air Cleaner Housing Removal).
- Supply fuel to the carburetors with an auxiliary fuel tank.
- For the models other than the California model, remove the #2, 3 inlet pipe plugs and install the vacuum gauge bolts (92150-1161) and washers.
- Connect the vacuum gauge hoses [A] to the fittings on the vacuum nozzles [B].

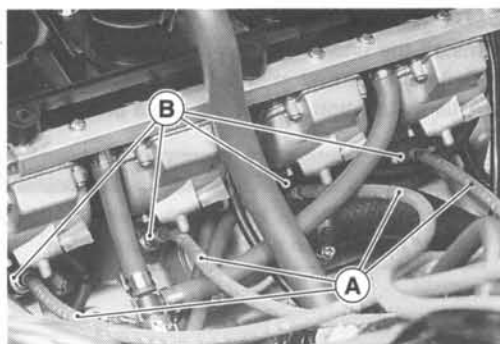


- Connect the vacuum gauge hoses to the vacuum gauge [A].

**Special Tool – Vacuum Gauge: 57001-1369**

- Start the engine and let it idle to measure the carburetor intake vacuum.
- ★ If the vacuum is incorrect, adjust the synchronization.

#### Carburetor Synchronization Vacuum

Standard: Less than 2.7 kPa (2 cmHg) difference between any two carburetors.

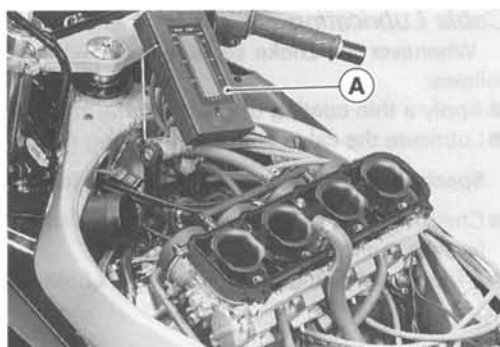

### Synchronization Adjustment

- Turn the adjusting screw to synchronize the carburetors.
- Apply grease to the tip of the adjusting screw threads.
- First synchronize the left two and then the right two carburetors by means of the left and right adjusting screws [A, C]. Then synchronize the left two carburetors and the right two carburetors using the center adjusting screw [B].
- ★ If the carburetor synchronization cannot be obtained by using the adjusting screws, check for dirt or blockage, and then check the pilot screw settings.


**Special Tool – Pilot Screw Adjuster, A: 57001-1239**

- Check the carburetor synchronization again.

### NOTE

○ Do not turn the pilot screws carelessly during carburetor synchronization. You may cause poor running at low engine speed.

- For the models other than the California model, remove the vacuum gauge bolts and install the inlet pipe plugs and washers.
- Check idle speed.

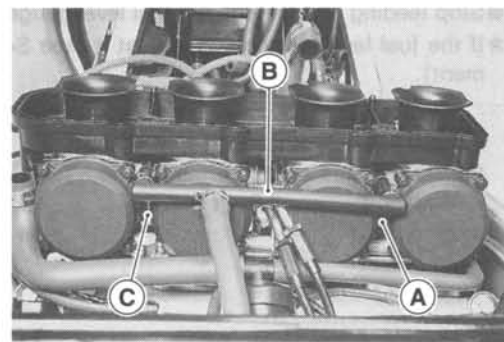

### Service Fuel Level Inspection

#### ⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Situate the motorcycle so that it is perpendicular to the ground.
- Remove the fuel tank (see Fuel Tank Removal).
- Prepare an auxiliary fuel tank and connect the fuel hose to the carburetors.
- Prepare a fuel hose (6 mm in diameter and about 300 mm long).
- Connect the fuel level gauge [A] to the carburetor float bowl with the fuel hose.


**Special Tool – Fuel Level Gauge: 57001-1017**

- Hold the gauge vertically against the side of the carburetor body so that the "zero" line [B] is several millimeters higher than the float level mark [C] on the carburetor body.
- Feed fuel to the carburetor, then turn the carburetor drain plug [D] out a few turns.
- Wait until the fuel level in the gauge settles.
- Keeping the gauge vertical, align the "zero" line with the lower end of the float level mark.

### NOTE

○ Do not lower the "zero" line below the mark of the carburetor body. If the gauge is lowered and then raised again, the fuel level measured shows somewhat higher than the actual fuel level. If the gauge is lowered too far, dump the fuel into a suitable container and start the procedure over again.

- Read the fuel level [E] in the gauge and compare to the specification.
- Screw in the carburetor drain plug.

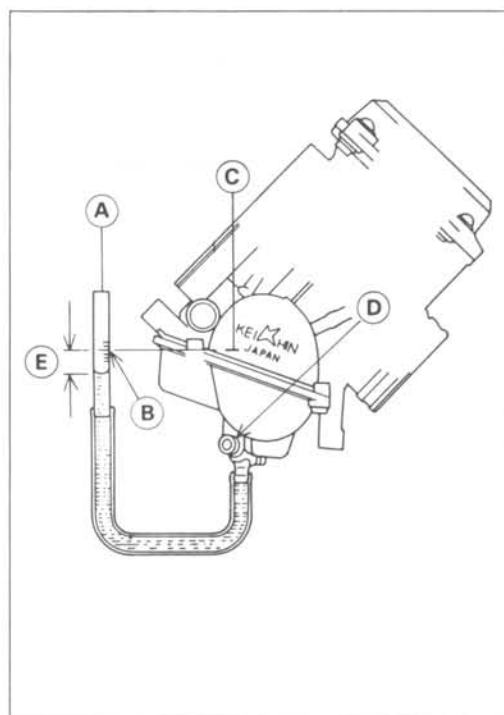

## 2-10 FUEL SYSTEM

- Stop feeding and remove the fuel level gauge.
- ★ If the fuel level is incorrect, adjust it (see Service Fuel Level Adjustment).

### Service Fuel Level

(below the mark on the carburetor body)

Standard:  $4.5 \pm 1$  mm

### Service Fuel Level Adjustment

#### ⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.




- Remove the carburetor, and drain the fuel into a suitable container.
- Remove the float bowl.
- Remove the screw [A] and take out the float [B], pin [C] and float valve needle [D].
- Bend the tang [A] on the float arm very slightly to change the float height. Increasing the float height lowers the fuel level and decreasing the float height raises the fuel level.

### Float Height

Standard:  $13 \pm 2$  mm

#### NOTE

- Do not push the needle rod [A] in during the float height measurement [B].
- Assemble the carburetor, and recheck the fuel level.
- ★ If the fuel level cannot be adjusted by this method, the float or the float valve [C] is damaged.

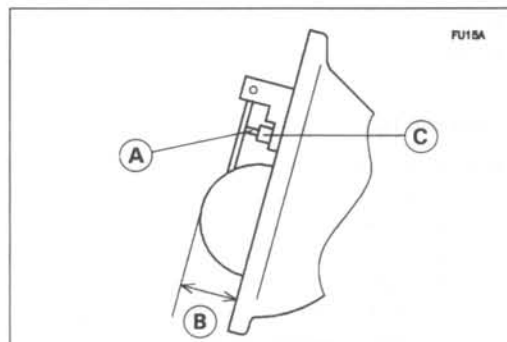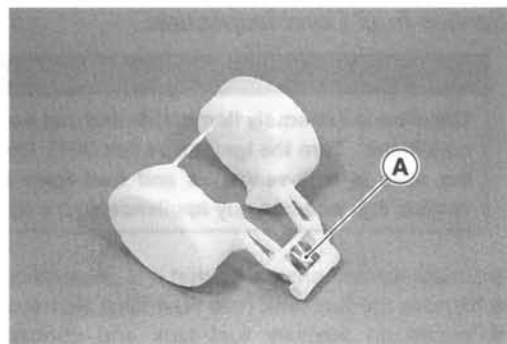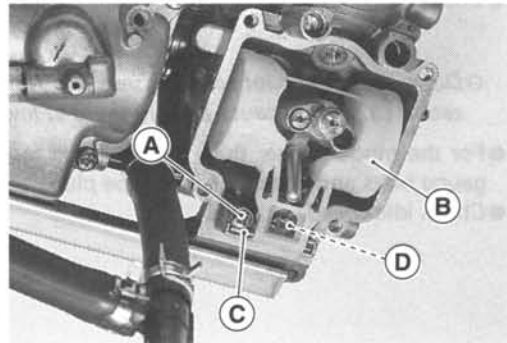


*Fuel System Cleanliness Inspection***⚠ WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Remove the fuel tank (see Fuel Tank Removal)
- Connect a suitable hose [A] to the fitting at the bottom of each carburetor float bowl.
- Run the lower ends of the hoses into a suitable container.
- Turn out each drain plug [B] a few turns and drain the float bowls.


**Special Tool – Carburetor Drain Plug Wrench, Hex 3: 57001-1269**

- Check to see if water or dirt comes out.
- Tighten the drain plugs.
- ★ If any water or dirt appears during the above inspection, clean the fuel system (see Carburetor Cleaning and Fuel Tank Cleaning).

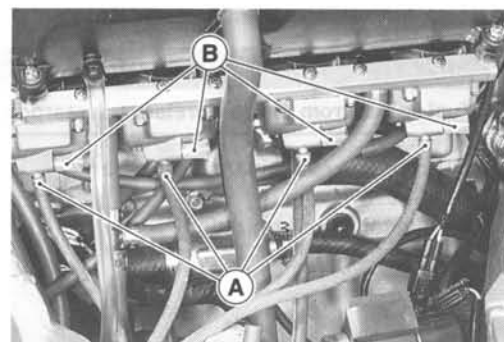
*Carburetor Removal***⚠ WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Drain the coolant (For the KR, FG, FR, IT, UK models, see Cooling System chapter)
- Remove:
  - Seats (see Frame chapter)
  - Fuel Tank (see Fuel Tank Removal)
  - Air Cleaner Housing (see Air Cleaner Housing Removal)
  - Vent Hose
  - Fuel Hose
  - Coolant Hoses (For the KR, FG, FR, IT, UK Models)
  - Throttle Sensor Connector
  - Fuel Cut Valve Connectors (ZX900-D and ZX900-C CA Model)
- Loosen the carburetor clamp screws [A], and remove the carburetors.
- Remove the throttle cable ends and choke cable.
- Stuff pieces of lint-free, clean cloth into the carburetor holders to keep dirt out of the engine.

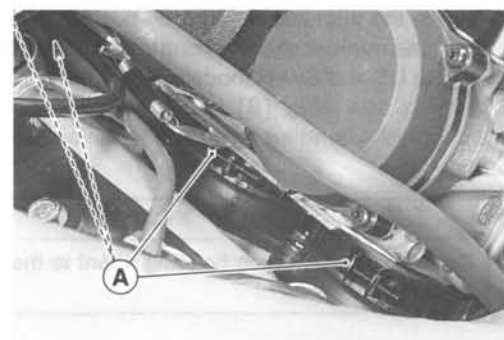*Carburetor Installation*

- Route the cables, harness, and hoses correctly (see General Information chapter).
- Tighten the clamps for the carburetor holders at the position in the figure.

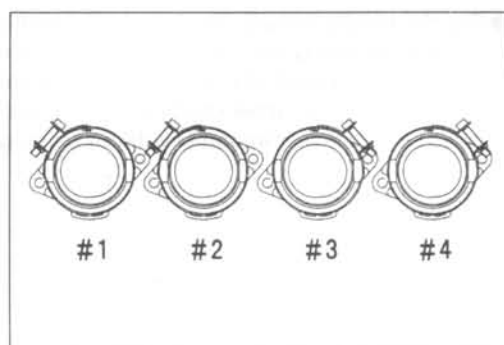

## 2-12 FUEL SYSTEM

- Check fuel leakage from the carburetors.

### ⚠ WARNING

**Fuel spilled from the carburetors is hazardous.**

- Adjust the following items if necessary.
  - Idle Speed
  - Carburetor Synchronization
  - Throttle Cables
  - Choke Cable

### Carburetor Disassembly/Assembly

- Remove the carburetors.
- Unscrew the bolts [A].
- Remove the air cleaner holder [B].

### ⚠ WARNING

**Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.**

- For the US and Swiss models, remove the pilot screw plug as follows:
  - Punch a hole in the plug and pry there with an awl or other suitable tool.
- Turn in the pilot screw and count the number of turns until it seats fully but not tightly, and then remove the screw. This is to set the screw to its original position when assembling.

### CAUTION




**During carburetor disassembly, be careful not to damage the diaphragm. Never use a sharp edge to remove the diaphragm.**

- Turn in the pilot screw [A] fully but not tightly, and then back it out the same number of turns counted during disassembly.
- For the US and Swiss models, install the pilot screw plug as follows:
  - Install a new plug [B] in the pilot screw hole, and apply a small amount of a bonding agent [C] to the circumference of the plug to fix the plug.

### CAUTION

**Do not apply too much bonding agent to the plug or the pilot screw itself may be fixed.**

- Slip the needle through the hole in the center of the vacuum piston, and put the spring seat [A] on the top of the needle. Turn the seat so that it does not block the hole [B] at the bottom of the vacuum piston.
- After installing the upper chamber cover, check that the vacuum piston slides up and down smoothly without binding in the carburetor bore.

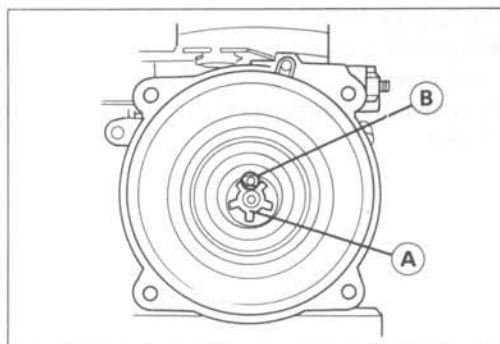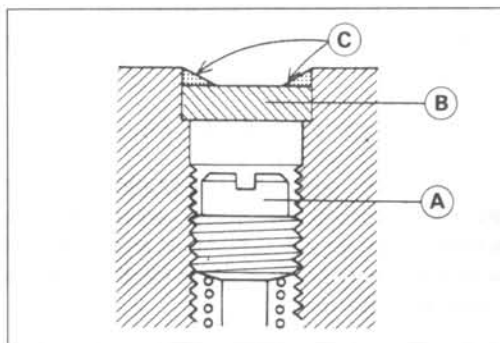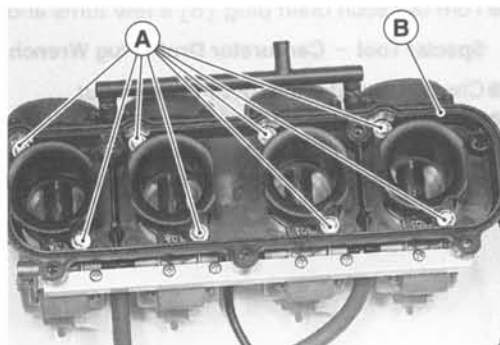


### Carburetor Separation/Assembly

- Read the WARNING in Carburetor Disassembly/Assembly.
- The center lines of the carburetor bores must be parallel both horizontally and vertically. If they are not, loosen the mounting screws and align the carburetors on a flat surface. Retighten the mounting screws.
- After assembling the choke mechanism, check to see that the starter plunger lever slides right to left smoothly without abnormal friction.

#### CAUTION

Fuel mixture trouble could result if the starter plunger lever does not seat properly in its rest position after the choke lever is returned.

- Visually synchronize the throttle (butterfly) valves.
- Check to see that all throttle valves open and close smoothly without binding when turning the pulley.
- Visually check the clearance [A] between the throttle valve and the carburetor bore in each carburetor.
- ★ If there is a difference between any two carburetors, turn the balance adjusting screw(s) [B] to obtain the same clearance.

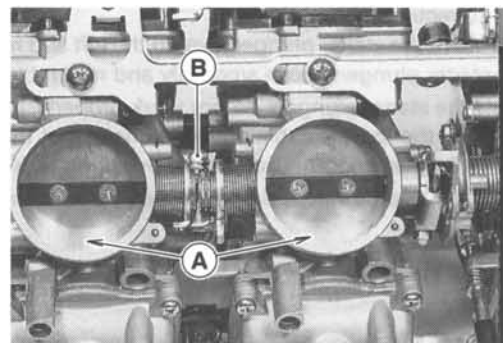

### Carburetor Cleaning

#### ⚠ WARNING

Clean the carburetors in a well-ventilated area, and take care that there is no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvents to clean the carburetors.

#### CAUTION

Do not use compressed air on an assembled carburetor, or the floats may be crushed by the pressure, and the vacuum piston diaphragms may be damaged.

Remove as many rubber or plastic parts from the carburetor as possible before cleaning the carburetor with a cleaning solution. This will prevent damage to or deterioration of the parts.

The carburetor body has plastic parts that cannot be removed. Do not use a strong carburetor cleaning solution which could attack these parts; instead, use a mild high flash-point cleaning solution safe for plastic parts.

Do not use wire or any other hard instrument to clean carburetor parts, especially jets, as they may be damaged.

- Disassemble the carburetor.
- Immerse all the metal parts in a carburetor cleaning solution.
- Rinse the parts in water.
- When the parts are clean, dry them with compressed air.
- Blow through the air and fuel passages with compressed air.
- Assemble the carburetor.




## 2-14 FUEL SYSTEM

### Carburetor Inspection



#### ⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.


- Remove the carburetors.
- Before disassembling the carburetors, check the fuel level (see Fuel Level Inspection).
- ★ If the fuel level is incorrect, inspect the rest of the carburetor before correcting it.
- Move the starter plunger lever to the left and release it to check that the starter plungers move smoothly and return by spring tension.
- ★ If the starter plungers do not work properly, replace the carburetors.
- Turn the throttle cable pulley to check that the throttle butterfly valves [A] move smoothly and return by spring tension.
- ★ If the throttle valves do not move smoothly, replace the carburetors.

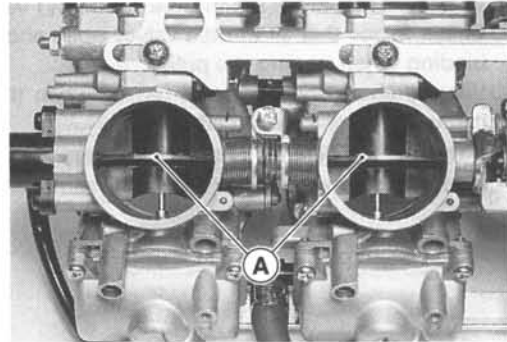

- Disassemble the carburetors.
- Clean the carburetors.
- Check that the O-rings on the float bowl and pilot screw and the diaphragm on the vacuum piston are in good condition.
- ★ If any of the O-rings or diaphragms are not in good condition, replace them.
- Check the plastic tip [A] of the float valve needle [B]. It should be smooth, without any grooves, scratches, or tears.
- ★ If the plastic tip is damaged [C], replace the needle.
- Push the rod [D] in the other end of the float valve needle, and then release it.
- ★ If the rod does not spring out, replace the needle.
- Check the tapered portion [A] of the pilot screw [B] for wear or damage.
- ★ If the pilot screw is worn or damaged on the tapered portion, it will prevent the engine from idling smoothly. Replace it.

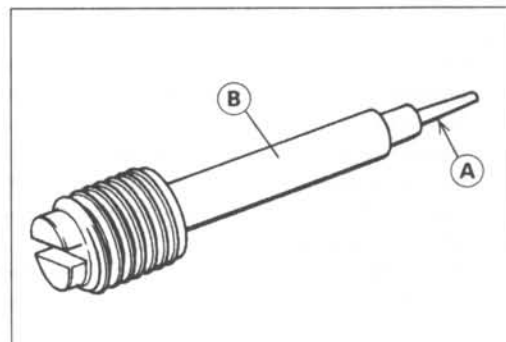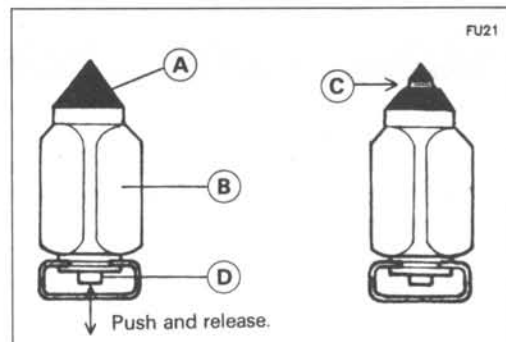

- Check that the vacuum piston [A] moves smoothly in the carburetor body. The surface of the piston must not be excessively worn.
- ★ If the vacuum piston does not move smoothly, or if it is very loose in carburetor body, replace the carburetor.

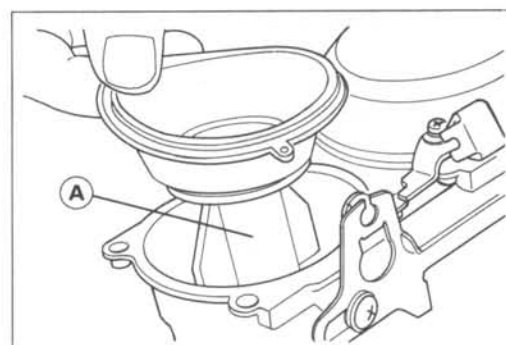




### Coolant Filter Cleaning (AR, FG, FR, IT, KR, NL, ST, UK Models)

Before winter season starts, clean the filter of carburetor system.

- Remove the fuel tank (see Fuel Tank Removal).
- Drain the coolant (see Cooling System chapter).
- Remove the filter [A] from the cooling hoses [B] of carburetor system.
- Blow off dirt and sediment on the filter with compressed air.

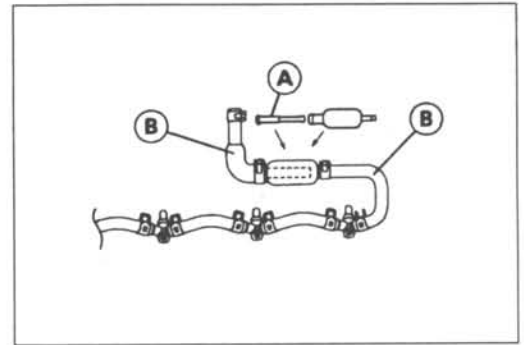


### Coolant Valve Inspection (AR, FG, FR, IT, KR, NL, ST, UK Models)

- Drain the coolant (see Cooling System chapter).
- Remove the coolant valve on the engine left side.
- Inspect the coolant valve [A] at room temperature.
- ★ If the valve is closed, replace the valve with a new one.
- To check valve opening just blow through the valve.

#### Valve Closing Temperature (for reference)

Standard: 70°C (158°F) or more at 125 kPa  
(0.25 kg/cm<sup>2</sup>, 3.6 psi)

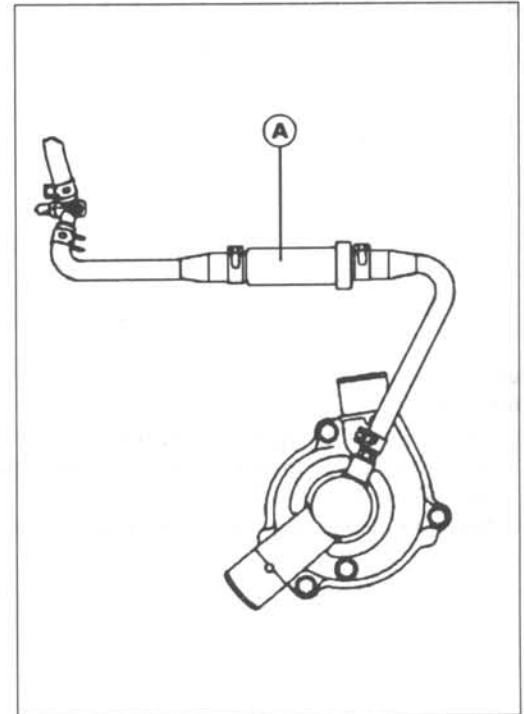

### High Altitude Performance Adjustment (US model)

#### NOTE

- The ZX900-C requires no high altitude performance adjustment for the California model.
- To improve the EMISSION CONTROL PERFORMANCE of vehicle operated above **4000 feet**, Kawasaki recommends the following Environmental Protection Agency (EPA) approved modification.
- Change the main jet and pilot jet for high altitude use.

#### High Altitude Carburetor Specifications

Pilot Jet: #35 (92064-1101)  
Main Jet: #152 (92063-1331)


## 2-16 FUEL SYSTEM

### Air Cleaner


#### Air Cleaner Housing Removal

● Remove:

- Seats (see Frame chapter)
- Fuel Tank (see Fuel Tank Removal)
- Engine Breather Hose [A]
- Vacuum Valve Hose [B]
- Drain Hose [C]
- Rubber Plugs [D]

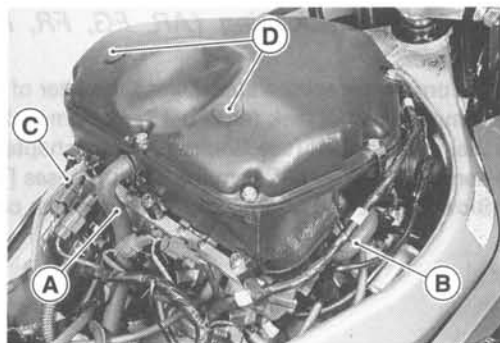

- Loosen the Air Duct Clamp Screws [A].

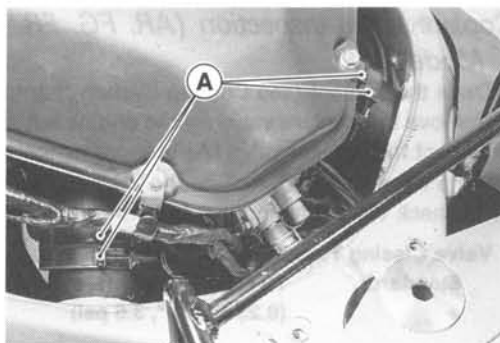


- Free the main harness from the clamp [A].

● Remove:

- Air Cleaner Housing Mounting Bolts [B]
- Fuel Cut Valve Connect Bracket (California and D type Model)
- Air Cleaner Housing [C]

- Pull up the rear of the housing, and then remove it from the air ducts.

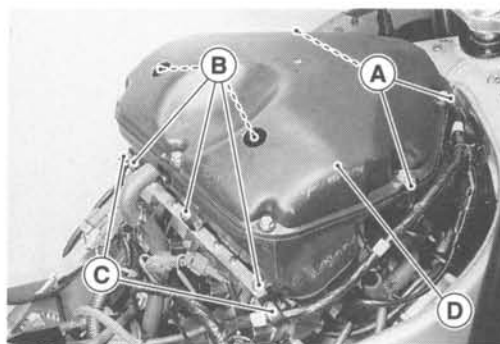

#### Air Cleaner Housing Installation

- Insert the air ducts [A] into the housing [B] securely while pushing down the rear of the housing.

● Tighten:

- Housing Mounting Bolts
- Clamp Screws

- Be sure to fit the following hoses.

- Engine Breather Hose
- Vacuum Valve Hose
- Air Cleaner Drain Hose


- Install the rubber plugs in place.




#### Element Removal

● Remove:

- Seats (see Frame chapter)
- Fuel Tank (see Fuel Tank Removal)
- Upper Housing Mounting Bolts [A]
- Upper Housing [B]

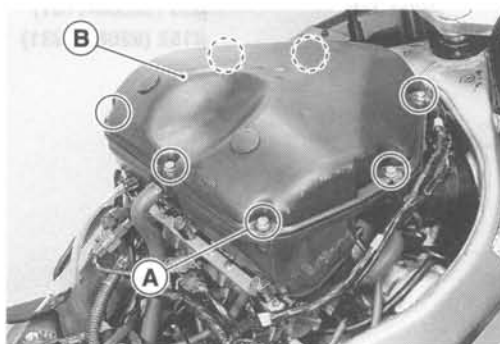

- Remove the following parts as a unit.  
Upper Plastic Holder [A]  
Wire Screen [B]  
Element [C]  
Lower Plastic Holder

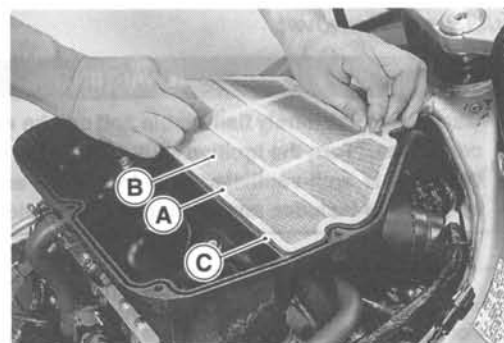

### Element Installation

- Install the element unit [A] with the foam element side (gray) facing up.




### Element Cleaning and Inspection

#### ⚠ WARNING

Clean the element in a well-ventilated area, and make sure that there are no sparks or flame anywhere near the working area. Because of the danger of highly flammable liquids, do not use gasoline or a low flash-point solvent to clean the element.

- Remove the air cleaner element [A] (see this chapter).
- Clean the element in a bath of high flash-point solvent, and then dry it with compressed air or by shaking it.
- After cleaning, saturate a clean, lint-free towel with SE, SF, or SG class SAE 30 oil and apply the oil to the element by tapping the element outside with the towel.
- Visually check the element for tears or breaks.
- ★ If the element has any tears or breaks, replace the element.

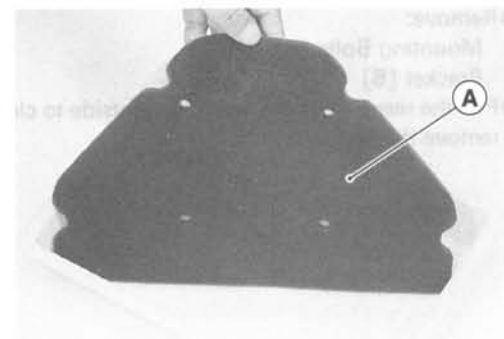


### Oil Draining

A drain hose [A] is connected to the bottom of the air cleaner housing, to drain water or oil accumulated in the housing.

- Visually check the drain hose if the water or oil accumulates in the hose.
- ★ If any water or oil accumulates in the hose, drain it by taking off the drain plugs [B] at the lower end of the front and rear drain hoses.

#### ⚠ WARNING

Be sure to reinstall the plug in the drain hose after draining. Oil on tires will make them slippery and can cause an accident and injury.

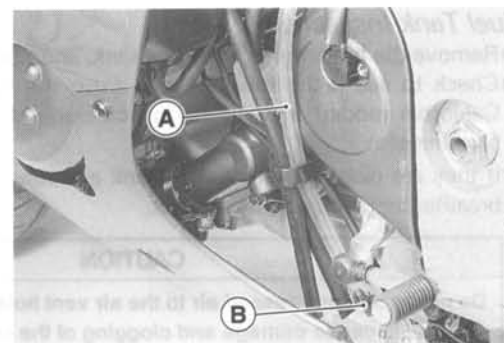

## 2-18 FUEL SYSTEM

### Fuel Tank

#### Fuel Tank Removal


#### ⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

#### CAUTION

For California model, if gasoline, solvent, water or any other liquid enters the canister, the canister's vapor absorbing capacity is greatly reduced. If the canister does become contaminated, replace it with a new one.

- Turn the fuel tap position lever [A] to the OFF position.
- Remove:
  - Seats (see Frame chapter)
  - Evaporative Emission Hoses (California model)
  - Fuel Filter Hose [B]
  - Fuel Tap Position Lever Screws [C]
- Remove:
  - Mounting Bolts [A]
  - Bracket [B]
- Pull the rear part of the fuel tank rightside to clear the fuel tap, and then remove the fuel tank.

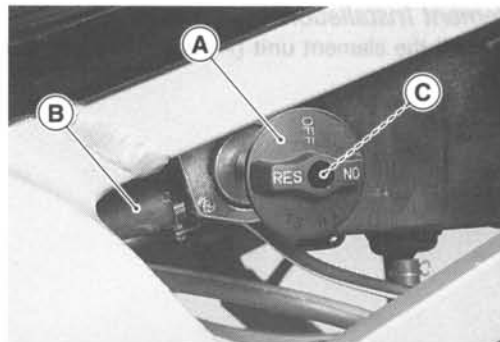

#### Fuel Tank Installation


- Read the above WARNING.
- Route the hoses correctly (see General Information chapter).
- Be sure the hoses are clamped securely to prevent leaks.

#### Fuel Tank Inspection

- Remove the hose(s) from the fuel tank, and open the tank cap.
- Check to see if the breather pipe (also the fuel return pipe for the California model) in the tank is not clogged. Check the tank cap breather also.
- ★ If they are clogged, remove the tank and drain it, and then blow the breather free with compressed air.

#### CAUTION

Do not apply compressed air to the air vent holes [A] in the tank cap. This could cause damage and clogging of the labyrinth in the cap.

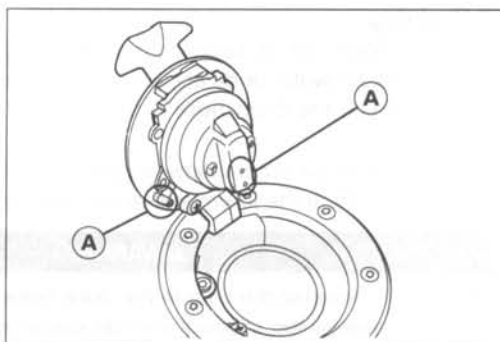

### Fuel Tank Cleaning


#### ⚠ WARNING

Clean the tank in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvents to clean the tank.

- Remove the fuel tank and drain it.
- Pour some high flash-point solvent into the fuel tank and shake the tank to remove dirt and fuel deposits.
- Pour high flash-point solvent through the tap in all lever positions.
- Pour the solvent out of the tank.
- Remove the fuel tap from the tank (see Fuel Tap Removal).
- Clean the fuel tap filter screens in a high flash-point solvent.
- Dry the tank and screens with compressed air.
- Install the tank filters in the tank.
- Install the fuel tank (see Fuel Tank Installation).


### Fuel Tap Removal

- Remove the Fuel Position Lever (see Fuel Tank Removal).
- Remove the fuel tank and drain it.
- Remove:
  - Bolts [A]
  - Nylon Flat Washers [B]
  - Fuel Tap [C]

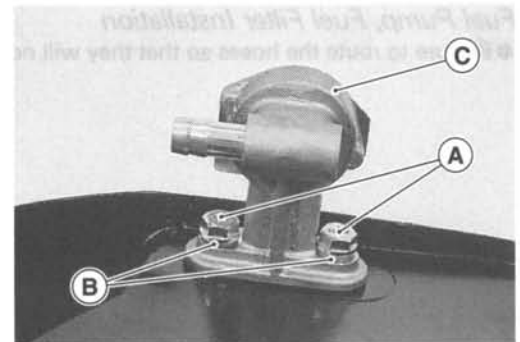


### Fuel Tap Installation

- Be sure the O-rings [A] is in good condition to prevent leaks.
- Be sure the nylon flat washers [B] are in good condition to prevent leaks.
- Do not use steel washers in place of the nylon flat washers, because they will not seal the bolts properly and fuel will leak.
- Be sure to clamp the fuel hoses to the tap to prevent leaks.

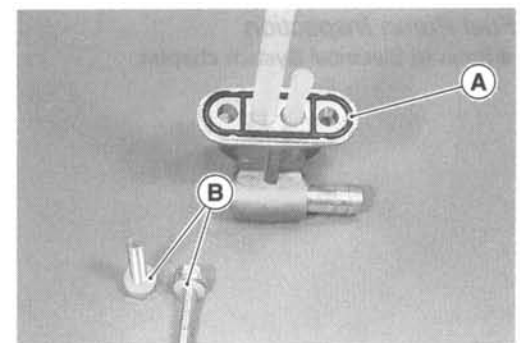

### Fuel Tap Inspection

- Remove the fuel tap.
- Check the fuel tap filter screens [A] for any breaks or deterioration.
- ★ If the screens have any breaks or are deteriorated, they may allow dirt to reach the carburetor, causing poor running. Replace the fuel tap.
- ★ If the fuel tap leaks, or allows fuel to flow when it is at ON or RES position without engine running, replace the damaged gasket [B] or O-rings [C].

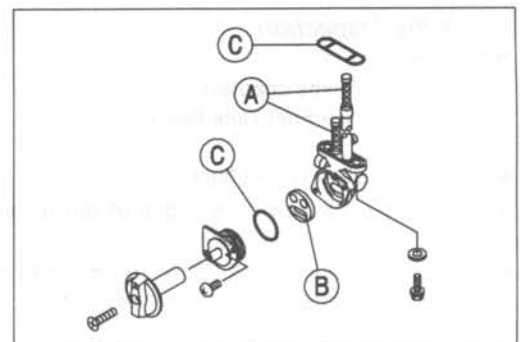

## 2-20 FUEL SYSTEM


### Fuel Pump, Fuel Filter

#### Fuel Pump, Fuel Filter Removal

##### ⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Remove:
  - Seats (see Frame chapter)
  - Fuel Tank (see Fuel Tank Removal)
  - Fuel Hose [A]
  - Fuel Pump Lead Connector [B]
- Remove the fuel pump [C] and fuel filter [D].

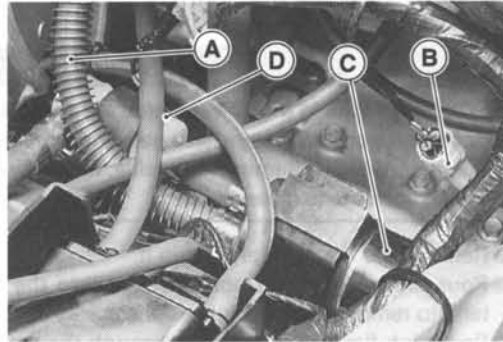

#### Fuel Pump, Fuel Filter Installation

- Be sure to route the hoses so that they will not be kinked or stretched.

#### Fuel Pump Inspection

- Refer to Electrical System chapter.


#### Fuel Filter Inspection

- Remove:
  - Seats (see Frame chapter)
  - Fuel Tank (see Fuel Tank Removal)
  - Band
- Visually inspect the fuel filter.
- ★ If the filter is clear with no signs of dirt or other contamination, it is OK and need not be replaced.
- ★ If the filter is dark or looks dirty, replace with a new one. Also, check the rest of the fuel system for contamination.

## Vacuum Valve

### Vacuum Valve Inspection

- Remove:
  - Air Cleaner Housing (see Air Cleaner Housing Removal)
  - Bracket [A] and Vacuum Valve [B]
  - Vacuum Valve Hoses [C]

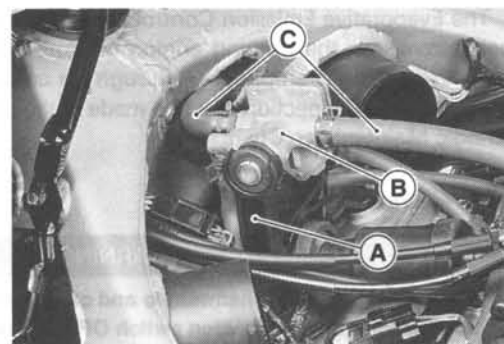


- Remove the drain screw [A] from the bottom of the chamber.
- ★ If any liquid accumulates in the chamber, drain it.

#### ⚠ WARNING

The liquid may contain gasoline.

- Replace the O-ring [B] with a new one.
- After draining, install the drain screw with the O-ring.

**Torque – Vacuum Valve Drain Screw: 1.0 N-m (0.10 kg-m, 9 in-lb)**

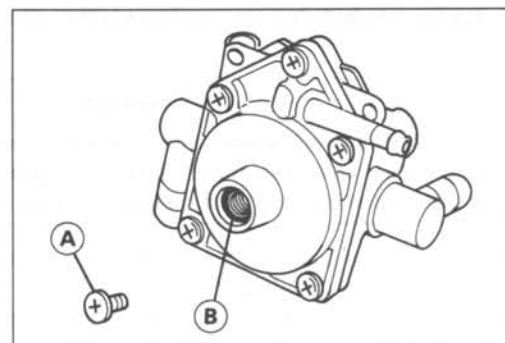

- Using the vacuum gauge and fork oil level gauge, inspect the vacuum valve operation (see Vacuum Switch Valve Test in Engine Top End chapter).



**Special Tools – Vacuum Gauge: 57001-1369**  
**Fork Oil Level Gauge: 57001-1290**

- When applying vacuum (1.5 cmHg) to the vacuum sensing fitting [A], air flows from pipe [B] to pipe [C], and vice versa.
- When stopping applying vacuum, air flows from pipe [B] to pipe [D], and vice versa.
- ★ Nevertheless if the vacuum valve does not operate as described, replace it with a new one.

#### CAUTION

Do not use compressed air during the valve check, or the vacuum valve may be damaged.

#### Vacuum Valve Operation

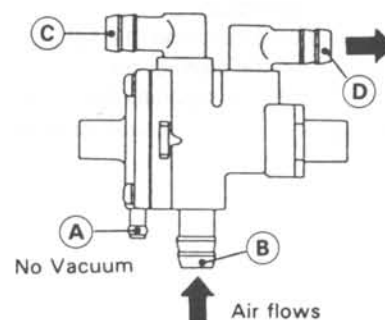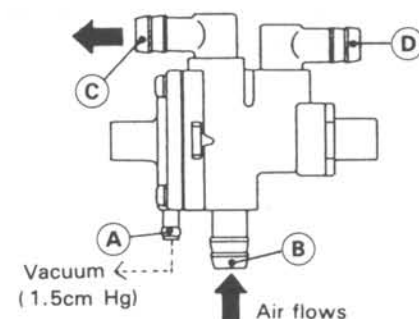



## 2-22 FUEL SYSTEM

### Evaporative Emission Control System (California Model Only)

The Evaporative Emission Control System routes fuel vapors from the fuel system into the running engine or stores the vapors in a canister when the engine is stopped. Although no adjustments are required, a thorough visual inspection must be made at the intervals specified by the Periodic Maintenance Chart.

#### Parts Removal/Installation

##### ⚠WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

##### CAUTION

If gasoline, solvent, water or any other liquid enters the canister, the canister's vapor absorbing capacity is greatly reduced. If the canister does become contaminated, replace it with a new one.

- To prevent the gasoline from flowing into or out of the canister, hold the separator perpendicular to the ground.
- Connect the hoses according to the diagram of the system. Make sure they do not get pinched or kinked.

#### Hose Inspection

- Check that the hoses are securely connected.
- Replace any kinked, deteriorated or damaged hoses.

#### Separator Inspection

- Disconnect the hoses from the liquid/vapor separator, and remove the separator from the motorcycle.
- Visually inspect the separator for cracks and other damage.
- ★ If the separator has any cracks or is badly damaged, replace it with a new one.

#### Separator Operation Test

##### ⚠WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Connect the hoses to the separator, and install the separator on the motorcycle.



- Disconnect the breather hose from the separator, and inject about 20 mL of gasoline into the separator through the hose fitting.
- Disconnect the fuel return hose from the fuel tank.
- Run the open end of the return hose into the container and hold it level with the tank top.
- Start the engine, and let it idle.
- ★ If the gasoline in the separator comes out of the hose, the separator works well. If it does not, replace the separator with a new one.

### *Canister Inspection*

- Remove the canister, and disconnect the hoses from the canister.
- Visually inspect the canister for cracks and other damage.
- ★ If the canister has any cracks or bad damage, replace it with a new one.

### **NOTE**

- *The canister is designed to work well through the motorcycle's life without any maintenance if it is used under normal conditions.*


# Cooling System

## Table of Contents


Exploded View .....	3-2
Coolant Flow Chart.....	3-3
Specifications .....	3-4
Coolant .....	3-5
Coolant Level Inspection .....	3-5
Coolant Draining.....	3-5
Coolant Filling.....	3-6
Pressure Testing .....	3-7
Cooling System Flushing .....	3-7
Water Pump.....	3-8
Water Pump Removal .....	3-8
Water Pump Installation .....	3-8
Water Pump Inspection .....	3-8
Radiator, Radiator Fan .....	3-9
Radiator, Radiator Fan Removal.....	3-9
Radiator Inspection.....	3-10
Radiator Cap Inspection.....	3-10
Hose Inspection .....	3-11
Thermostat.....	3-12
Thermostat Removal .....	3-12
Thermostat Installation .....	3-12
Thermostat Inspection .....	3-12
Radiator Fan Switch, Water Temperature Sensor .....	3-13
Radiator Fan Switch, Water Temperature Sensor Removal .....	3-13
Radiator Fan Switch, Water Temperature Sensor Installation.....	3-13
Radiator Fan Switch, Water Temperature Sensor Inspection .....	3-13

## 3-2 COOLING SYSTEM

### Exploded View

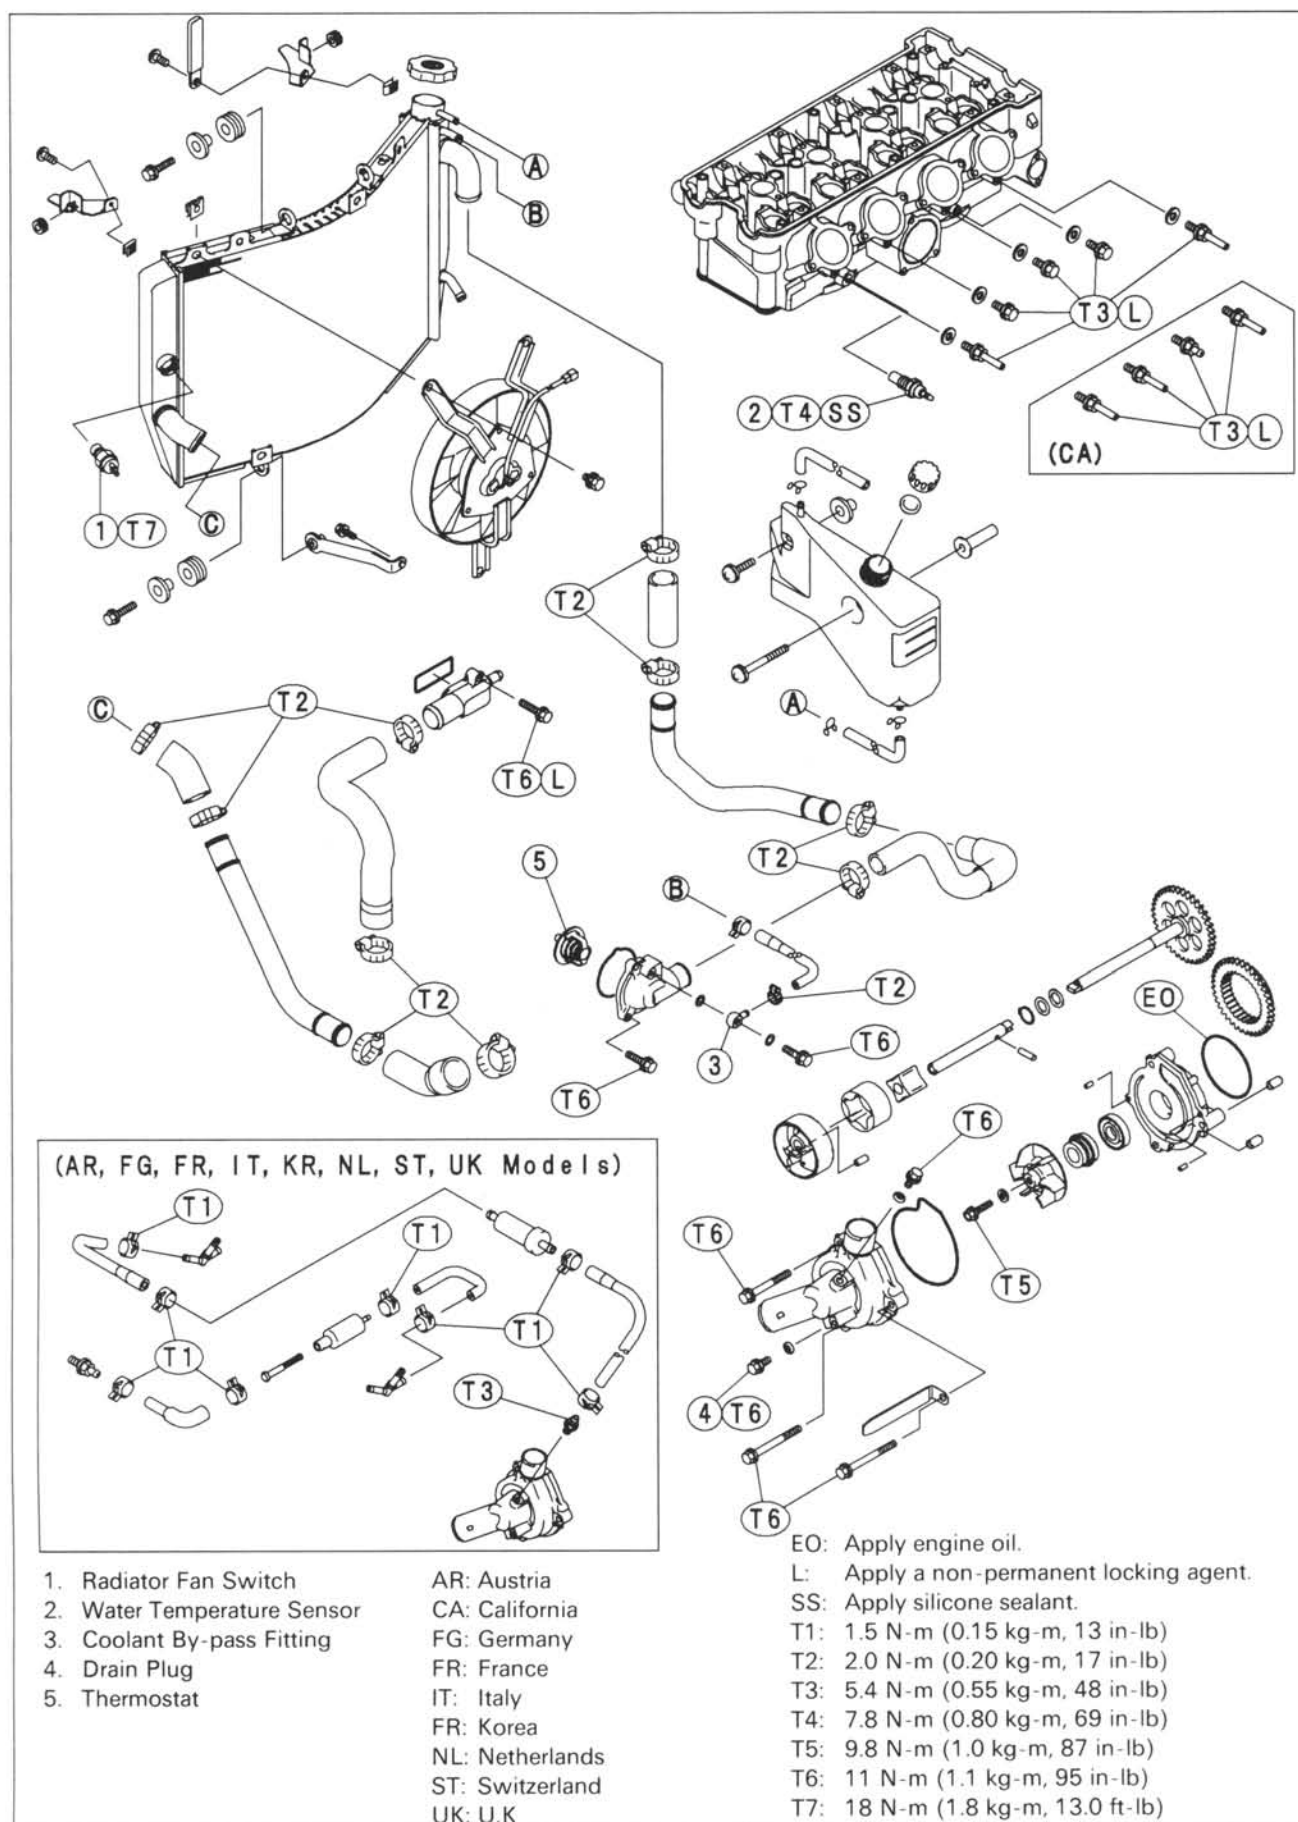

## Coolant Flow Chart

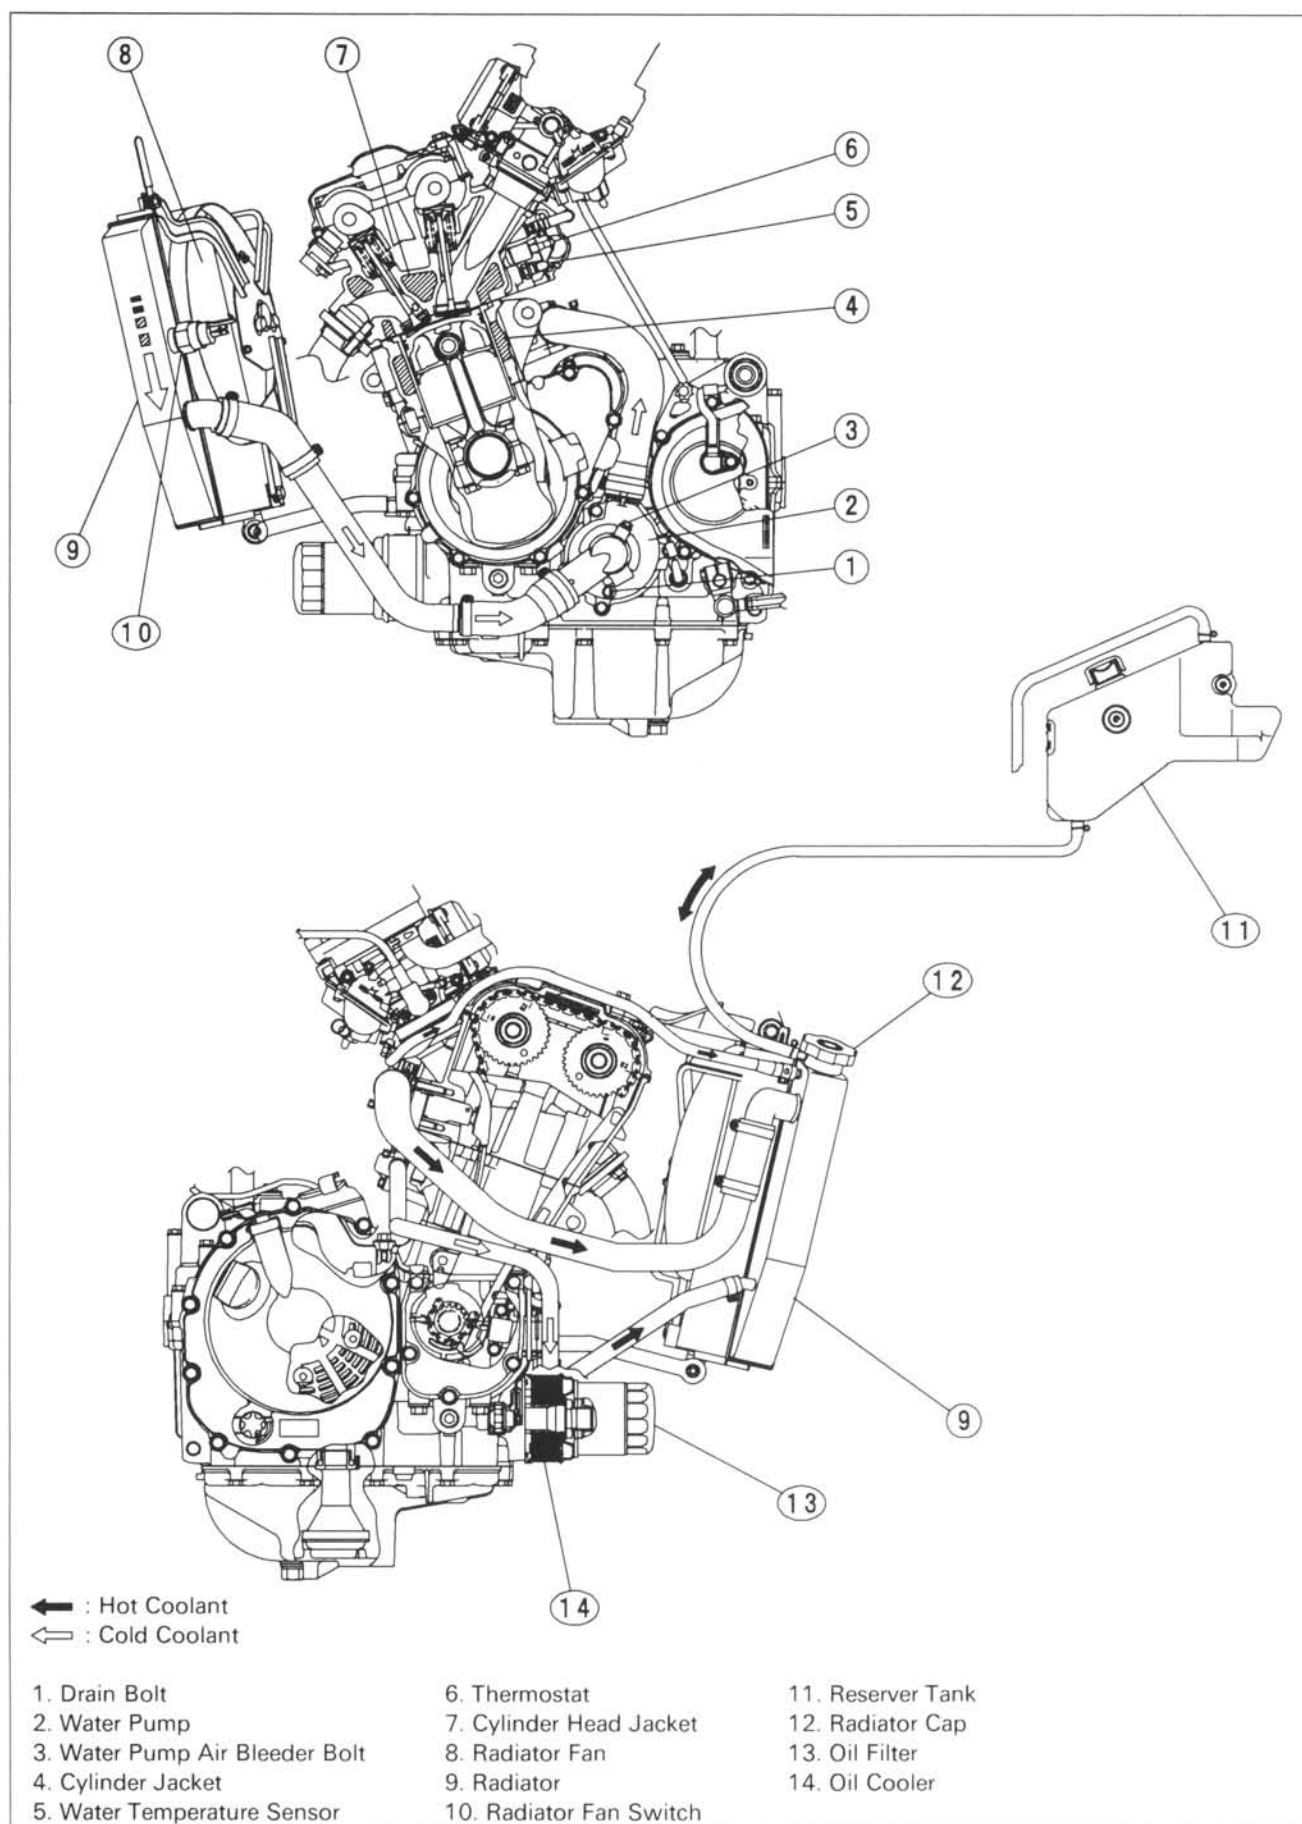

### 3-4 COOLING SYSTEM

#### Specifications

Item	Standard
<b>Coolant provided when shipping:</b> Type  Color Mixed ratio Freezing point Total amount	Permanent type of antifreeze (soft water and ethylene glycol plus corrosion and rust inhibitor chemicals for aluminum engines and radiators) Green Soft water 50%, coolant 50% -35°C (-31°F) 2.9L (reserve tank full level including radiator and engine)
<b>Radiator cap</b> Relief pressure:	93 ~ 123 kPa (0.95 ~ 1.25 kg/cm <sup>2</sup> , 14 ~ 18 psi)
<b>Thermostat:</b> Valve opening temperature Valve full opening lift	58 ~ 62°C (136 ~ 144 °F) 8mm or more @95°C (203 °F)


Sealant – Kawasaki Bond (Silicone Sealant): 56019-120

## Coolant

### Coolant Level Inspection

#### NOTE

- Check the level when the engine is cold (room or ambient temperature).
- Check the coolant level in the reserve tank with the motorcycle held perpendicular.
- ★ If the coolant level is lower than the low level line [A], add coolant to the full level line [B].

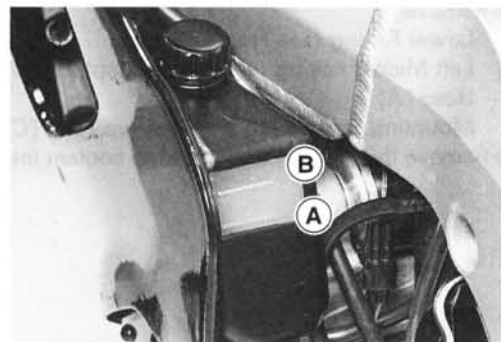

#### CAUTION

For refilling, add the specified mixture of coolant and soft water. Adding water alone dilutes the coolant and degrades its anticorrosion properties. The diluted coolant can attack the aluminum engine parts. In an emergency, soft water alone can be added. But the diluted coolant must be returned to the correct mixture ratio within a few days.

If coolant must be added often, or the reservoir tank has run completely dry; there is probably leakage in the cooling system. Check the system for leaks.

### Coolant Draining


#### ⚠ WARNING

To avoid burns, do not remove the radiator cap or try to change the coolant when the engine is still hot. Wait until it cools down.


Coolant on tires will make them slippery and can cause an accident and injury. Immediately wipe up or wash away any coolant that spills on the frame, engine, or other painted parts.

Since coolant is harmful to the human body, do not use for drinking.

- Remove:  
Radiator Cap [A]

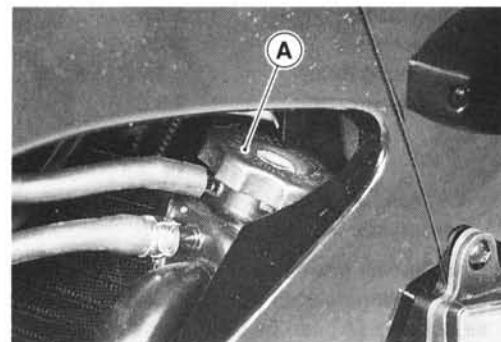


- Place a container under the drain plug [A] at the bottom of the water pump cover [B].
- Drain the coolant from the radiator and engine by removing the drain plug.

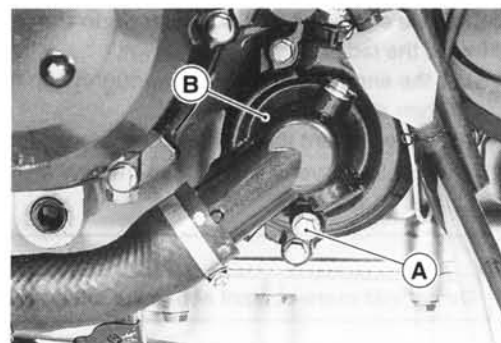


## 3-6 COOLING SYSTEM

- Remove:
  - Lower Fairing (see Frame chapter)
  - Left Middle Fairing (see Frame chapter)
  - Hose [A]
  - Mounting Screws [B] and Reserve Tank [C]
- Remove the cap [D] and pour the coolant into a container.

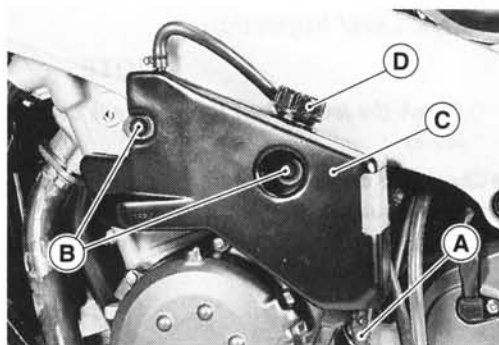

### Coolant Filling

- Remove:
  - Lower Fairing (see Frame chapter)
  - Right Middle Fairing (see Frame chapter)
- Tighten the drain plug.
- Torque – Drain Plug: 11 N-m (1.1 kg-m, 95 in-lb)**
- Fill the radiator up to the radiator filler neck [A] with coolant, and install the radiator cap.

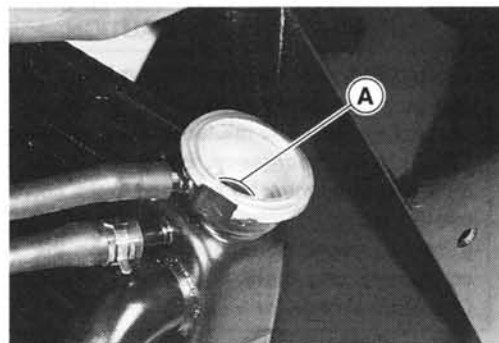

### NOTE

- Pour in the coolant slowly so that it can expel the air from the engine and radiator.
- Fill the reserve tank up to the full level line with coolant, and install the cap.

### CAUTION


Soft or distilled water must be used with the antifreeze (see below for antifreeze) in the cooling system.  
If hard water is used in the system, it causes scales accumulation in the water passages, and considerably reduces the efficiency of the cooling system.

### Water and Coolant Mixture Ratio (Recommended)

Soft Water	: 50%
Coolant	: 50%
Freezing Point	: -35°C (-31°F)
Total Amount	: 2.9 L

### NOTE

- Choose a suitable mixture ratio by referring to the coolant manufacturer's directions.
- Bleed the air from the cooling system as follows.
  - Start the engine with the radiator cap removed and run it until no more air bubbles [A] can be seen in the coolant.
  - Tap the radiator hoses to force any air bubbles caught inside.
  - Stop the engine and add coolant up to the radiator filler neck.
- Install the radiator cap.
- Start the engine, warm it up thoroughly until the radiator fan turns on and then stop the engine.
- Check the coolant level in the reserve tank after the engine cools down.
- ★ If the coolant level is lower than the low level line, add coolant to the full level line.

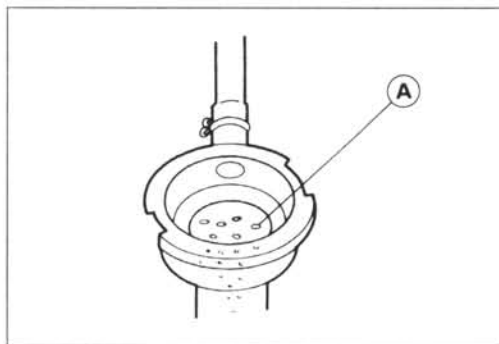

### CAUTION

Do not add more coolant above the full level line.



**Pressure Testing**

- Remove:
  - Right Middle Fairing (see Frame chapter)
- Remove the radiator cap, and install a cooling system pressure tester [A] on the filler neck.


**NOTE**

- Wet the cap sealing surfaces with water or coolant to prevent pressure leaks.
- Build up pressure in the system carefully until the pressure reaches 123 kPa (1.25 kg/cm<sup>2</sup>, 18 psi).

**CAUTION**

During pressure testing, do not exceed the pressure for which the system is designed. The maximum pressure is 123 kPa (1.25 kg/cm<sup>2</sup>, 18 psi).

- Watch the gauge for at least 6 seconds.
- ★ If the pressure holds steady, the system is all right.
- ★ If the pressure drops soon, check for leaks.

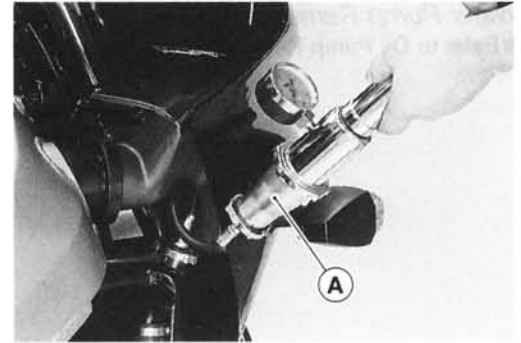**Cooling System Flushing**

Over a period of time, the cooling system accumulates rust, scale, and lime in the water jacket and radiator. When this accumulation is suspected or observed, flush the cooling system. If this accumulation is not removed, it will clog up the water passage and considerably reduce the efficiency of the cooling system.

- Drain the cooling system (see Coolant Draining).
- Fill the cooling system with fresh water mixed with a flushing compound.

**CAUTION**

Do not use a flushing compound which is harmful to the aluminum engine and radiator. Carefully follow the instructions supplied by the manufacturer of the cleaning product.

- Warm up the engine, and run it at normal operating temperature for about ten minutes.
- Stop the engine, and drain the cooling system.
- Fill the system with fresh water.
- Warm up the engine and drain the system.
- Repeat the previous two steps once more.
- Fill the system with a permanent type coolant and bleed the air from the system (see Coolant Filling).

## 3-8 COOLING SYSTEM

### Water Pump

#### Water Pump Removal

● Refer to Oil Pump Removal in Engine Lubrication System chapter.



#### Water Pump Installation

● Refer to Oil Pump Installation in Engine Lubrication System chapter.

#### Water Pump Inspection

- Check the drainage outlet passage [A] at the side of the water pump body for coolant leaks.
- ★ If the mechanical seal is damaged, the coolant leaks through the seal and drains through the passage. Replace the water pump unit with a new one.

- Visually inspect the impeller [A].
- ★ If the surface is corroded, or if the blades are damaged, replace the water pump unit.

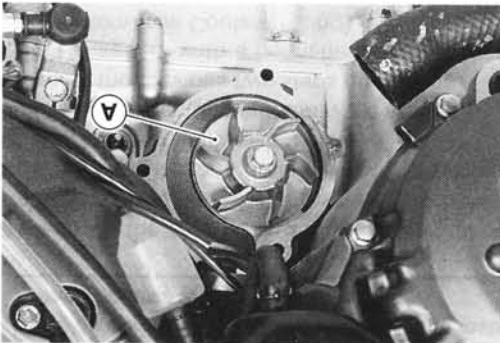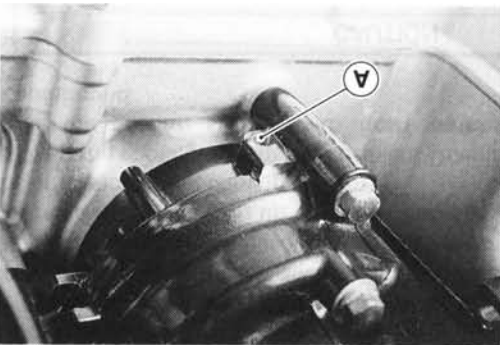

## Radiator, Radiator Fan


### *Radiator, Radiator Fan Removal*

#### ⚠WARNING


The radiator fan is connected directly to the battery. The radiator fan may start even if the ignition switch is off. NEVER TOUCH THE RADIATOR FAN UNTIL THE RADIATOR FAN CONNECTOR IS DISCONNECTED. TOUCHING THE FAN BEFORE THE CONNECTOR IS DISCONNECTED COULD CAUSE INJURY FROM THE FAN BLADES.

#### ● Remove:


Seats (see Frame chapter)  
 Fuel Tank and Air Cleaner Housing (see Fuel System chapter)  
 Lower, Middle, and Inner Fairings (see Frame chapter)  
 Coolant (see Coolant Draining)  
 Radiator Fan Connector [A]

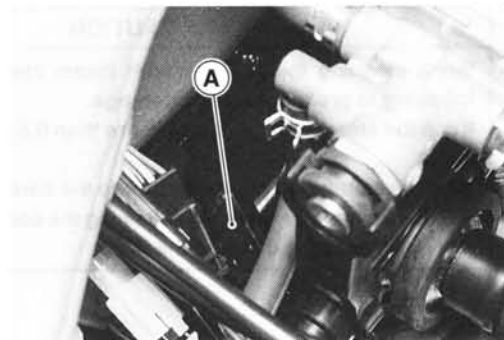


Radiator Hoses [A]  
 Radiator Mounting Bolt [B]

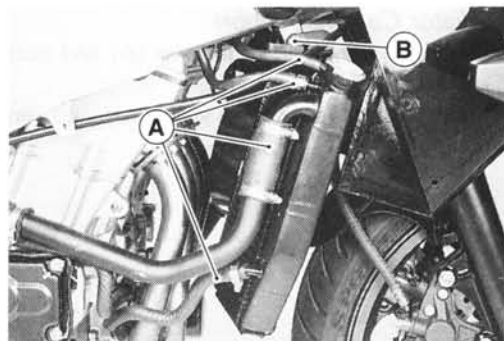

Fan Switch Lead Connector [A]  
 Radiator Hose [B]  
 Radiator Mounting Bolts [C]  
 Radiator

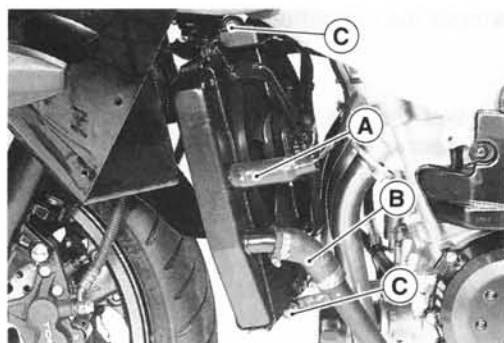

Radiator Fan Mounting Bolts [A]  
 Radiator Fan [B]

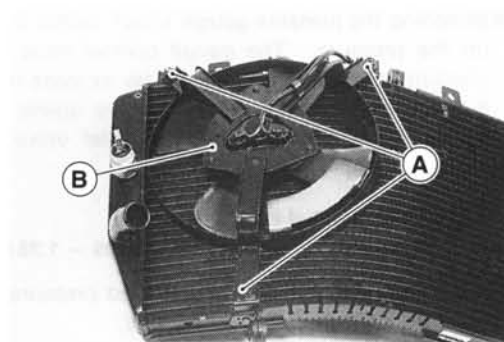

### 3-10 COOLING SYSTEM

#### Radiator Inspection

- Check the radiator core.
- ★ If there are obstructions to air flow, remove them.
- ★ If the corrugated fins [A] are deformed, carefully straighten them.
- ★ If the air passages of the radiator core are blocked more than 20% by unremovable obstructions or irreparably deformed fins, replace the radiator with a new one.



#### CAUTION

When cleaning the radiator with steam cleaner, be careful of the following to prevent radiator damage.

Keep the steam gun [A] away more than 0.5 m [B] from the radiator core.


Hold the steam gun perpendicular to the core surface.

Run the steam gun vertically following the core fin direction. Running it horizontally may damage the fin.

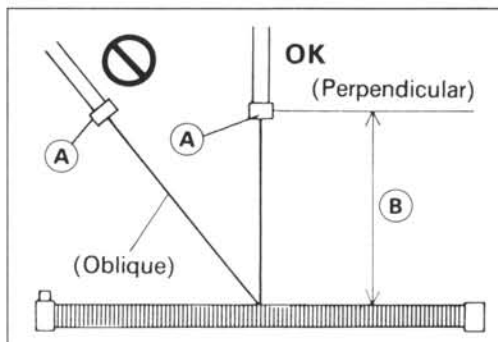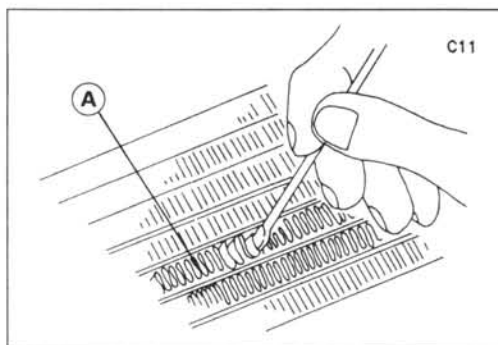

#### Radiator Cap Inspection


- Check the condition of the top [A] and bottom [B] valve seals and valve spring [C].
- ★ If any one of them shows visible damage, replace the cap with a new one.

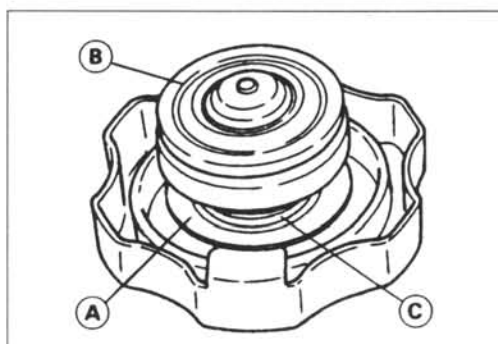

- Install the cap [A] on a cooling system pressure tester [B].

#### NOTE

- Wet the cap sealing surfaces with water or coolant to prevent pressure leaks.

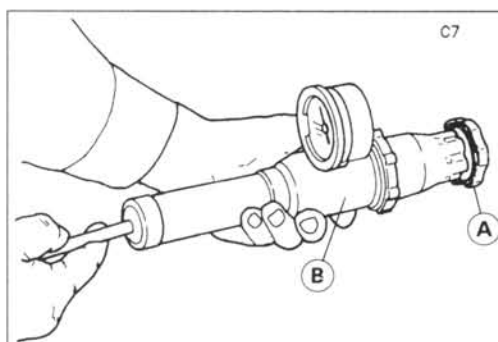

- Watching the pressure gauge, slowly pump the pressure tester to build up the pressure. The gauge pointer must remain within the relief pressure range in the table below at least 6 seconds. Continue to pump the tester until the relief valve opens, indicated by the gauge pointer flicks downward. The relief valve must open within the specified range.


#### Radiator Cap Relief Pressure

Standard: 93 ~ 123 kPa (0.95 ~ 1.25 kg/cm<sup>2</sup>, 14 ~ 18 psi)

- ★ If the cap cannot hold the specified pressure, or if it holds too much pressure, replace it with a new one.

*Hose Inspection*

- In accordance with the Periodic Maintenance Chart, visually inspect the radiator hoses [A] for signs of deterioration. Squeeze the hose. A hose should not be hard and brittle, nor should it be soft or swollen.
- Replace any damaged hose.

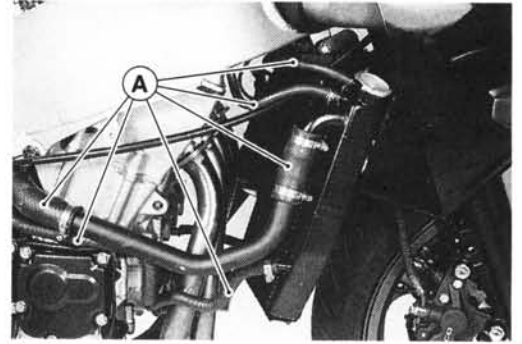


## 3-12 COOLING SYSTEM

### Thermostat


#### Thermostat Removal

- Remove:
  - Coolant (see Coolant Draining)
  - Seats (see Frame chapter)
  - Fuel Tank (see Fuel System chapter)
  - Thermostat Housing Cover Bolts [A]
  - Thermostat Housing Cover [B]
  - Thermostat

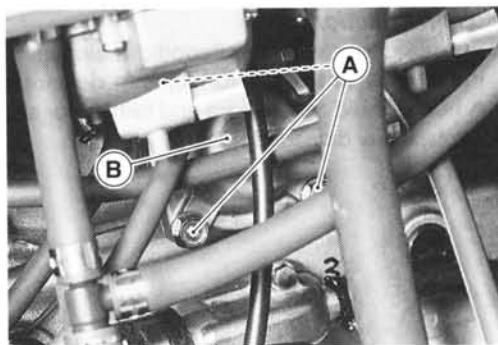


#### Thermostat Installation

- Be sure to install the O-ring [A] on the housing cover.
- Tighten the housing cover bolts.
- Torque – Thermostat Housing Cover Bolts: 11 N-m (1.1 kg-m, 95 in-lb)**
- Fill the radiator with coolant.

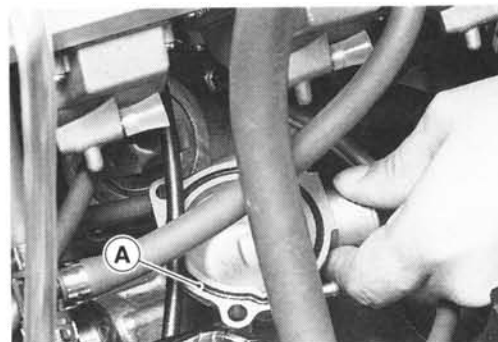

#### Thermostat Inspection


- Remove the thermostat, and inspect the thermostat valve [A] at room temperature.
- ★ If the valve is open, replace the thermostat with a new one.

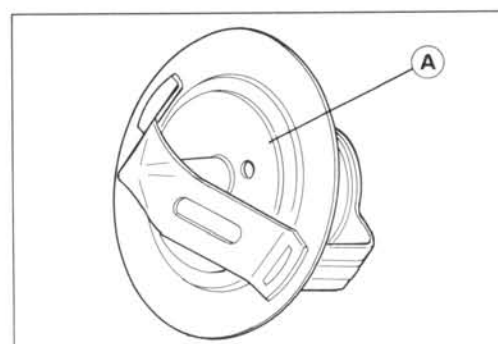

- To check valve opening temperature, suspend the thermostat [A] in a container of water and raise the temperature of the water.
- The thermostat must be completely submerged and must not touch the container sides or bottom. Suspend an accurate thermometer [B] in the water. It must not touch the container, either.
- ★ If the measurement is out of the specified range, replace the thermostat with a new one.

#### Thermostat Valve Opening Temperature

58 ~ 62°C (136 ~ 144°F)

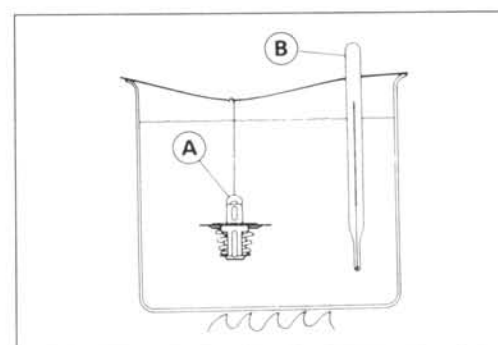



## Radiator Fan Switch, Water Temperature Sensor

### *Radiator Fan Switch, Water Temperature Sensor Removal*

#### CAUTION

The fan switch or the water temperature sensor should never be allowed to fall on a hard surface. Such a shock to their parts can damage them.

- Drain the coolant (see Coolant Draining).
- Remove:
  - Radiator Fan Switch Lead Connectors [A]
  - Radiator Fan Switch [B]
- Seats (see Frame chapter)
- Fuel Tank (see Fuel System chapter)
- Water Temperature Sensor Lead Connector [A]
- Water Temperature Sensor [B]

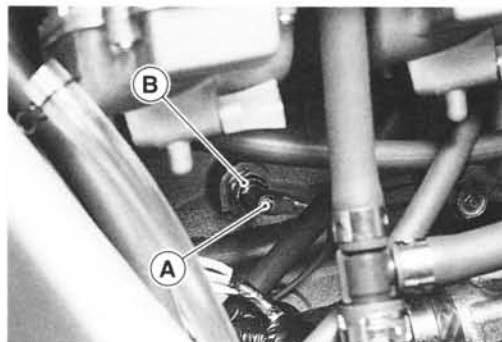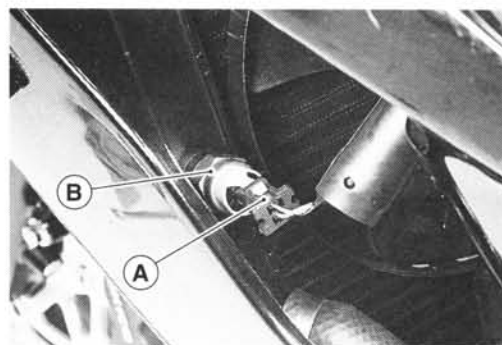

### *Radiator Fan Switch, Water Temperature Sensor Installation*

- Apply silicone sealant to the threads of the water temperature sensor.
- Sealant – Kawasaki Bond (Silicone Sealant): 56019-120**
- Tighten the fan switch and water temperature sensor.
- Torque – Radiator Fan Switch : 18 N-m (1.8 kg-m, 13.0 ft-lb)**  
**Water Temperature Sensor : 7.8 N-m (0.80 kg-m, 69 in-lb)**

### *Radiator Fan Switch, Water Temperature Sensor Inspection*

- Refer to Electrical System chapter for these inspections.





# Engine Top End

## Table of Contents

Exploded View .....	4-2	Valve Installation .....	4-20
Specifications .....	4-4	Valve Guide Removal .....	4-20
Clean Air System .....	4-6	Valve Guide Installation .....	4-20
Air Suction Valve Inspection .....	4-6	Valve-to-Guide Clearance Measurement	
Vacuum Switch Valve Installation .....	4-6	(Wobble Method) .....	4-20
Vacuum Switch Valve Test .....	4-6	Valve Seat Inspection .....	4-21
Clean Air System Hose Inspection .....	4-7	Valve Seat Repair .....	4-21
Cylinder Head Cover .....	4-8	Seat Cutter Operation Care: .....	4-22
Cylinder Head Cover Removal .....	4-8	Marks Stamped on the Cutter: .....	4-22
Cylinder Head Cover Installation .....	4-8	Operating Procedures: .....	4-22
Camshaft Chain Tensioner .....	4-10	Cylinder, Pistons .....	4-25
Camshaft Chain Tensioner Removal .....	4-10	Cylinder Removal .....	4-25
Camshaft Chain Tensioner Installation .....	4-10	Cylinder Installation .....	4-25
Camshaft, Camshaft Chain .....	4-11	Piston Removal .....	4-25
Camshaft Removal .....	4-11	Piston Installation .....	4-26
Camshaft Installation .....	4-11	Cylinder Wear .....	4-27
Camshaft, Camshaft Cap Wear .....	4-12	Piston Wear .....	4-27
Camshaft Chain Removal .....	4-12	Piston Ring, Piston Ring Groove Wear .....	4-27
Camshaft Chain Wear .....	4-13	Piston Ring End Gap .....	4-27
Cylinder Head .....	4-14	Carburetor Holder .....	4-28
Cylinder Compression Measurement .....	4-14	Carburetor Holder Installation .....	4-28
Cylinder Head Removal .....	4-14	Muffler .....	4-29
Cylinder Head Installation .....	4-15	Muffler Removal .....	4-29
Valves .....	4-16	Muffler Installation .....	4-29
Valve Clearance Adjustment .....	4-16	Muffler Body Removal .....	4-29
Valve Removal .....	4-20	Muffler Body Installation .....	4-29

### Exploded View


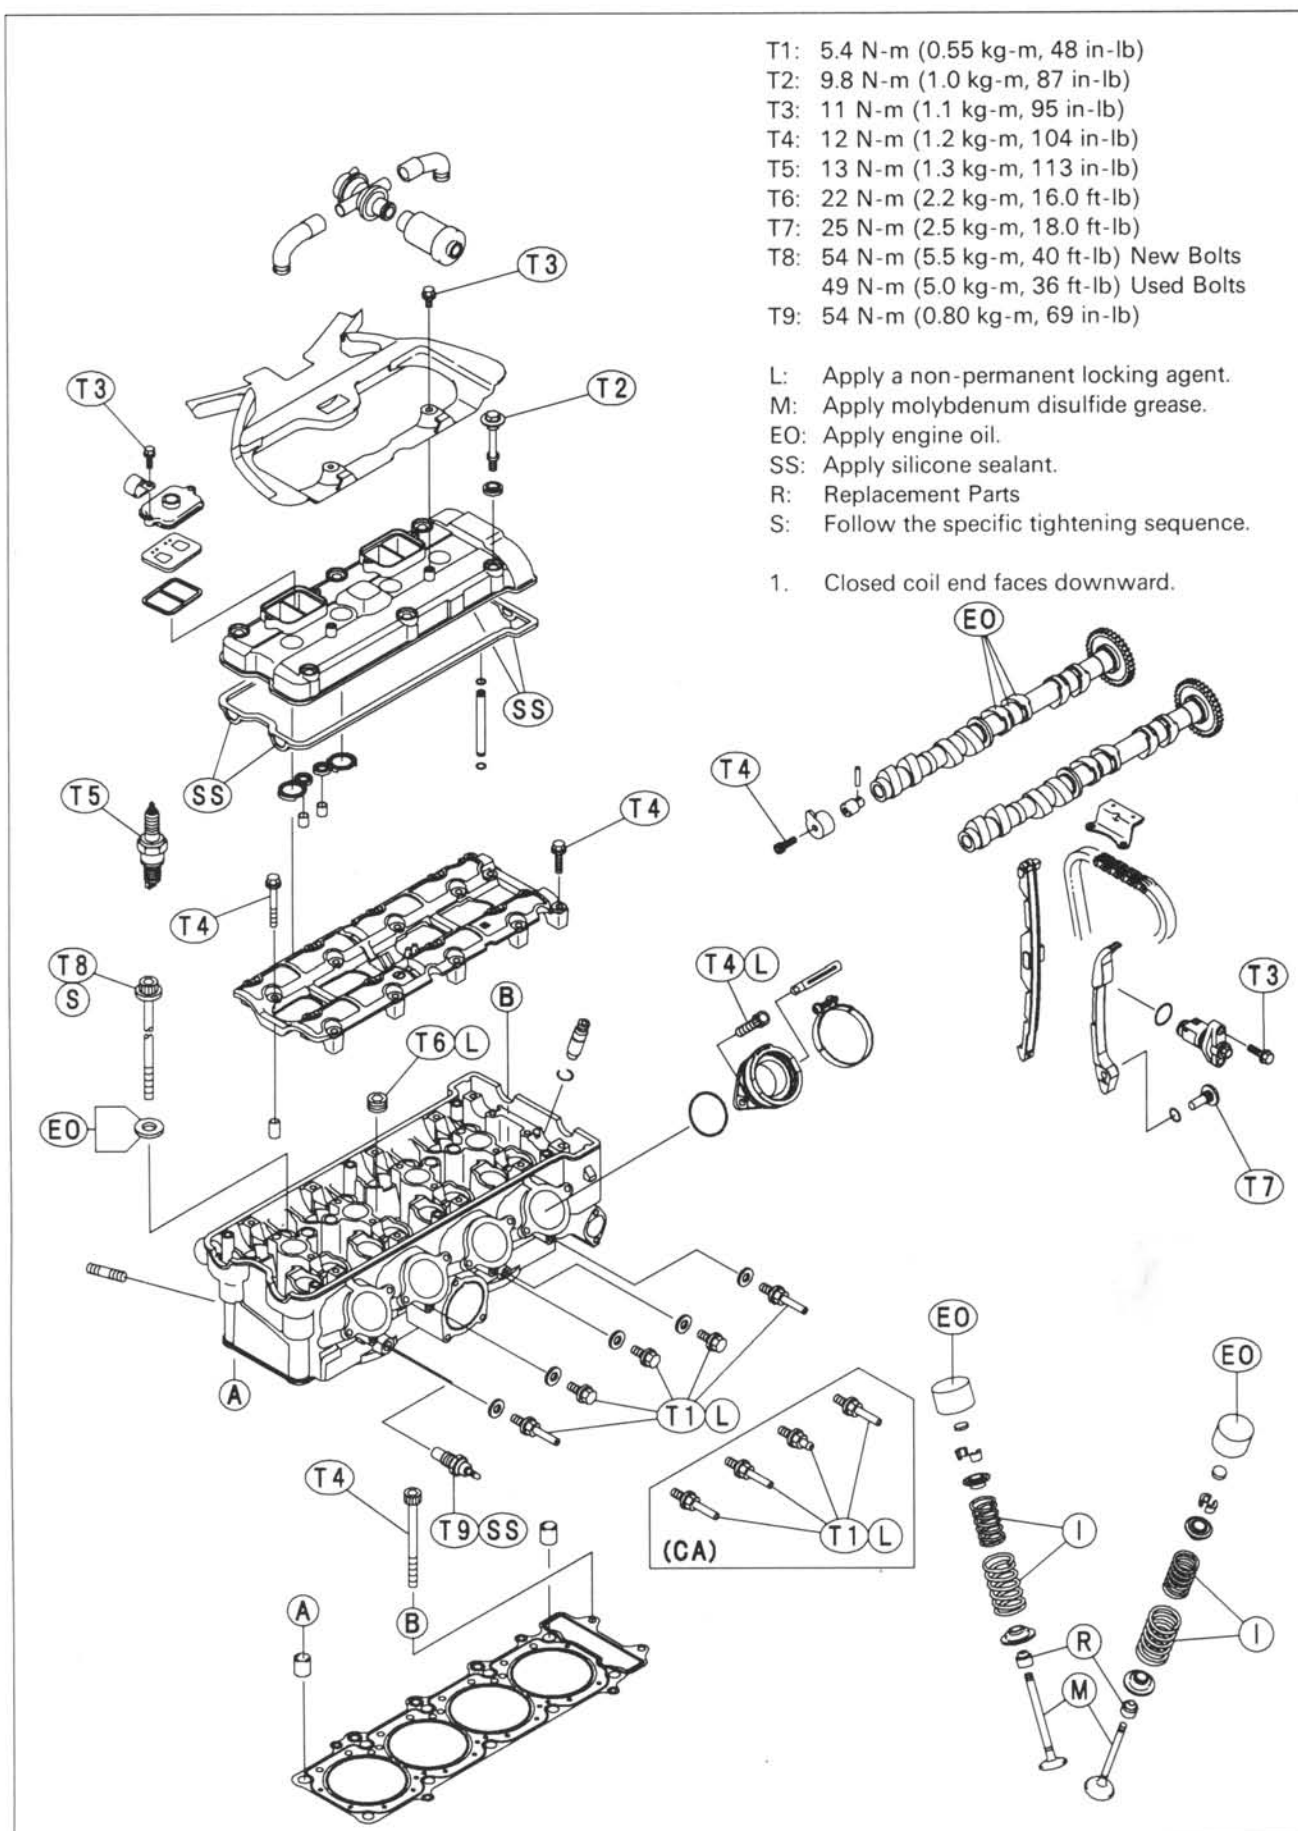


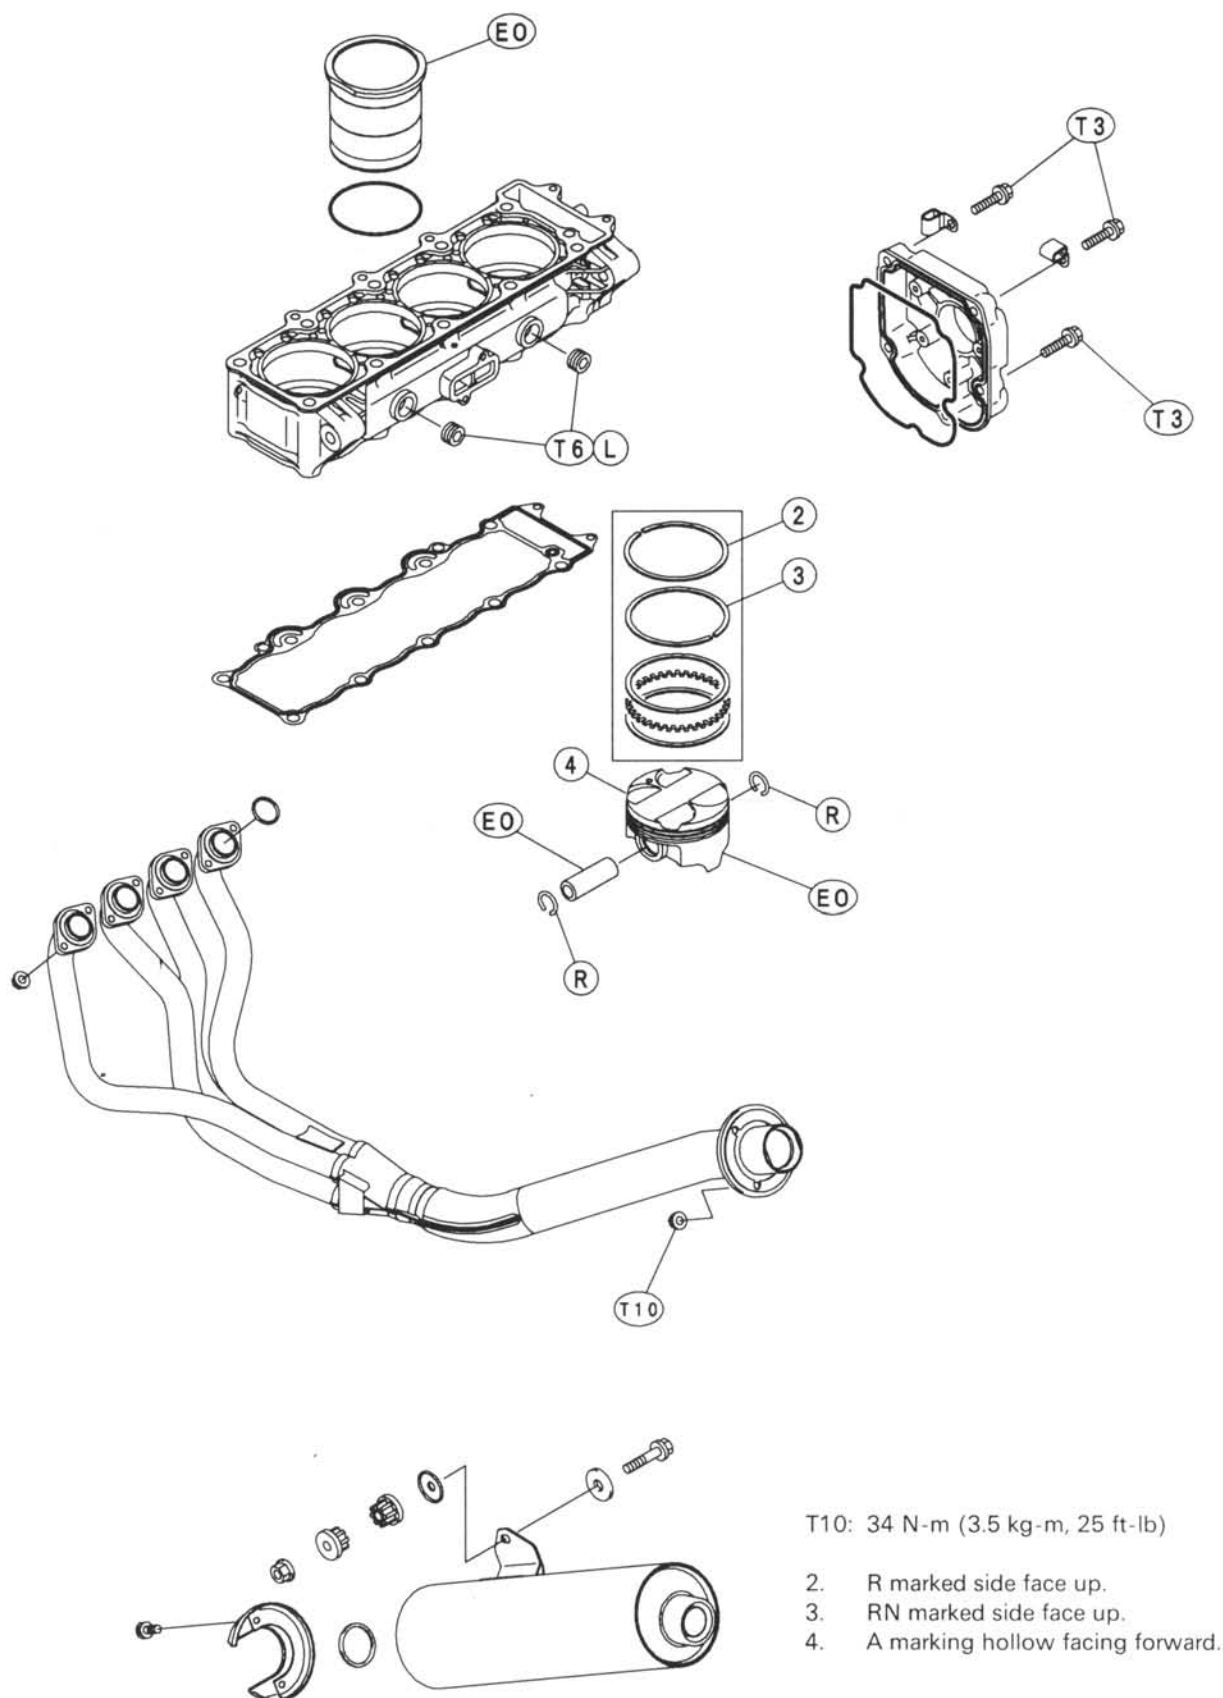



## 4-4 ENGINE TOP END

### Specifications

Item	Standard	Service Limit
<b>Clean Air System:</b>		
Vacuum switch valve closing pressure:	Open → Close 57 ~ 65 kPa (430 ~ 490 mmHg)	---
<b>Camshafts</b>		
Cam height:		
Exhaust	36.643 ~ 36.757 mm	36.54 mm
Inlet	37.143 ~ 37.257 mm	37.04 mm
Camshaft journal, camshaft cap clearance	0.028 ~ 0.071 mm	0.16 mm
Camshaft journal diameter	23.950 ~ 23.972 mm	23.92 mm
Camshaft bearing inside diameter	24.000 ~ 24.021 mm	24.08 mm
Camshaft runout	TIR 0.02 mm or less	TIR 0.1 mm
Camshaft chain 20-link length	127.00 ~ 127.36 mm	128.9 mm
<b>Cylinder Head:</b>		
Cylinder compression	(usable range) 1 070 ~ 1 620 kPa (10.9 ~ 16.5 kg/cm <sup>2</sup> , 155 ~ 236 psi) @300 r/min (rpm)	---
Cylinder head warp	---	0.05 mm
<b>Valves:</b>		
Valve clearance:		
Exhaust	0.22 ~ 0.31 mm	---
Inlet	0.15 ~ 0.24 mm	---
Valve head thickness:		
Exhaust	0.8 mm	0.5 mm
Inlet	0.5 mm	0.25 mm
Valve stem bend	TIR 0.01mm or less	TIR 0.05 mm
Valve stem diameter:		
Exhaust	4.455 ~ 4.470 mm	4.44 mm
Inlet	4.475 ~ 4.490 mm	4.46 mm
Valve guide inside diameter		
Exhaust	4.500 ~ 4.512 mm	4.58 mm
Inlet	4.500 ~ 4.512 mm	4.58 mm
Valve/valve guide clearance (wobble method):		
Exhaust	0.09 ~ 0.18 mm	0.40 mm
Inlet	0.03 ~ 0.12 mm	0.33 mm
Valve seat cutting angle	45°, 32°, 60°	---

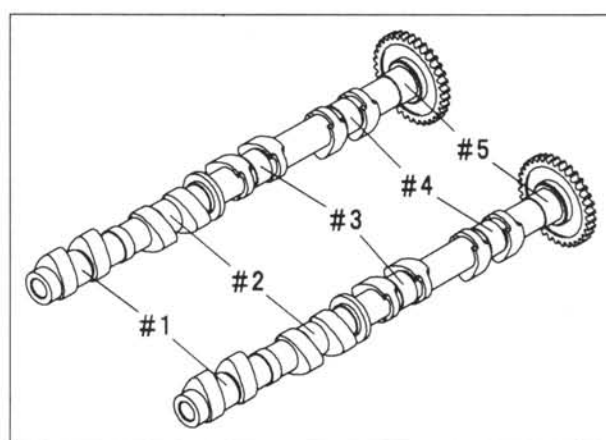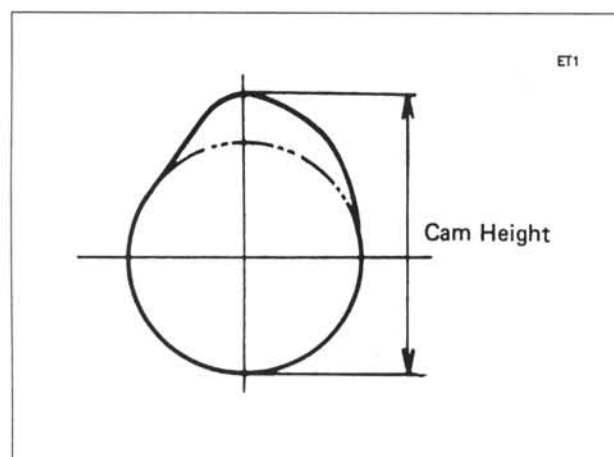

Item		Standard	Service Limit
Valve seat surface:			
Width:	Exhaust	0.5 ~ 1.0 mm	— — —
	Inlet	0.5 ~ 1.0 mm	— — —
Outside diameter:	Exhaust	25.2 ~ 25.4 mm	— — —
	Inlet	29.4 ~ 29.6 mm	— — —
Valve spring free length:	Exhaust (Inner)	35.3 mm	32.7 mm
	Exhaust (Outer)	39.2 mm	38.1 mm
	Inlet(Inner)	34.6 mm	33.0 mm
	Inlet(Outer)	38.6 mm	37.4 mm
<b>Cylinder, Piston:</b>			
Cylinder inside diameter		75.000 ~ 75.012 mm	75.10 mm
Piston diameter		74.945 ~ 74.960 mm	74.79 mm
Piston/cylinder clearance		0.040 ~ 0.067 mm	— — —
Piston ring/groove clearance:	Top	0.04 ~ 0.08 mm	0.18 mm
	Second	0.03 ~ 0.07 mm	0.17 mm
Piston ring groove width:	Top	0.83 ~ 0.85 mm	0.93 mm
	Second	0.82 ~ 0.84 mm	0.92 mm
Piston ring thickness:	Top	0.77 ~ 0.79 mm	0.70 mm
	Second	0.77 ~ 0.79 mm	0.70 mm
Piston ring end gap:	Top	0.20 ~ 0.35 mm	0.6 mm
	Second	0.35 ~ 0.50 mm	0.8 mm

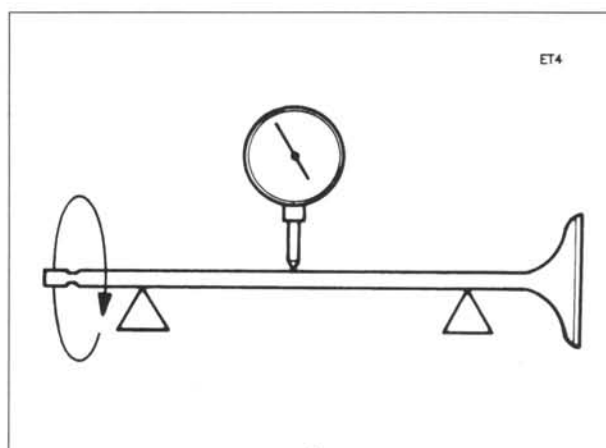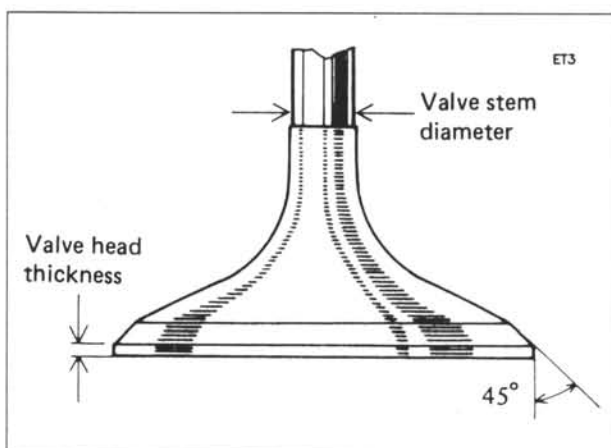

**Special Tools** – Fork Oil Level Gauge: 57001-1290  
 Vacuum Gauge: 57001-1369  
 Spark Plug Wrench, 16mm: 92110-1146  
 Compression Gauge: 57001-221  
 Compression Gauge Adapter, M10 X 1.0: 57001-1317  
 Valve Spring Compressor Assembly: 57001-241  
 Valve Spring Compressor Adapter,  $\Phi 22$ : 57001-1202  
 Valve Guide Arbor,  $\Phi 4.5$ : 57001-1331  
 Valve Guide Reamer,  $\Phi 4.5$ : 57001-1333  
 Valve Seat Cutter, 45° –  $\Phi 32$ : 57001-1115  
 Valve Seat Cutter, 32° –  $\Phi 30$ : 57001-1120  
 Valve Seat Cutter, 60° –  $\Phi 30$ : 57001-1123  
 Valve Seat Cutter, 45° –  $\Phi 27.5$ : 57001-1114  
 Valve Seat Cutter, 32° –  $\Phi 28$ : 57001-1119  
 Valve Seat Cutter, 60° –  $\Phi 33$ : 57001-1334  
 Valve Seat Cutter Holder,  $\Phi 4.5$ : 57001-1330  
 Valve Seat Cutter Holder Bar: 57001-1128  
 Piston Pin Puller Assembly: 57001-910


**Sealant** – Kawasaki Bond (Silicone Sealant): 56019-120

## 4-6 ENGINE TOP END

### Clean Air System

#### Air Suction Valve Inspection

- Visually inspect the reeds [A] for cracks, folds, warps, heat damage, or other damage.
- ★ If there is any doubt as to the condition of the reed, replace the air suction valve as an assembly.
- Check the reed contact areas [B] of the valve holder for grooves, scratches, any signs of separation from the holder, or heat damage.
- ★ If there is any doubt as to the condition of the reed contact areas, replace the air suction valve as an assembly.
- If any carbon or other foreign particles have accumulated between the reed and the reed contact area, wash the valve assembly with a high flash-point solvent.

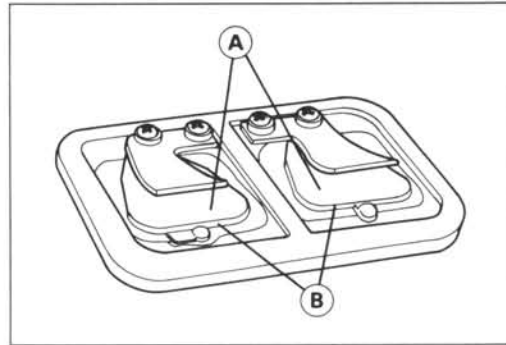


#### CAUTION

Do not scrape off the deposits with a scraper as this could damage the rubber, requiring replacement of the suction valve assembly.

#### Vacuum Switch Valve Installation

- Install the vacuum switch valve so that the air hole [A] faces downwards.
- Route the hoses correctly (see General Information chapter).

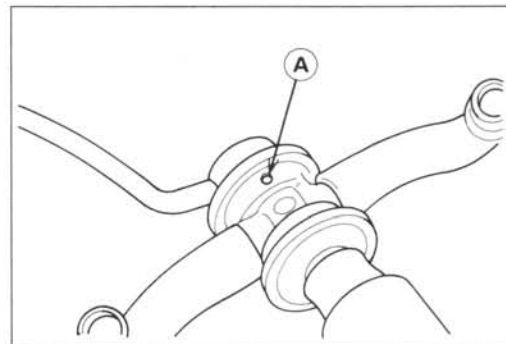


#### Vacuum Switch Valve Test

- Remove:
  - Fuel Tank (see Fuel System chapter)
  - Vacuum Switch Valve
- Connect the vacuum gauge [A] and syringe [B] or fork oil level gauge to the vacuum hoses as shown.

**Special Tools** – Vacuum Gauge: 57001-1369  
Fork Oil Level Gauge: 57001-1290

Air Flow [C]

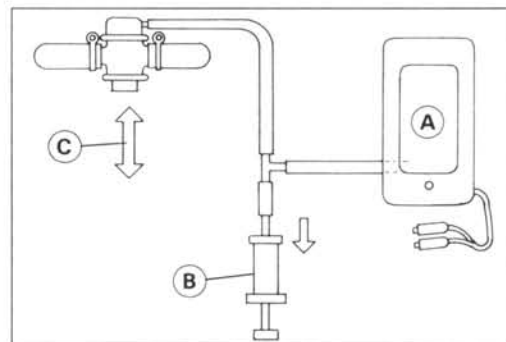


- Gradually raise the vacuum (lower the pressure) applied to the vacuum switch valve, and check the valve operation. When the vacuum is low, the vacuum switch valve should permit air to flow. When the vacuum raises to 57 ~ 65 kPa (430 ~ 490 mm Hg), it should stop air flow.
- ★ If the vacuum switch valve does not operate as described, replace it with a new one.

#### NOTE

○ To check air flow through the vacuum switch valve, just blow through the air cleaner hose.

#### Vacuum Switch Valve Closing Pressure (Open → Close)

Standard: 57 ~ 65 kPa (430 ~ 490 mmHg)

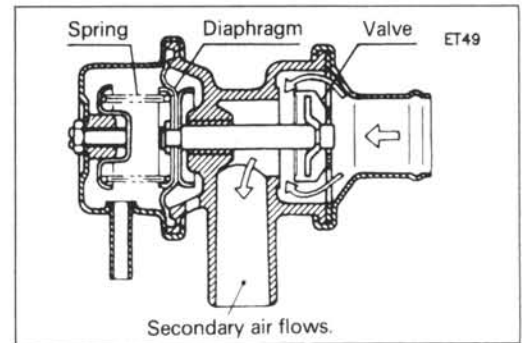

#### Clean Air System Hose Inspection

- Be certain that all the hoses are routed without being flattened or kinked, and are connected correctly to the air cleaner housing, vacuum switch valve, #1 and #4 carburetor holders and air suction valve covers.
- ★ If they are not, correct them. Replace them if they are damaged.




## 4-8 ENGINE TOP END

### Cylinder Head Cover

#### Cylinder Head Cover Removal


- Remove:
  - Lower Fairing (see Frame chapter)
  - Middle Fairings (see Frame chapter)
  - Inner Fairing (see Frame chapter)
  - Upper Fairing (see Frame chapter)
  - Seats (see Frame chapter)
  - Fuel Tank, Air Cleaner Housing and Carburetor (see Fuel System chapter)
  - Vacuum Valve (California Model only)
  - Vacuum Switch Valve and Hoses
  - Stick Coil [A]
  - Cam Sensor Connector [B]
  - Baffle Plate Bolts [C]
  - Baffle Plate [D]

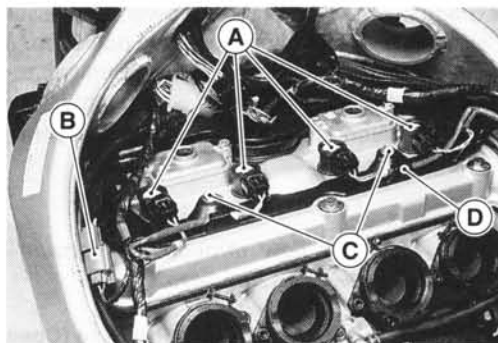

#### NOTE

- If the baffle plate cannot easily be removed, remove the air suction valve covers.


- Remove the cylinder head cover bolts [A] and take off the cover [B].

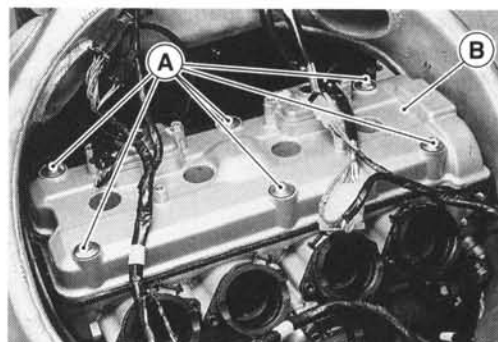


#### Cylinder Head Cover Installation

- Replace the head cover gasket with a new one if damaged.
- Apply silicone sealant to the head cover gasket as shown [A].

Sealant – Kawasaki Bond (Silicone Sealant): 56019-120

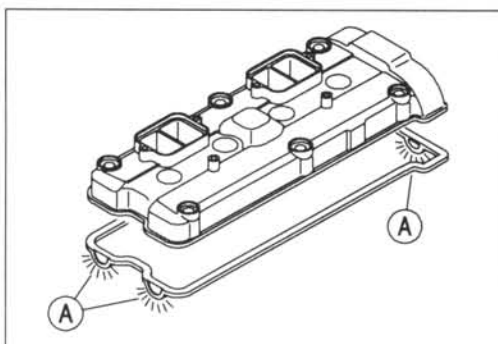

- Be sure to install the pins [A] and rubber gaskets [B].

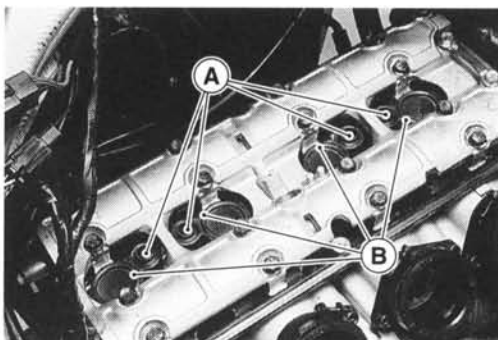


- Install the washer with the metal side [A] faces upward.
- Tighten the cylinder head cover bolts [B].

**Torque – Cylinder Head Cover Bolts: 9.8 N-m (1.0 kg-m, 87 in-lb)**

- Tighten the baffle plate bolts.

**Torque – Baffle Plate Bolts: 11 N-m (1.1 kg-m, 95 in-lb)**

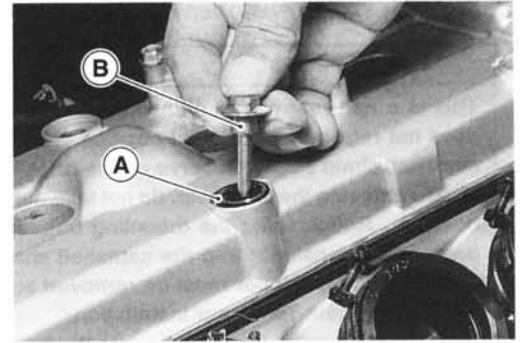

## 4-10 ENGINE TOP END

### Camshaft Chain Tensioner

#### Camshaft Chain Tensioner Removal


##### CAUTION

This is a non-return type camshaft chain tensioner. The push rod does not return to its original position once it moves out to take up camshaft chain slack. Observe all the rules listed below:

When removing the tensioner, do not take out the mounting bolts only halfway. Retightening the mounting bolts from this position could damage the tensioner and the camshaft chain. Once the bolts are loosened, the tensioner must be removed and reset as described in "Camshaft Chain Tensioner Installation."


Do not turn over the crankshaft while the tensioner is removed. This could upset the camshaft chain timing, and damage the valves.

- Remove:
  - Engine (see Engine Removal/Installation chapter)
  - Cap Bolt [A], Washer [B], Spring [C] and Rod [D]
- Remove the mounting bolts [E] and take off the camshaft chain tensioner.

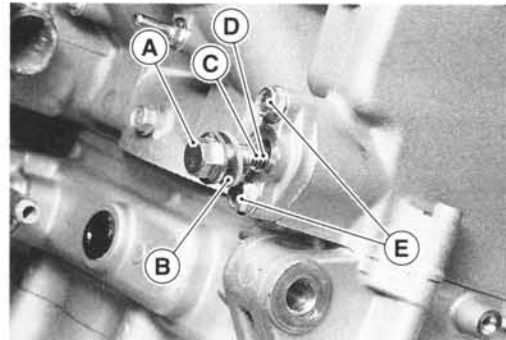


#### Camshaft Chain Tensioner Installation

- Release the stopper [A] and push the push rod [B] into the tensioner body [C].
- Insert the push rod so that the push rod teeth are leaved five notches.
- Install the tensioner body so that the stopper faces upward.

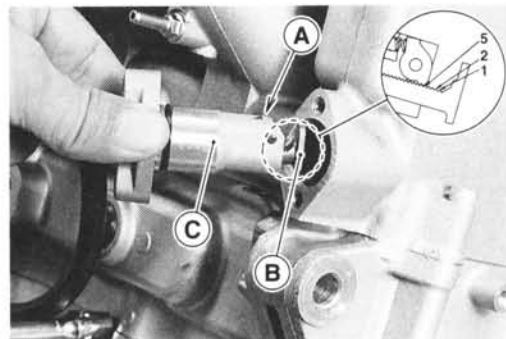


- Tighten the tensioner mounting bolts [A].
  - Torque – Camshaft Chain Tensioner Mounting Bolts: 11 N-m (1.1 kg-m, 95 in-lb)
- Install the spring and washer.
- Tighten the cap bolt [B].

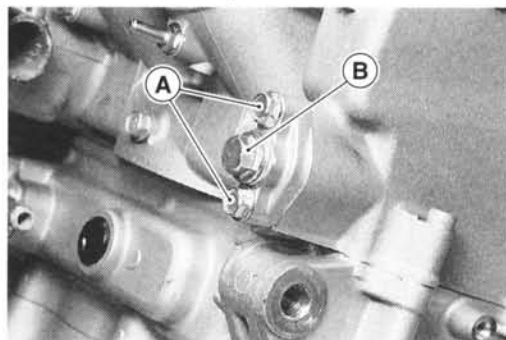


## Camshaft, Camshaft Chain

### Camshaft Removal

- Remove:
  - Engine (see Engine Removal/Installation chapter)
  - Cylinder Head Cover (see Cylinder Head Cover Removal)
  - Pickup Coil Cover
- Position the crankshaft at #1, 4 piston TDC.
  - [A] TDC mark for #1, 4 Pistons
  - [B] Timing Mark (crankcase halves mating surface)

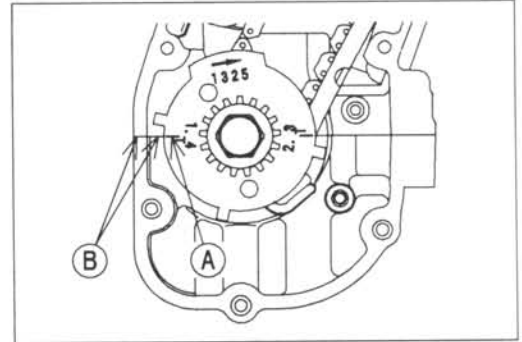

- Remove:
  - Camshaft Chain Tensioner (see Camshaft Chain Tensioner Removal)
  - Rubber Gaskets and Cylinder Head Cover Gasket
  - Camshaft Cap Bolts
  - Chain Guide [A]
  - Camshaft Cap [B]
  - Camshafts [C]
- Stuff a clean cloth into the chain tunnel to keep any parts from dropping into the crankcase.

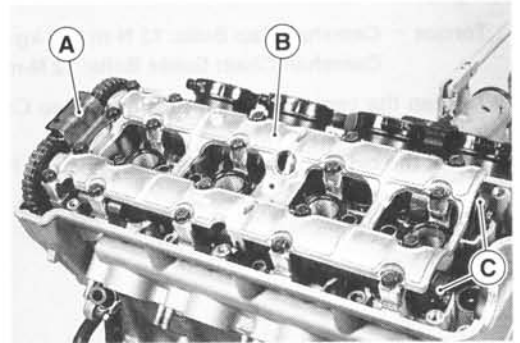


### CAUTION

The crankshaft may be turned while the camshafts are removed. Always pull the chain taut while turning the crankshaft. This avoids kinking the chain on the lower (crankshaft) sprocket. A kinked chain could damage both the chain and the sprocket.

### Camshaft Installation


- Be sure to install the following parts.
  - [A] O-rings
  - [B] Pins

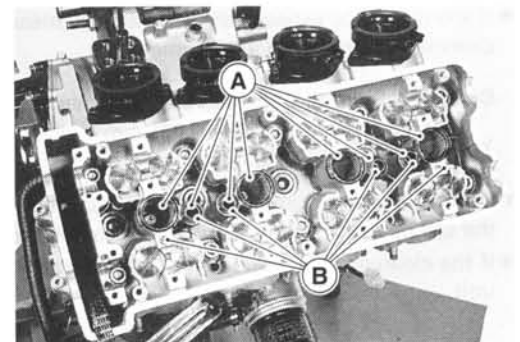

- Apply engine oil to all cam parts and journals.
- If a new camshaft is to be used, apply a thin coat of molybdenum disulfide grease to the cam surfaces.

### NOTE

- The exhaust camshaft has a 030 EX mark [A] and the inlet camshaft has a 030 IN mark [B]. Be careful not to mix up these shafts.

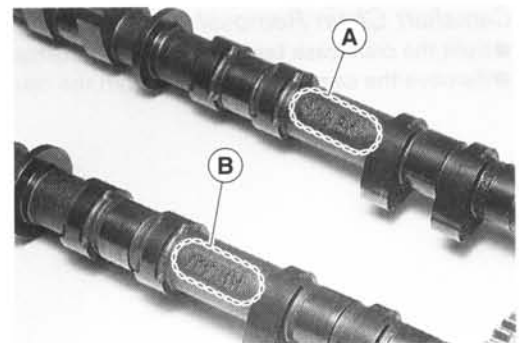


- Position the crankshaft at #1, 4 piston TDC (see Camshaft Removal).
- Pull the tension side (exhaust side) [A] of the chain taut to install the chain.
- Engage the camshaft chain with the camshaft sprockets so that the timing marks on the sprockets are positioned as shown.
- The timing marks must be aligned with the cylinder head upper surface [B].
  - [C] EX mark
  - [D] IN mark
- Before installing the camshaft cap and chain guide, install the camshaft chain tensioner body temporarily and tighten the cap bolt lightly.
- Install the camshaft cap and chain guide.
- Tighten the camshaft cap bolts.

**Torque – Camshaft Cap Bolts: 12 N·m (1.2 kg·m, 104 in·lb)**

**Camshaft Chain Guide Bolts: 12 N·m (1.2 kg·m, 104 in·lb)**

- Tighten the camshaft chain tensioner (see Camshaft Chain Tensioner Installation).
- Install the cylinder head cover (see Cylinder Head Cover Installation).

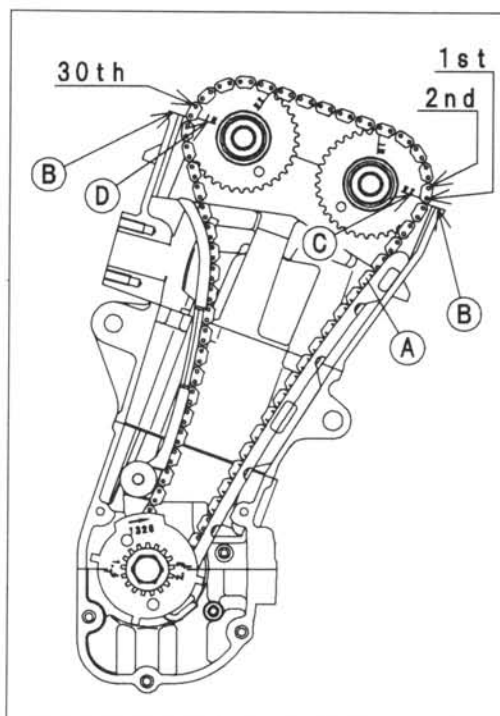

### Camshaft, Camshaft Cap Wear


- Measure each clearance between the camshaft journal and the camshaft cap using plastigage (press gauge) [A].
- Tighten the camshaft cap bolts.

**Torque – Camshaft Cap Bolts: 12 N·m (1.2 kg·m, 104 in·lb)**

**Camshaft Chain Guide Bolts: 12 N·m (1.2 kg·m, 104 in·lb)**

### NOTE

- Do not turn the camshaft when the plastigage is between the journal and camshaft cap.

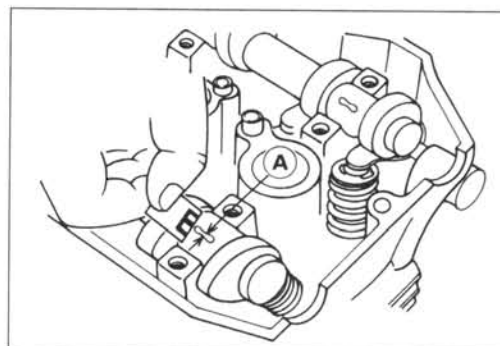

- ★ If any clearance exceeds the service limit, measure the diameter of each camshaft journal with a micrometer.

### Camshaft Journal, Camshaft Cap Clearance


**Standard: 0.028 ~ 0.071 mm**

**Service Limit: 0.16 mm**

- ★ If the camshaft journal diameter is less than the service limit, replace the camshaft with a new one and measure the clearance again.
- ★ If the clearance still remains out of the limit, replace the cylinder head unit.

### Camshaft Chain Removal

- Split the crankcase (see Crankshaft/Transmission chapter).
- Remove the camshaft chain [A] from the crankshaft sprocket.

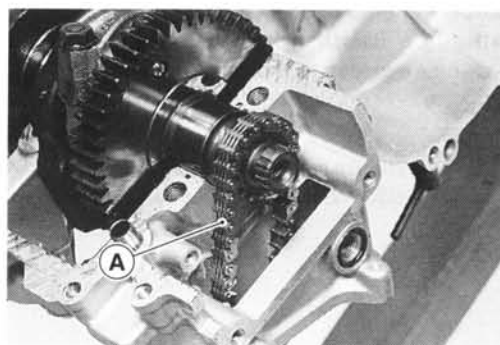

**Camshaft Chain Wear**


- Hold the chain taut with a force of about 5 kg in some manner, and measure a 20-link length. Since the chain may wear unevenly, take measurement at several places.

★ If any measurement exceeds the service limit, replace the chain.

**Camshaft Chain 20-link Length**

**Standard:** 127.00 ~ 127.36 mm

**Service Limit:** 128.9 mm

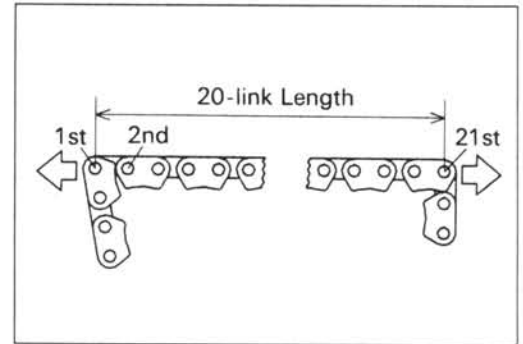

## 4-14 ENGINE TOP END

### Cylinder Head


#### Cylinder Compression Measurement

- Warm up the engine thoroughly.
- Stop the engine, and remove the spark plugs.

**Special Tool – Spark Plug Wrench, 16mm: 92110-1146**

- Measure the cylinder compression.
- Using the starter motor, turn the engine over with the throttle fully open until the compression gauge stops rising; the compression is the highest reading obtainable.

**Special Tools – Compression Gauge: 57001-221 [A]  
Compression Gauge Adapter, M10 X 1.0: 57001-1317 [B]**

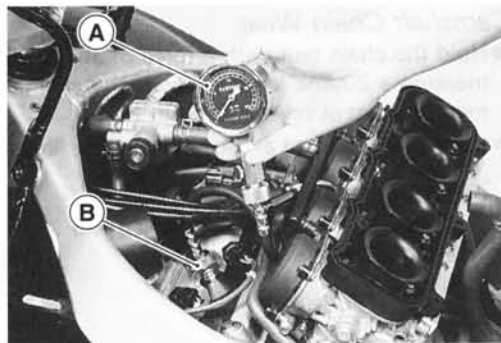

#### NOTE

- Be sure the battery is fully charged.
- Be sure no air leaks out of the cylinder head gasket.

#### Cylinder Compression


**Usable Range : 1070 ~ 1620 kPa (10.9 ~ 16.5 kg/cm<sup>2</sup>,  
155 ~ 236 psi) @ 300 r/min (rpm)**

- Repeat the measurement for the other cylinder.
- ★ If cylinder compression is higher than the usable range, check the following:
  - (1) Carbon build-up on the cylinder head combustion chamber and the piston crown.
  - (2) Cylinder head gasket is not the original part.
  - (3) Valve stem oil seals and/or piston rings are damaged.
- ★ If cylinder compression is lower than the usable range, check the following:
  - (1) Condition of the valve seat is wrong.
  - (2) Valve clearance is too small.
  - (3) Piston/cylinder clearance is excessive.
  - (4) Cylinder head is warped and/or head gasket is damaged.
  - (5) Piston ring/piston ring groove clearance is excessive.

#### Cylinder Head Removal

- Drain the coolant (see Cooling System chapter).
- Remove:
  - Engine (see Engine Removal/Installation chapter)
  - Cylinder Head Cover (see Cylinder Head Cover Removal)
  - Cam Sensor (see Electrical System chapter)
  - Camshaft Chain Tensioner (see Camshaft Chain Tensioner Removal)
  - Camshafts (see Camshaft Removal)

- Remove the 6 mm cylinder head bolts [A], and then the 10 mm cylinder head bolts [B].
- Take off the cylinder head.
- Remove the cam chain guide from the cylinder head.

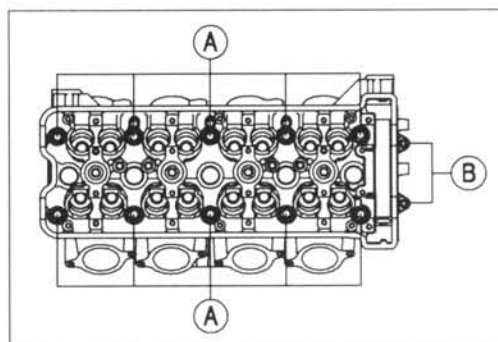


## Cylinder Head Installation

## NOTE

○ The camshaft cap is machined with the cylinder head, so if a new cylinder head is installed, use the cap that is supplied with the new head.

- Install a new cylinder head gasket and knock pins.
- Apply engine oil to both sides [A] of the cylinder head bolt washers [B].

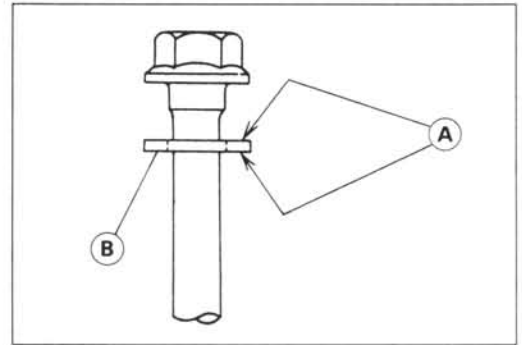


- Tighten the 10 mm cylinder head bolts following the tightening sequence [1 ~ 10].

## Torque – Cylinder Head Bolts (10mm):


First		20 N-m (2.0 kg-m, 14.5 ft-lb)
Final	Used Bolts	49 N-m (5.0 kg-m, 36 ft-lb)
	New Bolts	54 N-m (5.5 kg-m, 40 ft-lb)

- Tighten the 6 mm cylinder head bolts [11 ~ 12].

## Torque – Cylinder Head Bolts (6 mm): 12 N-m (1.2 kg-m, 104 in-lb)

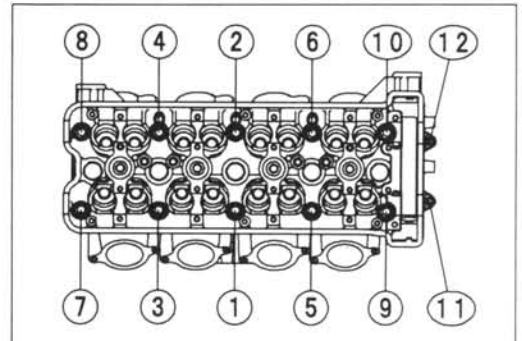

- Put the front cam chain guide [A] into the hole in the cylinder head as shown.

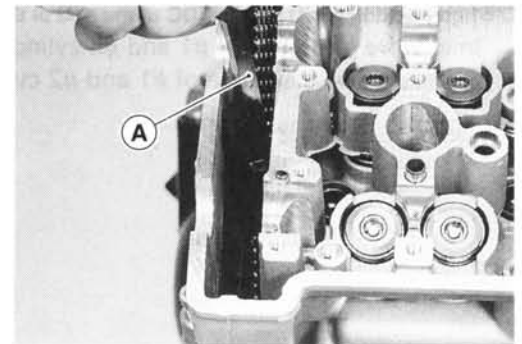






## 4-16 ENGINE TOP END

### Valves

#### Valve Clearance Adjustment

##### NOTE

- Valve clearance must be checked and adjusted when the engine is cold (at room temperature).
- Remove:
  - Lower Fairings (see Frame chapter)
  - Pickup Coil Cover
  - Cylinder Head Cover (see Cylinder Head Cover Removal)
- Using a thickness gauge [A], measure the valve clearance between the cam and the valve lifter.
- When positioning #4 piston TDC at the end of the compression stroke:
  - Inlet valve clearance of #2 and #4 cylinders
  - Exhaust valve clearance of #3 and #4 cylinders

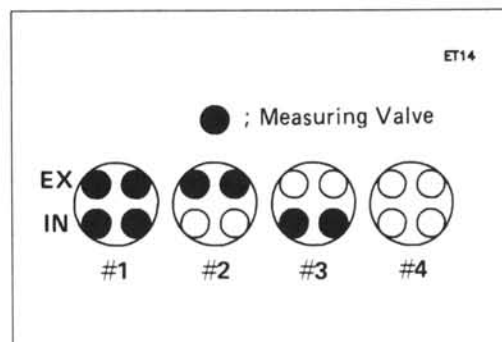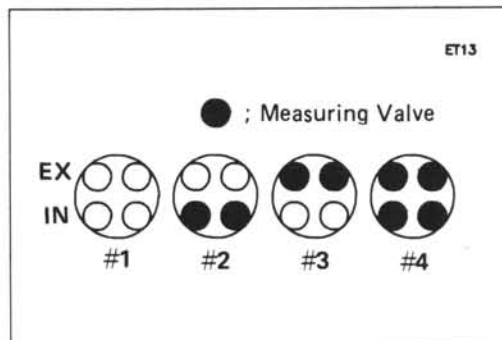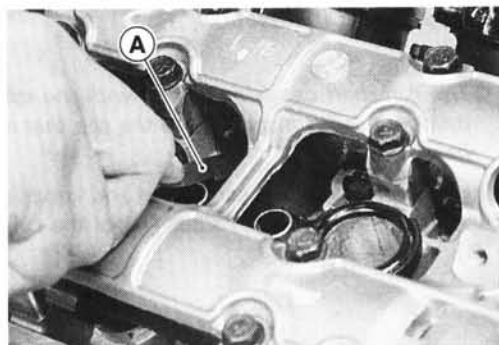

#### Valve Clearance

##### Standard:

IN: 0.15 ~ 0.24 mm

EX: 0.22 ~ 0.31 mm

*0.006 - 0.009*  
*0.007 - 0.012*

- ★ If the valve clearance is not within the specified range, first record the clearance, and then adjust it.
- To change the valve clearance, remove the camshaft chain tensioner, camshafts and valve lifters. Replace the shim with one of a different thickness.

##### NOTE

- Mark and record the valve lifter and shim locations so they can be reinstalled in their original positions.

- To select a new shim which brings the valve clearance within the specified range, refer to the Valve Clearance Adjustment Charts.
- Apply a thin coat of molybdenum disulfide grease to the valve lifters.
- Install the camshafts. Be sure to time the camshafts properly (see Camshaft Installation).
- Remeasure any valve clearance that was adjusted. Readjust if necessary.

CAUTION
<p>Do not put shim stock under the shim. This may cause the shim to pop out at high rpm, causing extensive engine damage.</p> <p>Do not grind the shim. This may cause it to fracture, causing extensive engine damage.</p>

## 4-18 ENGINE TOP END

### VALVE CLEARANCE ADJUSTMENT CHART INLET VALVE

INLET		PRESENT SHIM																				
		← Example																				
Part No. (92180)		1014	1016	1018	1020	1022	1024	1026	1028	1030	1032	1034	1036	1038	1040	1042	1044	1046	1048	1050	1052	1054
MARK		50	55	60	65	70	75	80	85	90	95	00	5	10	15	20	25	30	35	40	45	50
THICKNESS (mm)		2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50

VALVE CLEARANCE MEASUREMENT (mm) ← Example	0.00 ~ 0.02	—	—	—	—	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	
	0.03 ~ 0.07	—	—	—	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	
	0.08 ~ 0.12	—	—	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	
	0.13 ~ 0.14	—	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	
	0.15 ~ 0.24	SPECIFIED CLEARANCE/NO CHANGE REQUIRED																					
	0.25 ~ 0.27	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50	←	
	0.28 ~ 0.32	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50			
	0.33 ~ 0.37	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50				
	0.38 ~ 0.42	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50					
	0.43 ~ 0.47	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50						
	0.48 ~ 0.52	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50							
	0.53 ~ 0.57	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50								
	0.58 ~ 0.62	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50									
	0.63 ~ 0.67	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50										
	0.68 ~ 0.72	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50											
	0.73 ~ 0.77	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50												
	0.78 ~ 0.82	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50													
	0.83 ~ 0.87	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50														
	0.88 ~ 0.92	3.20	3.25	3.30	3.35	3.40	3.45	3.50															
	0.93 ~ 0.97	3.25	3.30	3.35	3.40	3.45	3.50																
0.98 ~ 1.02	3.30	3.35	3.40	3.45	3.50																		
1.03 ~ 1.07	3.35	3.40	3.45	3.50																			
1.08 ~ 1.12	3.40	3.45	3.50																				
1.13 ~ 1.17	3.45	3.50																					
1.18 ~ 1.22	3.50																						

INSTALL THE SHIM OF THIS THICKNESS (mm)

1. Measure the clearance (when engine is cold).
2. Check present shim size.
3. Match clearance in vertical column with present shim size in horizontal column.
4. Install the shim specified where the lines intersect. This shim will give the proper clearance.

**Example:** Present shim is **2.95 mm**  
 Measured clearance is **0.45 mm**  
 Replace **2.95 mm** shim with **3.20 mm** shim.

5. Remeasure the valve clearance and readjust if necessary.

#### NOTE

○ If there is no clearance, select a shim which is several sizes smaller and then measure the clearance.

# VALVE CLEARANCE ADJUSTMENT CHART EXHAUST VALVE

EXHAUST		PRESENT SHIM																	
		Example																	
Part No. (92180)		1014	1016	1018	1020	1022	1024	1026	1028	1030	1032	1034	1036	1038	1040	1042	1044	1046	1048
MARK		50	55	60	65	70	75	80	85	90	95	00	5	10	15	20	25	30	35
THICKNESS (mm)		2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35
VALVE CLEARANCE MEASUREMENT (mm)	0.00 ~ 0.04	—	—	—	—	—	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10
	0.05 ~ 0.09	—	—	—	—	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15
	0.10 ~ 0.14	—	—	—	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20
	0.15 ~ 0.19	—	—	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25
	0.20 ~ 0.21	—	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30
	0.22 ~ 0.31	SPECIFIED CLEARANCE/NO CHANGE REQUIRED																	
	0.32 ~ 0.34	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40
	0.35 ~ 0.39	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45
	0.40 ~ 0.44	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50
	0.45 ~ 0.49	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50	
	0.50 ~ 0.54	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50		
	0.55 ~ 0.59	2.80	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50			
	0.60 ~ 0.64	2.85	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50				
	0.65 ~ 0.69	2.90	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50					
	0.70 ~ 0.74	2.95	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50						
	0.75 ~ 0.79	3.00	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50							
	0.80 ~ 0.84	3.05	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50								
	0.85 ~ 0.89	3.10	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50									
	0.90 ~ 0.94	3.15	3.20	3.25	3.30	3.35	3.40	3.45	3.50										
	0.95 ~ 0.99	3.20	3.25	3.30	3.35	3.40	3.45	3.50											
	1.00 ~ 1.04	3.25	3.30	3.35	3.40	3.45	3.50												
	1.05 ~ 1.09	3.30	3.35	3.40	3.45	3.50													
	1.10 ~ 1.14	3.35	3.40	3.45	3.50														
	1.15 ~ 1.19	3.40	3.45	3.50															
	1.20 ~ 1.24	3.45	3.50																
	1.25 ~ 1.29	3.50																	

1. Measure the clearance (when engine is cold).
2. Check present shim size.
3. Match clearance in vertical column with present shim size in horizontal column.
4. Install the shim specified where the lines intersect. This shim will give the proper clearance.

**Example:** Present shim is 2.95 mm.  
Measured clearance is 0.47 mm.  
Replace 2.95 mm shim with 3.15 mm shim.

5. Remeasure the valve clearance and readjust if necessary.


## NOTE

○ If there is no clearance, select a shim which is several sizes smaller and then measure the clearance.

## Valve Removal


- Remove the cylinder head (see Cylinder Head Removal).
- Remove the valve lifter and shim.
- Mark and record the valve lifter and shim locations so they can be installed in their original positions.
- Using the valve spring compressor assembly, remove the valve.

**Special Tools – Valve Spring Compressor Assembly: 57001-241 [A]**  
**(Inlet) Adapter,  $\Phi 22$ : 57001-1202 [B]**  
**(Exhaust) Adapter,  $\Phi 20$ : 57001-1154**

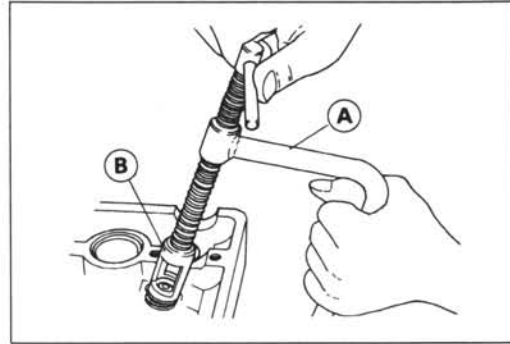

## Valve Installation


- Replace the oil seal with a new one.
  - Apply a thin coat of molybdenum disulfide grease to the valve stem before valve installation.
  - Install the springs so that the closed coil end faces downwards.
- |                     |                   |
|---------------------|-------------------|
| [A] Valve Stem      | [E] Valve Springs |
| [B] Oil Seal        | [F] Retainer      |
| [C] Spring Seat     | [G] Split Keepers |
| [D] Closed Coil End |                   |

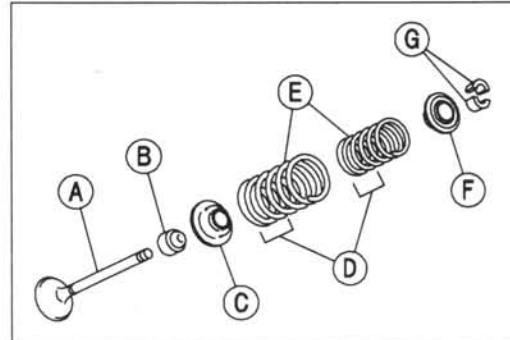

## Valve Guide Removal

- Remove:
  - Valve (see Valve Removal)
  - Oil Seal
  - Spring Seat
- Heat the area around the valve guide to 120 ~ 150°C (248 ~ 302 °F), and hammer lightly on the valve guide arbor [A] to remove the guide from the top of the head.

**Special Tool – Valve Guide Arbor,  $\Phi 4$ : 57001-1273**

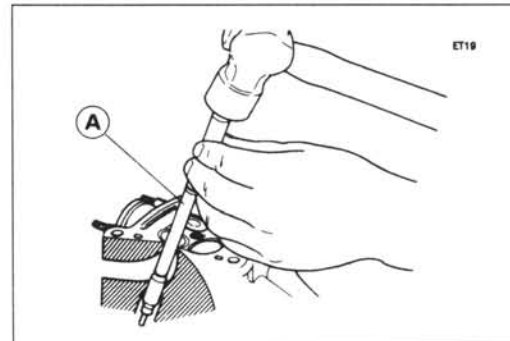


## Valve Guide Installation

- Apply oil to the valve guide outer surface before installation.
- Heat the area around the valve guide hole to about 120 ~ 150 °C (248 ~ 302 °F).
- Drive the valve guide in from the top of the head using the valve guide arbor. The flange stops the guide from going in too far.

**Special Tool – Valve Guide Arbor,  $\Phi 4$ : 57001-1273**

- Ream the valve guide with valve guide reamer [A] even if the old guide is reused.


**Special Tool – Valve Guide Reamer,  $\Phi 4$ : 57001-1274**

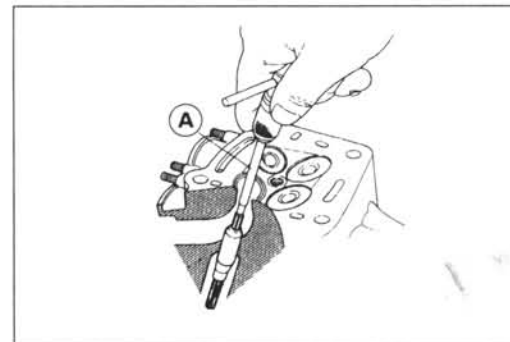

## Valve-to-Guide Clearance Measurement (Wobble Method)

If a small bore gauge is not available, inspect the valve guide wear by measuring the valve to valve guide clearance with the wobble method as indicated below.

- Insert a new valve [A] into the guide [B] and set a dial gauge against the stem perpendicular to it as close as possible to the cylinder head mating surface.
- Move the stem back and forth [C] to measure valve/valve guide clearance.
- Repeat the measurement in a direction at a right angle to the first.
- ★ If the reading exceeds the service limit, replace the guide.

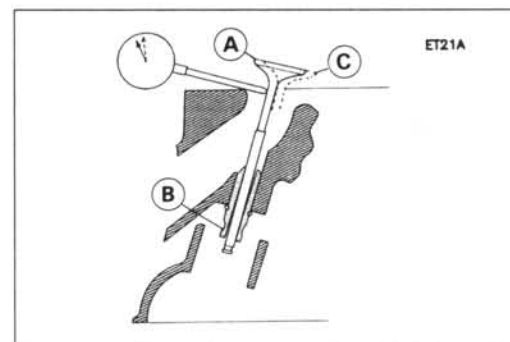

## NOTE

○ The reading is not actual valve/valve guide clearance because the measuring point is above the guide.

## Valve/Valve Guide Clearance (Wobble Method)

	Standard	Service Limit
Inlet	0.03 ~ 0.12 mm	0.33 mm
Exhaust	0.09 ~ 0.18 mm	0.40 mm

## Valve Seat Inspection

- Remove the valve (see Valve Removal).
- Check the valve seating surface [A] between the valve [B] and valve seat [C].
- Measure the outside diameter [D] of the seating pattern on the valve seat.
- ★ If the outside diameter is too large or too small, repair the seat (see Seat Repair).


## Valve Seating Surface Outside Diameter

Standard:	Inlet	29.4 ~ 29.6 mm
	Exhaust	25.2 ~ 25.4 mm

- Measure the seat width [E] of the portion where there is no build-up carbon (white portion) of the valve seat with a vernier caliper.
- ★ If the width is too wide, too narrow or uneven, repair the seat (see Valve Seat Repair).

## Valve Seating Surface Width

Standard:	Inlet, Exhaust	0.5 ~ 1.0 mm
-----------	----------------	--------------

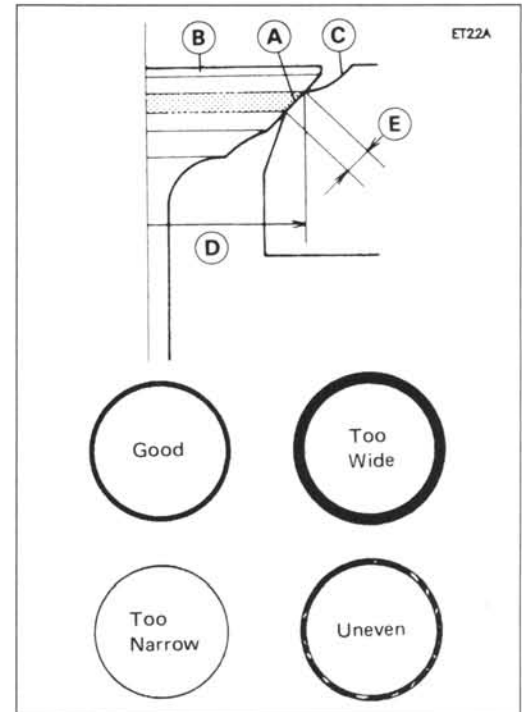

## Valve Seat Repair

- Repair the valve seat with the valve seat cutters [A].


Special Tools – Valve Seat Cutter Holder,  $\Phi 4.5$ : 57001-1330 [B]  
Valve Seat Cutter Holder Bar: 57001-1128 [C]

## [For Inlet Valve Seat]

Valve Seat Cutter, 45° –  $\Phi 32$ : 57001-1115  
Valve Seat Cutter, 32° –  $\Phi 30$ : 57001-1120  
Valve Seat Cutter, 60° –  $\Phi 33$ : 57001-1334

## [For Exhaust Valve Seat]

Valve Seat Cutter, 45° –  $\Phi 27.5$ : 57001-1114  
Valve Seat Cutter, 32° –  $\Phi 28$ : 57001-1119  
Valve Seat Cutter, 60° –  $\Phi 30$ : 57001-1123

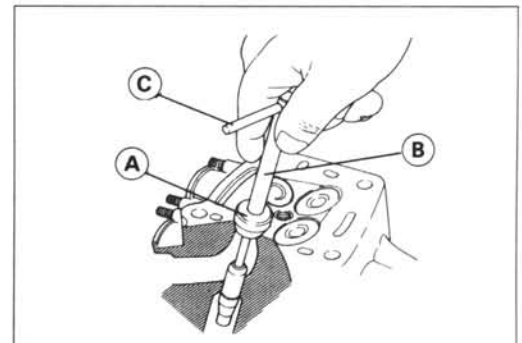

- ★ If the manufacturer's instructions are not available, use the following procedure.

### Seat Cutter Operation Care:

1. This valve seat cutter is developed to grind the valve for repair. Therefore the cutter must not be used for other purposes than seat repair.
2. Do not drop or shock the valve seat cutter, or the diamond particles may fall off.
3. Do not fail to apply engine oil to the valve seat cutter before grinding the seat surface. Also wash off ground particles sticking to the cutter with washing oil.

#### NOTE

○ Do not use a wire brush to remove the metal particles from the cutter. It will take off the diamond particles.

4. Setting the valve seat cutter holder in position, operate the cutter in one hand. Do not apply too much force to the diamond portion.

#### NOTE

○ Prior to grinding, apply engine oil to the cutter and during the operation, wash off any ground particles sticking to the cutter with washing oil.


5. After use, wash it with washing oil and apply thin layer of engine oil before storing.

### Marks Stamped on the Cutter:

The marks stamped on the back of the cutter [A] represent the following.

60° .....Cutter angle [B]

37.5Φ .....Outer diameter of cutter [C]

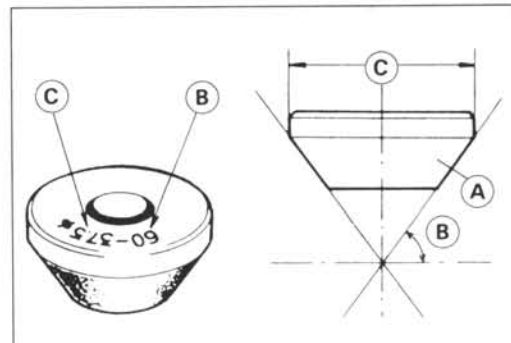

### Operating Procedures:


- Clean the seat area carefully.
- Coat the seat with machinist's dye.
- Fit a 45° cutter into the holder and slide it into the valve guide.
- Press down lightly on the handle and turn it right or left. Grind the seating surface only until it is smooth.

#### CAUTION

Do not grind the seat too much. Overgrinding will reduce valve clearance by sinking the valve into the head. If the valve sinks too far into the head, it will be impossible to adjust the clearance, and the cylinder head must be replaced.

- Measure the outside diameter of the seating surface with a vernier caliper.
- ★ If the outside diameter of the seating surface is too small, repeat the 45° grind until the diameter is within the specified range.
- ★ If the outside diameter of the seating surface is too large, make the 32° grind described below.
- ★ If the outside diameter of the seating surface is within the specified range, measure the seat width as described below.
- Grind the seat at a 32° angle until the seat O.D. is within the specified range.

Widened Width of engagement by machining with 45° cutter

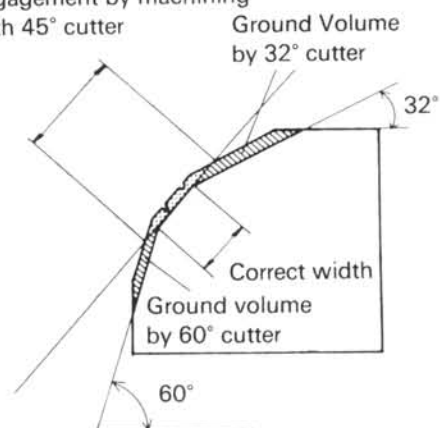

- To make the 32° grind, fit a 32° cutter into the holder, and slide it into the valve guide.
- Turn the holder one turn at a time while pressing down very lightly. Check the seat after each turn.


**CAUTION**

**The 32° cutter removes material very quickly. Check the seat outside diameter frequently to prevent overgrinding.**

- After making the 32° grind, return to the seat O.D. measurement step above.
- To measure the seat width, use a vernier caliper to measure the width of the 45° angle portion of the seat at several places around the seat.
- ★ If the seat width is too narrow, repeat the 45° grind until the seat is slightly too wide, and then return to the seat O.D. measurement step above.
- ★ If the seat width is too wide, make the 60° grind described below.
- ★ If the seat width is within the specified range, lap the valve to the seat as described below.
- Grind the seat at a 60° angle until the seat width is within the specified range.
- To make the 60° grind, fit 60° cutter into the holder, and slide it into the valve guide.
- Turn the holder, while pressing down lightly.
- After making the 60° grind, return to the seat width measurement step above.
- Lap the valve to the seat, once the seat width and O.D. are within the ranges specified above.
- Put a little coarse grinding compound on the face of the valve in a number of places around the valve head.
- Spin the valve against the seat until the grinding compound produces a smooth, matched surface on both the seat and the valve.
- Repeat the process with a fine grinding compound.


[A] Lapper  
[B] Valve Seat  
[C] Valve

- The seating area should be marked about in the middle of the valve face.
- ★ If the seat area is not in the right place on the valve, check to be sure the valve is the correct part. If it is, it may have been refaced too much; replace it.
- Be sure to remove all grinding compound before assembly.
- When the engine is assembled, be sure to adjust the valve clearance (see Valve Clearance Adjustment).

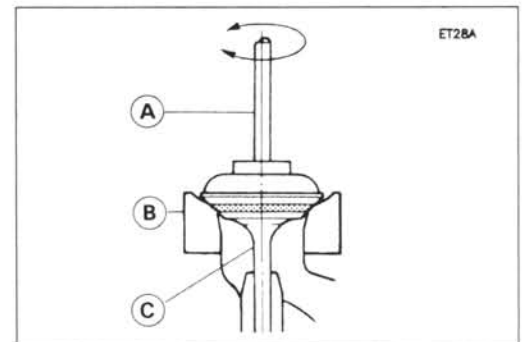




## Valve Seat Repair

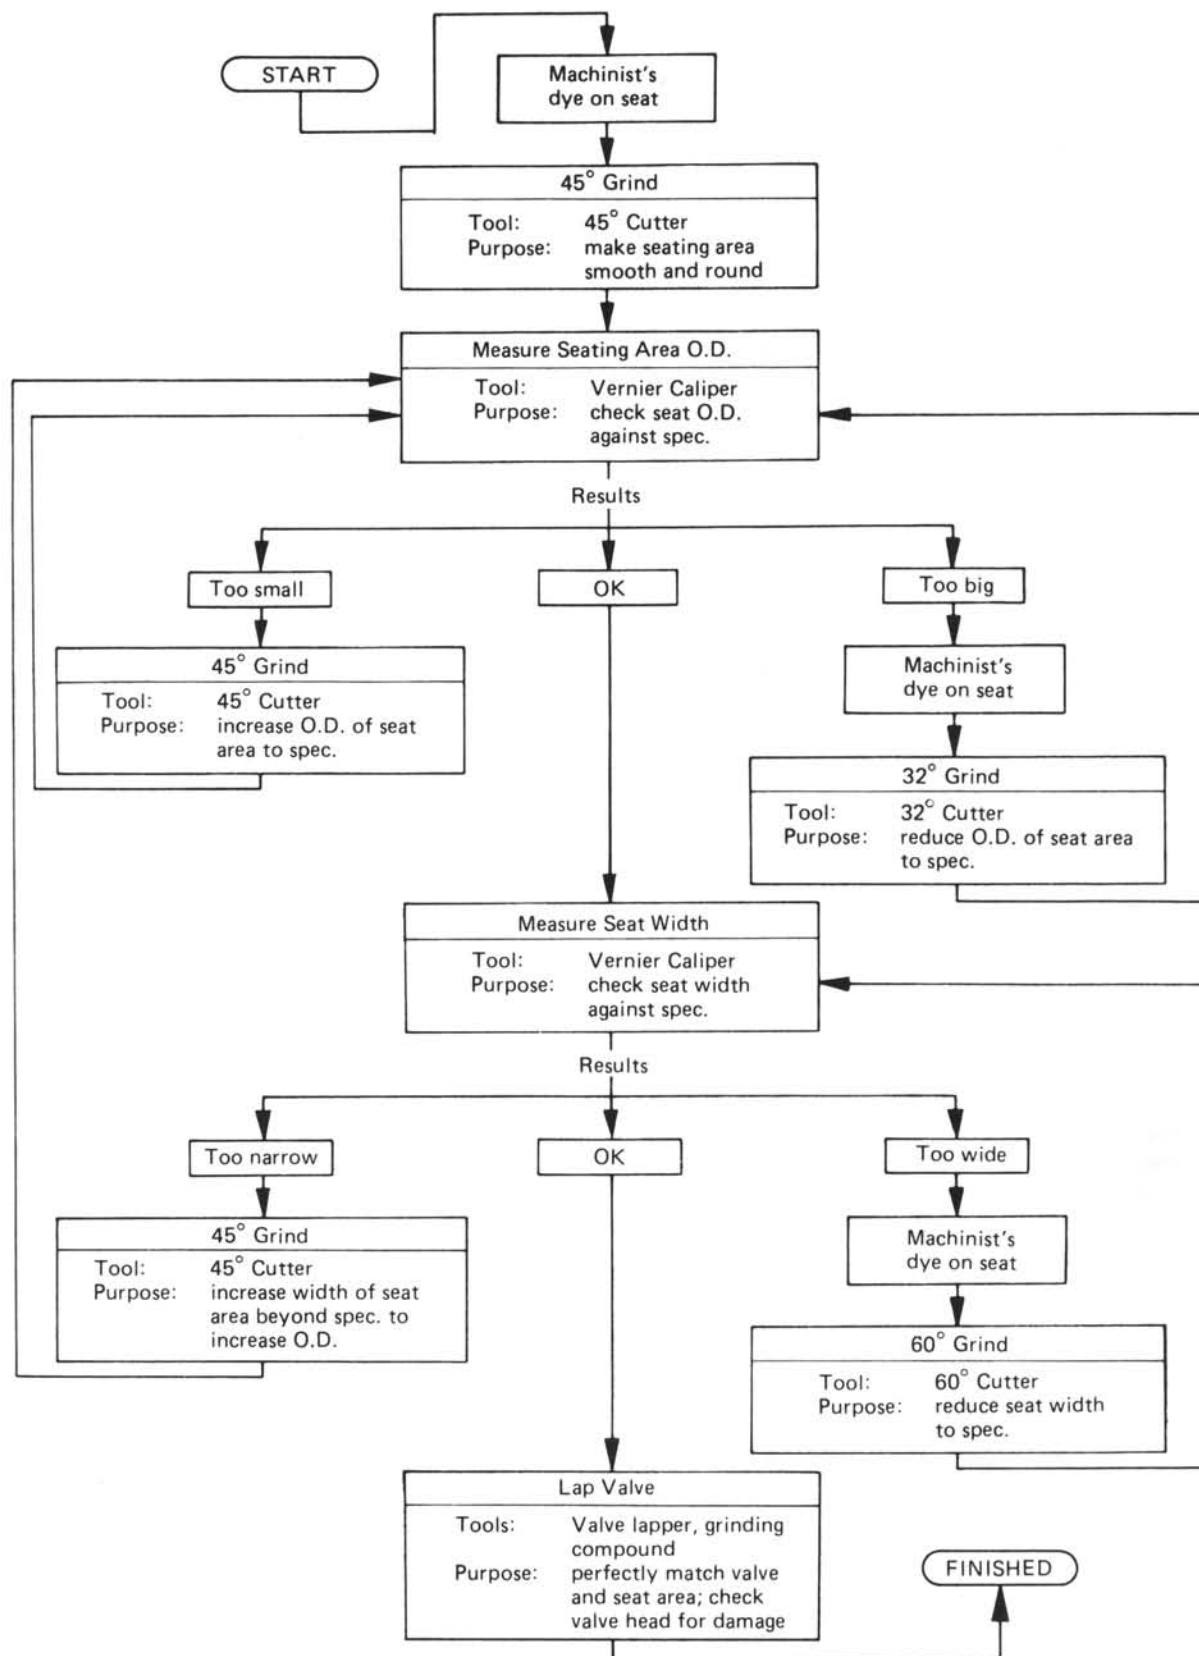

## Cylinder, Pistons


### Cylinder Removal

- Remove:
  - Engine (see Engine Removal/Installation chapter)
  - Cylinder Head (see Cylinder Head Removal)
  - Water Hoses [A]
  - Oil Pipe [B]
- Remove the cylinder.

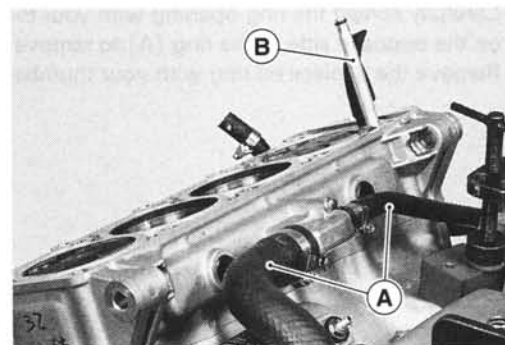


### Cylinder Installation

- Install the new cylinder gasket.
- Apply engine oil to the cylinder bore.
- Prepare two auxiliary head bolts with their head cut.
- Install the two bolts [A] diagonally in the crankcase.

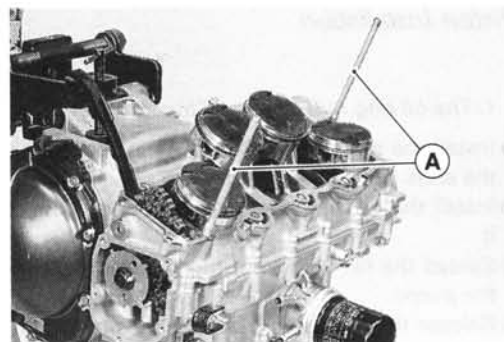

- Position the crankshaft so that all the piston heads are almost level.
- Install the cylinder block [A].
  - Auxiliary Head Bolts [B]
  - Pistons [C]
- Insert the piston rings with your thumbs.

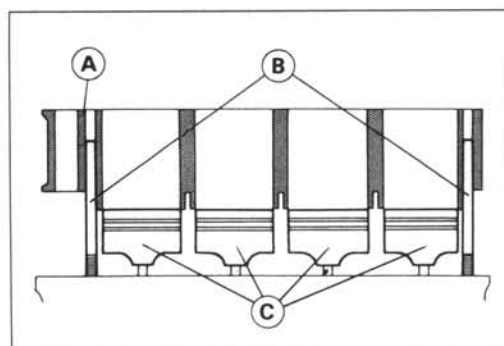


### Piston Removal

- Remove the cylinder (see Cylinder Removal).
- Place a clean cloth under the pistons and remove the piston pin snap ring [A] from the outside of each piston.



- Remove the piston pins.
  - Special Tool – Piston Pin Puller Assembly: 57001-910 [A]**

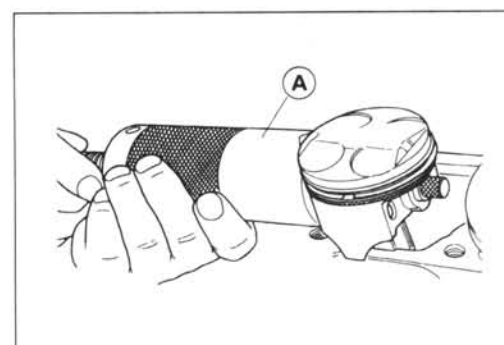

- Carefully spread the ring opening with your thumbs and then push up on the opposite side of the ring [A] to remove it.
- Remove the 3-piece oil ring with your thumbs in the same manner.





## Piston Installation

### NOTE

○ The oil ring rails have no "top" or "bottom".


- Install the oil ring expander [A] in the bottom piston ring groove so the ends [B] butt together.
- Install the oil ring steel rails, one above the expander and one below it.
- Spread the rail with your thumbs, but only enough to fit the rail over the piston.
- Release the rail into the bottom piston ring groove.
- Do not mix up the top and second ring.
- Install the top ring [A] so that the "R" mark [B] faces up.
- Install the second ring [C] so that the "RN" mark [D] faces up.

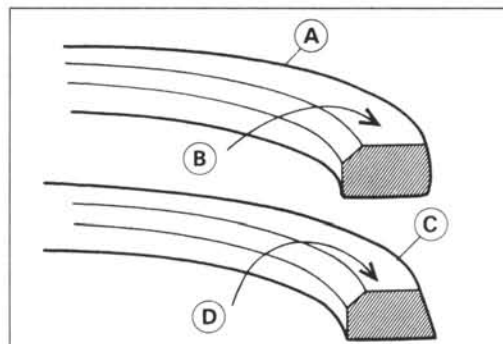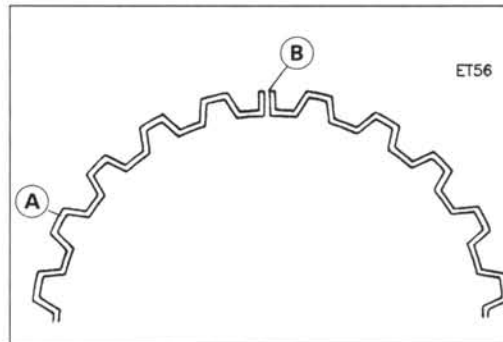

- The piston ring openings must be positioned as shown in the figure. The openings of the oil ring steel rails must be about 30° – 40° of angle from the opening of the top ring.

[A] Top Ring                      [D] Oil Ring Expander  
[B] Second Ring                [E] Hollow  
[C] Oil Ring Steel Rails

- Install the piston with its marking hollow facing forward.

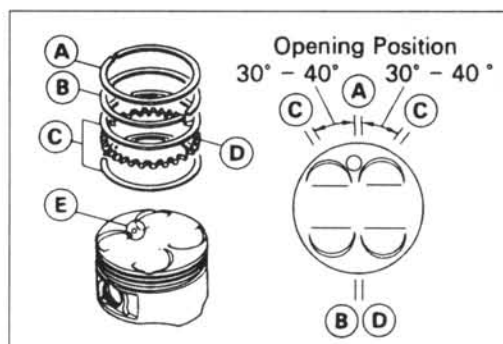

### CAUTION

Do not reuse snap rings, as removal weakens and deforms them. They could fall out and score the cylinder wall.


### Cylinder Wear

- Since there is a difference in cylinder wear in different directions, take a side-to-side and a front-to-back measurement at each of the two locations (total of four measurements) shown in the figure.

- ★ If any of the cylinder inside diameter measurements exceeds the service limit.

[A] 10 mm

[B] 60 mm

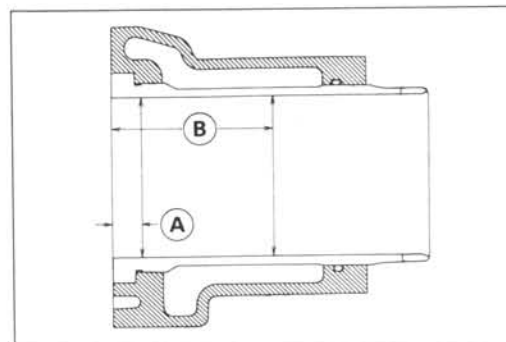

### Cylinder Inside Diameter

**Standard:** 75.000 ~ 75.012 mm

**Service Limit:** 75.10 mm

### Piston Wear


- Measure the outside diameter [A] of each piston 5 mm [B] up from the bottom of the piston at a right angle to the direction of the piston pin.

- ★ If the measurement is under service limit, replace the piston.

#### Piston Diameter

**Standard:** 74.945 ~ 74.960 mm

**Service Limit:** 74.79 mm

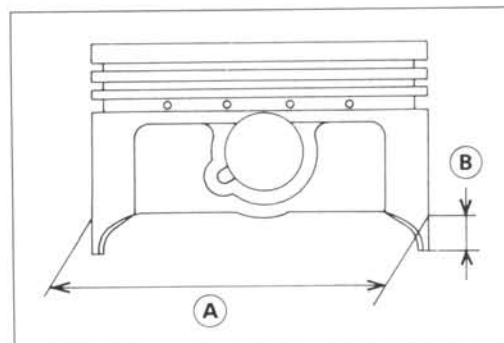


### Piston Ring, Piston Ring Groove Wear

- Check for uneven groove wear by inspecting the ring seating.
- ★ The rings should fit perfectly parallel to groove surfaces. If not, the piston must be replaced.
- With the piston rings in their grooves, make several measurements with a thickness gauge [A] to determine piston ring/groove clearance.

#### Piston Ring/Groove Clearance

	Standard	Service Limit
Top	0.04 ~ 0.08 mm	0.18 mm
Second	0.03 ~ 0.07 mm	0.17 mm

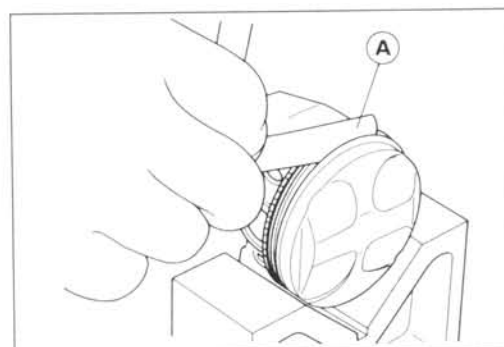


### Piston Ring End Gap

- Place the piston ring [A] inside the cylinder, using the piston to locate the ring squarely in place. Set it close to the bottom of the cylinder, where cylinder wear is low.
- Measure the gap [B] between the ends of the ring with a thickness gauge.

#### Piston Ring End Gap

	Standard	Service Limit
Top	0.20 ~ 0.35 mm	0.6 mm
Second	0.35 ~ 0.50 mm	0.8 mm

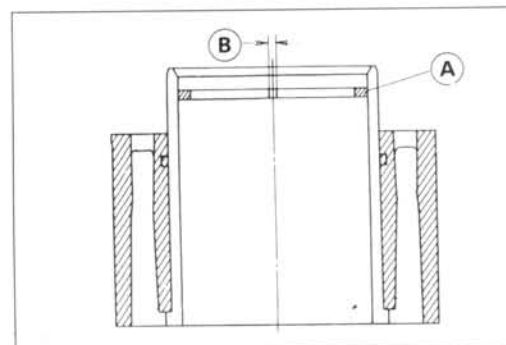


## 4-28 ENGINE TOP END

### Carburetor Holder

#### *Carburetor Holder Installation*

- Be sure the O-ring [A] is in place the holder.
- Tighten the carburetor holder bolts.
- Tighten the #4 right carburetor holder bolt with clamp [B].


**Torque – Carburetor Holder Bolts: 12 N-m (1.2 kg-m, 104 in-lb)**

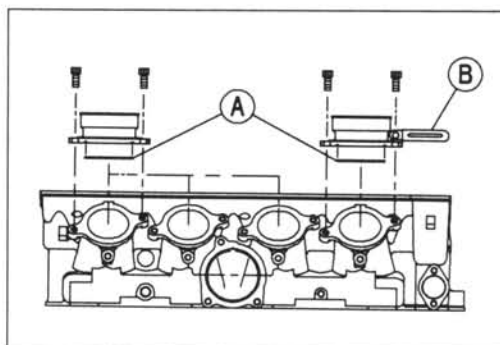


## Muffler

### Muffler Removal

- Remove:
  - Lower Fairings (see Frame chapter)
  - Middle Fairings (see Frame chapter)
  - Inner Fairing (see Frame chapter)
- Muffler Body Clamp Nut [A]

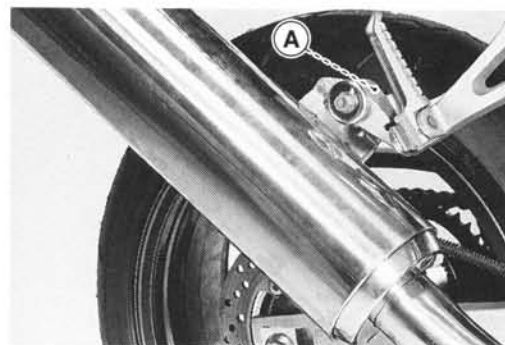

- Remove the radiator mount bracket [A].
- Loosen the radiator bolts [B].
- Move the bottom of the radiator toward the front [C], and then tighten the radiator bolts.
- Remove:
  - Exhaust Pipe Holder Nuts [D]
- Pull the muffler body clamp bolt and remove the muffler assembly.
- When removing the muffler, don't hit the radiator.

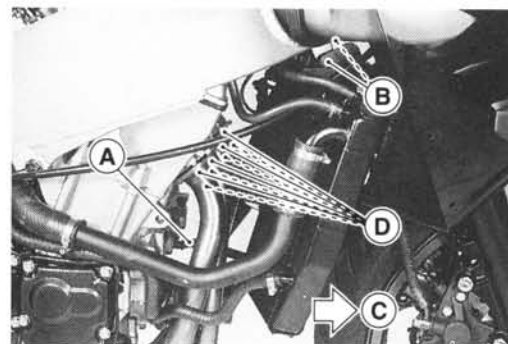

### Muffler Installation


- Replace the exhaust pipe gaskets with new ones.

### Muffler Body Removal

- Remove:
  - Muffler Body Connection Cover
  - Muffler Body and Exhaust Pipe Connection Nuts [A]
  - Muffler Body Clamp Bolt [B]
- Pull the muffler body backward.

### Muffler Body Installation

- Tighten:
  - Torque – Muffler Body and Exhaust Pipe Connections Nuts:**  
34 N-m (3.5 kg-m, 25 ft-lb)
- Replace the exhaust pipe connection gasket with new one.

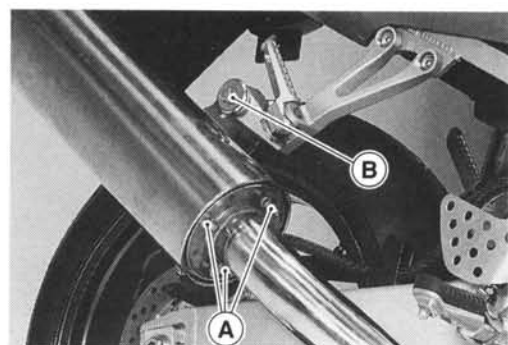


# Clutch

## Table of Contents

Exploded View .....	5-2
Specifications .....	5-3
Clutch Lever and Cable.....	5-4
Lever Free Play Inspection .....	5-4
Lever Free Play Adjustment.....	5-4
Cable Removal .....	5-5
Cable Installation .....	5-5
Cable Lubrication.....	5-5
Clutch Lever Installation .....	5-5
Clutch Cover.....	5-6
Clutch Cover Removal.....	5-6
Clutch Cover Installation .....	5-6
Release Shaft Removal .....	5-6
Release Shaft Installation .....	5-6
Clutch .....	5-7
Clutch Removal.....	5-7
Clutch Installation .....	5-7
Clutch Plate, Wear, Damage Inspection .....	5-9
Clutch Plate Warp Inspection.....	5-9
Clutch Spring Free Length Measurement.....	5-9

## 5-2 CLUTCH

### Exploded View

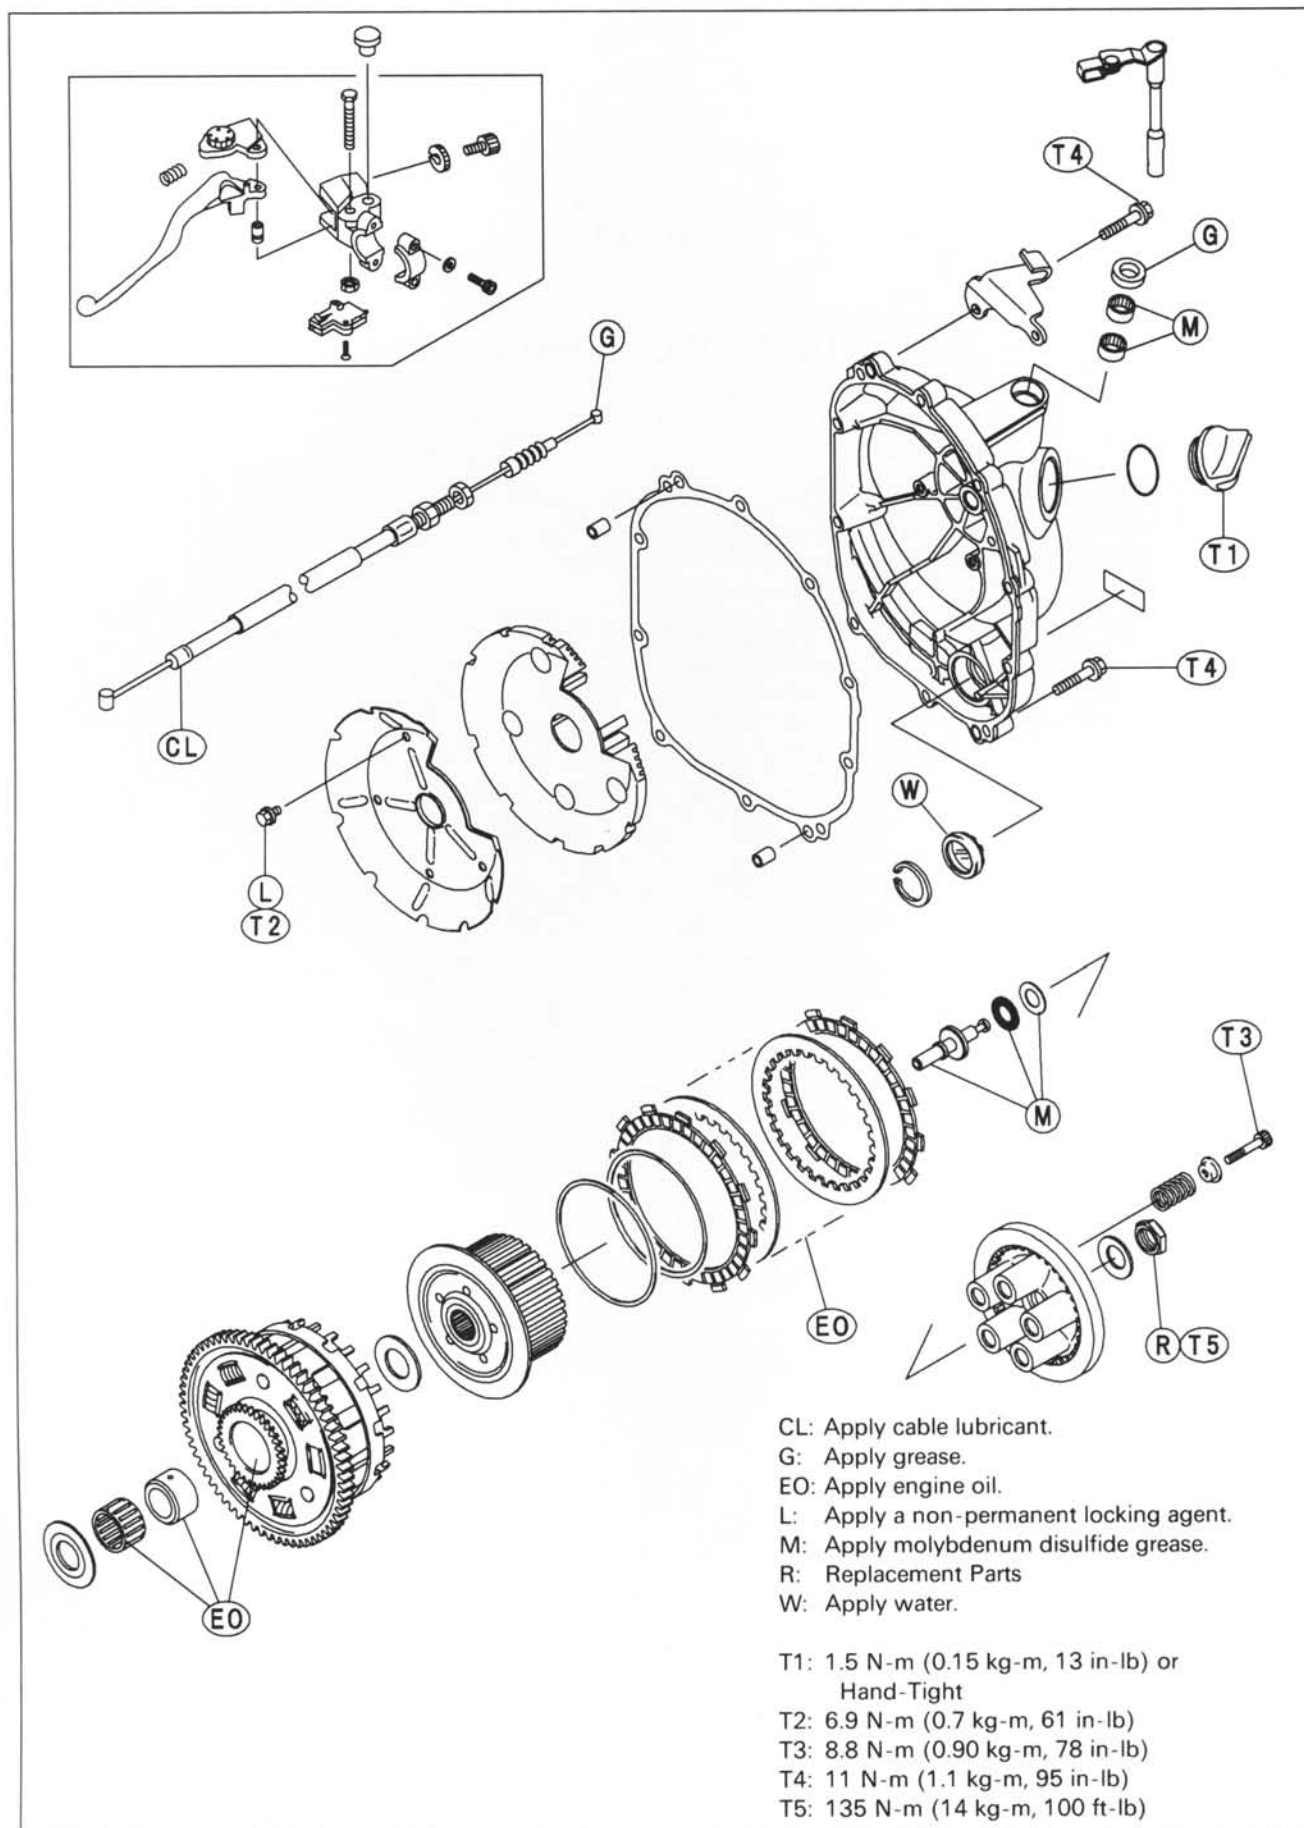



# Specifications

Item	Standard	Service Limit
<b>Clutch Lever Position</b>	5-way adjustable (to suit rider)	- - -
<b>Clutch Lever Free Play</b>	2 ~ 3 mm	- - -
<b>Clutch:</b>		
Friction plate thickness	2.72 ~ 2.88 mm	2.2 mm
Friction and steel plate warp	0.2 mm or less	0.3 mm
Clutch spring free length	73.49 mm	69.9 mm

**Special Tools – Clutch Holder:** 57001-1243  
**Pressure Cable Luber:** k56019-021

**Sealant – Kawasaki Bond (Silicone Sealant):** 56019-120

## 5-4 CLUTCH


### Clutch Lever and Cable

#### Lever Free Play Inspection

- Pull the clutch lever just enough to take up the free play [A].
- Measure the gap between the lever and the lever holder.
- ★ If the gap is too wide, the clutch may not release fully. If the gap is too narrow, the clutch may not engage fully. In either case, adjust it.

#### Clutch Lever Free Play


Standard: 2 ~ 3 mm

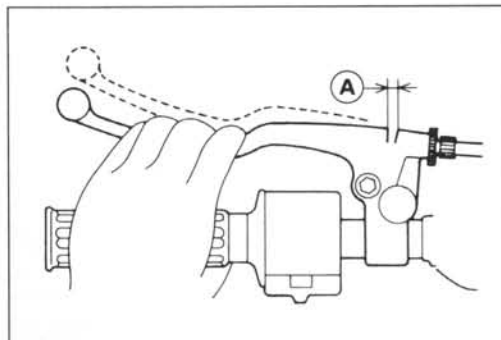


#### Lever Free Play Adjustment

##### ⚠WARNING

To avoid a serious burn, never touch the engine or exhaust pipe during clutch adjustment.

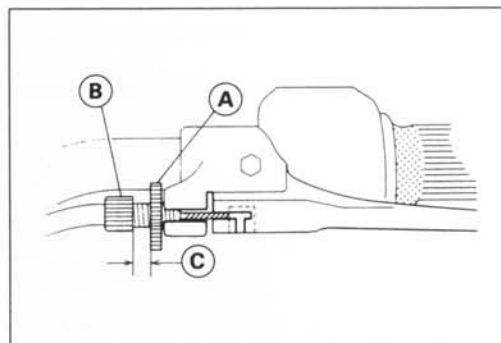


- Loosen the knurled locknut [A] at the clutch lever.
- Turn the adjuster [B] so that 5 ~ 6 mm [C] of threads are visible.
- Slide the dust cover [A] at the clutch cable lower end out of place.
- Loosen both adjusting nuts [B] at the clutch cover as far as they will go.
- Pull the clutch outer cable [C] tight and tighten the adjusting nuts against the bracket [D].
- Slip the rubber dust cover back onto place.
- Turn the adjuster at the clutch lever until the free play is correct.
- Tighten the knurled locknut at the clutch lever.
- Push the release lever [A] toward the front of the motorcycle until it becomes hard to turn.
- At this time, the release lever should have the proper angle shown.
- ★ If the angle is wrong, check the clutch and release parts for wear.

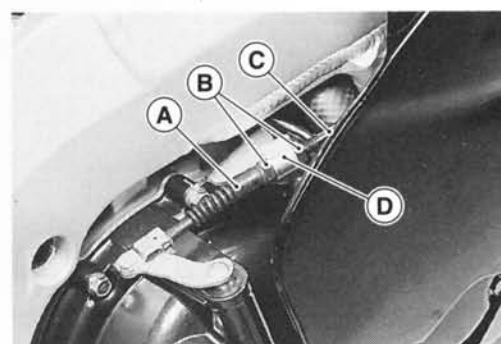

##### ⚠WARNING


Be sure that the outer cable end at the clutch lever is fully seated in the adjuster at the clutch lever, or it could slip into place later, creating enough cable play to prevent clutch disengagement.

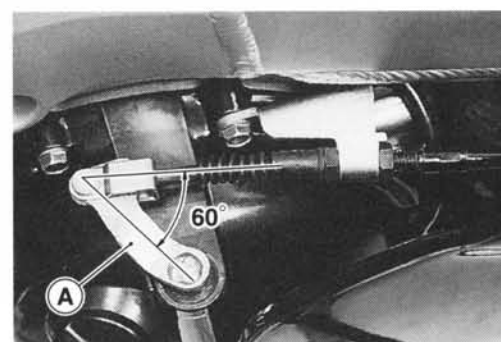

- After the adjustment, start the engine and check that the clutch does not slip and that it releases properly.

**Cable Removal**

- Remove the right lower fairing (see frame chapter).
- Slide the dust cover at the clutch cable lower end out of place.
- Loosen the nuts, and slide the lower end of the clutch cable to give the cable plenty of play.
- Push the lever forward and turn the adjuster to align the Number 5 with the triangular mark on the lever holder.
- Loosen the knurled locknut at the clutch lever, and screw in the adjuster.
- Line up the slots [A] in the clutch lever, knurled locknut [B], and adjuster [C], and then free the cable from the lever.
- Free the clutch inner cable tip from the clutch release lever.
- Push the release lever toward the front of the motorcycle and tape the release lever to the clutch cover to prevent the release shaft from falling out.
- Pull the clutch cable out of the frame.

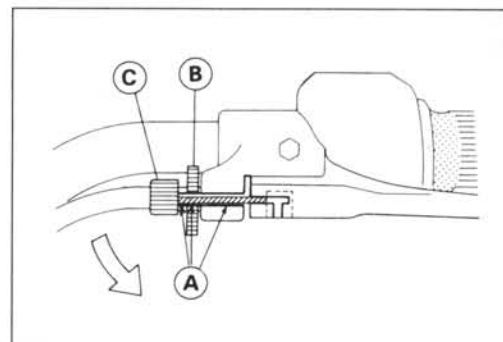**Cable Installation**


- Run the clutch cable correctly (see General Information chapter).
- Adjust the clutch cable (see Lever Free Play Adjustment).

**Cable Lubrication**


Whenever the clutch cable is removed, lubricate the clutch cable as follows.

- Apply a thin coating of grease to the cable upper and lower ends.
- Lubricate the cable with a penetrating rust inhibitor.

**Special Tool – Pressure Cable Luber: k56019-021 [A]**

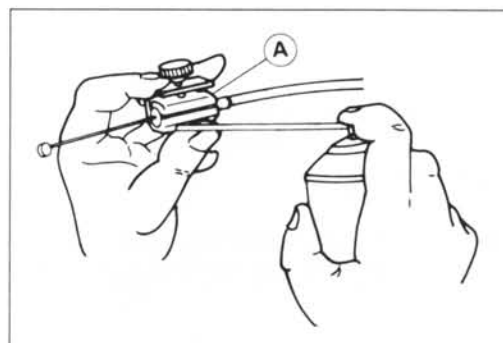**Clutch Lever Installation**

- Install the clutch lever so that the mating surface [A] of the switch housing is aligned with the mating surface [B] of the clutch lever clamp.

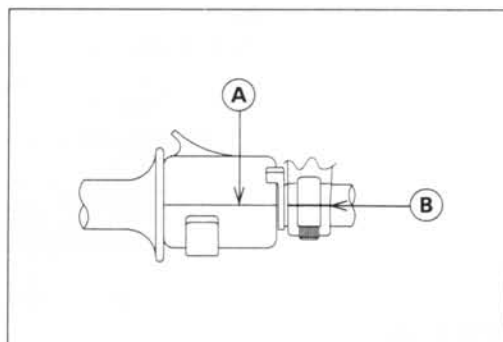


## 5-6 CLUTCH

### Clutch Cover


#### Clutch Cover Removal

● Remove:

- Engine Oil (drain, see Engine Lubrication System chapter)
- Lower Fairing (see Frame chapter)
- Middle Fairing (right)
- Clutch Cable Lower End [A]
- Clutch Cover Mounting Bolts [B]

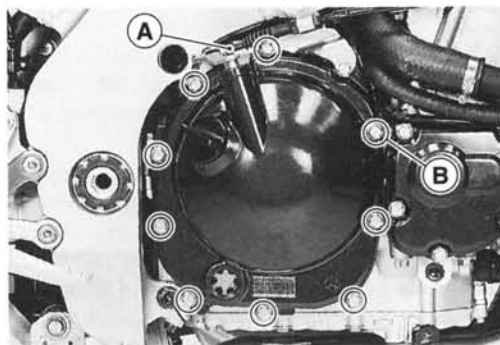

- Turn the release lever [A] toward the rear as shown, and remove the clutch cover [B].  
[C] about 90°

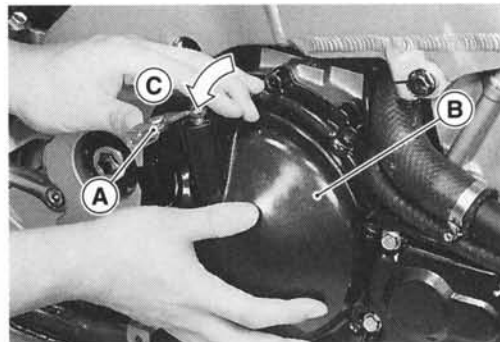


#### Clutch Cover Installation

- Apply silicone sealant to the area [A] where the mating surface of the crankcase touches the clutch cover gasket.

**Sealant – Kawasaki Bond (Silicone Sealant): 56019-120**

- Replace the cover gasket with a new one.
- Tighten the cover bolts.

**Torque – Clutch Cover Bolts: 11 N-m (1.1g-m, 95 in-lb)**

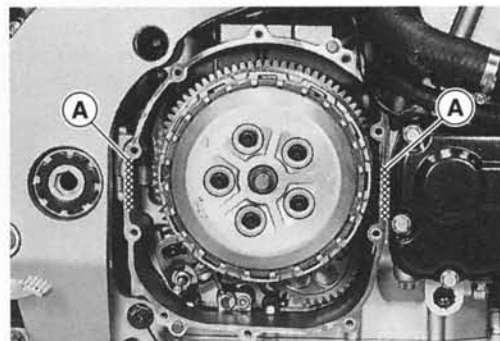

#### Release Shaft Removal

##### CAUTION

Do not remove the clutch release lever and shaft assembly unless it is absolutely necessary. If removed, the oil seal replacement may be required.

- Remove the clutch cover (see Clutch Cover Removal).
- Pull the lever and shaft assembly out of the clutch cover.

#### Release Shaft Installation

- Apply high-temperature grease to the oil seal lips on the upper ridge of the clutch cover.
- Apply oil to the bearing in the hole of the clutch cover.
- Insert the release shaft straight into the upper hole of the clutch cover.

##### CAUTION


When inserting the release shaft, be careful not to remove the spring of the oil seal.

## Clutch

### Clutch Removal

#### ● Remove:

- Engine Oil (drain, see Engine Lubrication System chapter)
- Right Lower Fairing (see Frame chapter)
- Clutch Cover (see Clutch Cover Removal)
- Clutch Spring Bolts [A]
- Clutch Springs
- Clutch Spring Plate [B] (with thrust bearing and pusher [C])

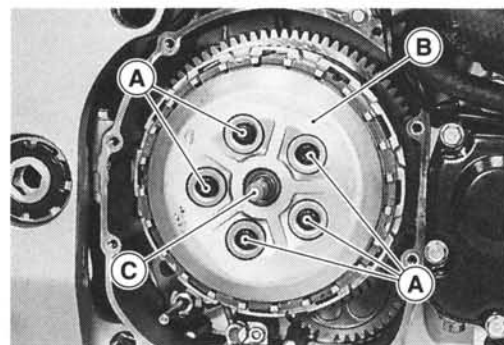

Friction Plates, Steel Plates

Spring, Spring Seat


Clutch Hub Nut [A]

- Holding the clutch hub [B], remove the nut.

**Special Tool – Clutch Holder: 57001-1243 [C]**


#### ● Remove:

- Clutch Hub

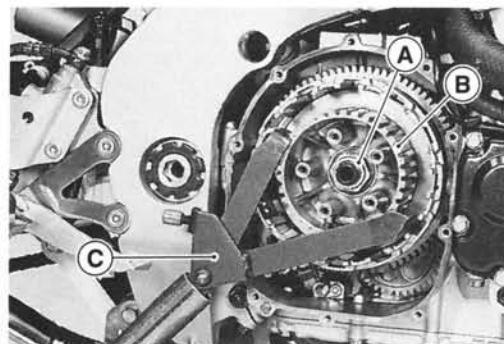

- Using the two 4 mm screws [A], pull out the sleeve [B], needle bearing [C] and clutch housing [D].


- Remove the spacer.

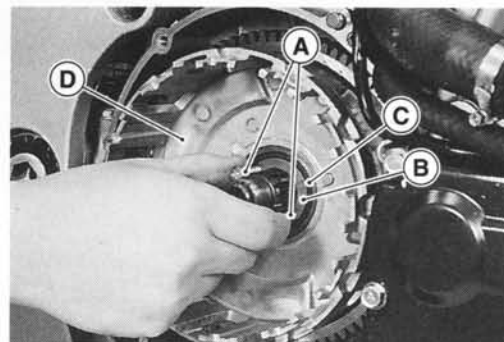

### Clutch Installation


- Install the following parts on the drive shaft.

- [A] Spacer
- [B] Sleeve
- [C] Needle Bearing
- [D] Clutch Housing
- [E] Spacer
- [F] Clutch Hub
- [G] Washer
- [H] Nut

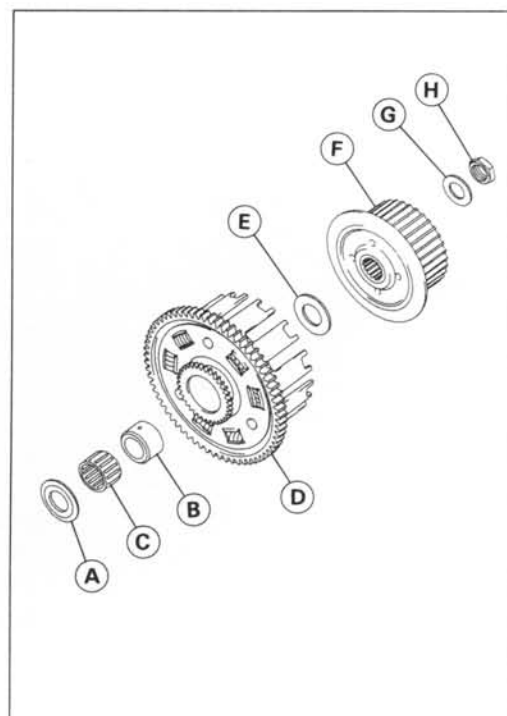


## 5-8 CLUTCH

○ Install the spacer [A] so that the stepped side [B] faces inward.

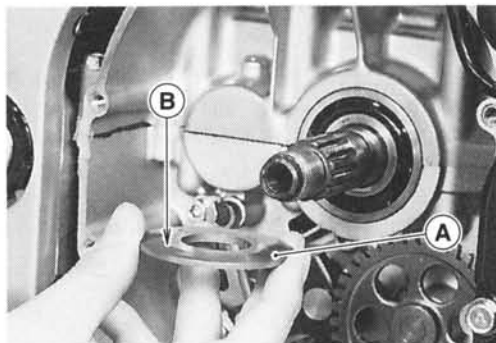

○ Install the washer [A] so that the OUT SIDE mark faces outward.

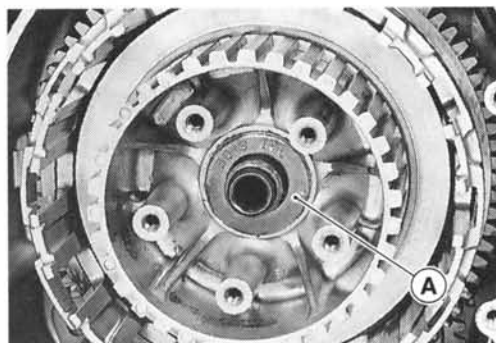


○ Replace the clutch hub nut with a new one.

○ Holding the clutch hub, tighten the clutch hub nut.

**Special Tool – Clutch Holder: 57001-1243**

**Torque – Clutch Hub Nut: 135 N-m (14 kg-m, 100 ft-lb)**

● Install the spring seat [A] and spring [B] as shown.  
[C] Clutch Hub

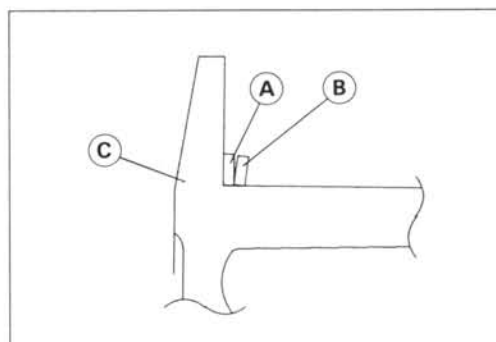


● Install the friction plates and steel plates, starting with a friction plate and alternating them.


### CAUTION

If new dry friction plates and steel plates are installed, apply engine oil to the surfaces of each plate to avoid clutch plate seizure.

○ Install the last friction plate [A] fitting the tangs in the grooves in the housing as shown.

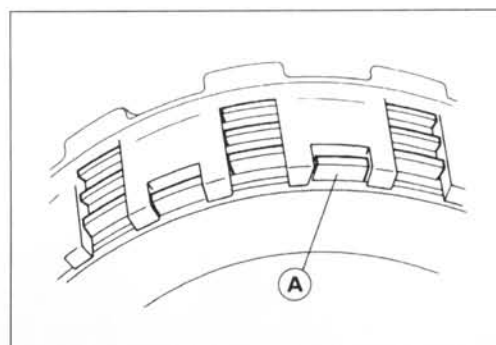

- Apply molybdenum disulfide grease to the pusher end [A] and install the pusher [B], needle bearing [C] and washer [D] in the clutch spring plate [E].

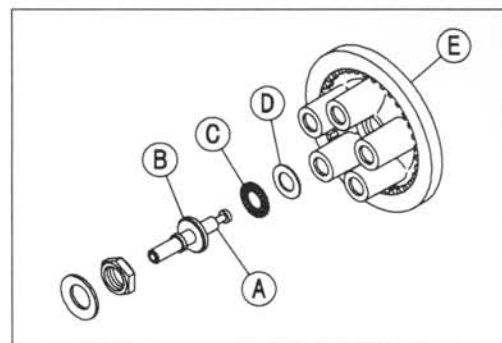

- Install the clutch spring plate and spring, and tighten the clutch spring bolts.

**Torque – Clutch Spring Bolts: 8.8 N-m (0.90 kg-m, 78 in-lb)**


- Install the clutch cover (see Clutch Cover Installation).

### *Clutch Plate, Wear, Damage Inspection*

- Visually inspect the friction and steel plates for signs of seizure, overheating (discoloration), or uneven wear.
- Measure the thickness of the friction plate [A] at several points.
- ★ If any plates show signs of damage, or if they have worn past the service limit, replace them with new ones.

#### **Friction Plate Thickness**

**Standard:** 2.72 ~ 2.88 mm  
**Service Limit:** 2.2 mm

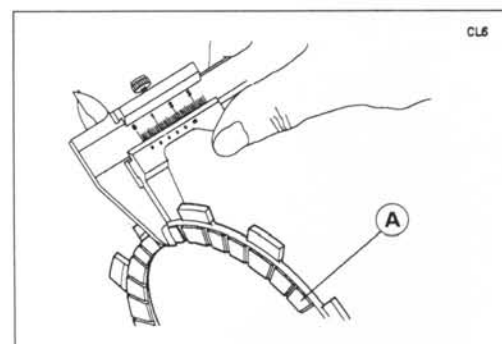


### *Clutch Plate Warp Inspection*

- Place each friction plate or steel plate on a surface plate and measure the gap between the surface plate [A] and each friction plate or steel plate [B] with a thickness gauge [C]. The gap is the amount of friction or steel plate warp.
- ★ If any plate is warped over the service limit, replace it with a new one.

#### **Friction and Steel Plate Warp**

**Standard:** 0.2 mm or less  
**Service Limit:** 0.3 mm

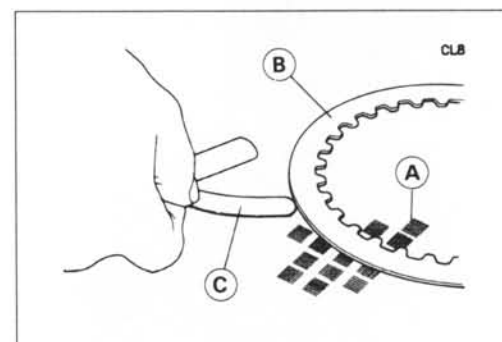


### *Clutch Spring Free Length Measurement*

- Measure the free length of the clutch springs [A].
- ★ If any spring is shorter than the service limit, it must be replaced.

#### **Clutch Spring Free Length**

**Standard:** 73.49 mm  
**Service Limit:** 69.9 mm

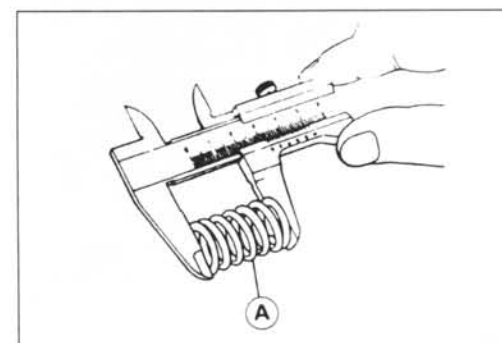

# Engine Lubrication System


## Table of Contents

Exploded View .....	6-2
Engine Oil Flow Chart.....	6-3
Specifications .....	6-4
Engine Oil and Oil Filter .....	6-5
Oil Level Inspection .....	6-5
Engine Oil Change.....	6-5
Oil Filter Change .....	6-6
Oil Cooler.....	6-7
Oil Cooler Removal.....	6-7
Oil Cooler Installation .....	6-7
Oil Cooler Inspection .....	6-7
Oil Pan .....	6-8
Oil Pan Removal .....	6-8
Oil Pan Installation.....	6-8
Oil Pump, Oil Pump Drive Gear.....	6-9
Oil Pump Removal.....	6-9
Oil Pump Installation .....	6-9
Oil Pump Drive Gear Removal .....	6-10
Oil Pump Drive Gear Installation.....	6-10
Oil Pump Drive Gear Shaft Removal.....	6-10
Oil Pump Drive Gear Shaft Installation .....	6-11
Oil Pressure Measurement.....	6-12
Oil Pressure Measurement.....	6-12
Oil Pressure Switch.....	6-13
Oil Pressure Switch Removal .....	6-13
Oil Pressure Switch Installation .....	6-13



## 6-2 ENGINE LUBRICATION SYSTEM


### Exploded View

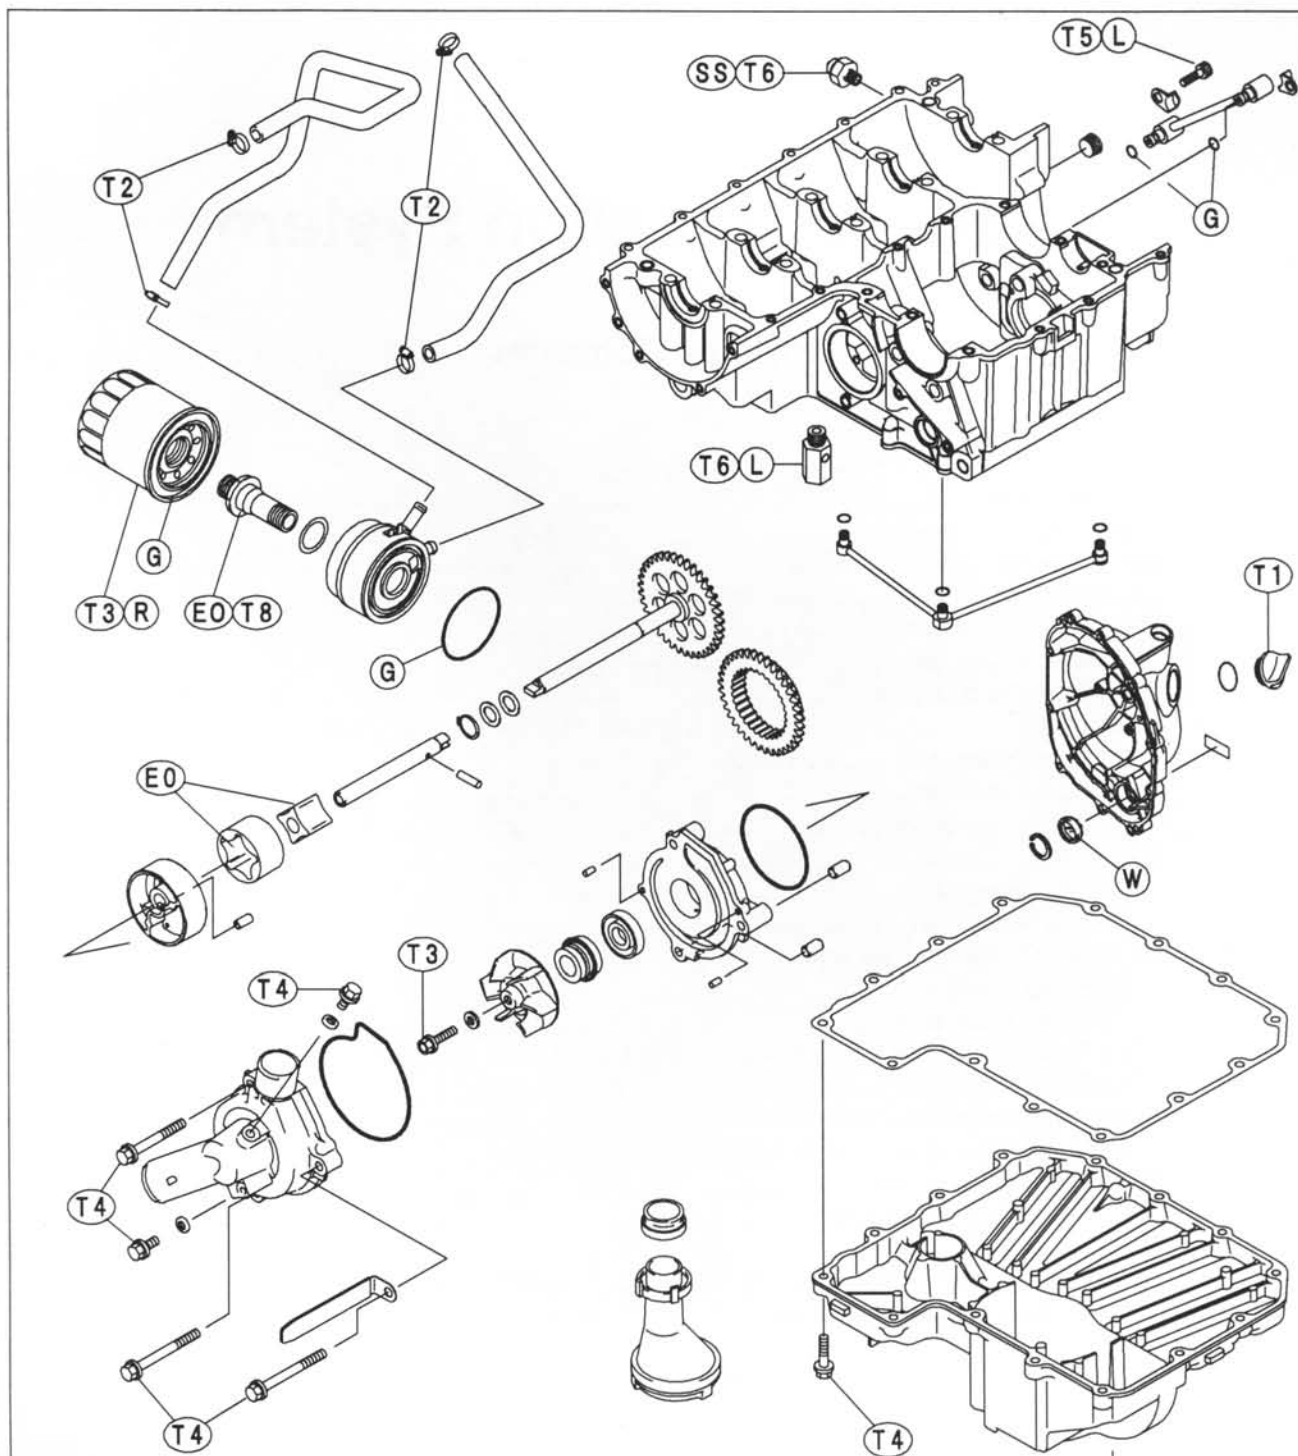

- T1: 1.0 N-m (0.10 kg-m, 9 in-lb) or Hand-Tight  
 T2: 2.0 N-m (0.20 kg-m, 17 in-lb)  
 T3: 9.8 N-m (1.0 kg-m, 87 in-lb)  
 T4: 11 N-m (1.1 kg-m, 95 in-lb)  
 T5: 12 N-m (1.2 kg-m, 104 in-lb)  
 T6: 15 N-m (1.5 kg-m, 11.0 ft-lb)  
 T7: 20 N-m (2.0 kg-m, 14.5 ft-lb)  
 T8: 78 N-m (7.8 kg-m, 56 ft-lb)

- SS: Apply silicone sealant.  
 L: Apply a non-permanent locking  
 R: Replacement parts agent.  
 G: Apply grease.  
 E0: Apply engine oil.  
 W: Apply water.

## Engine Oil Flow Chart

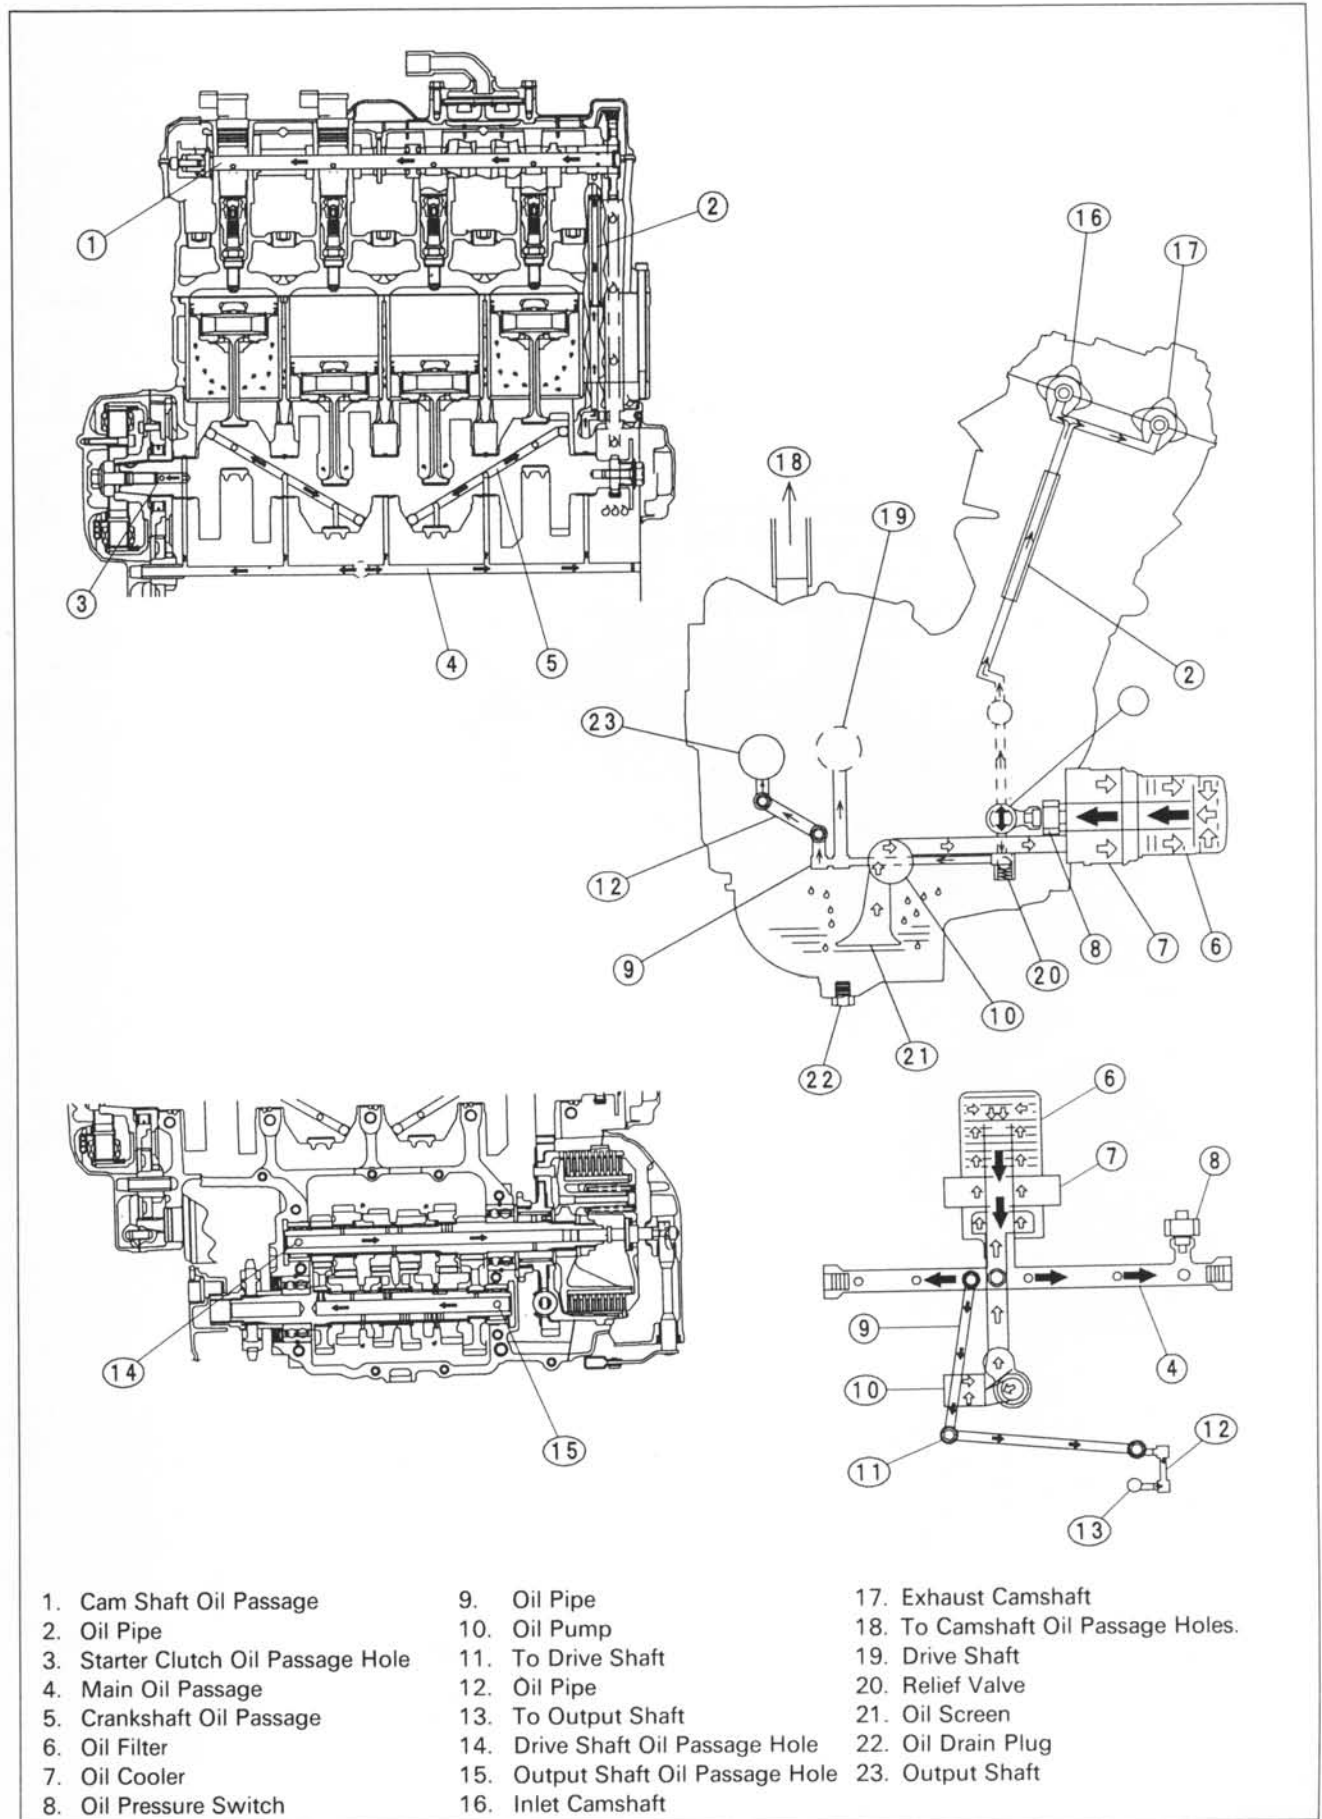

## 6-4 ENGINE LUBRICATION SYSTEM

### Specifications

Item	Standard
<b>Engine Oil:</b> Grade Viscosity Capacity  Level	SE, SF, or SG class SAE 10W-40, 10W-50, 20W-40, or 20W-50 3.1L (when filter is not removed) 3.3L (when filter is removed) 3.8L (when engine is completely dry) Between upper and lower level lines
<b>Oil Pressure Measurement:</b> Oil pressure @4,000 r/min(rpm), oil temp. 90°C(194°F)	120 ~ 180 kPa(1.2 ~ 1.8 kg/cm <sup>2</sup> , 17 ~ 26 psi)

**Special Tools – Oil Filter Wrench: 57001-1249**  
**Oil Pressure Gauge, 10 kg/cm<sup>2</sup>: 57001-164**  
**Oil Pressure Gauge Adapter, PT 1/8: 57001-1033**  
**Circlip Pliers: 57001-154**

**Sealant – Kawasaki Bond (Silicone Sealant): 56019-120**


## Engine Oil and Oil Filter

**⚠ WARNING**

Motorcycle operation with insufficient, deteriorated, or contaminated engine oil will cause accelerated wear and may result in engine or transmission seizure, accident, and injury.

**Oil Level Inspection**

- Check that the engine oil level is between the upper [A] and lower [B] levels in the gauge.

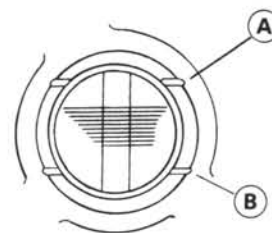**NOTE**

- Situate the motorcycle so that it is perpendicular to the ground.
- If the motorcycle has just been used, wait several minutes for all the oil to drain down.
- If the oil has just been changed, start the engine and run it for several minutes at idle speed. This fills the oil filter with oil. Stop the engine, then wait several minutes until the oil settles.

**CAUTION**

Racing the engine before the oil reaches every part can cause engine seizure.

If the engine oil gets extremely low or if the oil pump or oil passages clog up or otherwise do not function properly, the oil pressure warning light will light. If this light stays on when the engine is running above idle speed, stop the engine immediately and find the cause.

**Engine Oil Change**


- Support the motorcycle perpendicular to the ground after warming up the engine.
- Remove the engine drain plug [A] to drain the oil.
- The oil in the oil filter can be drained by removing the filter (see Oil Filter Change).
- ★ Replace the drain plug gasket [B] with a new one if it is damaged.
- Tighten the drain plug.

**Torque – Engine Drain Plug: 20 N·m (2.0 kg·m, 14.5 ft·lb)**

- Pour in the specified type and amount of oil.

**Engine Oil**

**Grade:** SE, SF or SG class  
**Viscosity:** SAE 10W40, 10W50, 20W40, or 20W50  
**Amount:** 3.1 L (when filter is not removed)  
 3.3 L (when filter is removed)  
 3.8 L (when engine is completely dry)

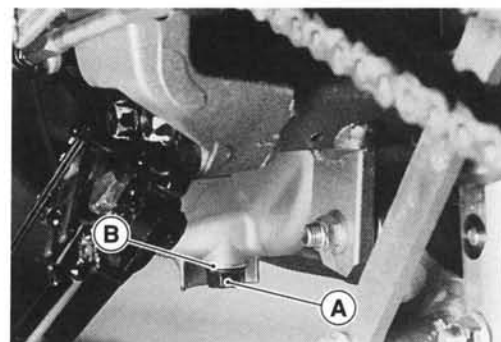


## 6-6 ENGINE LUBRICATION SYSTEM

### Oil Filter Change

- Drain the engine oil (see Engine Oil Change).
- Remove:
  - Lower Fairing (see Frame chapter)
- Remove the oil filter [A] with the oil filter wrench [B].


**Special Tool – Oil Filter Wrench: 57001-1249**

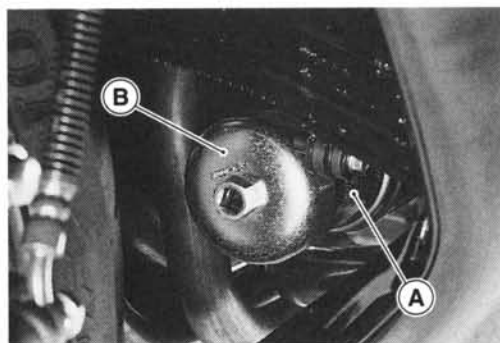

- Replace the filter with a new one.
- Apply grease to the gasket [A] before installation.
- Tighten the filter with the oil filter wrench or with hands about  $\frac{3}{4}$  turns after the gasket contacts the mounting surface of the oil cooler.

**Torque – Oil Filter: 9.8 N-m (1.0 kg-m, 87 in-lb)**


- Pour in the specified type and amount of oil (see Engine Oil Change).

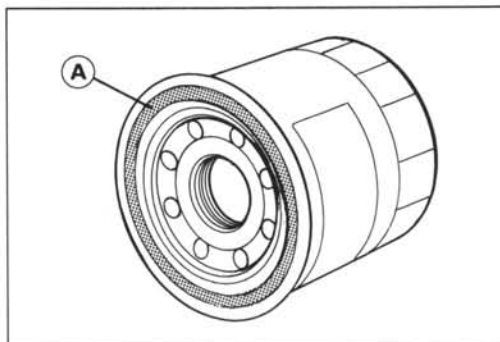


## Oil Cooler

### Oil Cooler Removal


- Remove:
  - Lower Fairing (see Frame chapter)
  - Right Fairing (see Frame chapter)
  - Inner Fairing (see Frame chapter)
- Drain:
  - Engine Oil (see Engine Oil Change)
  - Coolant (see Cooling System chapter)
- Remove the oil filter.
- Unscrew the oil cooler bolt [A] from the crankcase.

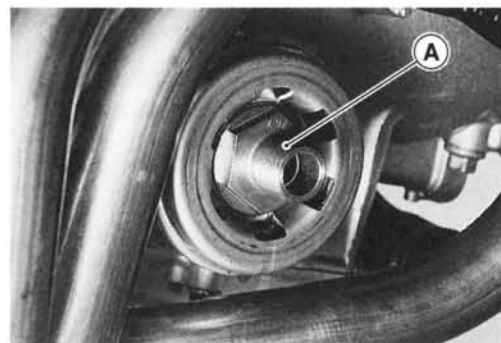

- Straighten the clamps [A].
- Remove the oil pressure switch lead [B].

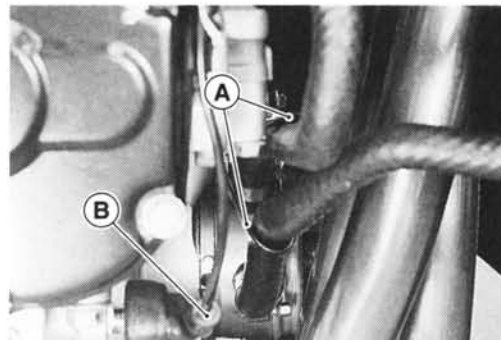


- Move the oil cooler [A] to the right side.
- Remove the oil cooler hoses [B] from the oil cooler.

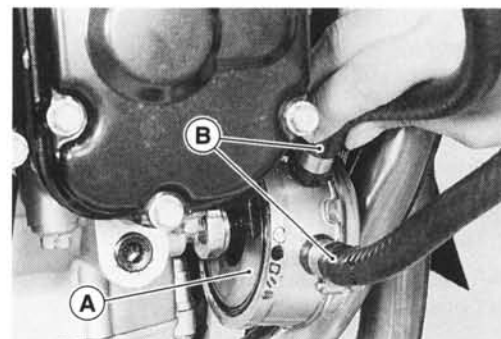

### Oil Cooler Installation


- Installation is the reverse of removal. Note the following.
- Apply grease to the O-ring [A] before installation.
- Apply grease to the oil cooler bolt, and install the oil cooler with the bolt.

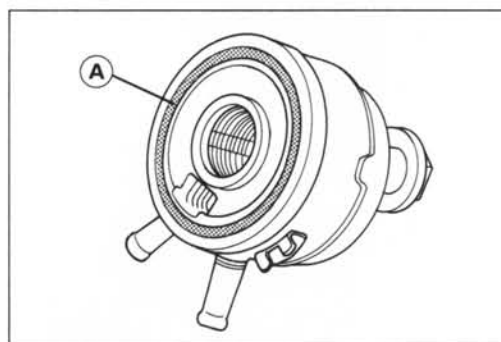

- Install the oil cooler so that the crankcase rib [A] fits the slot [B] of the oil cooler.
- Tighten the oil cooler bolt.

**Torque – Oil Cooler Bolt: 78 N-m (7.8 kg-m, 56 ft-lb)**

- Pour:
  - Engine Oil (see Engine Oil Change)
  - Coolant (see Cooling System chapter)

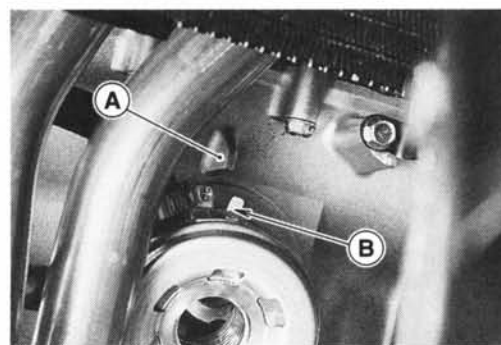


## 6-8 ENGINE LUBRICATION SYSTEM

### Oil Pan


#### Oil Pan Removal

● Remove:

- Engine Oil (drain, see Engine Oil Change)
- Muffler (see Engine Top End chapter)
- Right Lower Fairing Bracket [A]
- Oil Pan Bolts [B]
- Oil Pan [C]

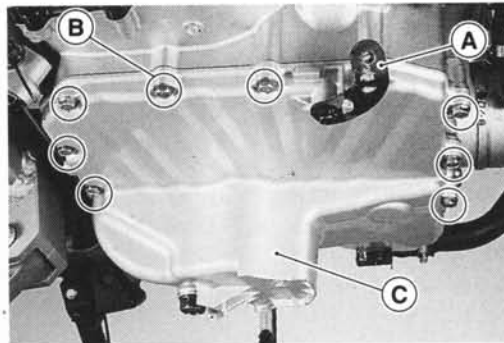

- Remove the oil pipe [A], oil pressure valve [B] and oil screen [C] as necessary.

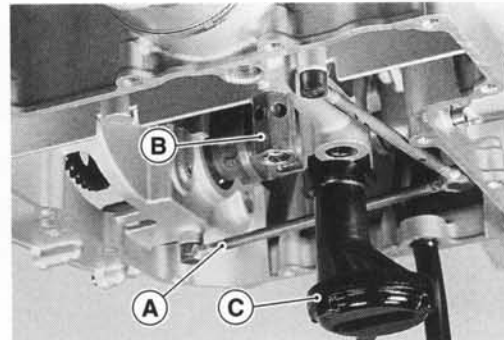


#### Oil Pan Installation

- Clean the oil screen [A].
- Install the oil screen so that the crankcase rib [B] fits the slot [C] of the oil screen.
- Apply engine oil to the O-rings on the oil pipe.
- Apply a non-permanent locking agent to the threads of the relief valve, and tighten it.

**Torque – Oil Pressure Relief Valve: 15 N-m (1.5 kg-m, 11.0 ft-lb)**

- Replace the oil pan gasket with a new one.
- Tighten the oil pan bolts.

**Torque – Oil Pan Bolts: 11 N-m (1.1 kg-m, 95 in-lb)**

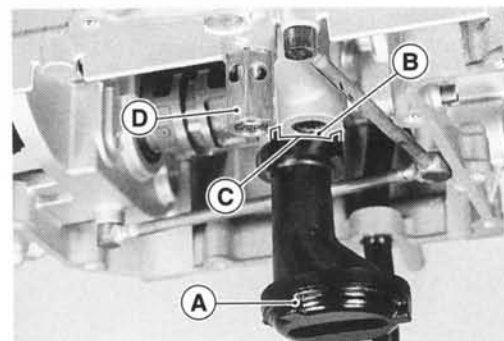



**Oil Pump, Oil Pump Drive Gear****Oil Pump Removal**

- Drain:
  - Coolant (see Cooling System chapter)
  - Engine Oil (see Engine Oil Change)
- Remove:
  - Lower Fairing (see Frame chapter)
  - Water Hoses [A]
  - Neutral Switch Lead Connector [B]
  - Bolts [C] and Clamp [D]
  - Water Pump Cover [E]

Impeller Bolt [A]  
Impeller [B]

Water Pump Body [A]  
Oil Pump Cover [B]  
Oil (Water) Pump Shaft [C]  
Outer rotor [D] and Inner Rotor






**NOTE**

- The oil (water) pump assembly can easily be removed by installing water pump cover bolt [E] into the oil (water) pump shaft and pulling them.

**Oil Pump Installation**

- Install the outer rotor [A] in to the crankcase.
- Install the pin, inner rotor [B] and oil (water) pump shaft [C].
- Turn the pump shaft so that the slot [D] in its shaft fits onto the projection [E] of the pump drive gear shaft.


- Fit the pin [A] of the oil pump cover [B] into the hole [C] in the crankcase.

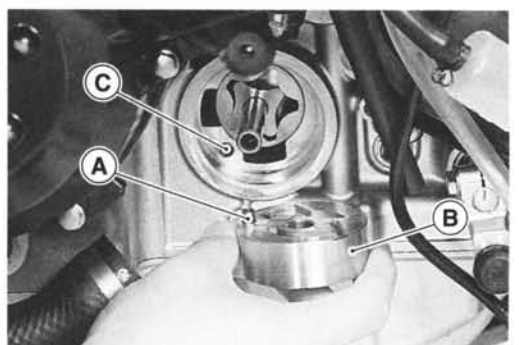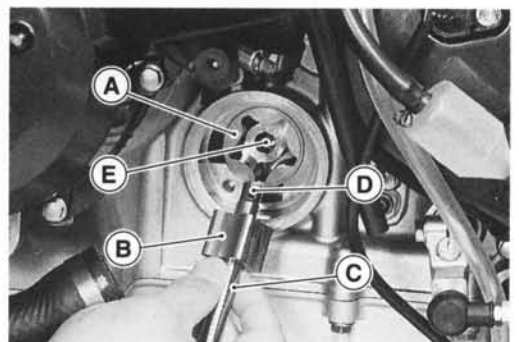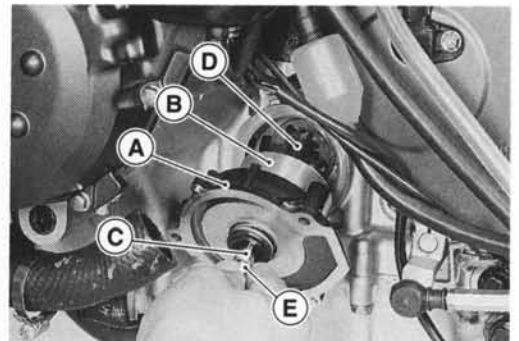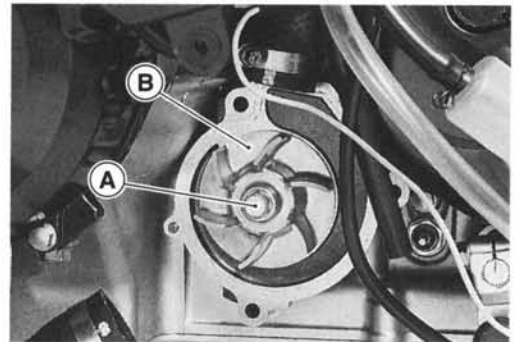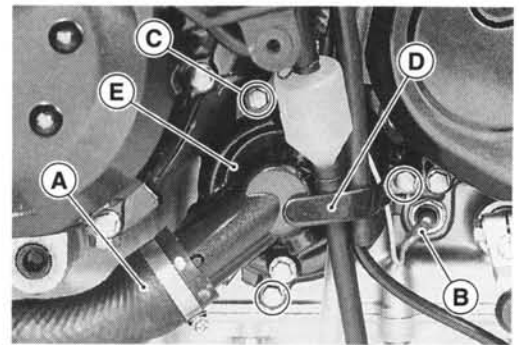



## 6-10 ENGINE LUBRICATION SYSTEM

- Install:
  - Pins [A]
  - Water Pump Body [B]

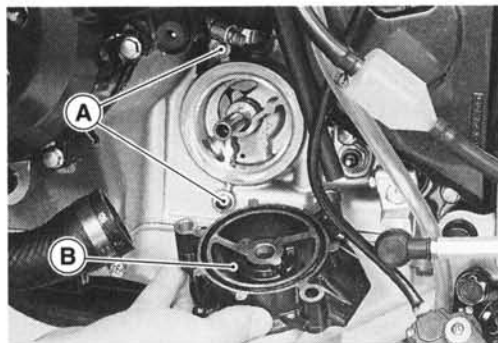


Impeller [A] and Bolt [B]

**Torque – Impeller Bolt: 9.8 N-m (1.0 kg-m, 87 in-lb)**

Pins [C]

Water Pump Cover [D] and Bolts

**Torque – Water Pump Cover Bolts: 11 N-m (1.1 kg-m, 95 in-lb)**

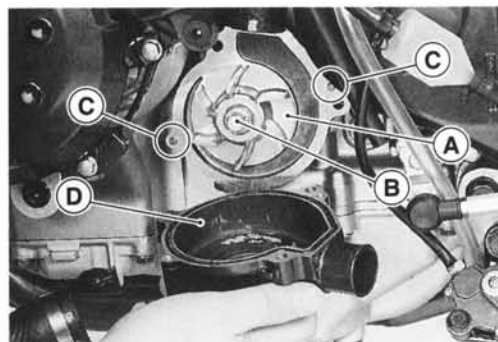


### *Oil Pump Drive Gear Removal*

- Remove:
  - Clutch (see Clutch chapter)
  - Oil Pan (see Oil Pan Removal)
  - Circlip [A] and Washer [B]

**Special Tool – Circlip Pliers: 57001-154**


Oil Pump Drive Gear [C]

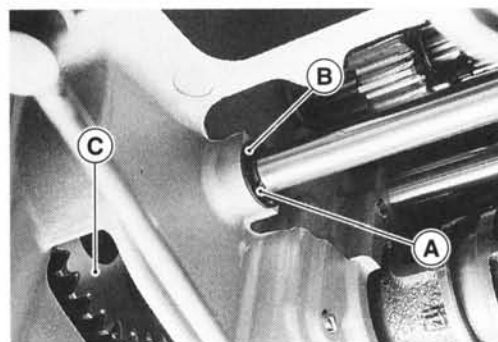

### *Oil Pump Drive Gear Installation*

- Install the circlip [A] into the groove [B] of the oil pump drive gear shaft.

**Special Tool – Circlip Pliers: 57001-154**

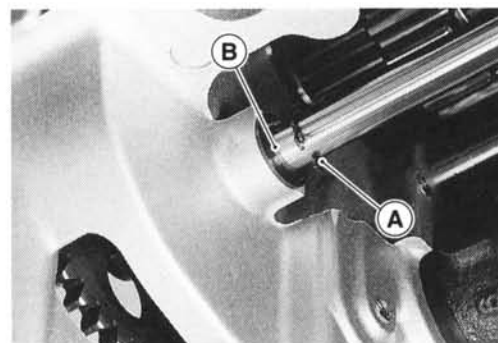


## Oil Pressure Measurement

### Oil Pressure Measurement

- Remove the lower fairing (see Frame chapter).
- Remove the oil passage plug, and attach the gauge and adapter to the plug hole.

**Special Tools** — Oil Pressure Gauge, 10 kg/cm<sup>2</sup>: 57001-164 [A]  
 Oil Pressure Gauge Adapter, PT 1/8: 57001-1033 [B]

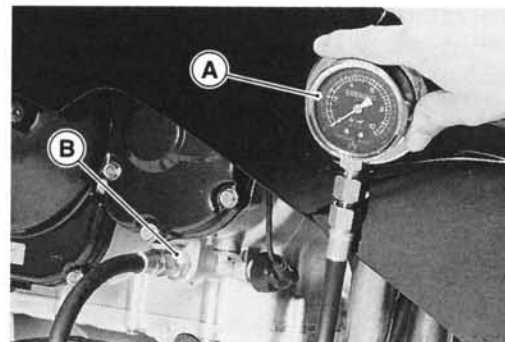

- Run the engine at the specified speed, and read the oil pressure gauge.
- ★ If the oil pressure is significantly below the specification, inspect the oil pump and relief valve.
- ★ If the oil pump and relief valve are not at fault, inspect the rest of the lubrication system.

### Oil Pressure

**Standard:** 120 ~ 180 kPa (1.2 ~ 1.8 kg/cm<sup>2</sup>, 17 ~ 26 psi)  
 @4,000 r/min (rpm), oil temp. 90°C (194 °F)

- Stop the engine.
- Remove the oil pressure gauge and adapter.

### ⚠ WARNING

Take care against burns from hot engine oil that will drain through the oil passage when the gauge adapter is removed.

- Apply silicone sealant to the oil passage plug, and tighten it.

**Sealant** — Kawasaki Bond (Silicone Sealant): 56019-120


**Torque** — Oil Passage Plug (Right): 20 N·m (2.0 kg·m, 14.5 ft·lb)

## 6-12 ENGINE LUBRICATION SYSTEM

### Oil Pressure Switch

#### *Oil Pressure Switch Removal*

- Remove:
  - Lower Fairing (see Frame chapter)
  - Engine Oil (drain, see Engine Oil Change)
  - Switch Cover [A]
  - Switch Terminal [B]
  - Oil Pressure Switch [C]

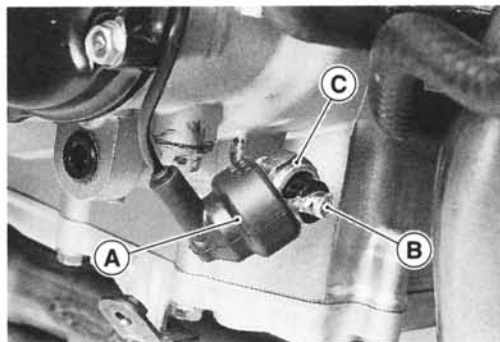

#### *Oil Pressure Switch Installation*

- Apply silicone sealant to the threads of the oil pressure switch and tighten it.
  - Sealant – Kawasaki Bond (Silicone Sealant): 56019-120**
  - Torque – Oil Pressure Switch: 15 N-m (1.5 kg-m, 11.0 ft-lb)**
- Tighten the terminal bolt.
  - Torque – Oil Pressure Switch Terminal Bolt: 1.5 N-m (0.15 kg-m, 13 in-lb)**
- Apply grease to the terminal.


# Engine Removal / Installation

## Table of Contents

Exploded View .....	7-2
Specifications .....	7-3
Engine Removal/Installation.....	7-4
Engine Removal .....	7-4
Engine Installation .....	7-5

## 7-2 ENGINE REMOVAL / INSTALLATION

### Exploded View

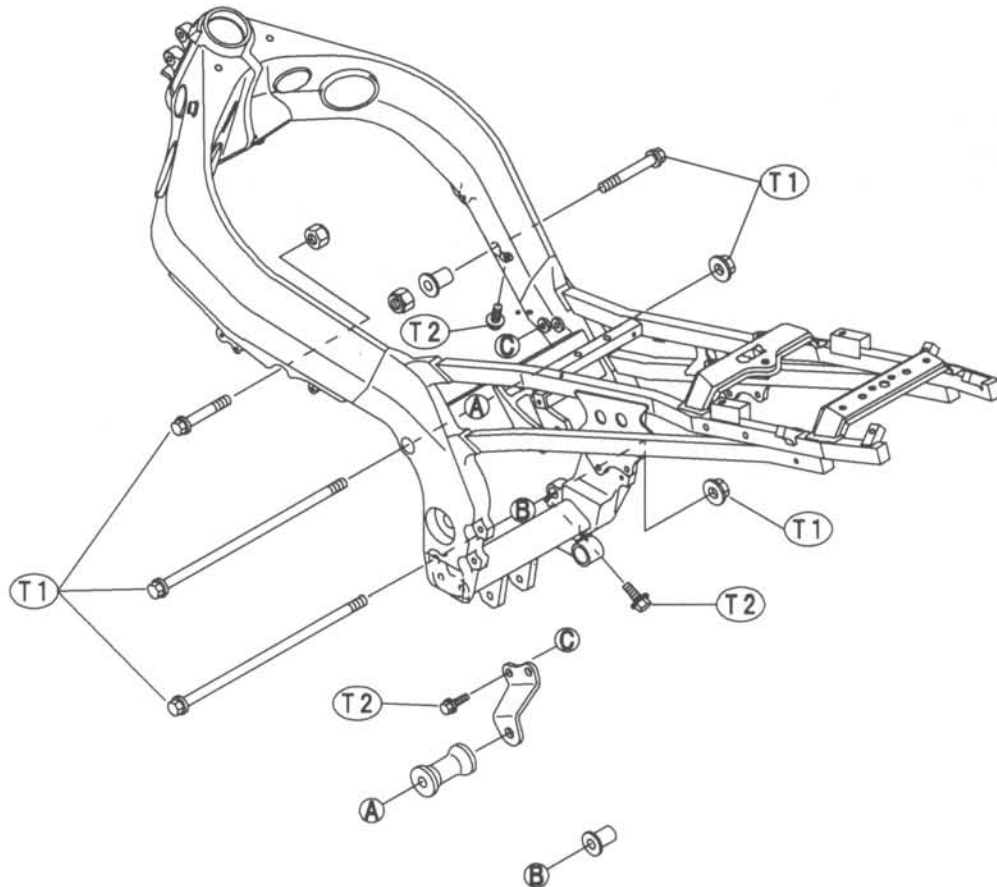

T1: 23 N-m (2.3 kg-m, 16.5 ft-lb)  
T2: 44 N-m (4.5 kg-m, 33 ft-lb)

---

**Specifications**

---

**Special Tool – Jack:** 57001-1238

## 7-4 ENGINE REMOVAL / INSTALLATION


### Engine Removal/Installation

#### Engine Removal

- Squeeze the brake lever slowly and hold it with a band [A].

#### ⚠ WARNING

Be sure to hold the front brake when removing the engine, or the motorcycle may fall over. It could cause an accident and injury.

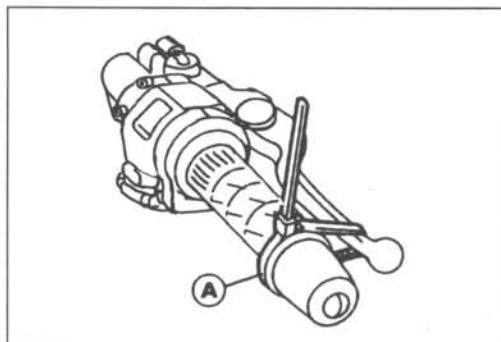


#### CAUTION

Be sure to hold the front brake when removing the engine, or the motorcycle may fall over. The engine or the motorcycle could be damaged.


- Drain:
  - Engine Oil (see Engine Lubrication System chapter)
  - Coolant (see Cooling System chapter)
- Remove:
  - Lower Fairings (see Frame chapter)
  - Middle Fairings and Inner Fairing (see Frame chapter)
  - Fuel Tank (see Fuel System chapter)
  - Air Cleaner Housing (see Fuel System chapter)
  - Stick Coils (see Electrical System chapter)
  - Carburetors (see Fuel System chapter)
  - Baffle Plate on the Cylinder Head Cover
  - Fuel Pump and Fuel Filter

Radiator [A]  
Clutch Cable Lower End [B]  
Muffler [C]

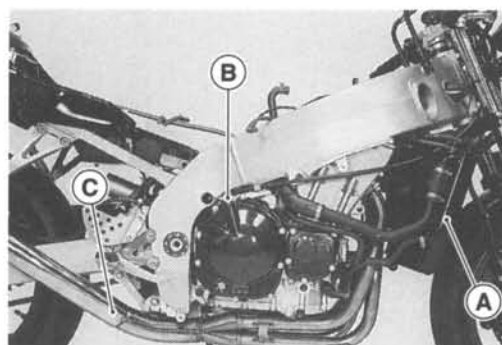

Shift Lever [A]  
Reserve Tank [B]  
Speed Sensor [C]  
Engine Sprocket (see Final Drive chapter)


- Disconnect wiring from the engine and free them from the clamps.
  - Neutral Switch Lead Connector [D]
  - Side Stand Switch Lead Connector [E]

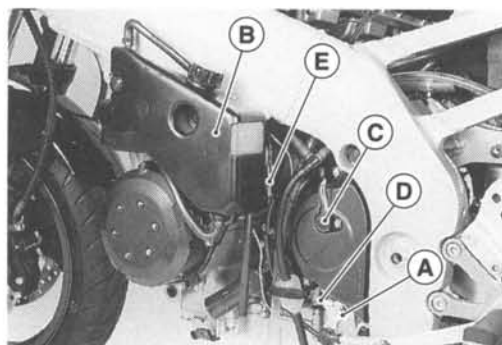


- Pickup Coil Lead and Oil Pressure Switch Lead Connector [A]
- Battery Ground Lead [B]
- Starter Motor Lead [C]
- Alternator Lead Connector [D]
- Cam Sensor Lead Connector

- Support the rear part of the frame on the jack.

**Special Tool – Jack: 57001-1238**

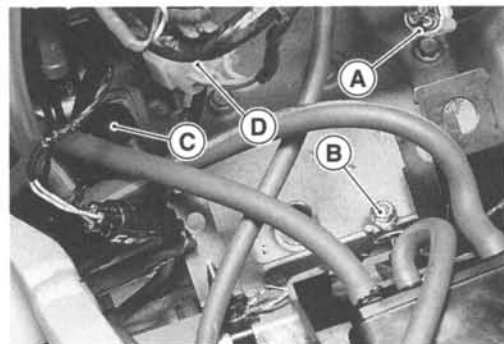

- Support the engine with a suitable stand [A].
- Loosen the clamp bolts [B] to free the collars.
- Remove the engine mounting bolts and nuts [C].
- Remove the drive chain from the output shaft.
- Using the stand, take out the engine.

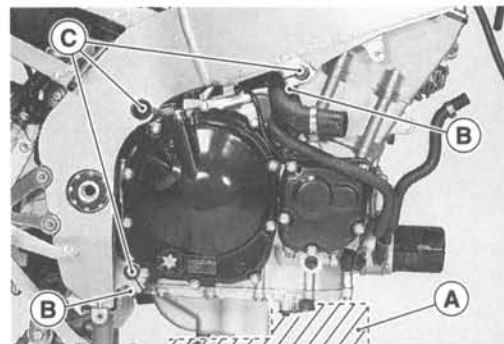

### Engine Installation

- Before engine installation loosen the engine bracket bolts [A].
- Support the engine with a suitable stand.
- Hang the drive chain over the output shaft just before moving the engine into its final position in the frame.
- Insert the collars in the clamps of the frame.
- Insert the lower mounting bolt [B].
- Insert the upper mounting bolts [C].
- Set the collar [D] and insert the middle mounting bolts [E].
- Tighten the engine mounting bolts and nuts.

**Torque – Engine Mounting Bolts and Nuts: 44 N-m (4.5 kg-m, 33 ft-lb)**

- Tighten the clamp bolts [F] and bracket bolts.


**Torque – Engine Mounting Clamp Bolts: 23 N-m (2.3 kg-m, 16.5 ft-lb)**

**Engine Bracket Bolts: 23 N-m (2.3 kg-m, 16.5 ft-lb)**

- Install the removed parts (see appropriate chapters).

- Adjust:

- Throttle Cables (see Fuel System chapter)
- Choke Cable (see Fuel System chapter)
- Drive Chain (see Final Drive chapter)

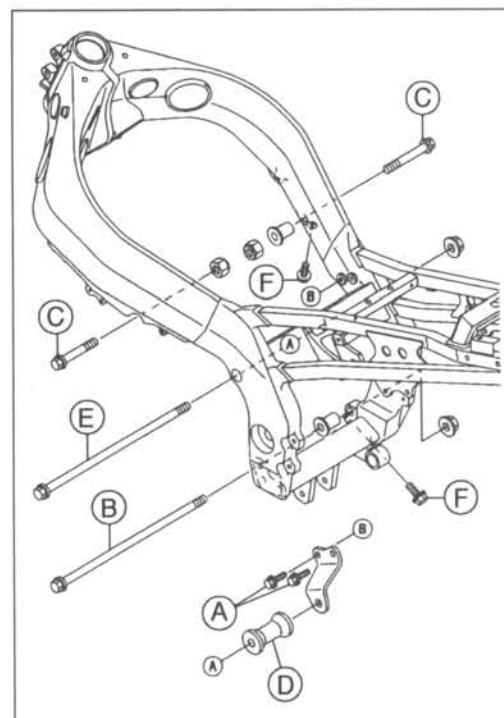




# Crankshaft / Transmission


## Table of Contents

Exploded View .....	8-2	Starter Motor Removal/Installation .....	8-17
Specifications .....	8-4	Starter Motor Assembly.....	8-17
Crankcase Splitting .....	8-6	Starter Clutch Inspection.....	8-17
Crankcase Splitting.....	8-6	Transmission.....	8-18
Crankcase Assembly.....	8-6	Shift Pedal Removal.....	8-18
Crankshaft and Connecting Rods.....	8-9	Shift Pedal Installation .....	8-18
Crankshaft Removal.....	8-9	External Shift Mechanism Removal .....	8-19
Crankshaft Installation.....	8-9	External Shift Mechanism Installation .....	8-19
Connecting Rod Removal.....	8-9	External Shift Mechanism Inspection .....	8-19
Connecting Rod Installation .....	8-9	Transmission Shaft Removal.....	8-20
Crankshaft/Connecting Rod Cleaning .....	8-12	Transmission Shaft Installation .....	8-20
Connecting Rod Bend .....	8-12	Transmission Disassembly .....	8-20
Connecting Rod Twist .....	8-12	Transmission Assembly .....	8-21
Connecting Rod Big End Side Clearance.....	8-12	Shift Drum and Fork Removal .....	8-22
Connecting Rod Big End Bearing		Shift Drum and Fork Installation.....	8-22
Insert/Crankpin Wear .....	8-13	Shift Drum Disassembly.....	8-23
Crankshaft Main Bearing		Shift Drum Assembly .....	8-23
Insert/Journal Wear .....	8-14	Shift Fork Bending .....	8-23
Crankshaft Side Clearance .....	8-15	Shift Fork/Gear Groove Wear .....	8-23
Crankshaft Runout .....	8-16	Shift Fork Guide Pin/Drum Groove Wear .....	8-24
Starter Motor Clutch .....	8-17	Gear Dog and Gear Dog Hole Damage.....	8-24

## 8-2 CRANKSHAFT / TRANSMISSION

### Exploded View

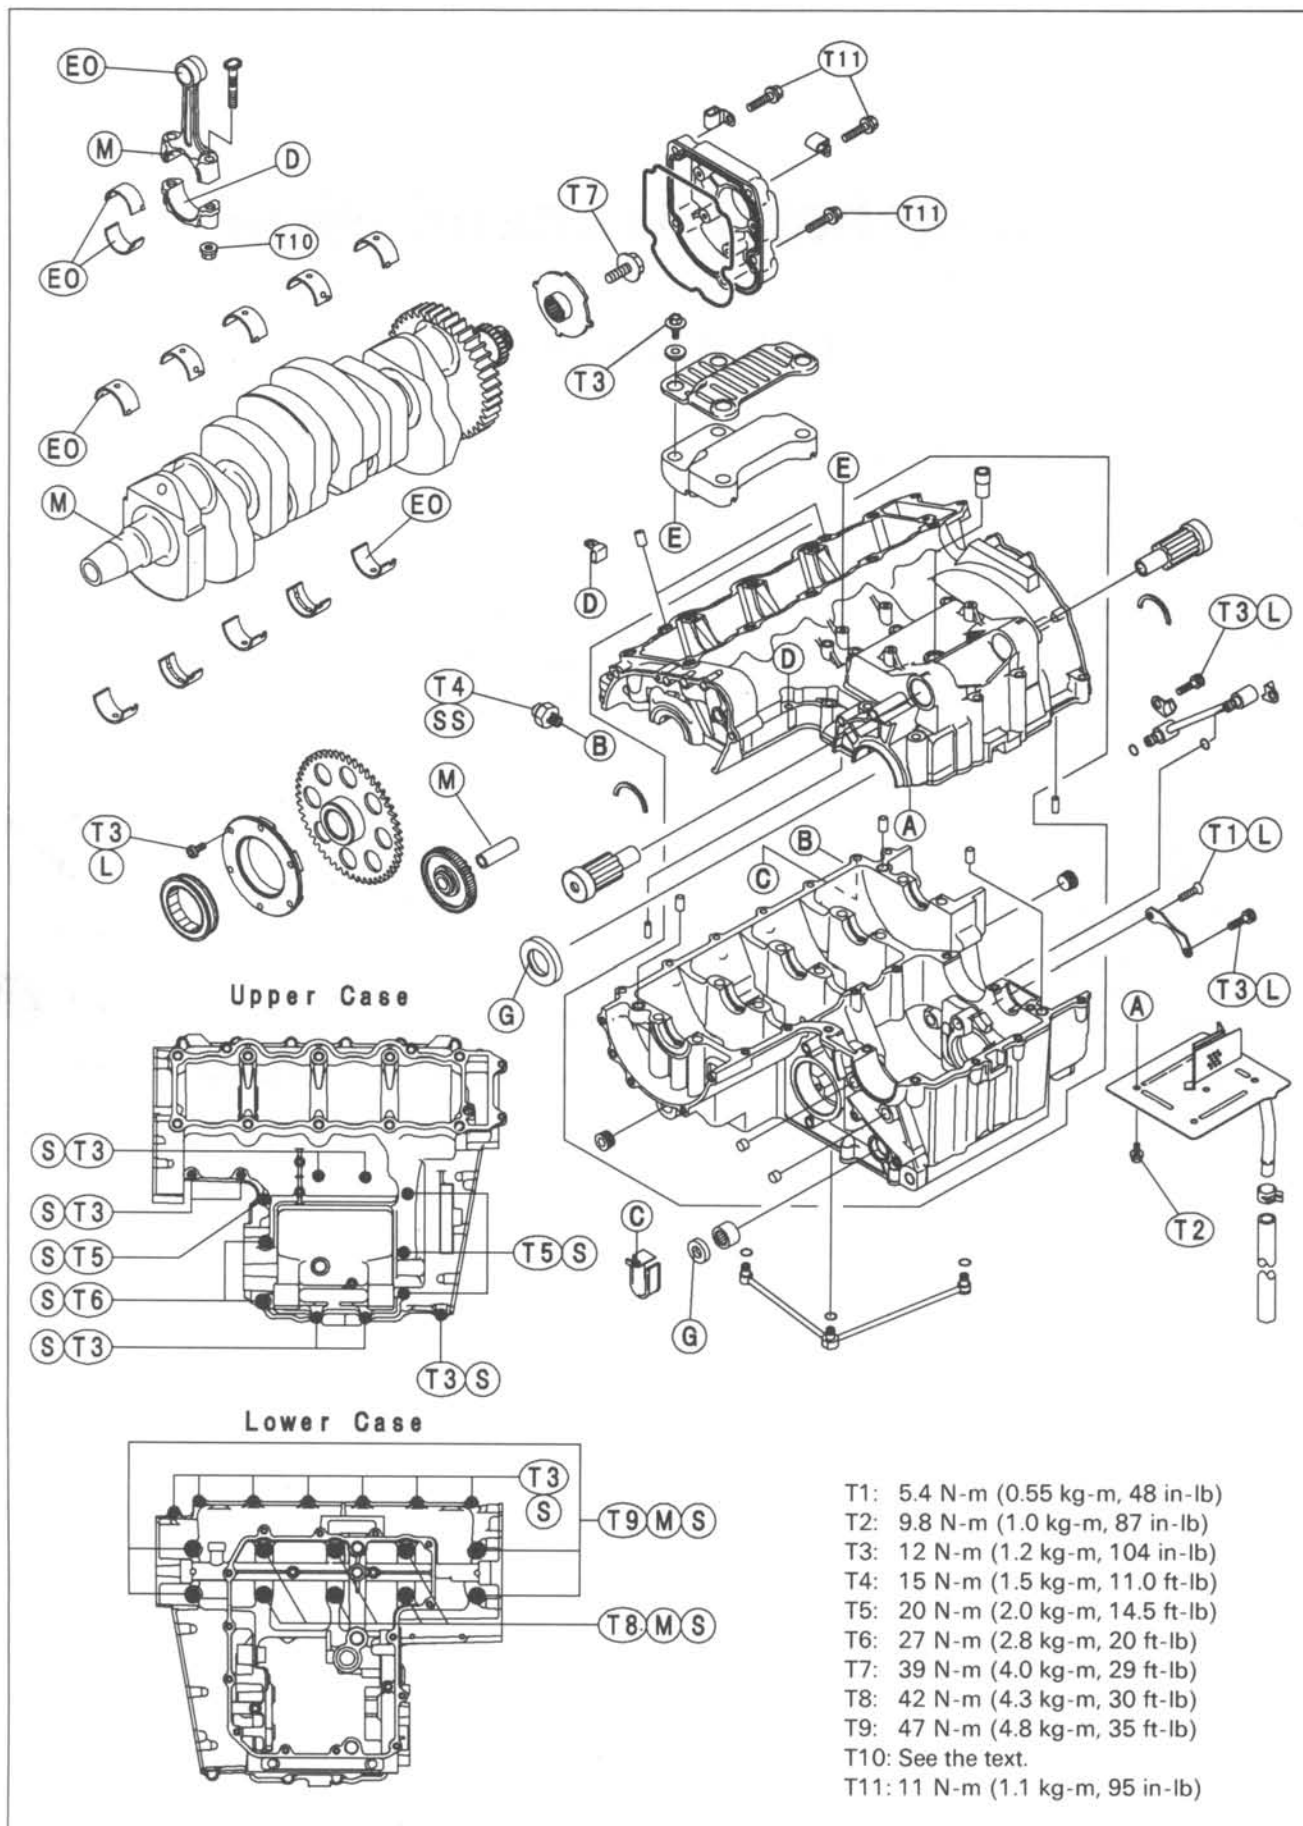

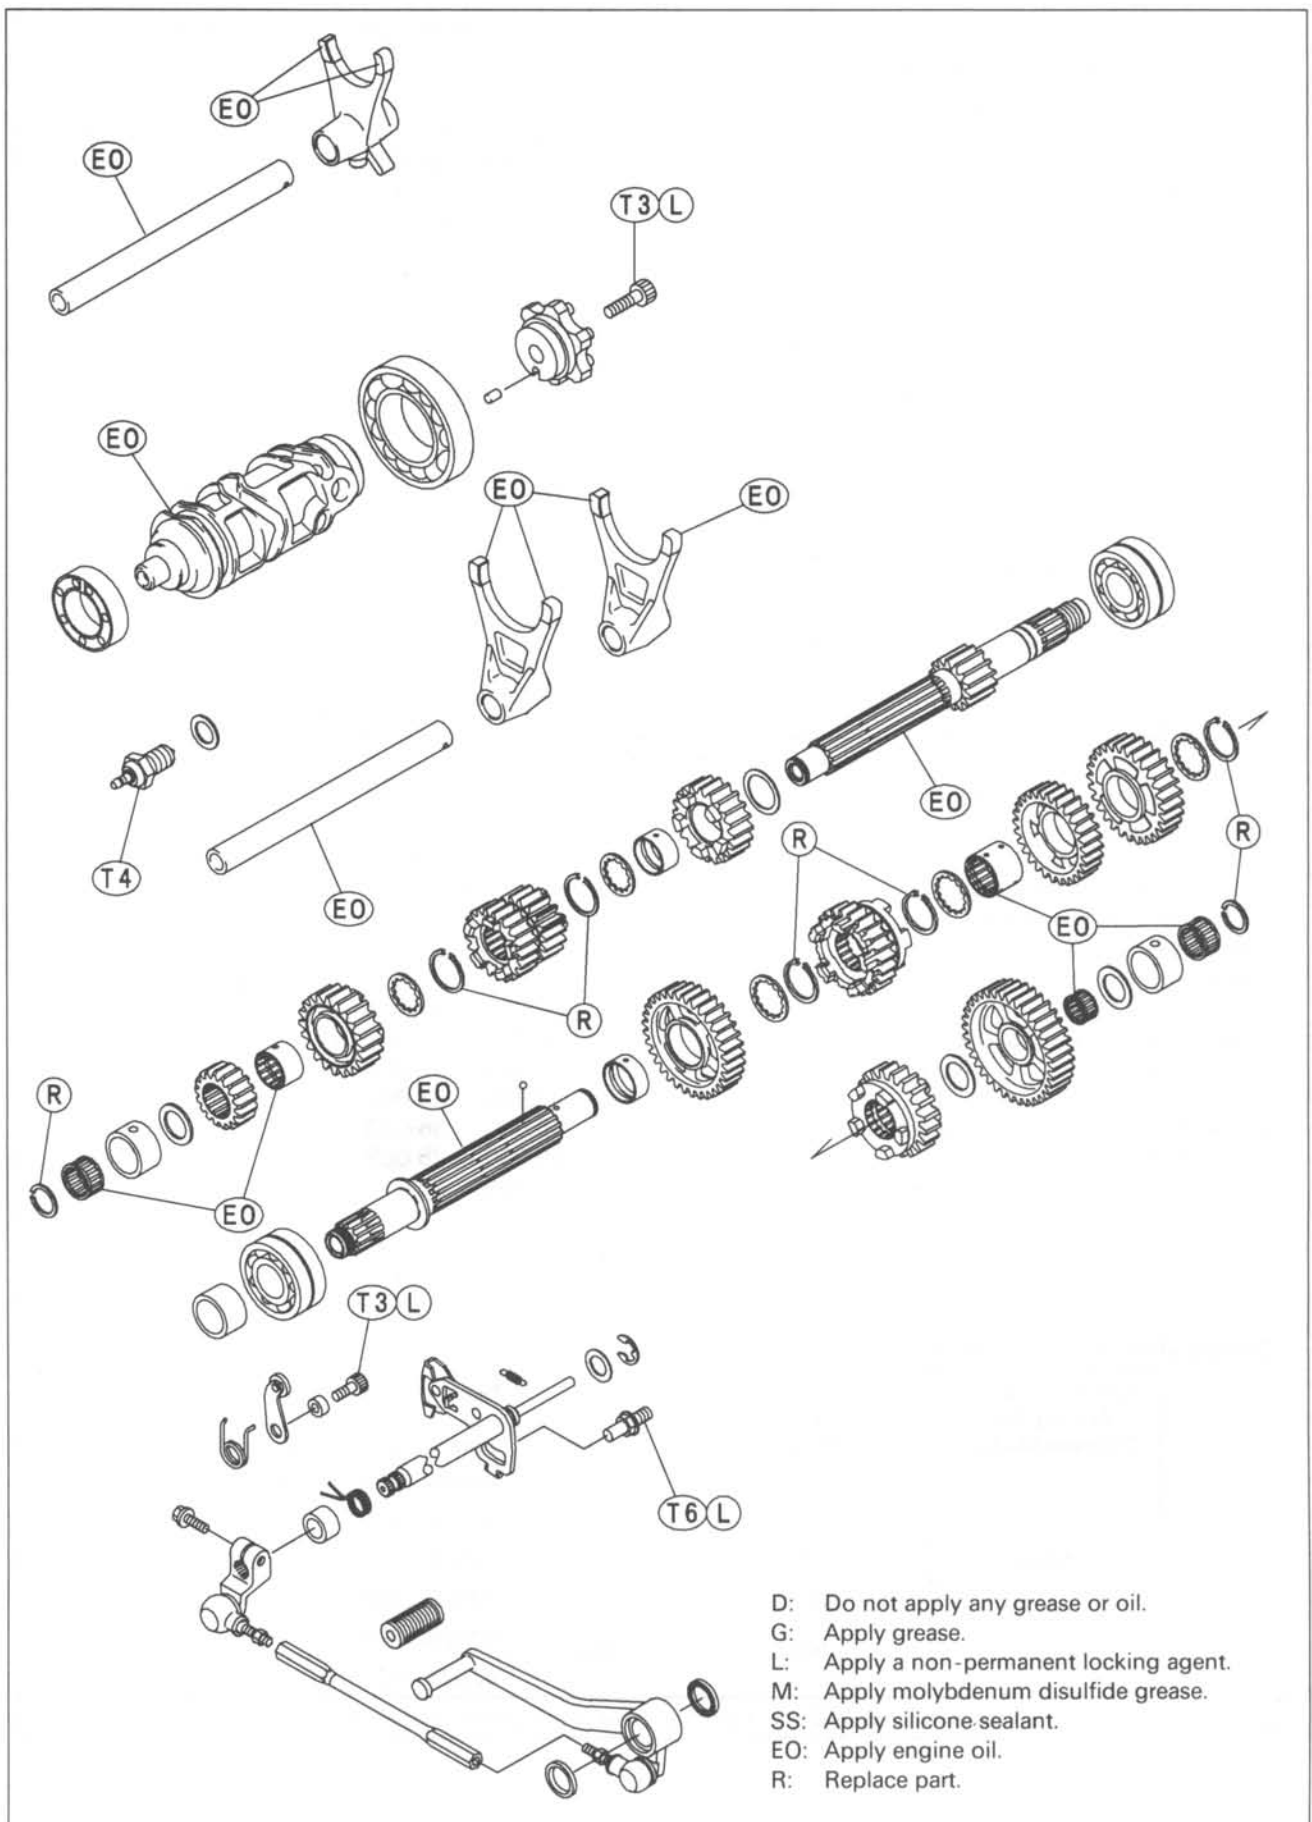

## 8-4 CRANKSHAFT / TRANSMISSION

### Specifications

Item	Standard	Service Limit
<b>Crankshaft, Connecting Rods:</b>		
Connecting rod big end side clearance	0.13 ~ 0.38 mm	0.58 mm
Connecting rod big end bearing insert/crankpin clearance	0.036 ~ 0.066 mm	0.10 mm
Crankpin diameter:	34.984 ~ 35.000 mm	34.97 mm
Marking                      None	34.984 ~ 34.994 mm	---
○	34.995 ~ 35.000 mm	---
Connecting rod big end bore diameter:	38.000 ~ 38.016 mm	---
Marking                      None	38.000 ~ 38.008 mm	---
○	38.009 ~ 38.016 mm	---
Connecting rod big end bearing insert thickness:		
Brown	1.475 ~ 1.480 mm	---
Colorless	1.480 ~ 1.485 mm	---
Blue	1.485 ~ 1.490 mm	---

Connecting rod big end bearing insert selection:

Con-rod Big End Bore Diameter Marking	Crankpin Diameter Marking	Bearing Insert	
		Size Color	Part Number
None	○	Brown	92028-1713
None	None	Colorless	92028-1714
○	○		
○	None	Blue	92028-1712

Connecting Rod Bolt Stretch  
(Usable Range)

New connecting rod

Used connecting rod

Crankshaft side clearance

Crankshaft runout

Crankshaft main bearing insert/  
journal clearance

Crankshaft main journal diameter:

Marking                      None

1

Crankcase main bearing bore diameter:

Marking                      ○

None

Crankshaft main bearing insert thickness:

Brown

Black

Blue

0.24 ~ 0.36 mm

0.20 ~ 0.32 mm

0.05 ~ 0.21 mm

TIR 0.02 mm or less

0.020 ~ 0.044 mm

32.984 ~ 33.000 mm

32.984 ~ 32.994 mm

32.995 ~ 33.000 mm

36.000 ~ 36.016 mm

36.000 ~ 36.008 mm

36.009 ~ 36.016 mm

1.490 ~ 1.494 mm

1.494 ~ 1.498 mm

1.498 ~ 1.502 mm

---

---

0.40 mm

TIR 0.05 mm

0.07 mm

32.96 mm

---

---

---

---

---

---

---

---

Crankshaft main bearing insert selection:

Crankcase Main Bearing Bore Diameter Marking	Crankshaft Main Journal Diameter Marking	Bearing Insert*		
		Size Color	Part Number	Journal Nos.
○	1	Brown	92028-1868	1, 3, 5
			92028-1829	2, 4
None	1	Black	92028-1867	1, 3, 5
○	None		92028-1828	2, 4
None	None	Blue	92028-1866	1, 3, 5
			92028-1827	2, 4

\*The bearing inserts for Nos. 1, 2 and 4 journals have an oil groove, respectively.

Item	Standard	Service Limit
<b>Transmission:</b>		
Shift fork ear thickness	5.9 ~ 6.0 mm	5.8 mm
Gear shift fork groove width	6.05 ~ 6.15 mm	6.25 mm
Shift fork guide pin diameter	6.9 ~ 7.0 mm	6.8 mm
Shift drum groove width	7.05 ~ 7.20 mm	7.3 mm

**Special Tool – Outside Circlip Pliers: 57001-144**


**Sealant – Kawasaki Bond (Silicone Sealant): 56019-120**

## 8-6 CRANKSHAFT / TRANSMISSION


### Crankcase Splitting

#### Crankcase Splitting

- Remove the engine (see Engine Removal/Installation chapter).
- Set the engine on a clean surface and hold the engine steady while parts are being removed.
- Remove:
  - Pickup Coil (see Electrical System chapter)
  - Oil Hose (Cylinder Head ~ Lower Crankcase)
  - Clutch (see Clutch chapter)
  - External Shift Mechanism (see External Shift Mechanism Removal)
  - Starter Motor (see Electrical System chapter)
  - Oil Pump (see Engine Lubrication System chapter)
  - Alternator Rotor (see Electrical System chapter)
  - Oil Filter (see Engine Lubrication System chapter)
  - Oil Cooler (see Engine Lubrication System chapter)
- ★ If the crankshaft is to be removed, remove the pistons (see Engine Top End chapter).
- Remove the upper crankcase bolts.
  - First loosen the 6 mm bolts.
  - 6 mm Bolts [A]
  - 7 mm Bolts [B]
  - 8 mm Bolts [C]

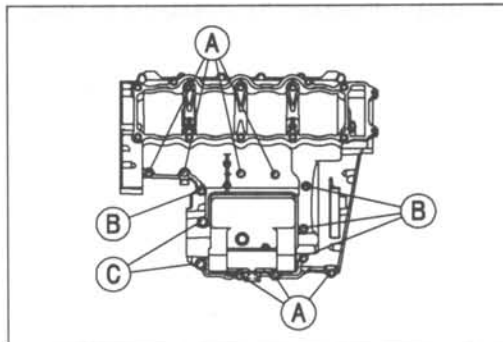

- Remove the oil pan, relief valve, oil screen and oil pipes (see Engine Lubrication System chapter).
- Remove the lower crankcase bolts and brackets.
  - First loosen the 6 mm bolts.
  - 6 mm Bolts [A]
  - 9 mm Bolts [B]
- Tap lightly around the crankcase mating surface with a plastic mallet, and split the crankcase. Take care not to damage the crankcase.

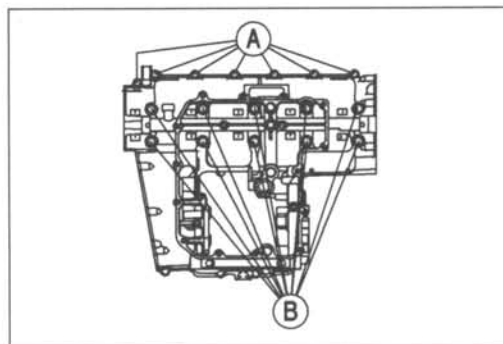


#### Crankcase Assembly

##### CAUTION

The upper and lower crankcase halves are machined at the factory in the assembled state, so the crankcase halves must be replaced as a set.


- With a high-flash point solvent, clean off the mating surfaces of the crankcases halves and wipe dry.
- Using compressed air, blow out the oil passages in the crankcase halves.
- Apply silicone sealant to the breather plate mating surface [A] 1 to 1.5 mm thick, wait until sealant dries, and then install the breather plate [B].

Sealant – Kawasaki Bond (Silicone Sealant): 56019-120

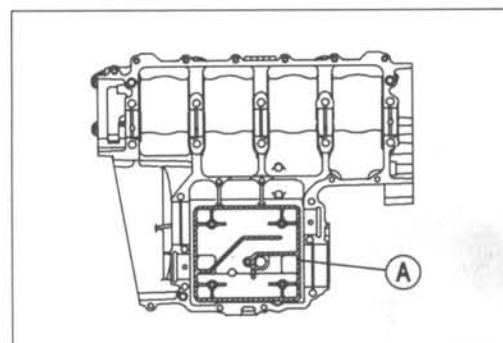


- Apply a non-permanent locking agent to the threads and tighten the bolts [A].

**Torque – Breather Plate Bolts: 9.8 N-m (1.0 kg-m, 87 in-lb)**

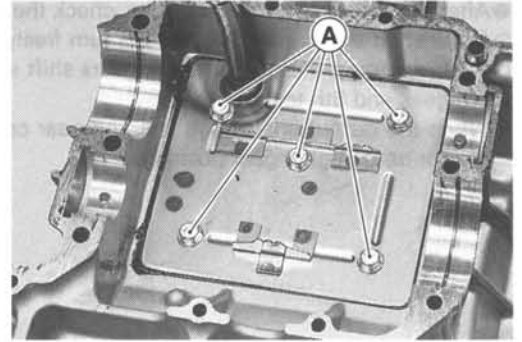

- Install:
  - Crankshaft and Connecting Rods
  - Camshaft Chain [A]
  - Transmission Shaft and Gears
  - Dowel Pins [B]
  - Shift Drum
  - Shift Forks and Shift Rods

- Before fitting the lower case on the upper case, check the following.
  - Be sure to hang the camshaft chain on the crankshaft.
  - Check to see that the shift drum and transmission gears are in the neutral position.

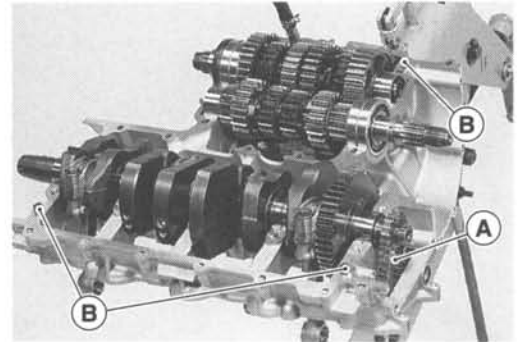


- Apply liquid gasket [A] to the mating surface of the lower crankcase half.

**Sealant – Kawasaki Bond (Liquid Gasket – Silver): 92104-002**

**CAUTION**

Do not apply liquid gasket around the crankshaft main bearing inserts, and oil passage holes.

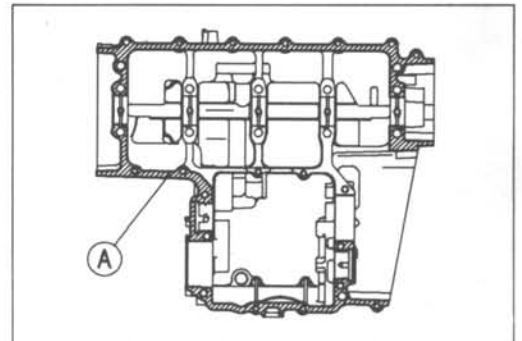

- Apply molybdenum disulfide grease to the seating surface of the lower crankcase 9 mm bolts.
- Tighten the lower crankcase bolts.
  - Following the sequence numbers on the lower crankcase half, tighten the 9 mm bolts [1 ~ 6].

**Torque – Crankcase 9 mm Bolts: 42 N-m (4.3 kg-m, 30 ft-lb)**

- Tighten the 9 mm bolts [7 ~ 10].

**Torque – Crankcase 9 mm Bolts: 47 N-m (4.8 kg-m, 35 ft-lb)**

- Tighten the 6 mm bolts [A].



**Torque – Crankcase 6 mm Bolts: 12 N-m (1.2 kg-m, 104 in-lb)**

- Put the 8 mm bolts [A], 7 mm bolts [B], and the 6 mm bolts [C] into the upper crankcase half as shown in the figure, tighten the 8 mm bolts first, then the other bolts in the sequence shown.

**Torque – Crankcase 8 mm Bolts: 27 N-m (2.8 kg-m, 20 ft-lb)**

**Crankcase 7 mm Bolts: 20 N-m (2.0 kg-m, 14.5 ft-lb)** 174.2-185

**Crankcase 6 mm Bolts: 12 N-m (1.2 kg-m, 104 in-lb)**

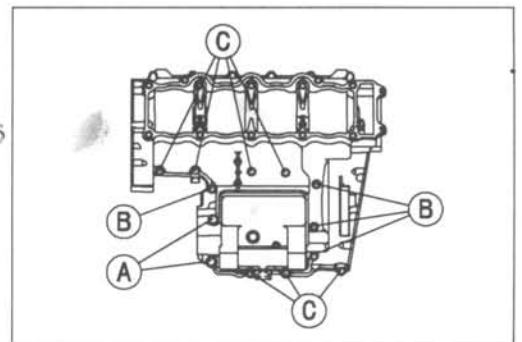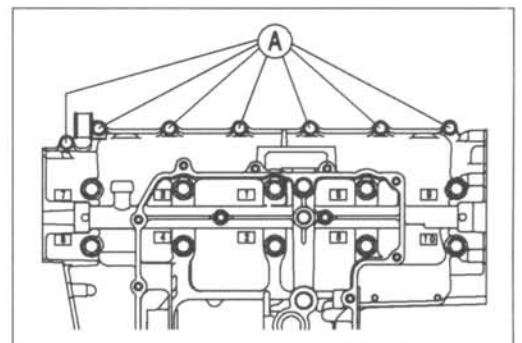

## 8-8 CRANKSHAFT / TRANSMISSION

---

- After tightening all crankcase bolts, check the following items.
- Crank shaft and transmission shafts turn freely.
- While spinning the output shaft, gears shift smoothly from the 1st to 6th gear, and 6th to 1st.
- When the output shaft stays still, the gear can not be shifted to 2nd gear or other higher gear positions.



## Crankshaft and Connecting Rods

### Crankshaft Removal


- Split the crankcase (see Crankcase Splitting).
- Remove the crankshaft.

### Crankshaft Installation

#### CAUTION

If the crankshaft, bearing inserts, or crankcase halves are replaced with new ones, select the bearing inserts and check clearance with a plastigage (press gauge) before assembling engine to be sure the correct bearing inserts are installed.

- Apply engine oil to the crankshaft main bearing inserts.
- Install the crankshaft with the camshaft chain [A] hanging on it.

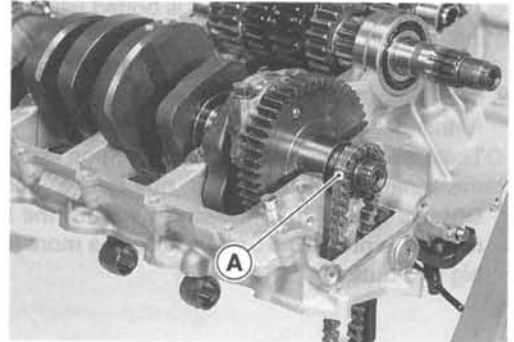

### Connecting Rod Removal

- Split the crankcase (see Crankcase Splitting).
- Remove the connecting rod nuts.
- Remove the crankshaft.

#### NOTE


- Mark and record the locations of the connecting rods and their big end caps so that they can be reassembled in their original positions.
- Remove the connecting rods from the crankshaft.

### Connecting Rod Installation

#### CAUTION

To minimize vibration, the connecting rods should have the same weight mark.

Big End Cap [A]  
Connecting Rod [B]  
Weight Mark, Alphabet [C]  
Diameter Mark [D]

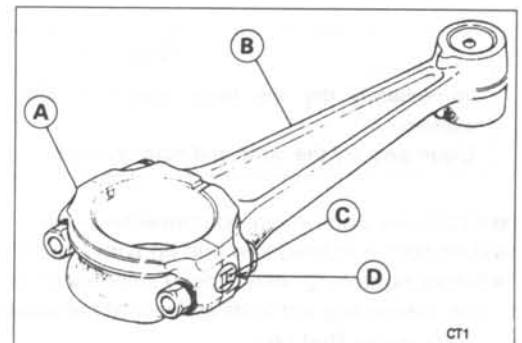

- If the connecting rods, big end bearing inserts, or crankshaft are replaced with new ones, select the bearing insert and check clearance with a plastigage (press gauge) before assembling engine to be sure the correct bearing inserts are installed.

#### CAUTION

The connecting rod bolts are designed to stretch when tightened. Never reuse them. - See the table below for correct bolt and nut usage.

- Apply engine oil to the inner surface of upper and lower bearing inserts.


Apply molybdenum disulfide grease [A].

Do not apply grease and oil [B].

Apply engine oil [C].

## CAUTION

**Do not apply grease to the inner surface of the upper or lower bearing inserts or to the outer surface of the lower bearing insert.**

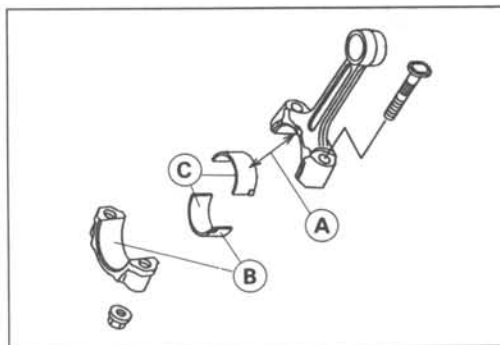

- The connecting rod big end is bolted using the "plastic region fastening method".
- This method precisely achieves the needed clamping force without exceeding it unnecessarily, allowing the use of thinner, lighter bolts further decreasing connecting rod weight.
- There are two types of the plastic region fastening. One is a bolt length measurement method and other is a tightening torque method. Observe one of the following two, but the bolt length measurement method is preferable because this is a more reliable way to tighten the big end nuts.

### (1) Bolt Length Measurement Method

- Be sure to clean the bolts, nuts, and connecting rods thoroughly with high-flash point solvent, because the new connecting rods, bolts, and nuts are treated with an anti-rust solution.

## ⚠ WARNING

**Clean the bolts, nuts, and connecting rods in a well-ventilated area, and take care that there is no spark or flame anywhere near the working area. This includes any appliance with a pilot light. Because of the danger of highly flammable liquids, do not use gasoline or low-flash point solvents to clean them.**


## CAUTION

**Immediately dry the bolts and nuts with compressed air after cleaning.**

**Clean and dry the bolts and nuts completely.**

- Install new bolts in reused connecting rods.
- Dent both bolt head and bolt tip with a punch as shown.
- Before tightening, use a point micrometer to measure the length of new connecting rod bolts and record the values to find the bolt stretch.  
Connecting Rod [A]  
Dent here with a punch [B].  
Nuts [C]  
Fit micrometer pins into dents [D].
- Tighten the big end nuts until the bolt elongation reaches the length specified in the table.
- Check the length of the connecting rod bolts.
- ★ If the stretch is more than the usable range, the bolt has stretched too much. An overelongated bolt may break in use.

$$\text{Bolt Length after tightening} - \text{Bolt Length before tightening} = \text{Stretch}$$

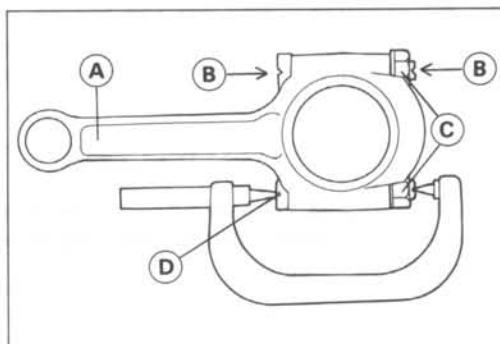

Connecting Rod Assy	Bolt	Nut	Usable Range of Connecting Rod Bolt Stretch
New	Use the bolts attached to new con-rod.	Attached to new con-rod	0.20 ~ 0.32 mm
		New	
Used	Replace the bolts with new ones.	Used	0.24 ~ 0.36 mm
		New	

## (2) Tightening Torque Method

★ If you don't have a point micrometer, you may tighten the nuts using the "Tightening Torque Method".

- Be sure to clean the bolts and nuts thoroughly with high-flash point solvent, because the new bolts and nuts are treated with an anti-rust solution.

### ⚠ WARNING

Clean the bolts and nuts in a well-ventilated area, and take care that there is no spark or flame anywhere near the working area. This includes any appliance with a pilot light. Because of the danger of highly flammable liquids, do not use gasoline or low-flash point solvents to clean them.

### CAUTION



Immediately dry the bolts and nuts with compressed air after cleaning.  
Clean and dry the bolts and nuts completely.

- Apply a small amount of engine oil to the threads [A] and seating surface [B] of the connecting rod nuts.
- First, tighten the nuts to the specified torque. See the table below.
- Next, tighten the nuts 120° more.
- Mark [A] the connecting rod big end caps and nuts so that nuts can be turned 120° [B] properly.
- Tighten the hexagon nut by 2 corners.

Connecting Rod Assy	Bolt	Nut	Torque + Angle N·m (kg·m, ft·lb)
New	Use the bolts attached to new con-rod.	Attached to new con-rod	18 (1.8, 13.0) + 120°
		New	20 (2.0, 14.5) + 120°
Used	Replace the bolts with new ones	Used	24 (2.4, 17.4) + 120°
		New	25 (2.6, 18.8) + 120°

### CAUTION

Since the friction force of the seating surface and thread portion of new nuts is different from that of used ones, the nut tightening torque should be changed as specified in the above table.  
Be careful not to overtighten the nuts.

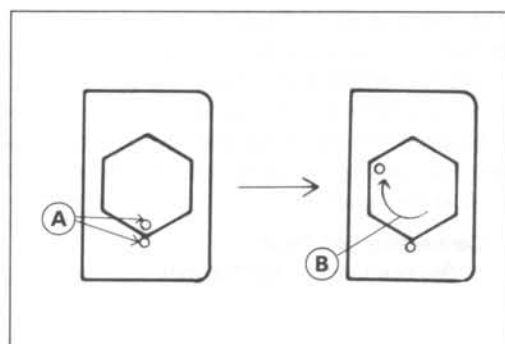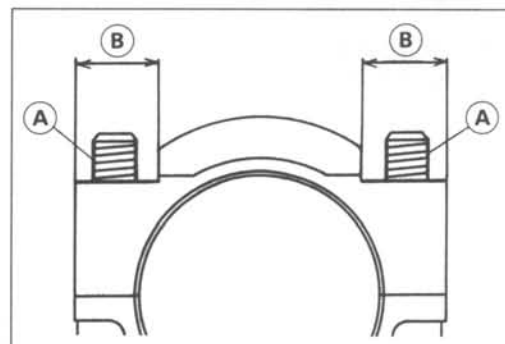


### Crankshaft/Connecting Rod Cleaning

- After removing the connecting rods from the crankshaft, clean them with a high-flash point solvent.
- Blow the crankshaft oil passages with compressed air to remove any foreign particles or residue that may have accumulated in the passages.

### Connecting Rod Bend

- Remove the connecting rod big end bearing inserts, and reinstall the connecting rod big end cap.
  - Select an arbor [A] of the same diameter as the connecting rod big end, and insert the arbor through the connecting rod big end.
  - Select an arbor of the same diameter as the piston pin and least 100 long, and insert the arbor [B] through the connecting rod small end.
  - On a surface plate, set the big-end arbor on V blocks [C].
  - With the connecting rod held vertically, use a height gauge to measure the difference in the height of the arbor above the surface plate over a 100 mm length to determine the amount of connecting rod bend.
- ★ If connecting rod bend exceeds the service limit, the connecting rod must be replaced.

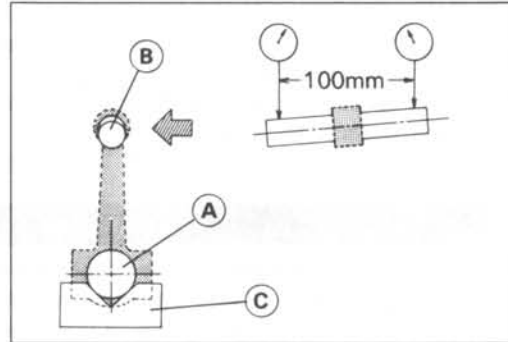

#### Connecting Rod Bend


Service Limit: 0.2/100 mm

### Connecting Rod Twist

- With the big-end arbor [A] still on V block [C], hold the connecting rod horizontally and measure the amount that the arbor [B] varies from being parallel with the surface plate over a 100 mm length of the arbor to determine the amount of connecting rod twist.
- ★ If connecting rod twist exceeds the service limit, the connecting rod must be replaced.

#### Connecting Rod Twist

Service Limit: 0.2/100 mm

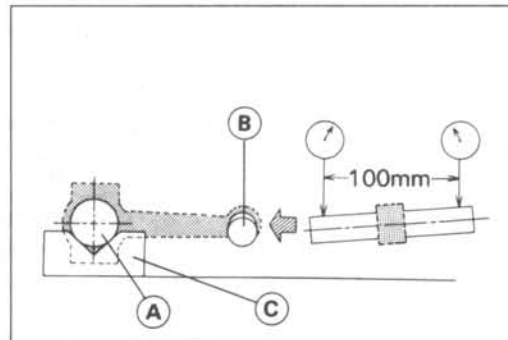

### Connecting Rod Big End Side Clearance


- Measure connecting rod big end side clearance [A].
- Insert a thickness gauge [B] between the big end and either crank web to determine clearance.

#### Connecting Rod Big End Side Clearance

Standard: 0.13 ~ 0.38 mm

Service Limit: 0.58 mm

- ★ If the clearance exceeds the service limit, replace the connecting rod with new one and then check clearance again. If clearance is too large after connecting rod replacement, the crankshaft also must be replaced.

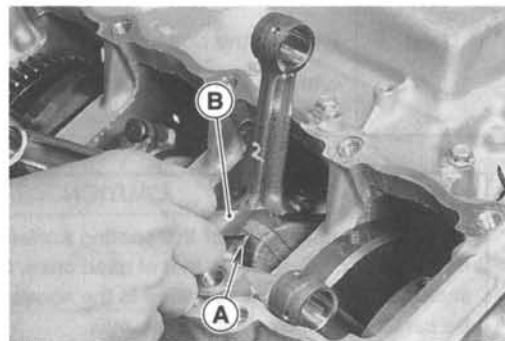

### Connecting Rod Big End Bearing Insert/Crankpin Wear

- Using a plastigage (press gauge) [A], measure the bearing insert/crankpin [B] clearance.

#### NOTE

- Tighten the connecting rod big end nuts to the specified torque (see Connecting Rod Installation).
- Do not move the connecting rod and crankshaft during clearance measurement.

#### Connecting Rod Big End Bearing Insert/Crankpin Clearance

Standard: 0.031 ~ 0.066 mm

Service Limit: 0.10 mm

- ★ If clearance is within the standard, no bearing replacement is required.
- ★ If clearance is between 0.067 mm and the service limit (0.10 mm), replace the bearing inserts with inserts painted black [C]. Check insert/crankpin clearance with the plastigage. The clearance may exceed the standard slightly, but it must not be less than the minimum in order to avoid bearing seizure.
- ★ If the clearance exceeds the service limit, measure the diameter of the crankpins.

#### Crankpin Diameter

Standard: 34.984 ~ 35.000 mm

Service Limit: 34.97 mm

- ★ If any crankpin has worn past the service limit, replace the crankshaft with a new one.
- ★ If the measured crankpin diameters are not less than the service limit, but do not coincide with the original diameter markings on the crankshaft, make new marks on it.

#### Crankpin Diameter Marks

None 34.984 ~ 34.994 mm

○ 34.995 ~ 35.000 mm

△: Crankpin Diameter Marks, "○" mark or no mark.

- Measure the connecting rod big end bore diameter, and mark each connecting rod big end in accordance with the bore diameter.

Bore Diameter Mark (Around Weight Mark) [A]: "○" or no mark.

#### NOTE





- Tighten the connecting rod big end nuts to the specified torque (see Connecting Rod Installation).
- The mark already on the big end should almost coincide with the measurement.

#### Connecting Rod Big End Bore Diameter Marks

None 38.000 ~ 38.008 mm

○ 38.009 ~ 38.016 mm

- Select the proper bearing insert in accordance with the combination of the connecting rod and crankshaft coding.
- Install the new inserts in the connecting rod and check insert/crankpin clearance with the plastigage.

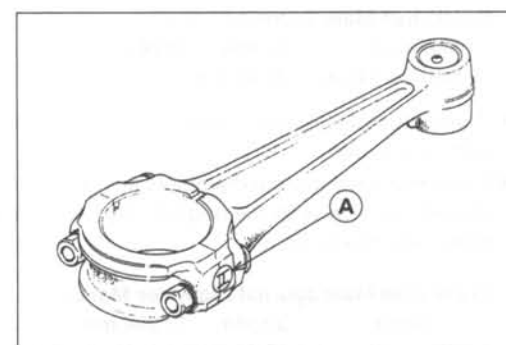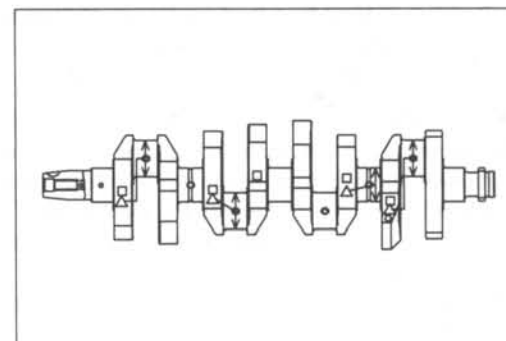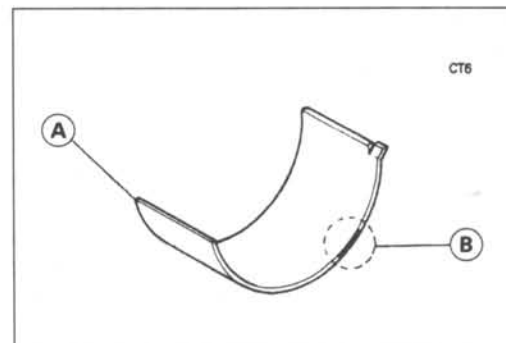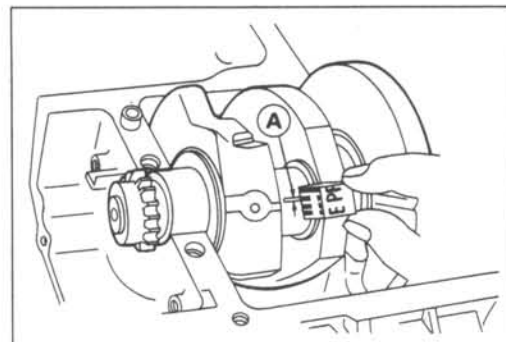

## 8-14 CRANKSHAFT / TRANSMISSION

Con-rod Big End Bore Diameter Marking	Crankpin Diameter Marking	Bearing Insert	
		Size Color	Part Number
None	○	Brown	92028-1713
None	None	color less	92028-1714
○	○		
○	None	Blue	92028-1712

### Crankshaft Main Bearing Insert/Journal Wear

- Using a plastigage (press gauge) [A], measure the bearing insert/journal [B] clearance.

#### NOTE

- Tighten the crankcase bolts to the specified torque (see Crankcase Assembly).
- Do not turn the crankshaft during clearance measurement.
- Journal clearance less than 0.025 mm can not be measured by plastigage, however, using genuine parts maintains the minimum standard clearance.

### Crankshaft Main Bearing Insert/Journal Clearance

**Standard:** 0.020 ~ 0.044 mm

**Service Limit:** 0.07 mm

- ★ If clearance is within the standard, no bearing replacement is required.
- ★ If clearance is between 0.045 mm and the service limit (0.07 mm), replace the bearing inserts with inserts painted blue [C]. Check insert/journal clearance with the plastigage. The clearance may exceed the standard slightly, but it must not be less than the minimum in order to avoid bearing seizure.
- ★ If clearance exceeds the service limit, measure the diameter of the crankshaft main journal.

### Crankshaft Main Journal Diameter

**Standard:** 32.984 ~ 33.000 mm

**Service Limit:** 32.96 mm




- ★ If any journal has worn past the service limit, replace the crankshaft with a new one.
- ★ If the measured journal diameters are not less than the service limit, but do not coincide with the original diameter markings on the crankshaft, make new marks on it.

### Crankshaft Main Journal Diameter Marks

**None** 32.984 ~ 32.994 mm

**1** 32.995 ~ 33.000 mm


□: Crankshaft Main Journal Diameter Marks, "1" mark or no mark.

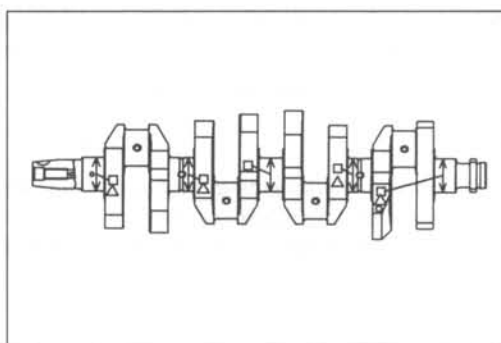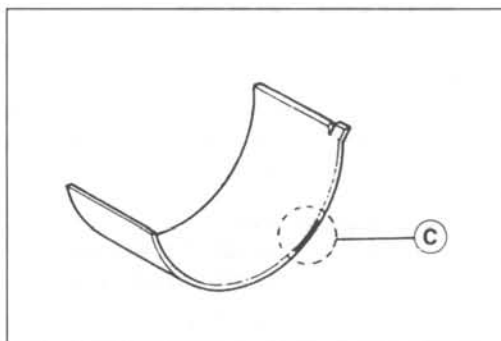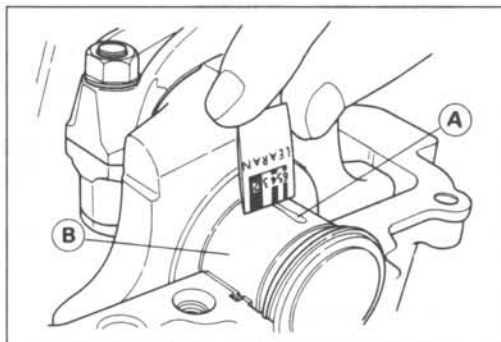

- Measure the main bearing bore diameter, and mark the upper crankcase half in accordance with the bore diameter.  
○: Crankcase Main Bearing Bore Diameter Marks, "○" mark or no mark.

**NOTE**

- Tighten the crankcase bolts to the specified torque (see Crankcase Assembly).
- The mark already on the upper crankcase half should almost coincide with the measurement.

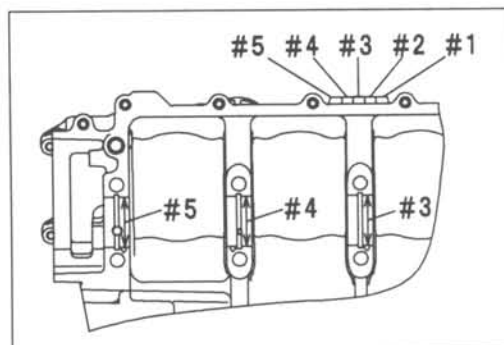

**Crankcase Main Bearing Bore Diameter Marks**

○	36.000 ~ 36.008 mm
None	36.009 ~ 36.016 mm

- Select the proper bearing insert in accordance with the combination of the crankcase and crankshaft coding.
- Install the new inserts in the crankcase halves and check insert/journal clearance with the plastigage.

Crankcase Main Bearing Bore Diameter Marking	Crankshaft Main Journal Diameter Marking	Bearing Insert*		
		Size Color	Part Number	Journal Nos.
○	1	Brown	92028-1868	1, 3, 5
			92028-1829	2, 4
None	1	Black	92028-1867	1, 3, 5
			92028-1828	2, 4
○	None	Blue	92028-1866	1, 3, 5
			92028-1827	2, 4


\*The bearing inserts for Nos. 1, 3 and 5 journals have an oil groove, respectively.

**Crankshaft Side Clearance**

- Insert a thickness gauge between the crankcase main bearing [A] and the crank web [B] at the No. 2 journal to determine clearance.
- ★ If the clearance exceeds the service limit, replace the crankcase halves as a set.

**CAUTION**

The upper and lower crankcase halves are machined at the factory in the assembled state, so the crankcase halves must be replaced as a set.

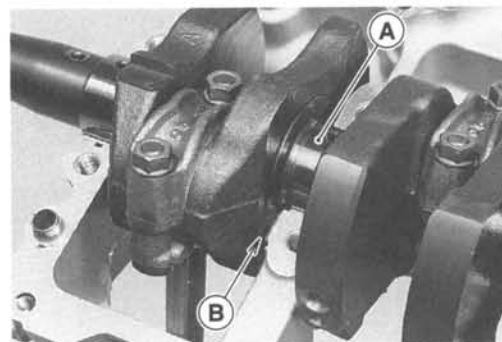

**Crankshaft Side Clearance**

Standard:	0.05 ~ 0.21 mm
Service Limit:	0.40 mm

## 8-16 CRANKSHAFT / TRANSMISSION


---

### *Crankshaft Runout*

- Measure the crankshaft runout.
- ★ If the measurement exceeds the service limit, replace the crankshaft.

#### **Crankshaft Runout**

**Standard:** TIR 0.02 mm or less  
**Service Limit:** TIR 0.05 mm

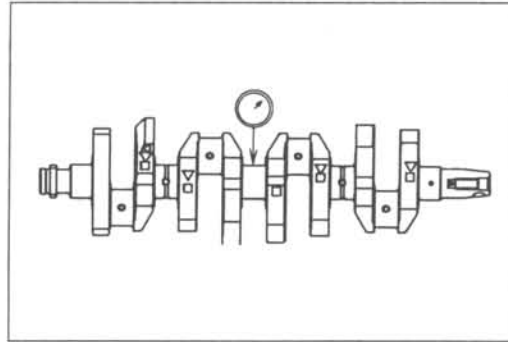



## Starter Motor Clutch


### Starter Motor Removal/Installation

- Refer to Alternator Rotor Removal and Installation in the Electrical System chapter.

### Starter Motor Assembly


- Be sure to install the one-way clutch [A] so that its flange [B] fits in the holder recess [C].
- Apply a non-permanent locking agent to the threads of the starter motor clutch bolts, and tighten them.

**Torque – Starter Motor Clutch Bolts: 12 N-m (1.2 kg-m, 104 in-lb)**

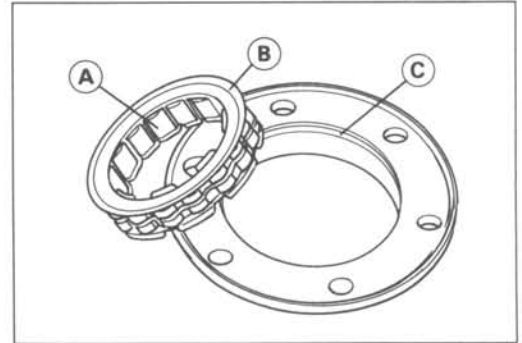

### Starter Clutch Inspection

- Remove:
  - Alternator Cover (see Electrical System chapter)
  - Starter Idle Gear
- Turn the starter clutch gear [A] by hand. The starter clutch gear should turn clockwise [B] freely, but should not turn counterclockwise [C].
- ★ If the clutch does not operate as it should or if it makes noise, disassemble the starter clutch, examine each part visually, and replace any worn or damaged parts.

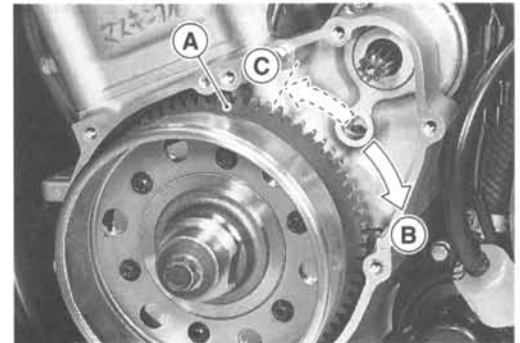


## 8-18 CRANKSHAFT / TRANSMISSION


### Transmission

#### Shift Pedal Removal


- Mark [A] the position of the shift lever [B] on the shift shaft so that it can be installed later in the same position.
- Remove:
  - Bolt [C]
  - Shift Lever

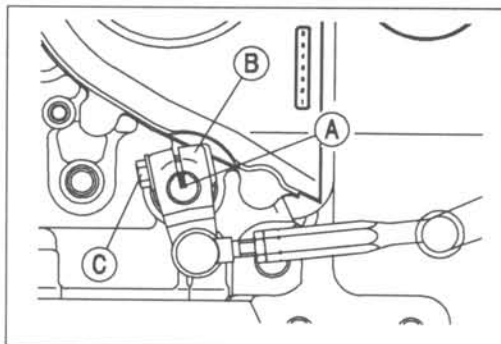

Bolts [A]  
Footpeg Bracket [B]

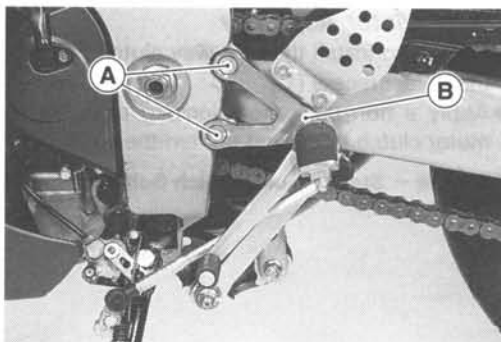

- Remove the bolt [A], footpeg [B], and shift pedal [C].

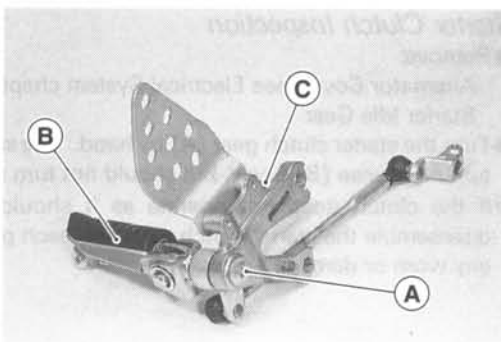

#### Shift Pedal Installation


- Install the shift pedal [A] so that the distance between the center of the shift pedal front end and the center line of the shift rod [B] is 0 ~ 5 mm by loosening the front and rear locknuts [C] and turning the rod.

#### NOTE

- The locknut next to the knurled portion of the rod has left-hand threads.


★ If necessary, adjust the pedal position from the standard position to suit you as follows.

- Loosen the front and rear rod locknuts.
- Turn the rod to adjust the pedal position.
- Tighten the locknuts securely.

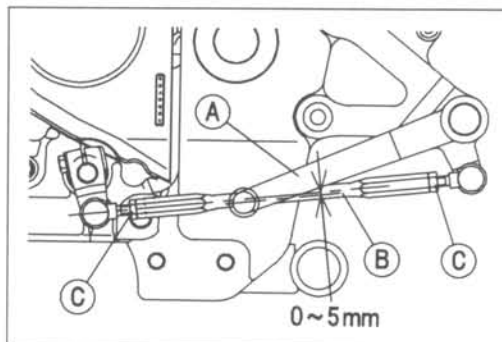


### External Shift Mechanism Removal

- Remove:
  - Engine Oil (drain, see Engine Lubrication System chapter)
  - Shift Pedal (see Shift Pedal Removal)
  - Clutch (see Clutch chapter)
  - Bolts [A], Oil Pipe Holders [B], Oil Pipe [C] and O-ring

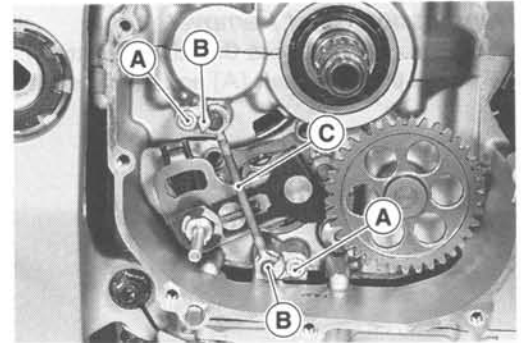

- Remove:
  - Shift Shaft [A]
  - Bolt [B]
  - Gear Positioning Lever [C] and Spring

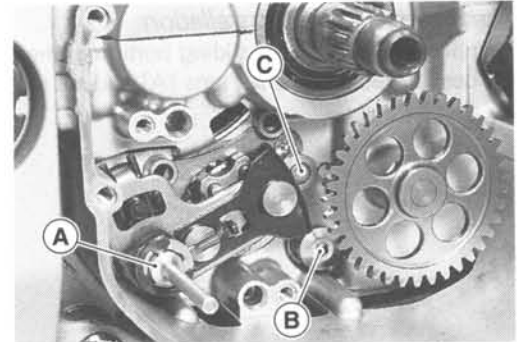


### External Shift Mechanism Installation

- Install the gear positioning lever [A] as shown.
  - Springs [B] Collar [C]
  - Bolt [D]
- Apply a non-permanent locking agent to the bolt and tighten it.
 


**Torque – Gear Positioning Lever Bolt: 12 N-m (1.2 kg-m, 104 in-lb)**
- Apply a non-permanent locking agent to the oil pipe holder bolts and tighten them.
 

**Torque – Oil Pipe Holder Bolts: 12 N-m (1.2 kg-m, 104 in-lb)**

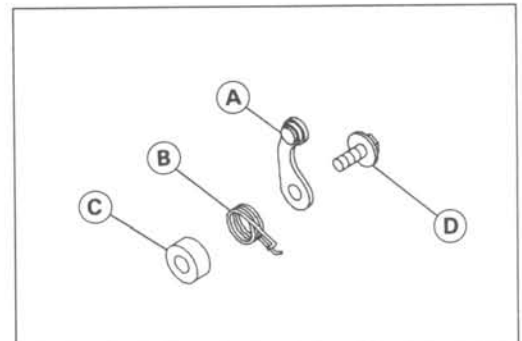

### External Shift Mechanism Inspection


- Examine the shift shaft [A] for any damage.
  - ★ If the shaft is bent, straighten or replace it.
  - ★ If the serration [B] are damaged, replace the shaft.
  - ★ If the springs [C] [D] are damaged in any way, replace them.
  - ★ If the shift mechanism arm [E] is damaged in any way, replace the arm.

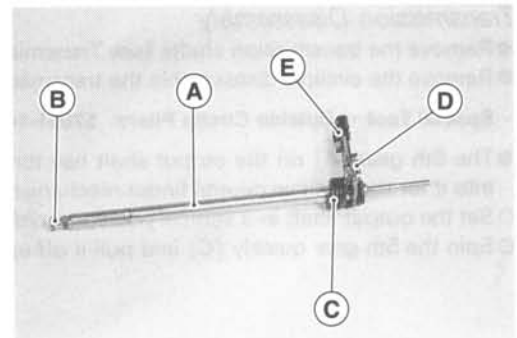

- Check the return spring pin [A] is not loose.
  - ★ If it is loose, unscrew it, apply a non-permanent locking agent to the threads, and tighten it.


**Torque – Shift Shaft Return Spring Pin: 29 N-m (3.0 kg-m, 22 ft-lb)**

- Check the neutral set lever [B] and its spring for breaks or distortion.
  - ★ If the lever or spring are damaged in any way, replace them.
- Visually inspect the shift drum cam [C].
  - ★ If they are badly worn or if they show any damage, replace it.

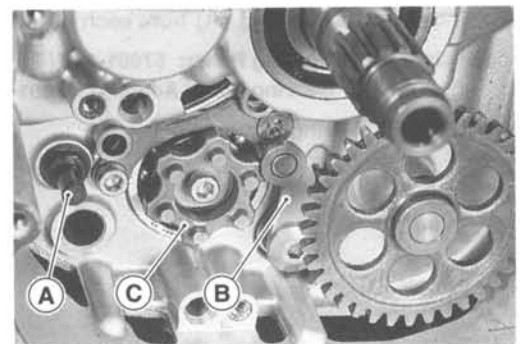


### Transmission Shaft Removal

- Split the crankcase (see Crankcase Splitting).
- Remove the drive shaft [A] and output shaft [B].

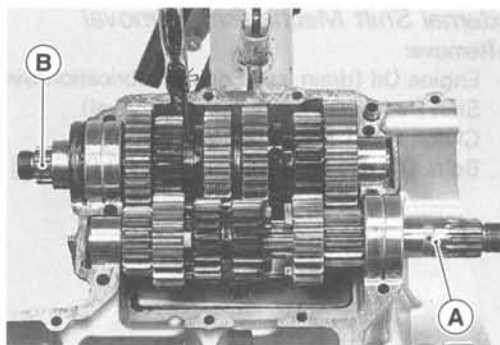


### Transmission Shaft Installation

- Apply engine oil to the sliding portion of the gears and bearings.
- Check to see that the set pins [A] and set rings [B] are in place.

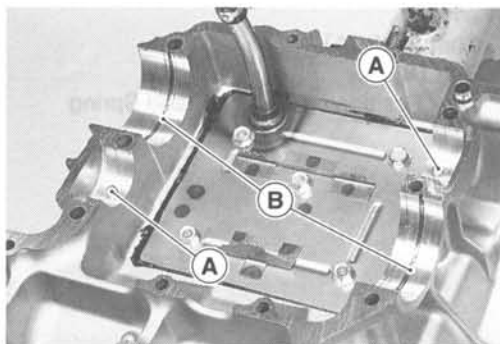

- Install the drive shaft and output shaft into the upper crankcase half.
- Apply engine oil to the sliding surfaces of the gears and bearings.
- The bearing set pins and rings must match properly with the holes or grooves in the bearing outer races. When they are properly matched, there is no clearance between the crankcase and the bearing outer races [A].

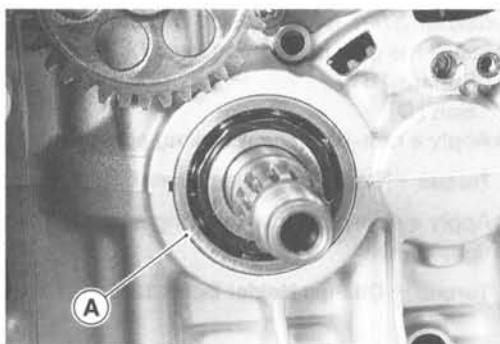


### Transmission Disassembly

- Remove the transmission shafts (see Transmission Shaft Removal).
- Remove the circlips, disassemble the transmission shafts.

**Special Tool – Outside Circlip Pliers: 57001-144**

- The 5th gear [A] on the output shaft has three steel balls assembled into it for the positive neutral finder mechanism. Remove the 5th gear.
- Set the output shaft in a vertical position holding the 3rd gear [B].
- Spin the 5th gear quickly [C] and pull it off upward.

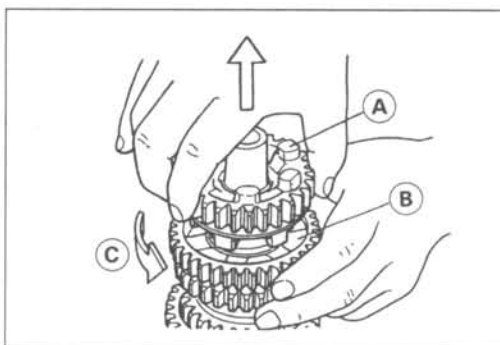


- Remove the ball bearing [A] from each shafts.

**Special Tool – Bearing Puller: 57001-135 [B]**


**Bearing Puller Adapter: 57001-317 [C]**

- Discard the bearing.

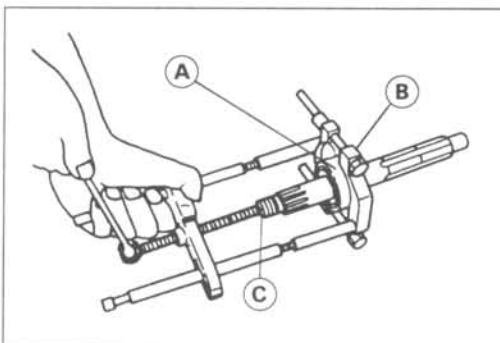


### Transmission Assembly

- Install the gear bushings [A] on the shaft with their oil holes [B] aligned with the shaft oil holes.

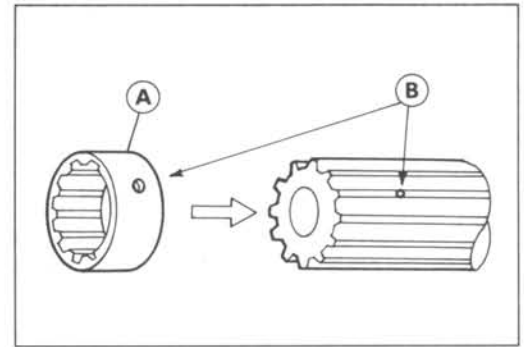

- The drive shaft gears can be recognized by size: the gear with the smallest diameter is 1st gear, and the largest one is 6th gear. Be sure that all parts are put back in the correct sequence and all circlips and washers are properly in place.
- Install the 3rd/4th gear onto the drive shaft with their holes aligned.
- The output shaft gears can be recognized by size: the gear with the largest diameter is 1st gear, and the smallest one is 6th gear. Be sure that all parts are put back in the correct sequence and all circlips and washers are properly in place.
- Install the 5th gear onto the output shaft with their holes aligned as shown.

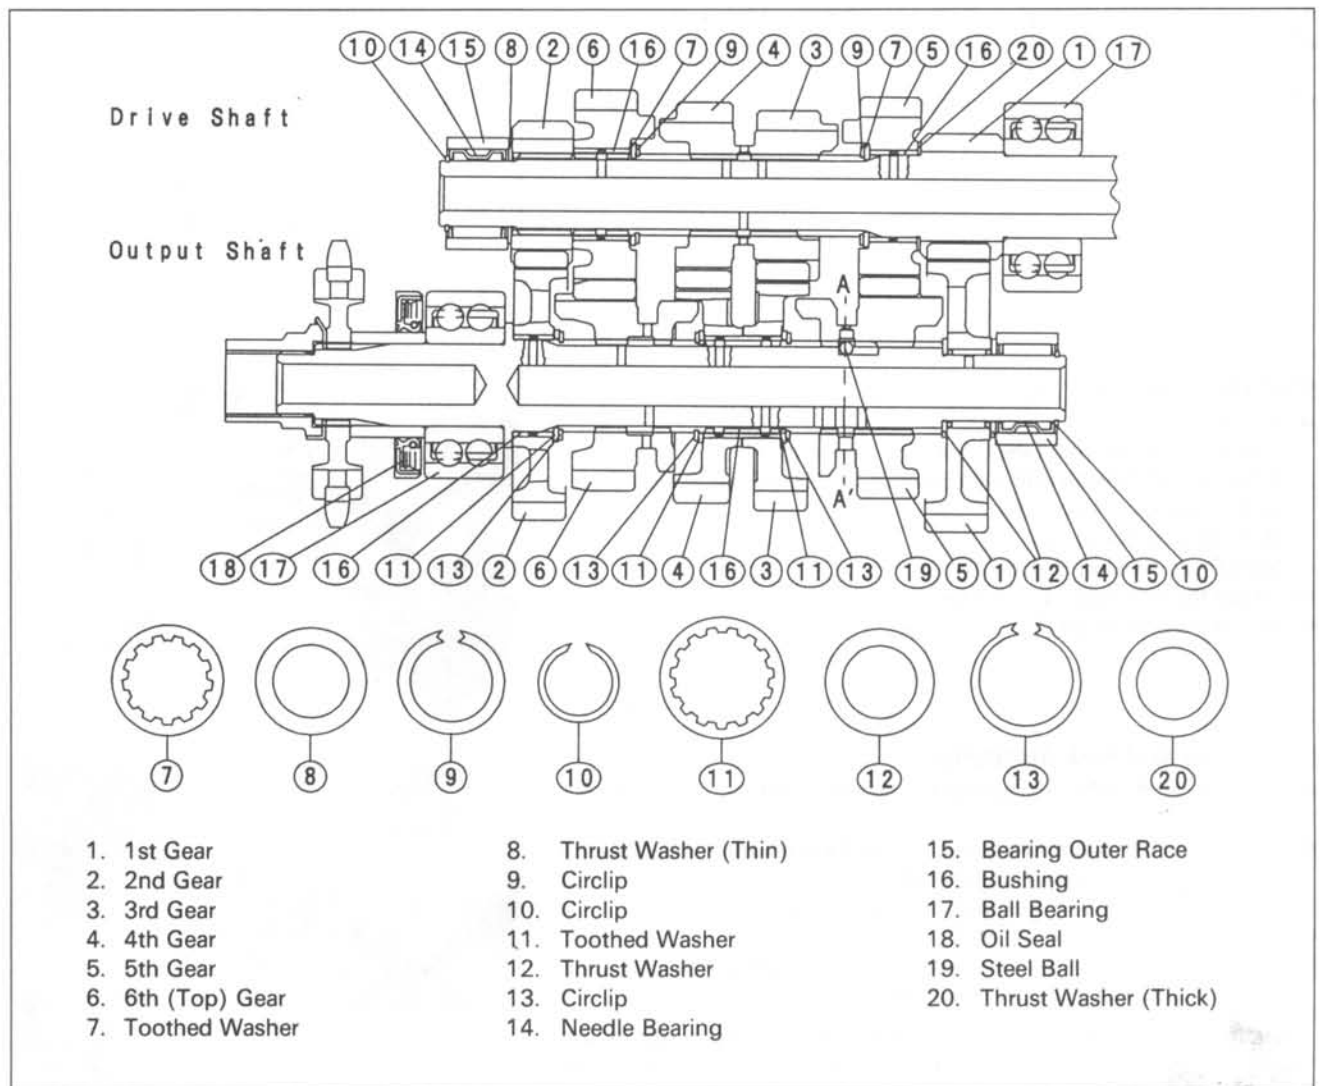


## 8-22 CRANKSHAFT / TRANSMISSION

- Fit the steel balls into the 5th gear holes as shown.  
View A – A' (see the output shaft illustration)  
[A] Gear (5th)  
[B] Shaft  
[C] Steel Balls


### CAUTION

**Do not apply grease to the steel balls to hold them in place. This will cause the positive neutral finder mechanism to malfunction.**

- Check the ball-locking effect that the 5th gear does not come out of the output shaft when moving it up and down by hand.

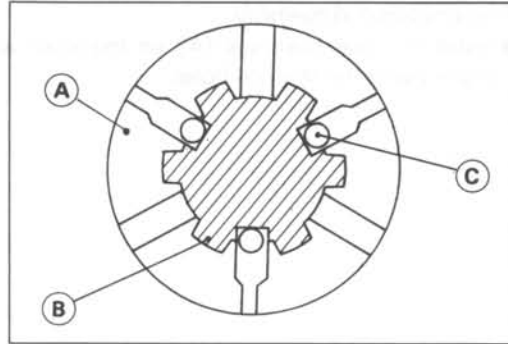


- Replace any circlip that were removed with new ones.
- Install the circlips [A] so that the opening is aligned with a spline groove [B].
- Check that each gear spins or slides freely on the transmission shafts without binding after assembly.

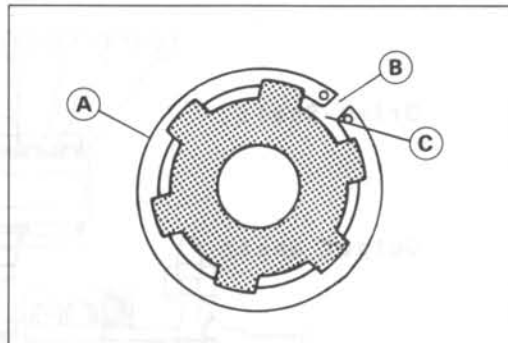

### Shift Drum and Fork Removal


- Remove:  
Lower Crankcase Half (see Crankcase Splitting)  
External Shift Mechanism (see External Shift Mechanism Removal)  
Gear Positioning Lever [A]  
Bolt [B] and Screw [C]  
Shift Drum Bearing Holder [D]
- Pull out the shift rods [E], and take off the shift forks.
- Pull out the shift drum [F].

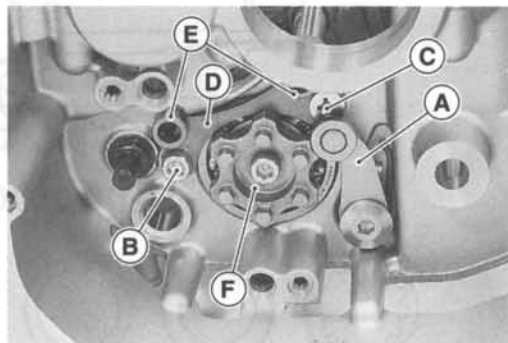

### Shift Drum and Fork Installation

- Install the shift rods [A], noting the groove position. The rods are identical.
- Position the one with shortest ears [B] on the drive shaft and place the pin in the center groove in the shift drum [C].
- The two forks [D] on the output shaft are identical.
- Install the forks as shown.
- Apply a non-permanent locking agent to the threads of the shift drum bearing holder bolt and screw, and tighten them.


**Torque – Shift Drum Bearing Holder Bolt: 12 N-m (1.2 kg-m, 104 in-lb)  
Shift Drum Bearing Holder Screw: 5.4 N-m (0.55 kg-m, 48 in-lb)**

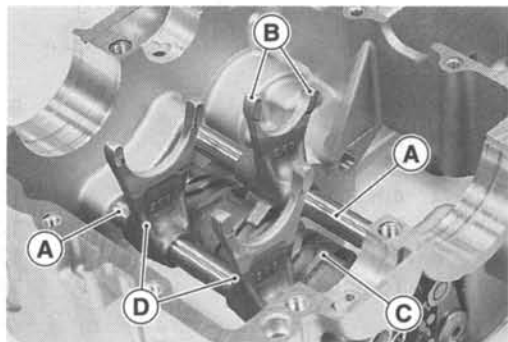

**Shift Drum Disassembly**

- Remove the shift drum (see Shift Drum and Fork Removal).
- While holding the shift drum with a vise, remove the shift drum cam holder bolt.

[A] Shift Drum Cam Holder Bolt  
[B] Dowel Pin

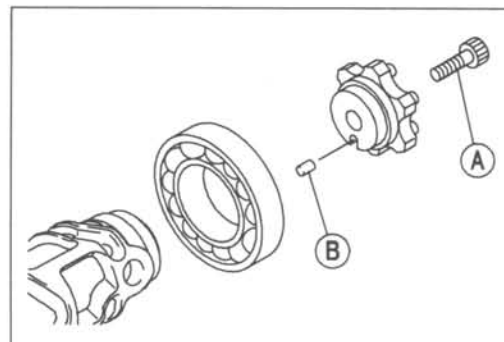**Shift Drum Assembly**


- Be sure to install the dowel pin.
- Apply a non-permanent locking agent to the threads of the shift drum cam holder bolt, and tighten it.

**Torque – Shift Drum Cam Holder Bolt: 12 N-m (1.2 kg-m, 104 in-lb)**

**Shift Fork Bending**

- Visually inspect the shift forks, and replace any fork that is bent. A bent fork could cause difficulty in shifting, or allow the transmission to jump out of gear when under power.

90° [A]

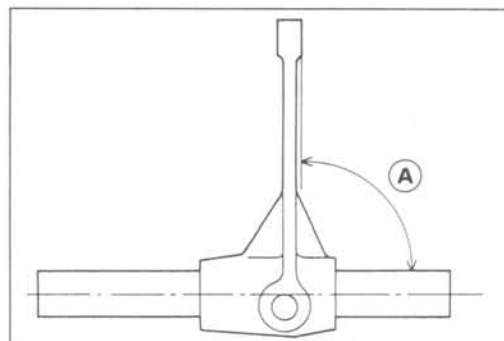**Shift Fork/Gear Groove Wear**

- Measure the thickness of the shift fork ears [A], and measure the width [B] of the gear grooves.
- ★ If the thickness of a shift fork ear is less than the service limit, the shift fork must be replaced.


**Shift Fork Ear Thickness**

**Standard:** 5.9 ~ 6.0 mm  
**Service Limit:** 5.8 mm

- ★ If the gear groove is worn over the service limit, the gear must be replaced.

**Gear Groove Width**

**Standard:** 6.05 ~ 6.15 mm  
**Service Limit:** 6.25 mm

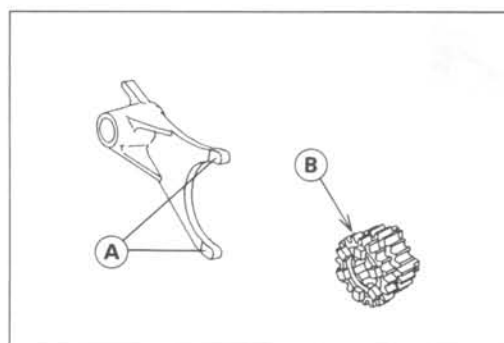

### *Shift Fork Guide Pin/Drum Groove Wear*

- Measure the diameter of each shift fork guide pin [A], and measure the width [B] of each shift drum groove.

★ If the guide pin on any shift fork is less than the service limit, the fork must be replaced.

#### **Shift Fork Guide Pin Diameter**

**Standard:** 6.9 ~ 7.0 mm


**Service Limit:** 6.8 mm

★ If any shift drum groove is worn over the service limit, the drum must be replaced.

#### **Shift Drum Groove Width**

**Standard:** 7.05 ~ 7.20 mm


**Service Limit:** 7.30 mm

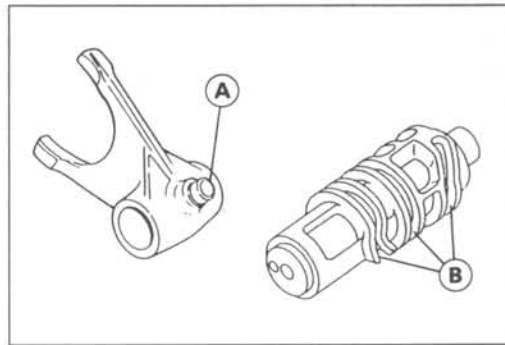

### *Gear Dog and Gear Dog Hole Damage*

- Visually inspect the gear dogs [A] and gear dog holes [B].

★ Replace any damaged gears or gears with excessively worn dogs or dog holes.

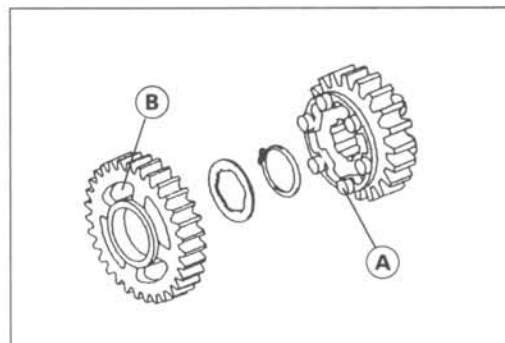




# Wheels / Tires

## Table of Contents

Exploded View .....	9-2
Specifications .....	9-3
Wheels (Rims) .....	9-4
Front Wheel Removal .....	9-4
Front Wheel Installation .....	9-4
Rear Wheel Removal .....	9-5
Rear Wheel Installation .....	9-5
Wheel Inspection .....	9-6
Axle Inspection .....	9-6
Balance Inspection .....	9-6
Balance Adjustment .....	9-6
Balance Weight Removal .....	9-7
Balance Weight Installation .....	9-7
Tires .....	9-9
Air Pressure Inspection/Adjustment .....	9-9
Tire Inspection .....	9-9
Tire Removal .....	9-9
Tire Installation .....	9-10
Repair .....	9-11
Hub Bearing .....	9-12
Hub Bearing Removal .....	9-12
Hub Bearing Installation .....	9-12
Hub Bearing Inspection .....	9-12

## 9-2 WHEELS / TIRES

### Exploded View

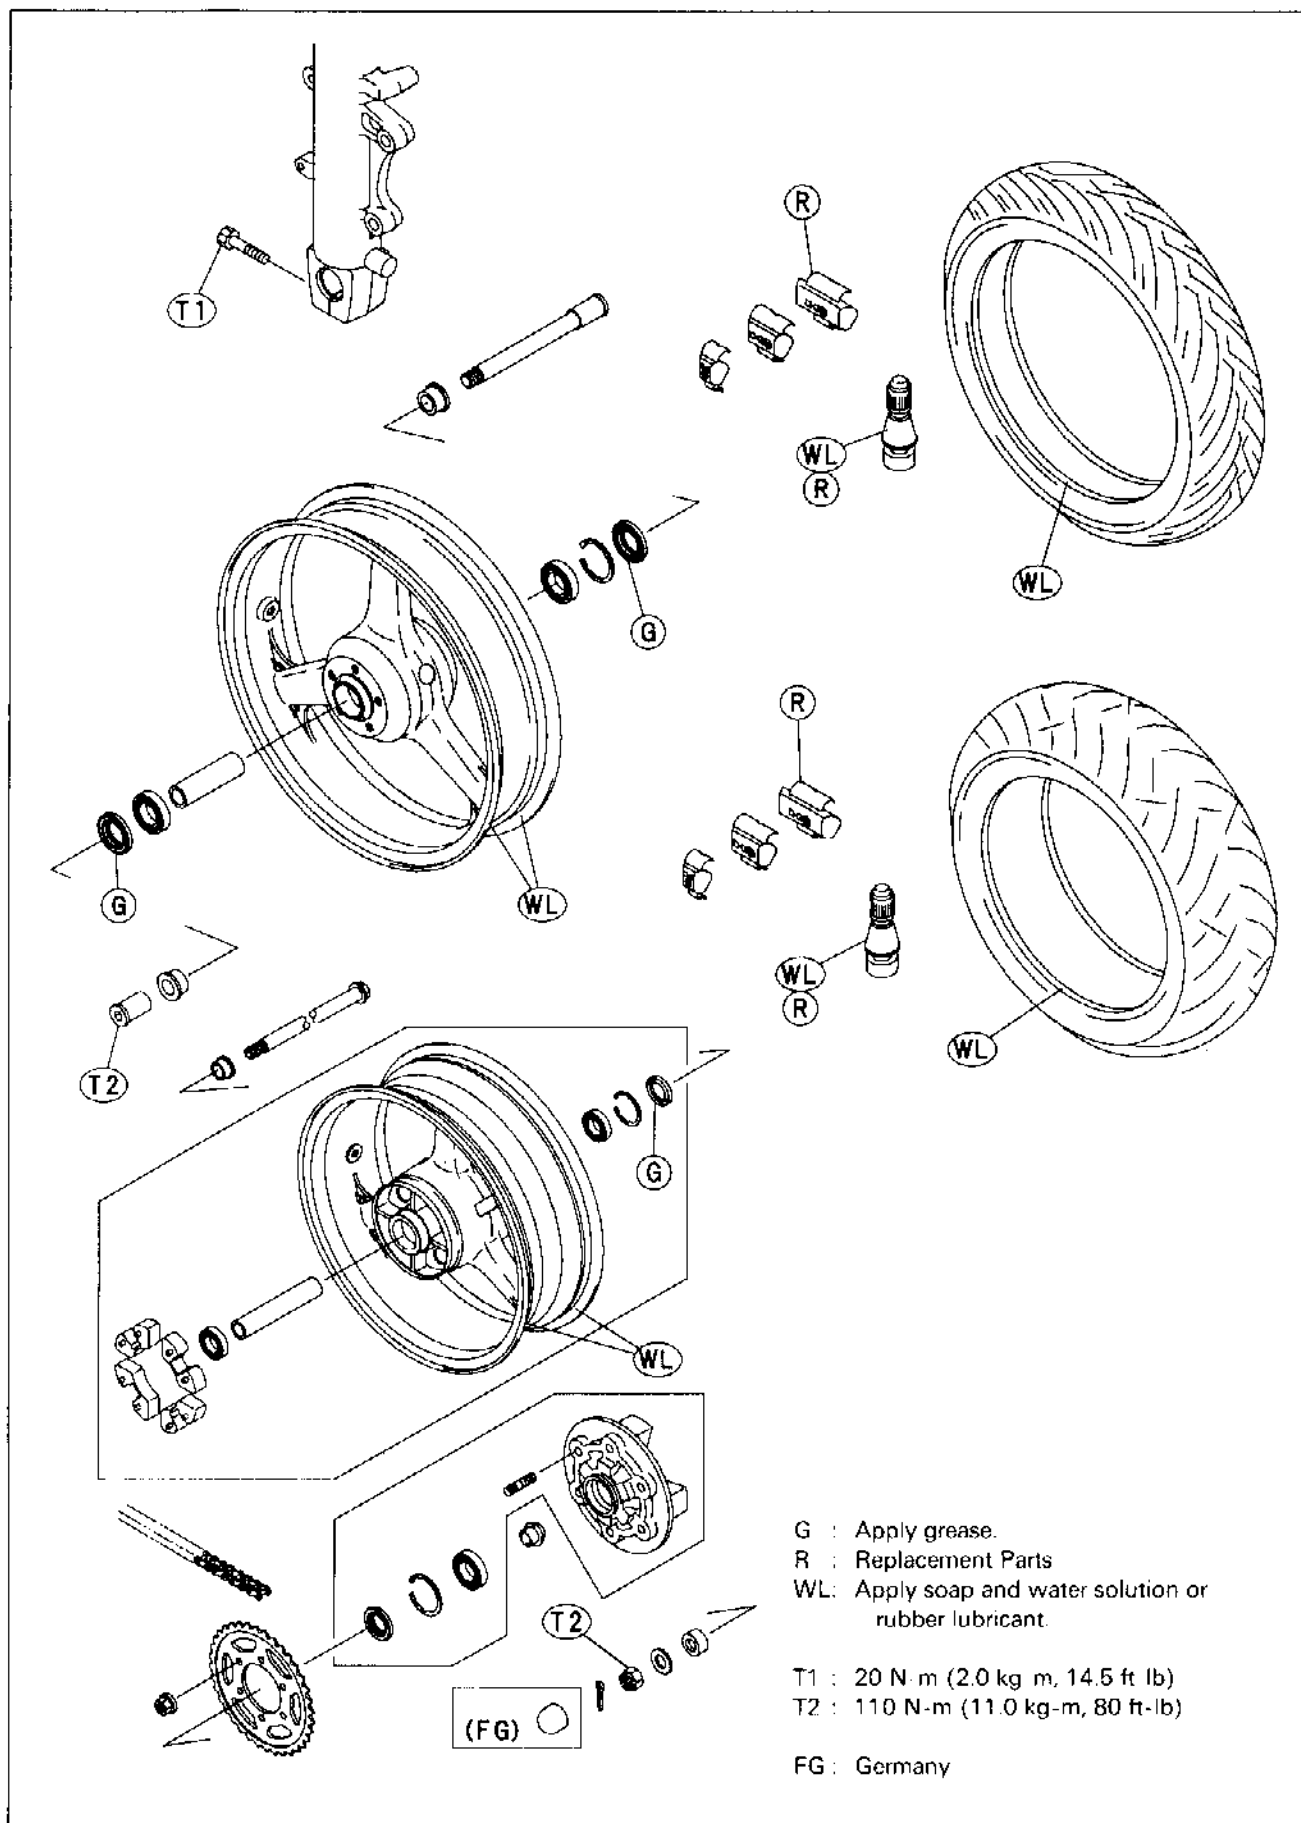

## Specifications

Item		Standard	Service Limit
<b>Wheels (Rims):</b>			
Rim runout:	Axial	---	0.5 mm
	Radial	---	0.8 mm
Axle runout/100 mm		0.05 mm or less	0.2 mm
Wheel balance		10 g or less	
Balance weights		10 g, 20 g, 30 g	---
<b>Tires:</b>			
Air pressure: (when cold)			
	Front	Up to 184 kg (406 lb) load: 250 kPa (2.5 kg/cm <sup>2</sup> 36 psi)	---
	Rear	Up to 184 kg (406 lb) load: 290 kPa (2.9 kg/cm <sup>2</sup> 41 psi)	---
Tread depth:			
	Front	BRIDGESTONE: 4.3 mm DUNLOP: 4.4 mm	1 mm (FG, AR, ST) 1.6 mm
	Rear	BRIDGESTONE: 6.2 mm DUNLOP: 5.4 mm	Up to 130 km/h (80 mph): 2 mm Over 130 km/h (80 mph): 3 mm
Standard tires:		Make, Type	Size
	Front	DUNLOP, D204FW (tubeless) BRIDGESTONE, BATTLAX BT-56F RADIAL F MICHELIN A89X PIRELLI MTR01 METZELER ME Z1 FRONT	120/70 ZR17(58 W)
	Rear	DUNLOP, D204T (tubeless) BRIDGESTONE, BATTLAX BT-56R RADIAL F MICHELIN M89X PIRELLI MTR02 METZELER ME Z1	180/55 ZR17 (73 W)

Special Tools — Jack: 57001-1238

Inside Circlip Pliers: 57001-143

Bearing Driver Set: 57001-1129

Bearing Remover Shaft,  $\phi 13$ : 57001-1377Bearing Remover Head,  $\phi 20 \times \phi 22$ : 57001-1293


## 9-4 WHEELS / TIRES

### Wheels (Rims)

#### Front Wheel Removal


● Remove:

- Lower Fairing (see Frame chapter)
- Inner Fairing
- Brake Caliper Mounting Bolts [A]

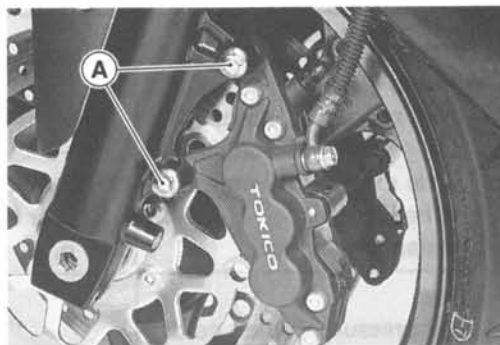

● Loosen:

- Right Side Axle Clamp Bolts [A]
- Axle [B]

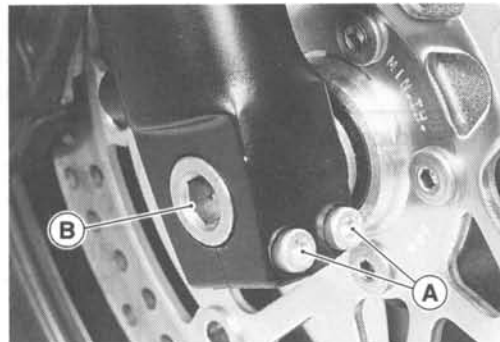

- Raise the front wheel off the ground.

**Special Tool – Jack: 57001-1238**

- Pull out the axle to the right and drop the front wheel out of the forks.

#### CAUTION

Do not lay the wheel down on one of the discs. This can damage or warp the disc. Place blocks under the wheel so that the disc does not touch the ground.

#### Front Wheel Installation

#### NOTE


- The direction of the wheel rotation [A] is shown by an arrow [B] on the wheel spoke.

- Check the wheel rotation mark on the front wheel and install it.
- Fit the collars on the both sides of the hub.
- Tighten the axle nut and axle clamp bolt.

**Torque – Front Axle Nut: 110 N-m(11.0 kg-m, 80 ft-lb)**

**Front Axle Clamp Bolts: 20 N-m(2.0 kg-m, 14.5 ft-lb)**

- Install the front brake caliper (see Brakes chapter).
- Check the front brake.

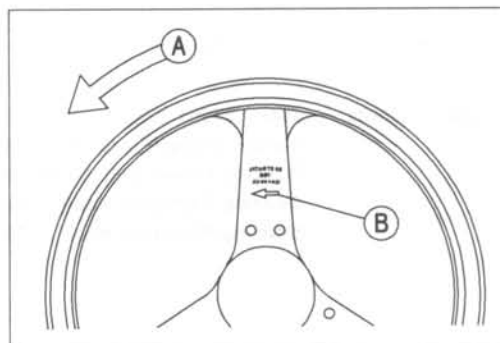

#### ⚠ WARNING

Do not attempt to drive the motorcycle until a full brake lever is obtained by pumping the brake lever until the pads are against the disc. The brake will not function on the first application of the lever if this is not done.

**Rear Wheel Removal**

- Using the jack [A], raise the rear wheel off the ground.

**Special Tool – Jack: 57001-1238**

- Remove:
  - Cotter Pin [A]
  - Axle Nut [B]
  - Axle [C]

- Remove the drive chain [A] from the rear sprocket toward the left.
- Move the rear wheel back and remove the wheel from the rear caliper.
- Remove the rear wheel.

**CAUTION**

Do not lay the wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so that the disc does not touch the ground.

**Rear Wheel Installation**




- Engage the drive chain with the rear sprocket.
- Install the caliper bracket [A] onto the swingarm stop [B].
- Insert the axle from the right side of the wheel, and tighten the axle nut.

**Torque – Rear Axle Nut: 110 N-m (11.0 kg-m, 80 ft-lb)**

- Adjust the drive chain slack after installation (see Final Drive chapter).
- Check the rear brake.

**⚠WARNING**

Do not attempt to drive the motorcycle until a full brake pedal is obtained by pumping the brake pedal until the pads are against the disc. The brake will not function on the first application of the pedal if this is not done.

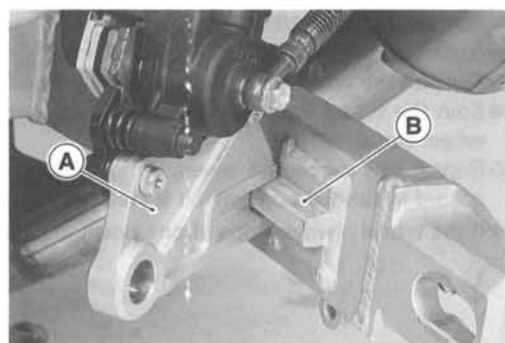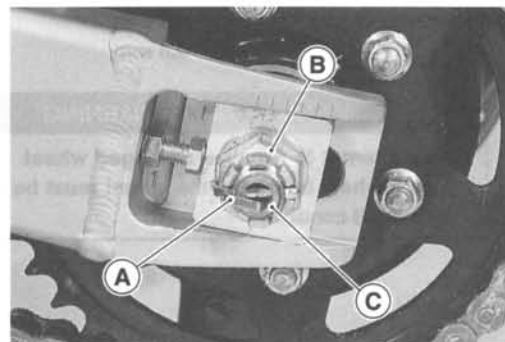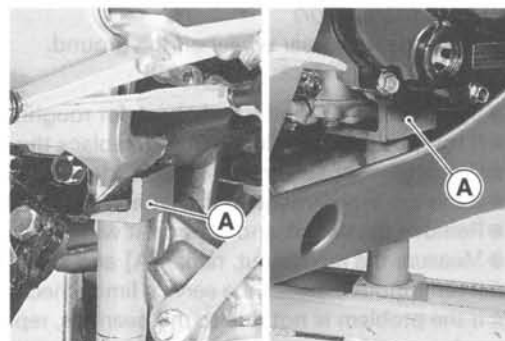

### Wheel Inspection

- Raise the front/rear wheel off the ground.

**Special Tool – Jack: 57001-1238**


- Spin the wheel lightly, and check for roughness or binding.
- ★ If roughness or binding is found, replace the hub bearings.
- Inspect the wheel for small cracks, dents, bending, or warp.
- ★ If there is any damage to the wheel, replace the wheel.
- Remove the wheel, and support it without the tire by the axle.
- Measure the rim runout, radial [A] and axial [B], with a dial gauge.
- ★ If rim runout exceeds the service limit, check the hub bearings.
- ★ If the problem is not due to the bearings, replace the wheel.

#### Rim Runout

**Service Limit:** Axial 0.5 mm  
Radial 0.8 mm

#### ⚠ WARNING

Never attempt to repair a damaged wheel. If there is any damage besides wheel bearings, the wheel must be replaced to insure safe operational condition.

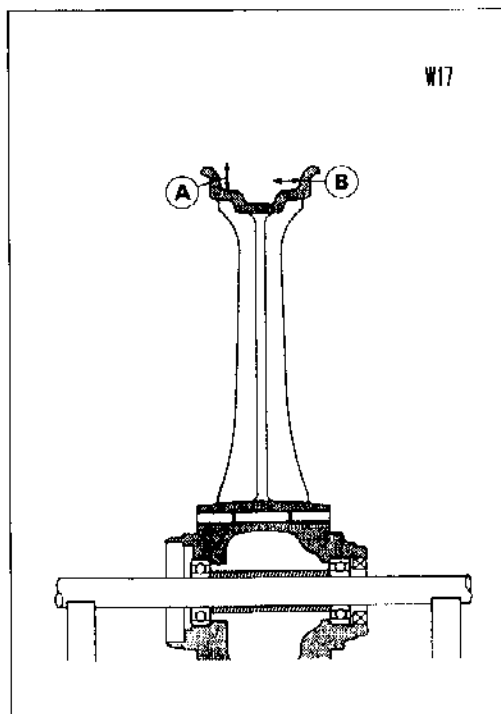


### Axle Inspection

- Visually inspect the front and rear axle for damages.
- ★ If the axle is damaged or bent, replace it.
- Measure the axle runout with a dial gauge.
- ★ If axle runout exceeds the service limit, replace the axle.


#### Axle Runout/100 mm

**Standard:** 0.05 mm or less  
**Service Limit:** 0.2 mm

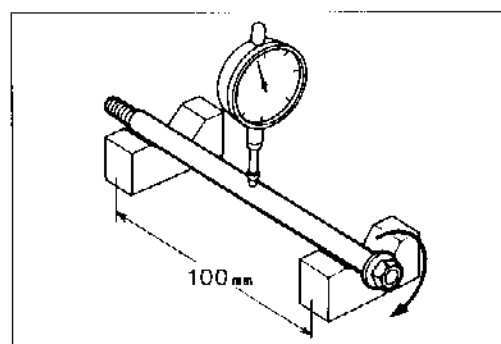


### Balance Inspection

- Remove the wheel.
- Support the wheel so that it can be spun freely.
- Spin the wheel lightly, and mark [A] the wheel at the top when the wheel stops.
- Repeat this procedure several times. If the wheel stops of its own accord in various positions, it is well balanced.
- ★ If the wheel always stops in one position, adjust the wheel balance.

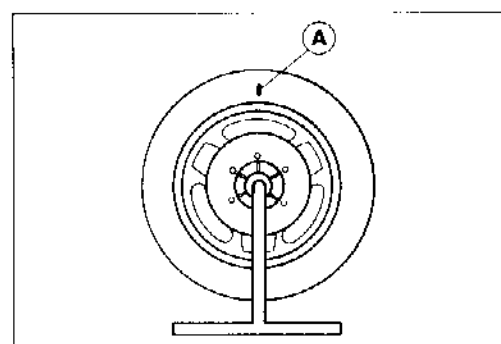

### Balance Adjustment

- If the wheel always stops in one position, provisionally attach a balance weight [A] on the rim at the marking using adhesive tape.
- Rotate the wheel ¼ turn [B], and see whether or not the wheel stops in this position. If it does, the correct balance weight is being used.
- ★ If the wheel rotates and the weight goes up, replace the weight with the next heavier size. If the wheel rotates and the weight goes down, replace the weight with the next lighter size. Repeat these steps until the wheel remains at rest after being rotated ¼ turn.
- Rotate the wheel another ¼ turn and then another ¼ turn to see if the wheel is correctly balanced.

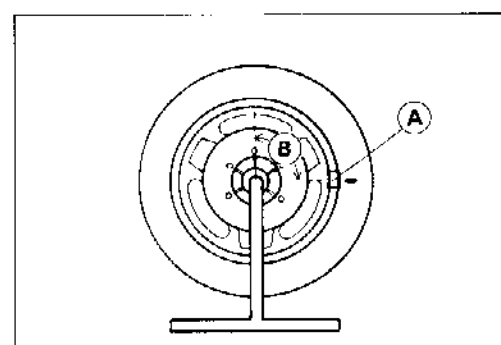

- Repeat the entire procedure as many times as necessary to achieve correct wheel balance.
- Permanently install the balance weight.


#### Balance Weight

Part Number	Weight(grams)
41075-1014	10
41075-1015	20
41075-1016	30

#### Balance Weight Removal


(a) When the tire is not on the rim.

- Push the blade portion toward the outside with a regular tip screw driver, and slip the weight off the rim flange.
- Discard the used balance weight.

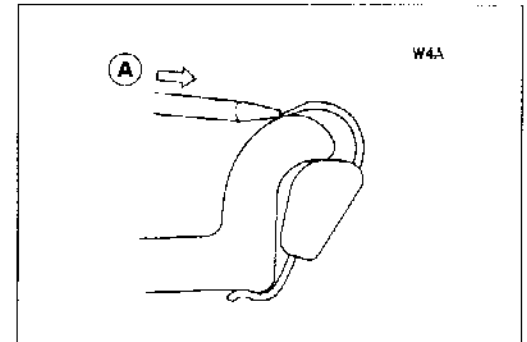

(b) When the tire is on the rim.

- Pry [A] the balance weight off the rim flange using a regular tip screw driver as shown in the figure.
- Insert a tip of the screw driver between the tire bead [B] and weight blade [C] until the end of the tip reaches the end of the weight blade.
- Push the driver grip toward the tire so that the balance weight slips off the rim flange.
- Discard the used balance weight.

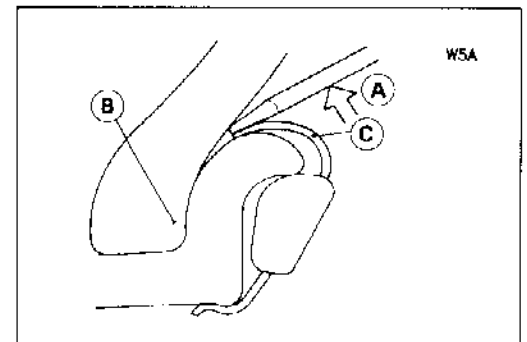

#### Balance Weight Installation

- Check if the weight portion has any play on the blade-and-clip plate.
- ★ If it does, discard it.

#### ⚠ WARNING

If the balance weight has any play on the rim flange, the blade and/or clip have been stretched. Replace the loose balance weight. Do not reuse used balance weight. Unbalanced wheels can create an unsafe riding condition.

- Lubricate the balance weight blade, tire bead, and rim flange with a soap and water solution or rubber lubricant. This helps the balance weight slip onto the rim flange.

#### CAUTION


Do not lubricate the tire bead with engine oil or petroleum distillates because they will deteriorate the tire.

## 9-8 WHEELS / TIRES


- Install the balance weight on the rim.
- Slip the weight on the rim flange by pushing or lightly hammering the weight in the direction shown in the figure.
- Check that the blade and weight seat fully on the rim flange, and that the clip is hooked over the rim ridge and reaches rim flat portion.

### Installing Balance Weight

(a) Press or lightly hammer the weight in.

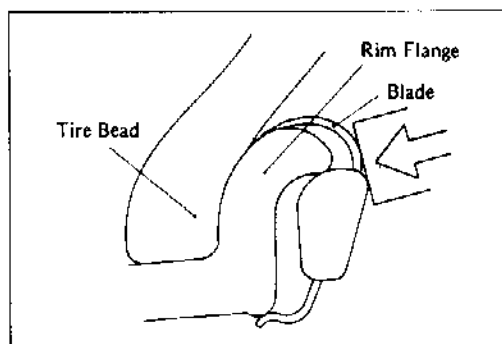


(b) Installation completed.

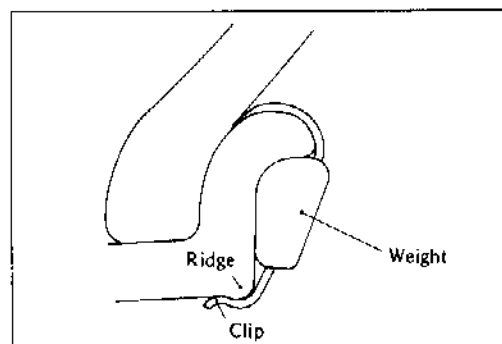

- When required total weight exceeds 20g, install balance weight at both sides of rim flange as shown.

Required Total Weight	Weight Selection	
	One Side [A]	Other Side [B]
20g	10g	10g
30g	20g	10g
40g	20g	20g
50g	30g	20g
60g	30g	30g
70g	20g + 20g	30g
80g	20g + 20g	20g + 20g
90g	20g + 30g	20g + 20g

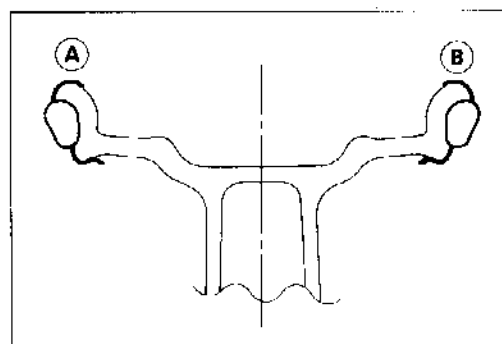



## Tires


### Air Pressure Inspection/Adjustment

- Measure the tire air pressure with an air pressure gauge [A] when the tires are cold (that is, when the motorcycle has not been ridden more than a mile during the past 3 hours).

★ Adjust the tire air pressure according to the specifications if necessary.

#### Air Pressure (when cold)

Front	Up to 184 kg (406 lb)	250 kPa (2.5 kg/cm <sup>2</sup> , 36 psi)
Rear	Up to 184 kg (406 lb)	290 kPa (2.9 kg/cm <sup>2</sup> , 41 psi)

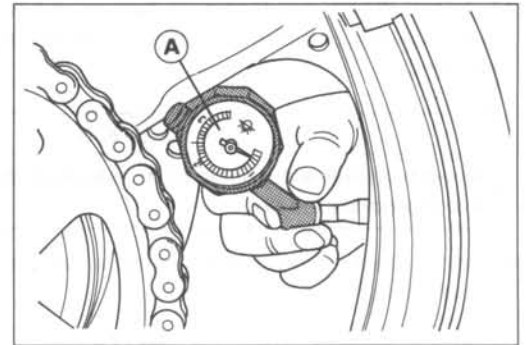


### Tire Inspection

As the tire tread wears down, the tire becomes more susceptible to puncture and failure. An accepted estimate is that 90 % of all tire failures occur during the last 10 % of tread life (90 % worn). So it is false economy and unsafe to use the tires until they are bald.

- Remove any imbedded stones or other foreign particles from the tread.
- Visually inspect the tire for cracks and cuts, replacing the tire in case of damage. Swelling or high spots indicate internal damage, requiring tire replacement.
- Measure the tread depth at the center of the tread with a depth gauge [A]. Since the tire may wear unevenly, take measurement at several places.

★ If any measurement is less than the service limit, replace the tire.

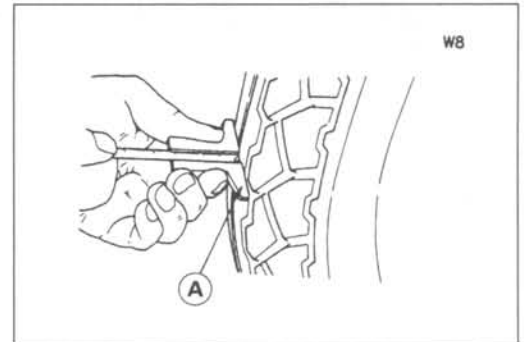

#### Tread Depth

##### Front:

Standard:	4.3 mm (BRIDGESTONE) 4.4 mm (DUNLOP)
Service Limit:	1 mm

##### Rear:

Standard:	6.2 mm (BRIDGESTONE) 5.4 mm (DUNLOP)
Service Limit:	2 mm (Up to 130 km/h) 3 mm (Over 130 km/h)

#### ⚠ WARNING


To ensure safe handling and stability, use only the recommended standard tires for replacement, inflated to the standard pressure.

#### NOTE

- Most countries may have their own regulations a minimum tire tread depth: be sure to follow them.
- Check and balance the wheel when a tire is replaced with a new one.

### Tire Removal

- Remove:
  - Wheel (see Front Wheel Removal, Rear Wheel Removal)
  - Disc (s)
  - Valve Core (let out the air)
- To maintain wheel balance, mark the valve stem position on the tire with chalk so that the tire can be reinstalled in the same position.
  - Chalk Mark or Yellow Mark [A]
  - Air Valve [B]
  - Align [C]

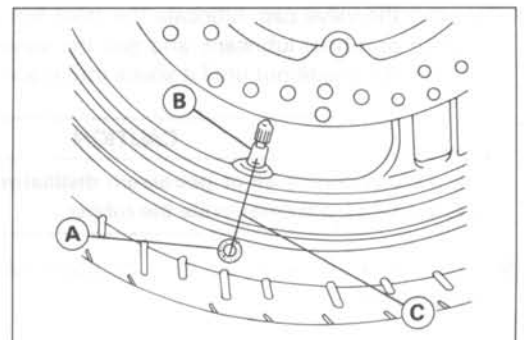

## 9-10 WHEELS / TIRES

- Lubricate the tire beads and rim flanges on both sides with a soap and water solution or rubber lubricant. This helps the tire beads slip off the rim flanges.

### CAUTION

**Never lubricate with engine oil or petroleum distillates because they will deteriorate the tire.**

- Remove the tire from the rim using a suitable commercially available tire changer.

### NOTE

- *The tires cannot be removed with hand tools because they fit the rims too tightly.*

### Tire Installation


- Inspect the rim and tire, and replace them if necessary.
- Clean the sealing surfaces of the rim and tire, and smooth the sealing surfaces of the rim with a fine emery cloth if necessary.
- Remove the air valve and discard it.

### CAUTION

**Replace the air valve whenever the tire is replaced.  
Do not reuse the air valve.**

- Install a new valve in the rim.

- |                |                |                  |
|----------------|----------------|------------------|
| [A] Valve Cap  | [C] Stem Seal  | [E] Valve Seat   |
| [B] Valve Core | [D] Valve Stem | [F] Valve Opened |

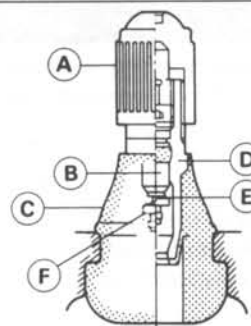


- Remove the valve cap, lubricate the stem seal with a soap and water solution or rubber lubricant, and pull the valve stem [A] through the rim from the inside out until it snaps into place.

### CAUTION

**Do not use engine oil or petroleum distillates to lubricate the stem because they will deteriorate the rubber.**


- Apply a soap and water solution, or rubber lubricant to the rim flange and tire beads.

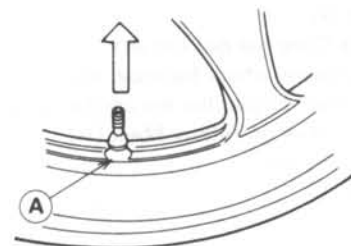

- Check the tire rotation mark on the front and rear tires and install them on the rim accordingly.

### NOTE



- The direction of the tire rotation [A] is shown by an arrow [B] on the tire sidewall.

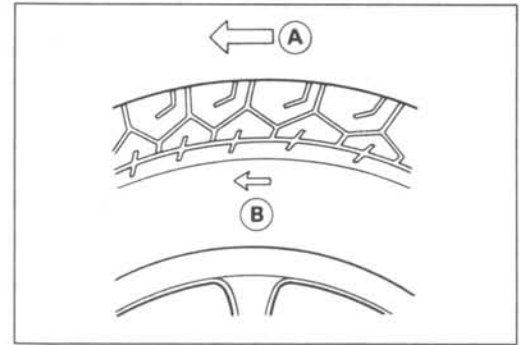

- Position the tire on the rim so that the valve [A] is at the tire balance mark [B] (the chalk mark made during removal, or the yellow paint mark on a new tire).
- Install the tire on the rim using a suitable commercially available tire changer.
- Lubricate the tire beads and rim flanges with a soap and water solution or rubber lubricant to help seat the tire beads in the sealing surfaces of the rim while inflating the tire.
- Center the rim in the tire beads, and inflate the tire with compressed air until the tire beads seat in the sealing surfaces.

### ⚠ WARNING

Be sure to install the valve core whenever inflating the tire, and do not inflate the tire to more than 400 kPa (4.0 kg/cm<sup>2</sup>, 57 psi). Overinflation can explode the tire with possibility of injury and loss of life.

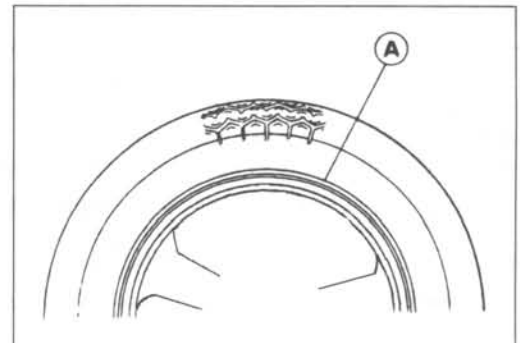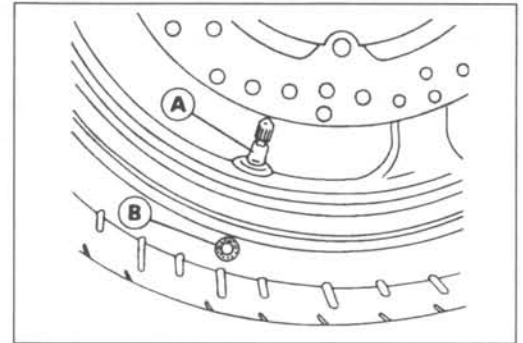

- Check to see that the rim lines [A] on both sides of the tire sidewalls are parallel with the rim flanges.
- ★ If the rim flanges and tire sidewall rim lines are not parallel, remove the valve core.
- Lubricate the rim flanges and tire beads.
- Install the valve core and inflate the tire again.
- After the tire beads seat in the rim flanges, check for air leaks.
- Inflate the tire slightly above standard inflation.
- Use a soap and water solution or submerge the tire, and check for bubbles that would indicate leakage.
- Adjust the air pressure to the specified pressure.
- Install the brake disc(s) so that the disc rotation mark aligns with the tire rotation.
- Adjust the wheel balance.

### Repair

Currently two types of repair for tubeless tires have come into wide use. One type is called a temporary (external) repair which can be carried out without removing the tire from the rim, and the other type is called permanent (internal) repair which requires tire removal. It is generally understood that higher running durability is obtained by permanent (internal) repairs than by temporary (external) ones. Also, permanent (internal) repairs have the advantage of permitting a thorough examination for secondary damage not visible from external inspection of the tire. For these reasons, Kawasaki does not recommend temporary (external) repair. Only appropriate permanent (internal) repairs are recommended. Repair methods may vary slightly from make to make. Follow the repair methods indicated by the manufacturer of the repair tools and materials so that safe results can be obtained.


## Hub Bearing

### Hub Bearing Removal

- Remove the wheel, and take out the following.
  - Collars
  - Coupling (out of rear hub)
  - Grease Seals
  - Circlips

**Special Tool – Inside Circlip Pliers: 57001-143**

- Take the bearings [A] out of the hub.

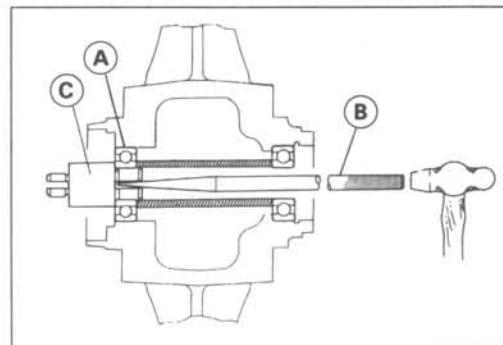

### CAUTION

Do not lay the wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so that the disc does not touch the ground.

**Special Tools – Bearing Remover Shaft,  $\phi 13$ : 57001-1377 [B]**  
**Bearing Remover Head,  $\phi 20 \times \phi 22$ : 57001-1293 [C]**


### Hub Bearing Installation

- Before installing the wheel bearings, blow any dirt or foreign particles out of the hub with compressed air to prevent contamination of the bearings.
- Replace the bearings with new ones.
- Press in each right the bearing [A] until they are bottomed.

**Special Tool – Bearing Driver Set: 57001-1129 [B]**

### NOTE

- Install the bearings so that the marked side faces out.

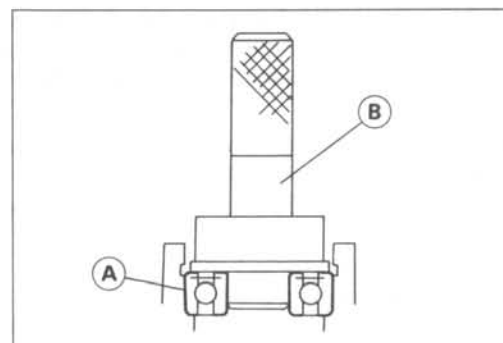


- Replace the circlips with new ones.

**Special Tool – Inside Circlip Pliers: 57001-143**

- Replace the grease seals with new ones.
- Press in the grease seals [A] so that the seal surface is flush [B] with the end of the hole.
- Apply high temperature grease to the grease seal lips.

**Special Tool – Bearing Driver Set: 57001-1129 [C]**

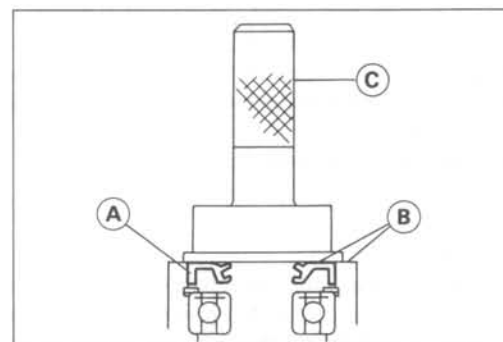


### Hub Bearing Inspection

### NOTE

- It is not necessary to remove any bearings for inspection. If any bearings are removed, they will need to be replaced with new ones.

- Spin it by hand to check its condition.
- ★ If it is noisy, does not spin smoothly, or has any rough spots, it must be replaced.
- Examine the bearing seal for tears or leakage.
- ★ If the seal is torn or is leaking, replace the bearing.

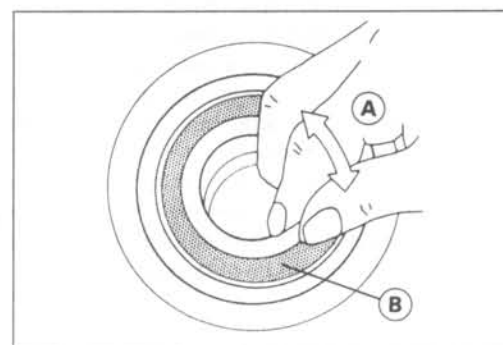


# Final Drive

## Table of Contents

Exploded View .....	10-2
Specifications .....	10-3
Drive Chain.....	10-4
Slack Inspection.....	10-4
Slack Adjustment.....	10-4
Wheel Alignment Inspection Adjustment .....	10-4
Drive Chain Wear Inspection.....	10-5
Lubrication .....	10-6
Drive Chain Removal .....	10-6
Drive Chain Installation .....	10-7
Sprocket, Coupling .....	10-8
Engine Sprocket Removal .....	10-8
Engine Sprocket Installation.....	10-8
Rear Sprocket Removal .....	10-9
Rear Sprocket Installation.....	10-9
Sprocket Wear Inspection .....	10-9
Rear Sprocket Warp Inspection.....	10-9
Coupling Bearing Removal .....	10-9
Coupling Bearing Installation.....	10-10
Coupling Installation .....	10-10
Coupling Bearing Inspection and Lubrication.....	10-10
Damper Inspection .....	10-11

## 10-2 FINAL DRIVE

### Exploded View

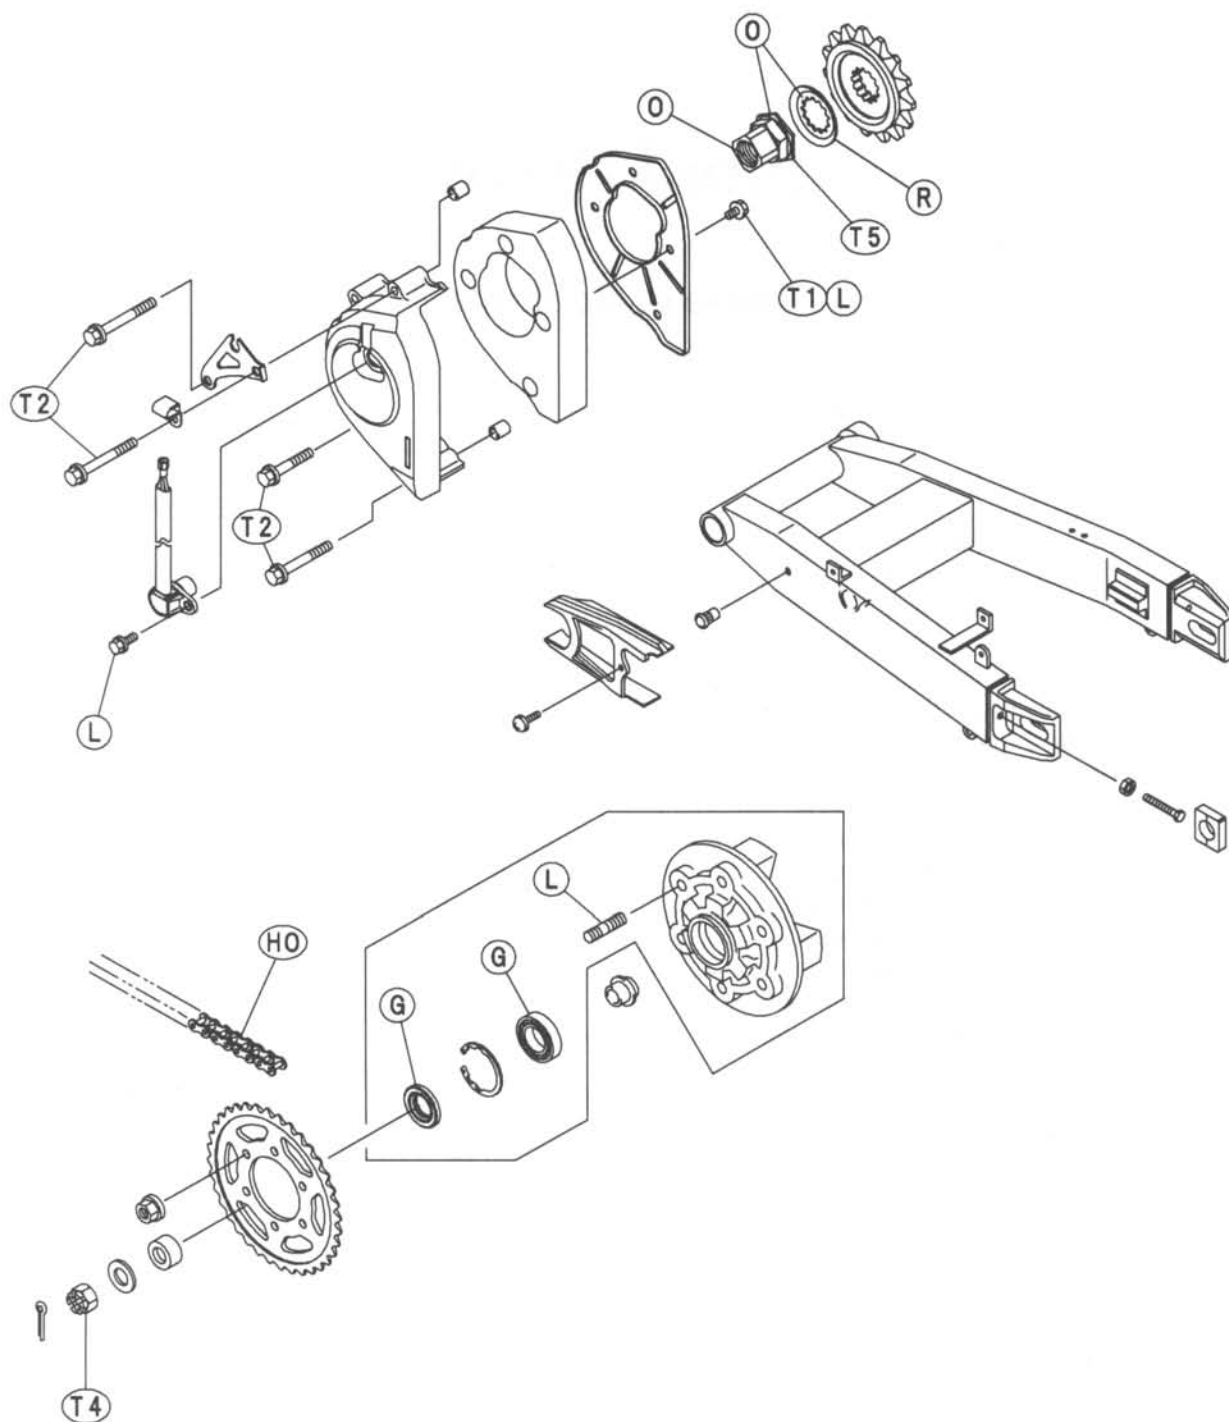

G : Apply grease.  
 HO: Apply heavy oil.  
 L : Apply a non-permanent locking agent.  
 O : Apply oil  
 R : Replacement Parts

T1 : 6.9 N-m (0.7 kg-m, 61 in-lb)  
 T2 : 11 N-m (1.1 kg-m, 95 in-lb)  
 T3 : 74 N-m (7.5 kg-m, 54 ft-lb)  
 T4 : 110 N-m (11.0 kg-m, 80 ft-lb)  
 T5 : 125 N-m (13.0 kg-m, 94 ft-lb)

## Specifications

Item	Standard	Service Limit
<b>Drive Chain:</b>		
Chain slack	20 ~ 35 mm	(Usable range) 20 ~ 40 mm
20-link length	317.5 ~ 318.2 mm	323 mm
Standard chain		
Make	ENUMA	- - -
Type	EK525UVX, Endless	- - -
Link	110 links	- - -
<b>Sprockets:</b>		
Rear sprocket warp	0.4 mm or less	0.5 mm

**Special Tools** — Inside Circlip Pliers: 57001-143  
 Bearing Driver Set: 57001-1129  
 Jack: 57001-1238


## 10-4 FINAL DRIVE

### Drive Chain

#### Slack Inspection

##### NOTE

- Check the slack with the motorcycle setting on its side stand.
- Clean the chain if it is dirty, and lubricate it if it appears dry.
- Check the wheel alignment (see Wheel Alignment Inspection).
- Rotate the rear wheel to find the position where the chain is tightest.
- Measure the vertical movement (chain slack) [A] midway between the sprockets.
- ★ If the chain slack exceeds the standard, adjust it.

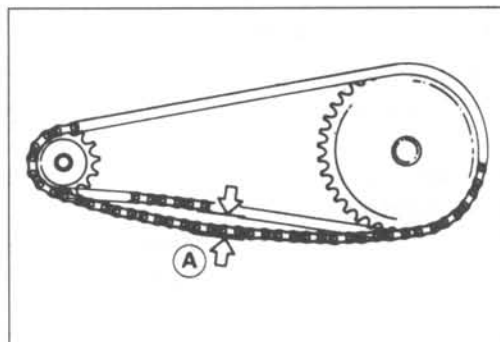

#### Chain Slack


**Standard:** 20 ~ 35 mm  
**Usable Range:** 20 ~ 40 mm

#### Slack Adjustment

- Remove the cotter pin [A], and loosen the axle nut [B].
- Loosen the both chain adjuster locknuts [C].
- Turn the chain adjusters [D] forward or rearward until the drive chain has the correct amount of chain slack.
- The right and left notches [E] on the alignment indicators [F] should point to the same marks or positions [G] on the swingarm.

##### ⚠WARNING

Misalignment of the wheel will result in abnormal wear and may result in an unsafe riding condition.

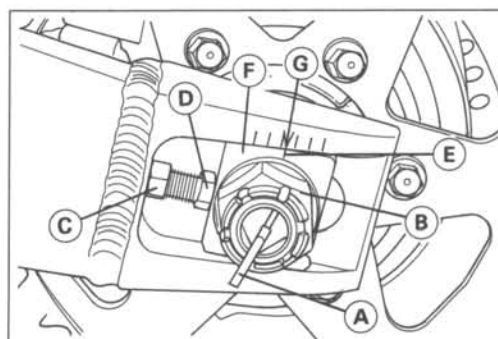


- Tighten both chain adjuster locknuts securely.
- Tighten the axle nut.  
**Torque – Rear Axle Nut: 110 N-m (11.0 kg-m, 80 ft-lb)**
- Turn the wheel, measure the chain slack again at the tightest position, and readjust if necessary.
- Insert a new cotter pin and spread its ends.

#### Wheel Alignment Inspection Adjustment

- Check that the notch [A] on the left alignment indicator [B] aligns with the same swingarm mark or position [C] that the right alignment indicator notch aligns with.
- ★ If they are not, adjust the chain slack and align the wheel alignment (see Slack Adjustment).

##### NOTE

- Wheel alignment can be also be checked using the straightedge or string method.

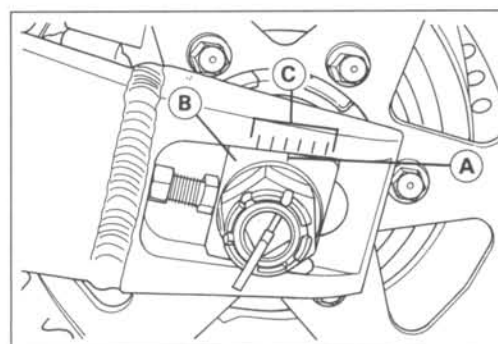



**⚠ WARNING**


Misalignment of the wheel will result in abnormal wear, and may result in an unsafe riding condition.

**Drive Chain Wear Inspection**

## ● Remove:

Mounting Screw [A]

Chain Cover [B]

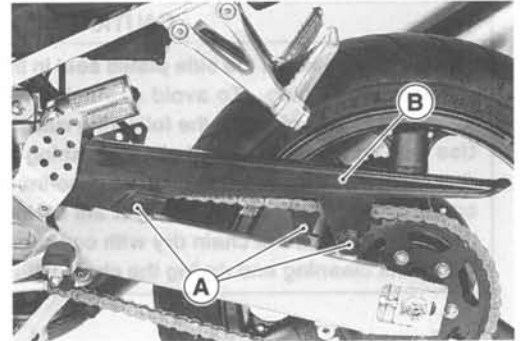

- Rotate the rear wheel to inspect the drive chain for damaged rollers, and loose pins and links.


★ If there is any irregularity, replace the drive chain.

★ Lubricate the drive chain if it appears dry.

- Stretch the chain taut by hanging a 98 N (10 kg, 20 lb) weight [A] on the chain.

- Measure the length of 20 links [B] on the straight part [C] of the chain from the pin center of the 1st pin to the pin center of the 21st pin. Since the chain may wear unevenly, take measurements at several places.

★ If any measurements exceed the service limit, replace the chain. Also, replace the front and rear sprockets when the drive chain is replaced.

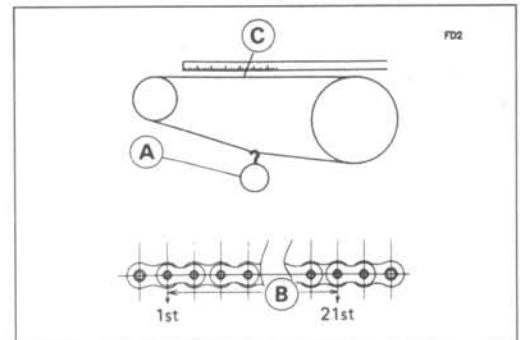**Drive Chain 20-link Length**

Standard: 317.5 ~ 318.2 mm

Service Limit: 323 mm

**⚠ WARNING**


If the drive chain wear exceeds the service limit, replace the chain or an unsafe riding condition may result. A chain that breaks or jumps off the sprockets could snag on the engine sprocket or lock the rear wheel, severely damaging the motorcycle and causing it to go out of control.

For safety, use only the standard chain. It is an endless type and should not be cut for installation.

## 10-6 FINAL DRIVE

### Lubrication

- If a special lubricant is not available, a heavy oil such as SAE 90 is preferred to a lighter oil because it will stay on the chain longer and provide better lubrication.
- If the chain appears especially dirty, clean it before lubrication.

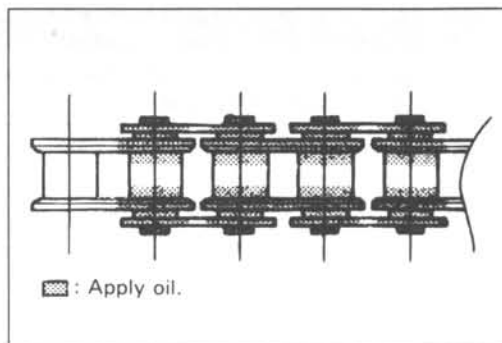

### CAUTION

The O-rings between the side plates seal in the lubricant between the pin and the bushing. To avoid damaging the O-rings and resultant loss of lubricant, observe the following rules.

Use only kerosene or diesel oil for cleaning an O-ring drive chain.

Any other cleaning solution such as gasoline or trichloroethylene will cause deterioration and swelling of the O-ring.


Immediately blow the chain dry with compressed air after cleaning.

Complete cleaning and drying the chain within 10 minutes.


- Apply oil to the sides of the rollers so that oil will penetrate to the rollers and bushings. Apply the oil to the O-rings so that the O-rings will be coated with oil.
- Wipe off any excess oil.

### Drive Chain Removal

- Remove:
  - Rear Wheel (see Wheels/Tires chapter)
  - Chain Cover Screws [A]
  - Chain Cover [B]
  - Swingarm (see Suspension chapter)
  - Engine Sprocket Cover (see this chapter)

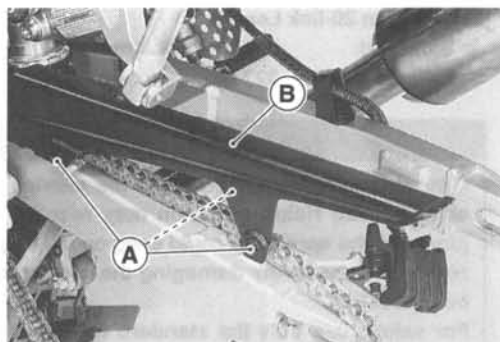

- Disengage the drive chain [A] from the engine sprocket [B], and take it off the chassis.

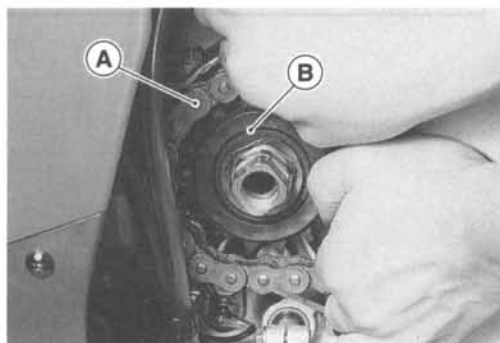


*Drive Chain Installation*

- Engage the drive chain to the engine sprocket.
- Install:
  - Swingarm (see Suspension chapter)
  - Rear Wheel (see Wheels/Tires chapter)
  - Engine Sprocket Cover
  - Chain Cover
- Adjust the chain slack after installing the chain (see Slack Adjustment).

## Sprocket, Coupling

### Engine Sprocket Removal


- Remove:
  - Throttle Sensor Bolt [A]
  - Throttle Sensor [B]
  - Engine Sprocket Cover Bolts [C]
  - Engine Sprocket Cover [D]

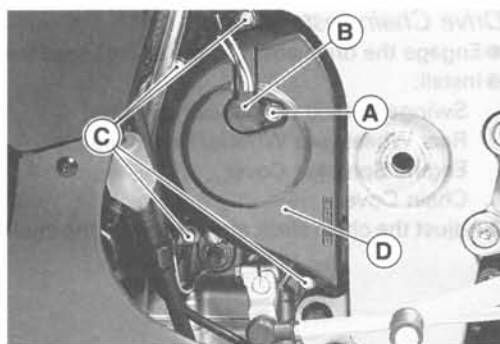

- Flatten out the bended washer [A].
- Remove the engine sprocket nut [B] and washer.

### NOTE


○ When loosening the engine sprocket nut, hold the rear brake on.

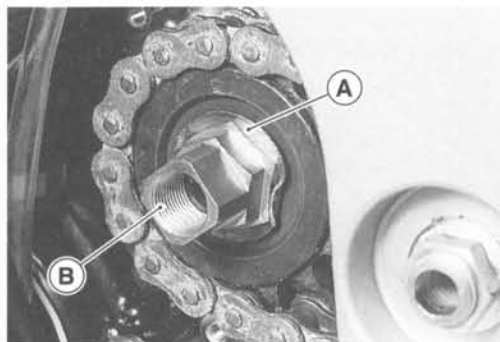

- Using the jack, raise the rear wheel off the ground.

**Special Tool – Jack: 57001-1238**

- Loosen the drive chain (see Slack Adjustment).
- Remove the drive chain from the rear sprocket toward the right.
- Disengage the drive chain [A] from the engine sprocket [B].
- Pull the engine sprocket off the output shaft [C].

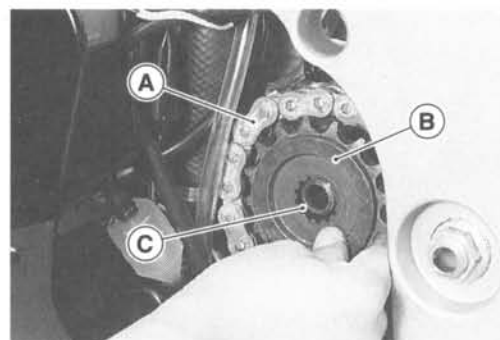

### Engine Sprocket Installation

- Replace the sprocket washer and axle cotter pin.
- Install the engine sprocket.
- Apply oil to the threads of the output shaft and the seating surface of the engine sprocket nut.
- After torquing the engine sprocket nut, bend the one side of the washer over the nut.

### NOTE

○ Tighten the nut while applying the rear brake.

**Torque – Engine Sprocket Nut : 125 N-m (13.0 kg, 94 ft-lb)**

- Adjust the drive chain slack after installing the sprocket (see Slack Adjustment).


### Rear Sprocket Removal

- Remove the rear wheel (see Wheel/Tires chapter).

#### CAUTION

Do not lay the wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so that the disc does not touch the ground.

- Remove the rear sprocket nuts [A].
- Remove the rear sprocket [B].

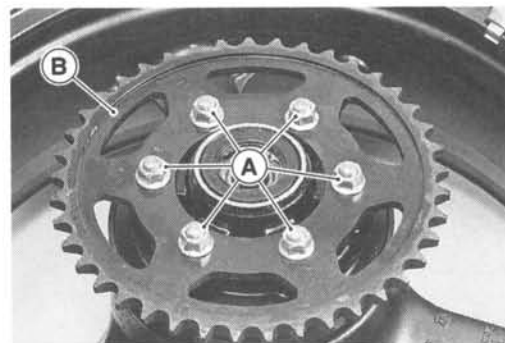


### Rear Sprocket Installation

- Install the sprocket facing the tooth number marking [A] outward.
- Tighten the rear sprocket nuts.

**Torque – Rear Sprocket Nut : 74 N·m (7.5 kg-m, 54 ft-lb)**

- Install the rear wheel (see Wheels/ Tires chapter).

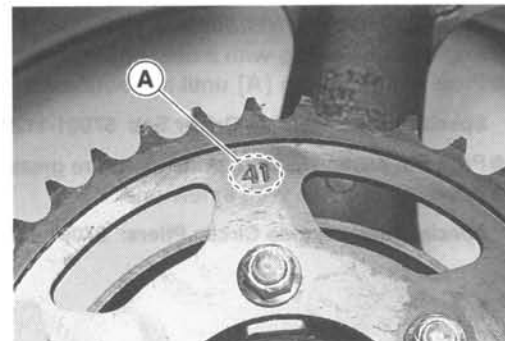


### Sprocket Wear Inspection

- Visually inspect the engine and rear sprocket teeth for wear and damage.
- ★ If the teeth are worn as illustrated, replace the sprocket, and inspect the drive chain wear (see Drive Chain Wear Inspection).
  - [A] Worn Tooth (Engine Sprocket)
  - [B] Worn Tooth (Rear Sprocket)
  - [C] Direction of Rotation

#### NOTE

- If a sprocket requires replacement, the chain is probably worn also. When replacing a sprocket, inspect the chain.

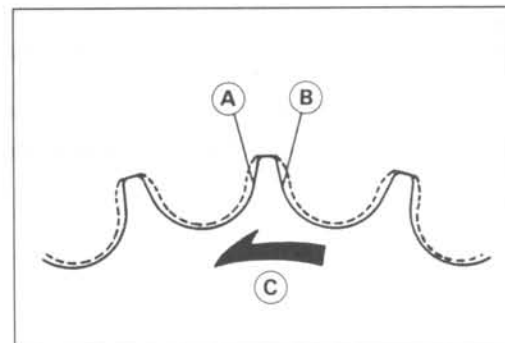


### Rear Sprocket Warp Inspection

- Raise the rear wheel off the ground (see Wheels/Tires chapter) so that it will turn freely.
- Set a dial gauge [A] against the rear sprocket [B] near the teeth as shown, and rotate [C] the rear wheel to measure the sprocket runout (warp). The difference between the highest and lowest dial gauge readings is the amount of runout (warp).
- ★ If the runout exceeds the service limit, replace the rear sprocket.

#### Rear Sprocket Warp


**Standard: 0.4 mm or less**  
**Service Limit: 0.5 mm**

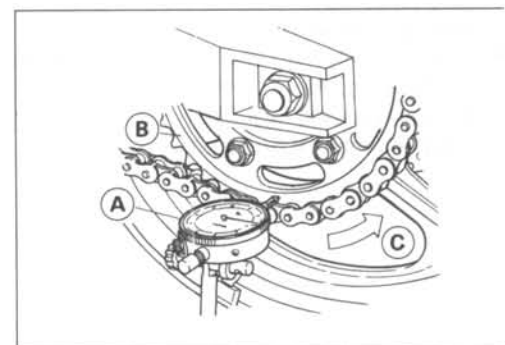

### Coupling Bearing Removal

- Remove:
  - Coupling
  - Grease Seal
  - Circlip [A]


**Special Tool – Inside Circlip Pliers: 57001-143 [B]**

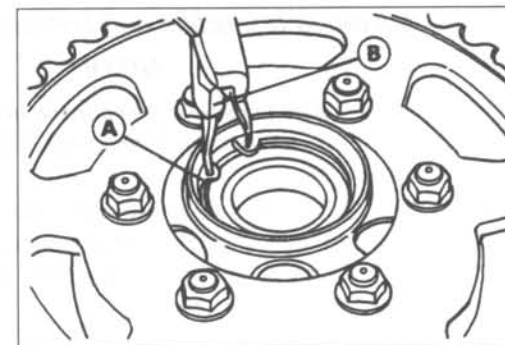

## 10-10 FINAL DRIVE

- Remove the bearing [A] by tapping from the wheel side.

**Special Tool – Bearing Driver Set: 57001-1129 [B]**

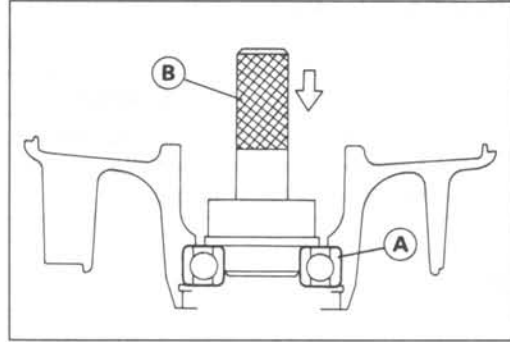


### Coupling Bearing Installation

- Replace the bearing with a new one.
- Press in the bearing [A] until it is bottomed.

**Special Tool – Bearing Driver Set: 57001-1129 [B]**


- Pack the bearing with high temperature grease.
- Replace the circlip with a new one.

**Special Tool – Inside Circlip Pliers: 57001-143**

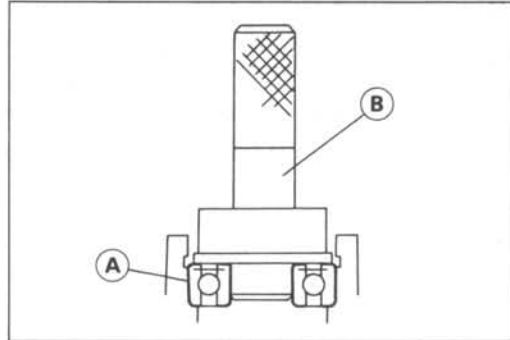


- Replace the grease seal with a new one.
- Press in the grease seal so that the seal surface is flush with the end of the hole.
- Apply high temperature grease to the grease seal lips.

**Special Tool – Bearing Driver Set: 57001-1129 [A]**

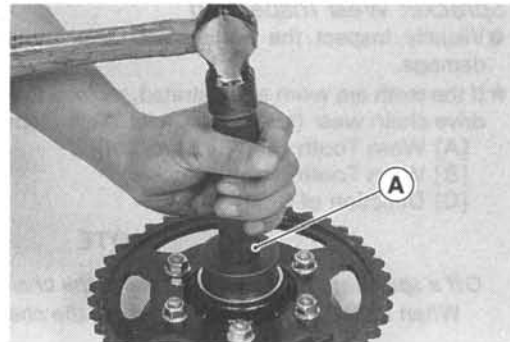

### Coupling Installation

- Grease the following and install the coupling.
  - Ball Bearing [A]
  - Coupling Grease Seal [B]
  - Coupling Internal Surface [C]

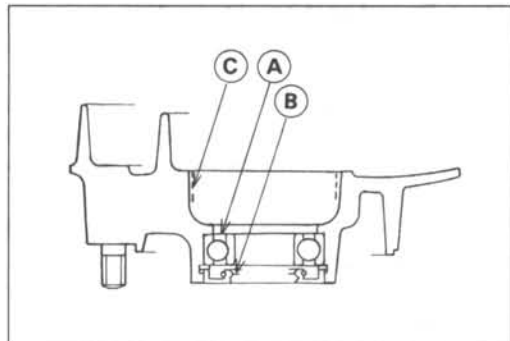

### Coupling Bearing Inspection and Lubrication


#### NOTE

- It is not necessary to remove the coupling bearing for inspection and lubrication. If the bearing is removed, it will need to be replaced with a new one.
- Wash the bearing with a high flash-point solvent, dry it (do not spin it while it is dry), and oil it. Spin it by hand to check its condition.
- ★ If it is noisy, does not spin smoothly, or has any rough spots, it must be replaced.

- Pack the bearing with good quality bearing grease. Turn the bearing around by hand a few times to make sure the grease is distributed uniformly inside the bearing.

#### *Damper Inspection*

- Remove the rear wheel coupling, and inspect the rubber dampers [A].
- Replace the damper if it appears damaged or deteriorated.

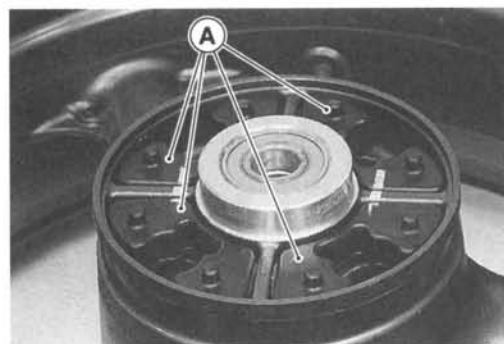

# Brakes


## Table of Contents

Exploded View .....	11-2	Front Master Cylinder Installation .....	11-13
Specifications .....	11-4	Rear Master Cylinder Removal .....	11-13
Brake Pedal .....	11-5	Rear Master Cylinder Installation .....	11-14
Brake Pedal Position Inspection .....	11-5	Front Master Cylinder Disassembly .....	11-14
Brake Pedal Position Adjustment .....	11-5	Rear Master Cylinder Disassembly .....	11-14
Calipers .....	11-6	Master Cylinder Assembly .....	11-15
Front Caliper Removal .....	11-6	Master Cylinder Inspection	
Rear Caliper Removal .....	11-6	(Visual Inspection) .....	11-15
Caliper Installation .....	11-6	Brake Disc .....	11-16
Front Caliper Disassembly .....	11-7	Brake Disc Removal .....	11-16
Front Caliper Assembly .....	11-8	Brake Disc Installation .....	11-16
Rear Caliper Disassembly .....	11-8	Brake Disc Wear .....	11-16
Rear Caliper Assembly .....	11-9	Brake Disc Warp .....	11-16
Brake Pads .....	11-11	Brake Fluid .....	11-17
Front Brake Pad Removal .....	11-11	Level Inspection .....	11-17
Front Brake Pad Installation .....	11-11	Brake Fluid Change .....	11-17
Rear Brake Pad Removal .....	11-11	Bleeding the Brake Line .....	11-18
Rear Brake Pad Installation .....	11-11	Brake Hose .....	11-21
Lining Wear .....	11-12	Brake Hose Removal/Installation .....	11-21
Master Cylinder .....	11-13	Brake Hose Inspection .....	11-21
Front Master Cylinder Removal .....	11-13		




## 11-2 BRAKES

### Exploded View

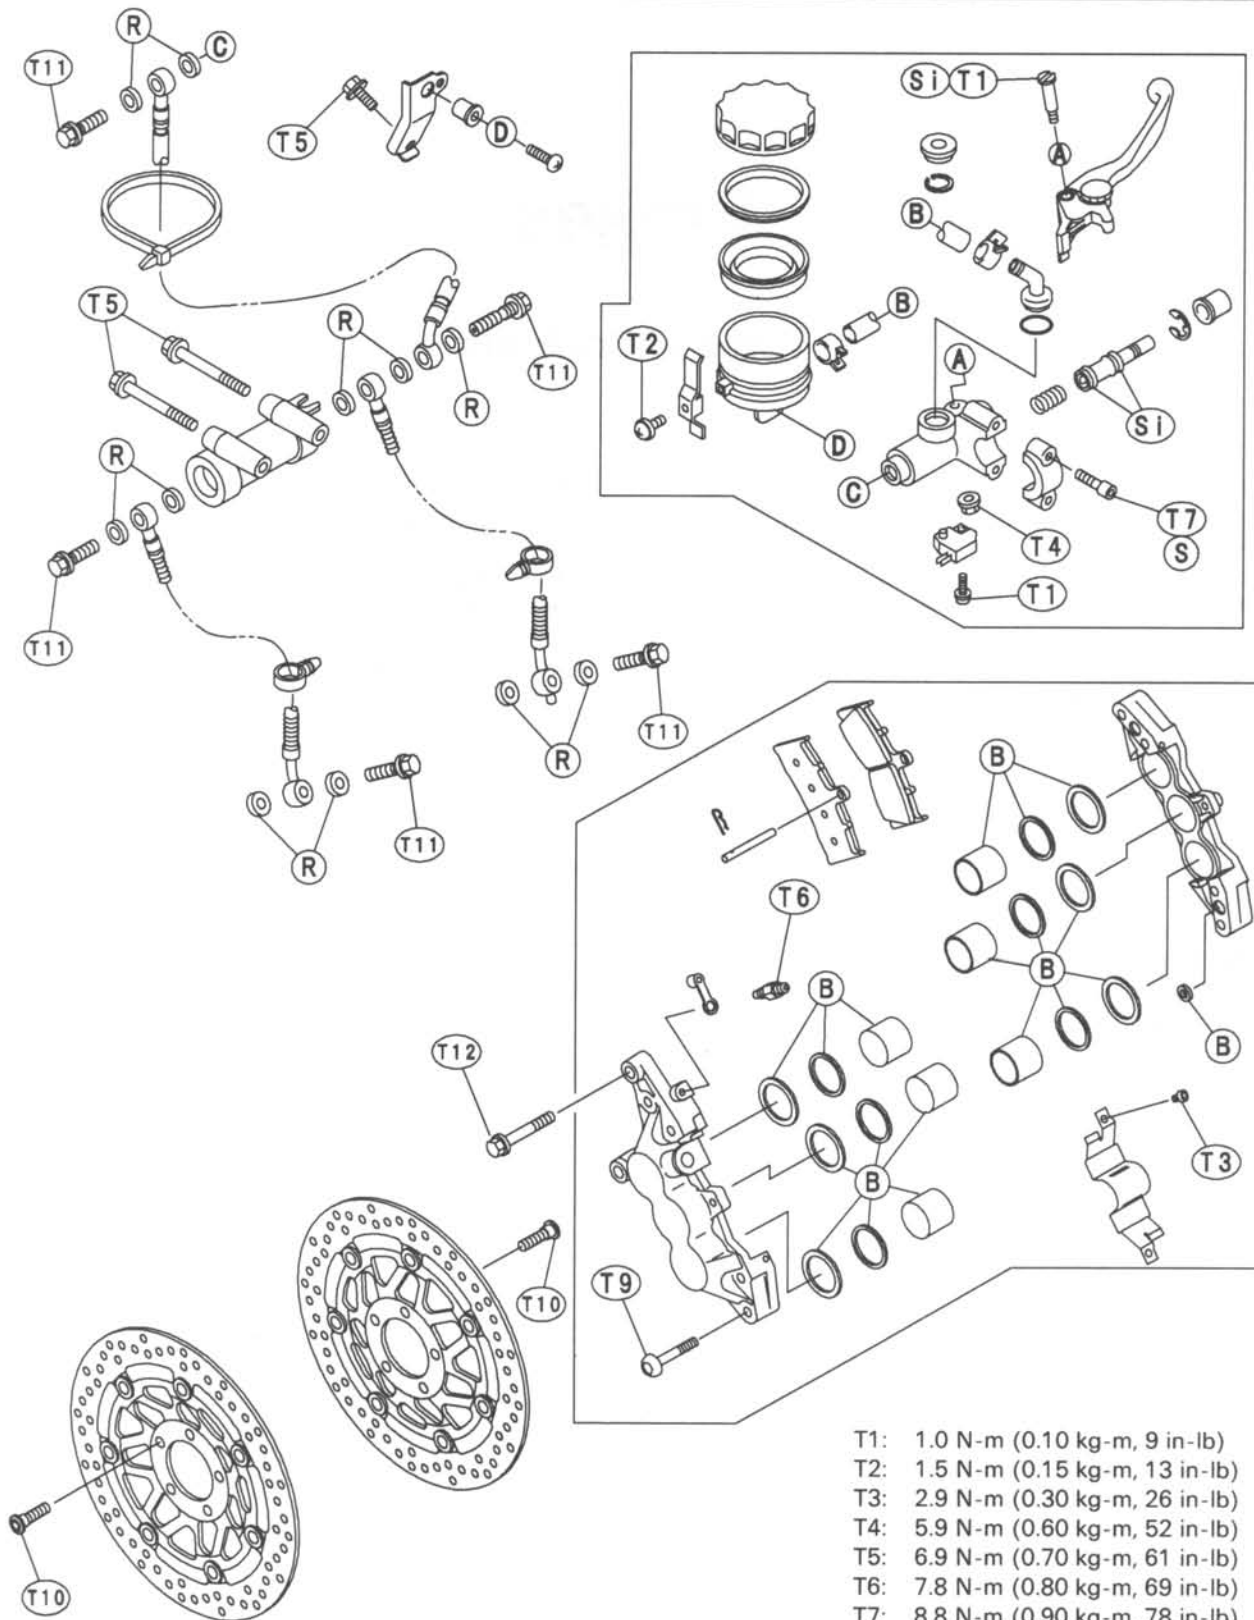

- B: Apply brake fluid.  
 G: Apply grease.  
 R: Replacement Parts  
 S: Follow the specific tightening sequence.  
 Si: Apply silicone grease (ex. PBC grease)

- T1: 1.0 N-m (0.10 kg-m, 9 in-lb)  
 T2: 1.5 N-m (0.15 kg-m, 13 in-lb)  
 T3: 2.9 N-m (0.30 kg-m, 26 in-lb)  
 T4: 5.9 N-m (0.60 kg-m, 52 in-lb)  
 T5: 6.9 N-m (0.70 kg-m, 61 in-lb)  
 T6: 7.8 N-m (0.80 kg-m, 69 in-lb)  
 T7: 8.8 N-m (0.90 kg-m, 78 in-lb)  
 T8: 18 N-m (1.8 kg-m, 13.0 ft-lb)  
 T9: 21 N-m (2.1 kg-m, 15.0 ft-lb)  
 T10: 23 N-m (2.3 kg-m, 16.5 ft-lb)  
 T11: 25 N-m (2.5 kg-m, 18.0 ft-lb)  
 T12: 34 N-m (3.5 kg-m, 25 ft-lb)

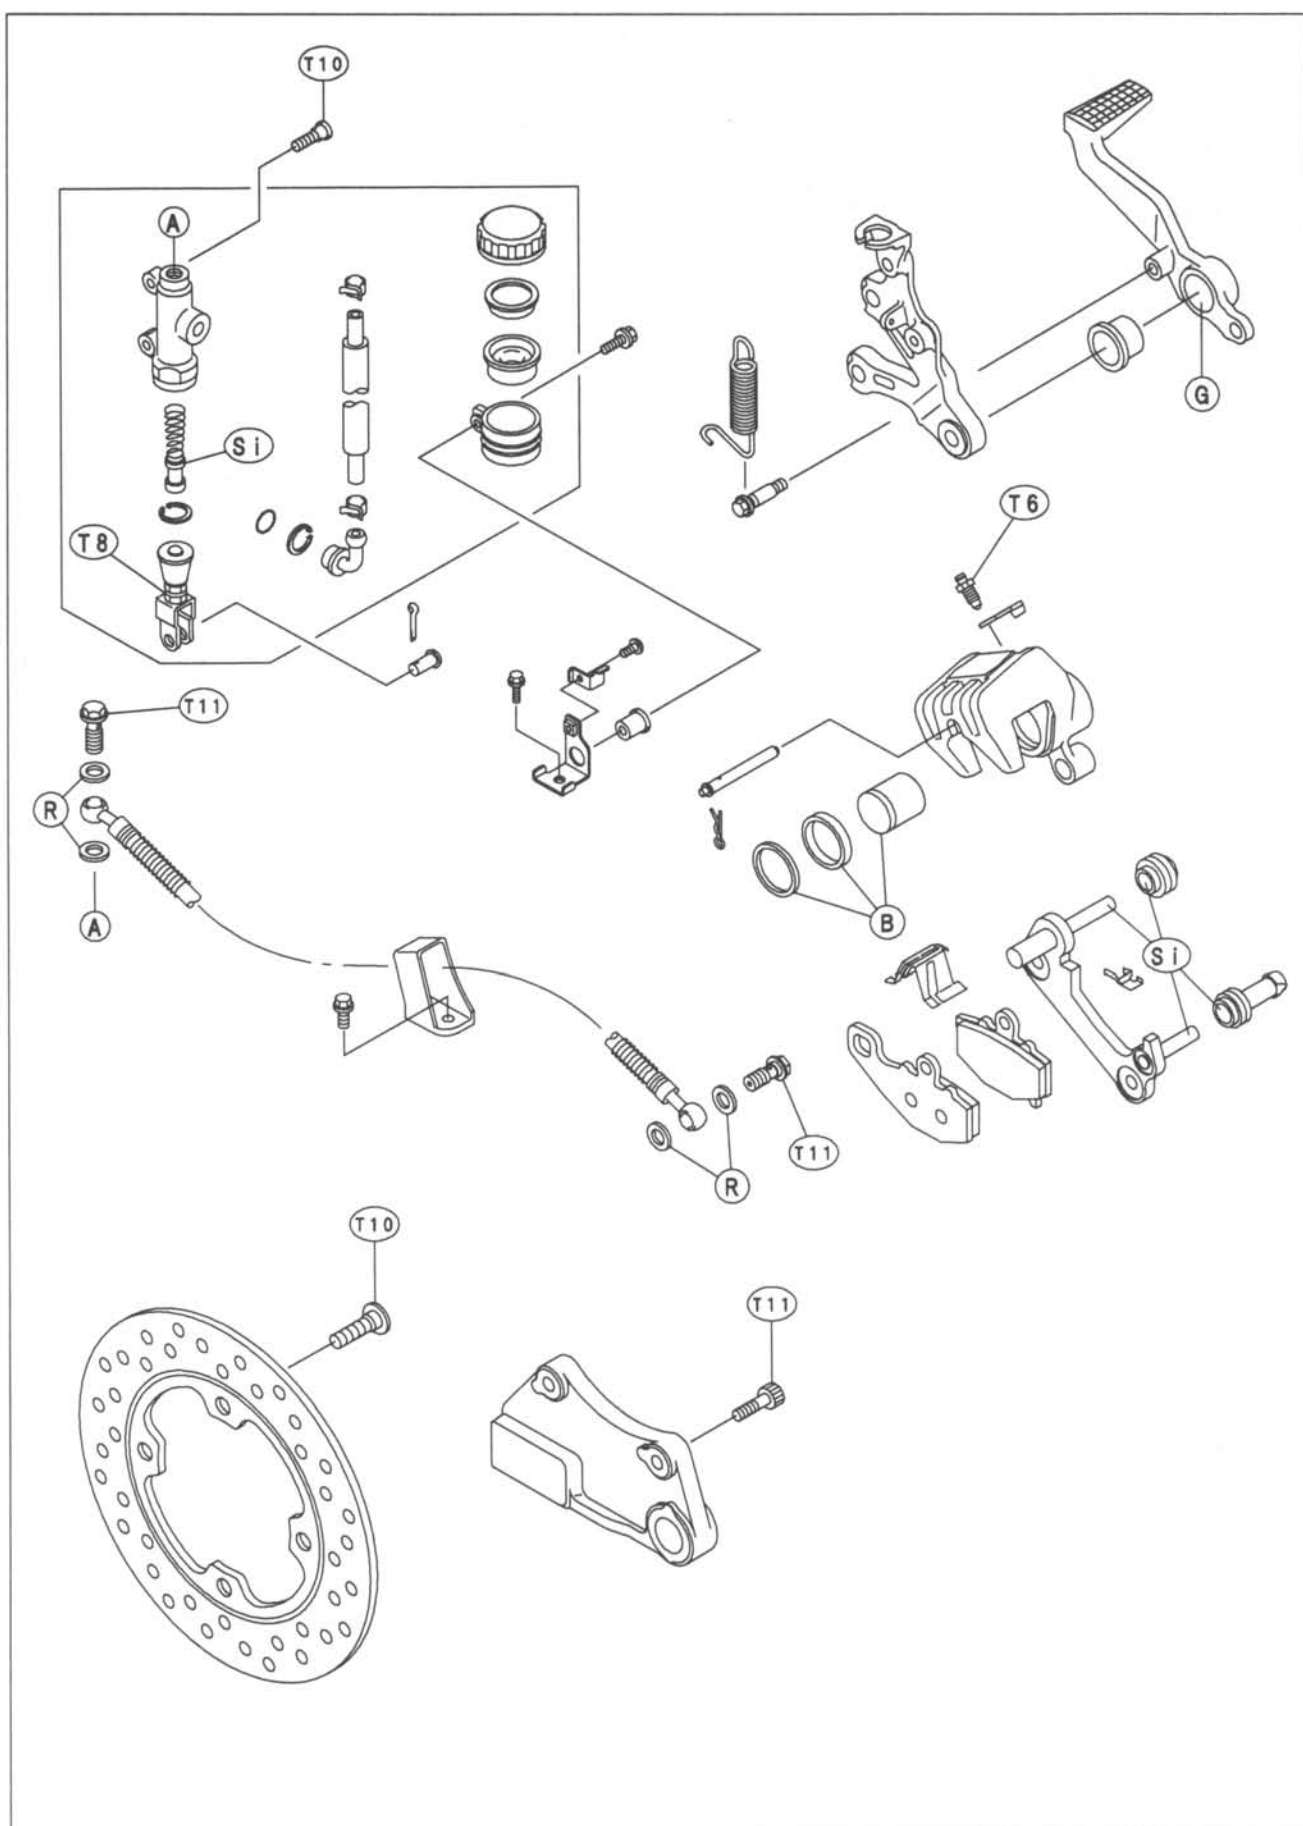

## 11-4 BRAKES

### Specifications

Item	Standard	Service Limit
<b>Brake Lever, Brake Pedal:</b> Brake lever position Brake lever free play Pedal free play Pedal position	5-way adjustable (to suit rider) Non-adjustable Non-adjustable About 43 mm below footpeg top	--- --- --- ---
<b>Brake Fluid:</b> Grade Brand (recommended)	D.O.T.4 Castrol Girling-Universal Castrol GT (LMA) Castrol Disc Brake Fluid Check Shock Premium Heavy Duty	--- --- --- --- ---
<b>Brake Pads:</b> Lining thickness: Front Rear	4 mm 5 mm	1 mm 1 mm
<b>Brake Discs:</b> Thickness: Front Rear Runout	4.4 ~ 4.6 mm 4.8 ~ 5.15 mm 0.15 mm or less	4.0 mm 4.5 mm 0.3 mm

**Special Tools –** Inside Circlip Pliers: 57001-143  
Jack: 57001-1238

## Brake Pedal


### Brake Pedal Position Inspection

- Check that the brake pedal [A] is in the correct position.  
[B] Footpeg

#### Pedal Position [C]

**Standard:** About 43 mm below top of footpeg

- ★ If it is incorrect, adjust the brake pedal position.

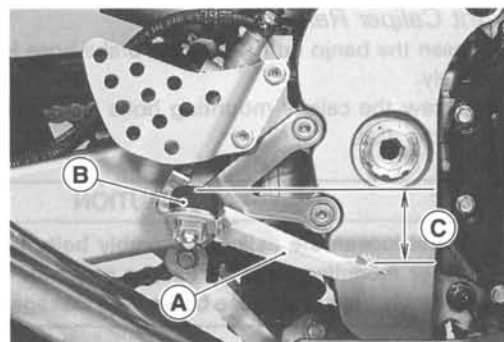


### Brake Pedal Position Adjustment

#### NOTE

○ Usually it is not necessary to adjust the pedal position, but always adjust it when the master cylinder is disassembled or pedal position is incorrect.

- Unscrew the bolts [A] and remove the guard bracket [B].
- Reinstall the bolts with master cylinder.

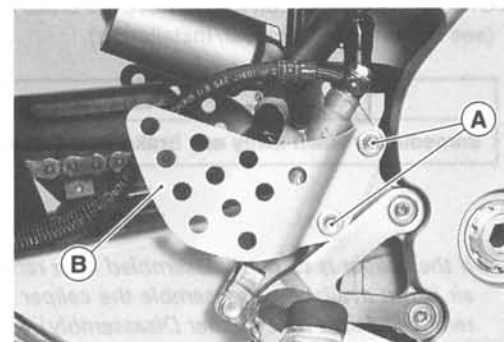


- Measure the length indicated in the figure.

#### Length [A]

**Standard:**  $67 \pm 1$  mm

- ★ If it is specified length, the brake pedal may be deformed or incorrectly installed.
- ★ If it is not within the specified length, adjust the push rod in the master cylinder as following.

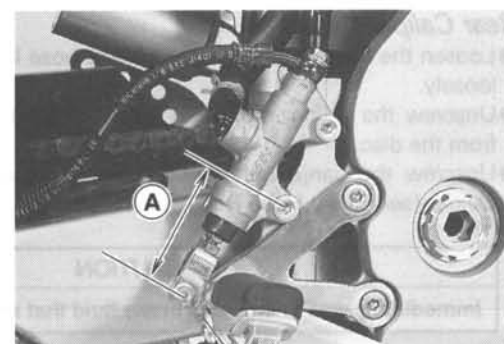


○ Loosen the push rod locknut [A].

○ Turn the hex head [B] of the push rod [C] to obtain the specified length [D].

○ Tighten the locknut.

**Torque – Rear Master Cylinder Push Rod Locknut: 18 N-m (1.8 kg-m, 13.0 ft-lb)**

- Check the brake light switch operation (see Rear Brake Light Switch Adjustment in Electrical System chapter).

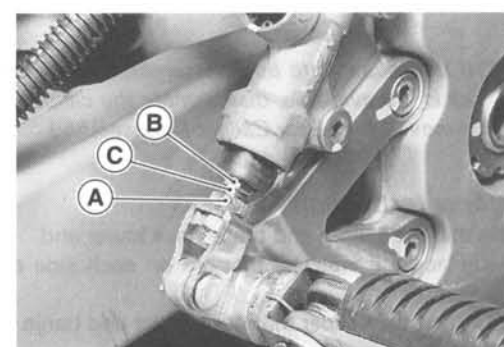

## 11-6 BRAKES

### Calipers

#### Front Caliper Removal

- Loosen the banjo bolt [A] at the brake hose lower end, and tighten it loosely.
- Unscrew the caliper mounting bolts [B], and detach the caliper [C] from the disc.

#### CAUTION

Do not loosen the caliper assembly bolts [D]. Take out only the caliper mounting bolts for caliper removal. Loosening the caliper assembly bolts will cause brake fluid leakage.


- Unscrew the banjo bolt and remove the brake hose [E] from the caliper (see Brake Hose Removal/Installation).

#### CAUTION

Immediately wash away any brake fluid that spills.

#### NOTE

○ If the caliper is to be disassembled after removal and if compressed air is not available, disassemble the caliper before the brake hose is removed (see Front Caliper Disassembly).

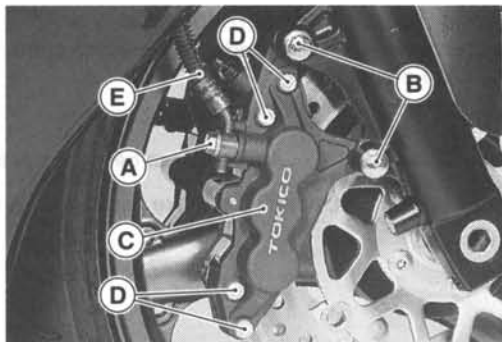

#### Rear Caliper Removal


- Loosen the banjo bolt [A] at the brake hose lower end, and tighten it loosely.
- Unscrew the caliper mounting bolts [B], and detach the caliper [C] from the disc.
- Unscrew the banjo bolt and remove the brake hose [D] from the caliper (see Brake Hose Removal/Installation).

#### CAUTION

Immediately wash away any brake fluid that spills.

#### NOTE

○ If the caliper is to be disassembled after removal and if compressed air is not available, disassemble the caliper before the brake hose is removed (see Rear Caliper Disassembly).

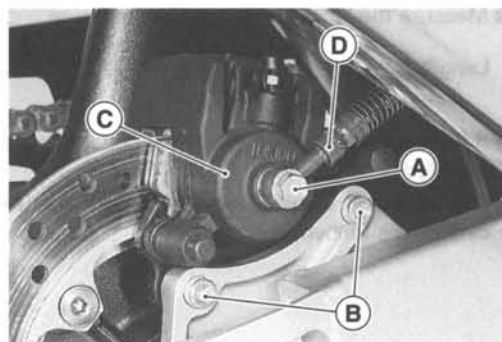

#### Caliper Installation

- Install the caliper and brake hose lower end.
- Replace the washers that are on each side of hose fitting with new ones.
- Tighten the caliper mounting bolts and banjo bolt.

**Torque – Caliper Mounting Bolts (Front): 34 N-m (3.5 kg-m, 25 ft-lb)**  
**Caliper Mounting Bolts (Rear): 25 N-m (2.5 kg-m, 18.0 ft-lb)**  
**Brake Hose Banjo Bolt: 25 N-m (2.5 kg-m, 18.0 ft-lb)**


- Check the fluid level in the brake reservoirs.
- Bleed the brake line (see Bleeding the Brake Line).
- Check the brake for good braking power, no brake drag, and no fluid leakage.

**⚠ WARNING**


Do not attempt to drive the motorcycle until a full brake lever or pedal is obtained by pumping the brake lever or pedal until the pads are against the disc. The brakes will not function on the first application of the lever or pedal if this is not done.

### Front Caliper Disassembly

- Remove the pad spring and brake pads (see this chapter).
- Loosen the front caliper assembly bolts [A] and front caliper banjo bolt [B] and tighten them loosely.
- Remove the front caliper [C] and banjo bolt.
- Remove the front caliper assembly bolts and split the front caliper.
- Remove the O-rings.

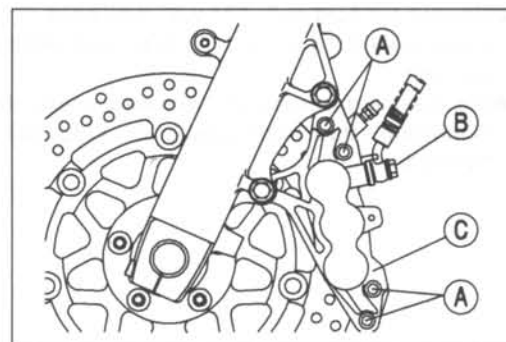


- Using compressed air, remove the pistons. One way to remove the pistons is as follows.
- Install a rubber gasket [A] and a wooden board [B] more than 10 mm thick on the caliper half, and fasten them together with a suitable bolt and nut as shown. Leave one of the oil passages [C] open.
- Lightly apply compressed air [D] to the oil passage until the pistons hit the rubber gasket. Block the hose joint opening [E] during this operation if the caliper half has the opening.
- [F] Bolt and Nut
- [G] Oil Passage sealed by Rubber Gasket.
- [H] Push down.

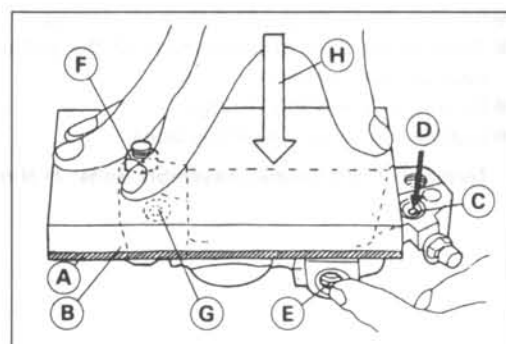

**⚠ WARNING**

To avoid serious injury, never place your fingers or palm in front of the piston. If you apply compressed air into the caliper, the piston may crush your hand or fingers.

- Pull out the pistons by hand.
- Remove the dust seals [A] and fluid seals [B].
- Remove the bleed valve [C] and rubber cap [D].
- Repeat the previous step to remove the pistons from the other side of the caliper body.

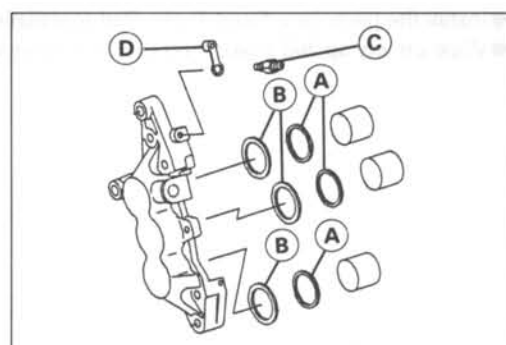

### NOTE

- If compressed air is not available, do as follows for both calipers coincidentally, with the brake hose connected to the caliper.
- Prepare a container for brake fluid, and perform the work above it.
- Remove the spring and pads (see Front Brake Pad Removal).
- Pump the brake lever until the pistons come out of the cylinders, and then disassemble the caliper.

## 11-8 BRAKES

### Front Caliper Assembly

- Clean the caliper parts except for the pads.


#### CAUTION

For cleaning the parts, use only disc brake fluid, isopropyl alcohol, or ethyl alcohol.

- Install the bleed valve and rubber cap.


**Torque – Bleed Valve: 7.8 N-m (0.80 kg-m, 69 in-lb)**

- Replace the fluid seals [A] with new ones.
- Apply brake fluid to the fluid seals, and install them into the cylinders by hand.
- Replace the dust seals [B] with new ones if they are damaged.
- Apply brake fluid to the dust seals, and install them into the cylinders by hand.

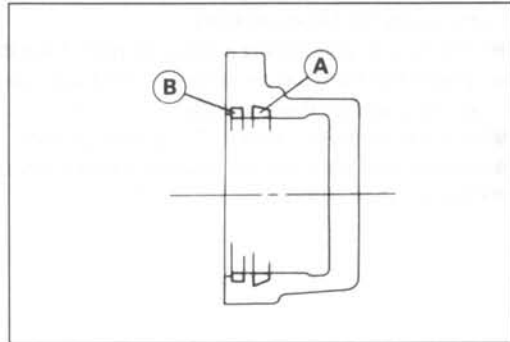

- Replace the O-rings [A] if they are damaged.
- Apply brake fluid to the outside of the pistons, and push them into each cylinder by hand.
- Be sure to install the O-rings.
- Tighten the caliper assembly bolts.


**Torque – Front Caliper Assembly Bolts: 21 N-m (2.1 kg-m, 15.0 ft-lb)**

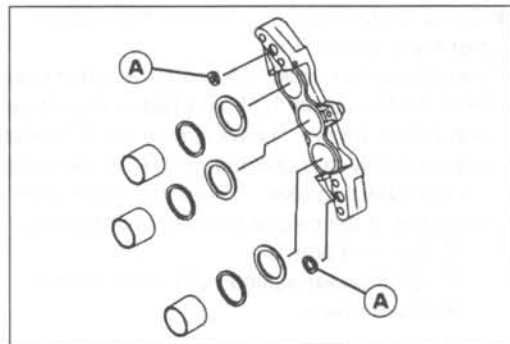

- Install the pads (see Front Brake Pad Installation).
- Wipe up any spilled brake fluid on the caliper with wet cloth.

### Rear Caliper Disassembly

- Remove the rear caliper.
- Remove the pads and anti-rattle spring (see Rear Brake Pad Removal).
- Remove the piston insulator.
- Using compressed air, remove the piston.
- Cover the caliper opening with a clean, heavy cloth [A].
- Remove the piston by lightly applying compressed air [B] to where the brake line fits into the caliper.

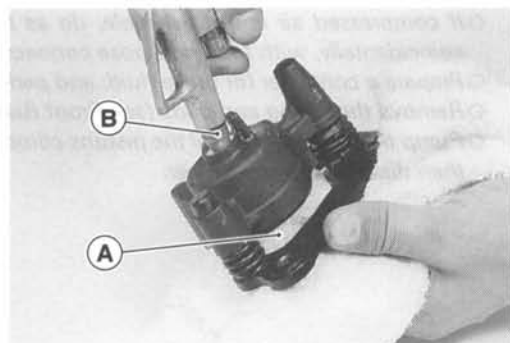

**⚠ WARNING**

To avoid serious injury, never place your fingers or palm inside the caliper opening. If you apply compressed air into the caliper, the piston may crush your hand or fingers.

- Remove the dust seal and fluid seal.
- Remove the bleed valve and rubber cap.

**NOTE**

- If compressed air is not available, do as follows with the brake hose connected to the caliper.
- Prepare a container for brake fluid, and perform the work above it.
- Remove the pads and spring (see Rear Brake Pad Removal).
- Pump the brake pedal to remove the caliper piston.

**Rear Caliper Assembly**

- Clean the caliper parts except for the pads.


**CAUTION**

For cleaning the parts, use only disc brake fluid, isopropyl alcohol, or ethyl alcohol.


- Install the bleed valve and rubber cap.

**Torque – Bleed Valve: 7.8 N-m (0.80 kg-m, 69 in-lb)**

- Replace the fluid seal [A] with a new one.
- Apply brake fluid to the fluid seal, and install it into the cylinder by hand.
- Replace the dust seal [B] with a new one if it is damaged.
- Apply brake fluid to the dust seal, and install it into the cylinder by hand.

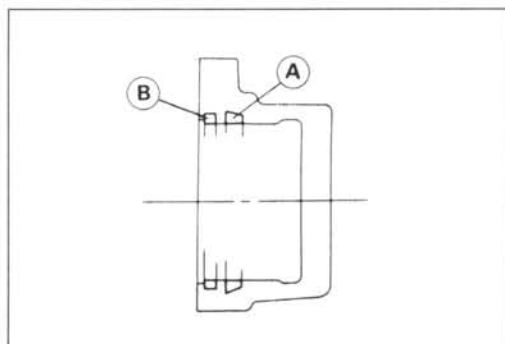


- Apply brake fluid to the outside of the piston, and push it into the cylinder by hand.
- Replace the shaft rubber friction boot [A] and dust cover [B] if they are damaged.
- Apply a thin coat of PBC (Poly Butyl Cuprysil) grease to the caliper holder shafts [C] and holder holes [D] (PBC is a special high temperature, water-resistance grease).

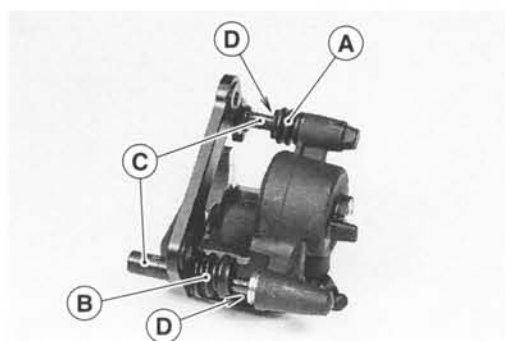



## 11-10 BRAKES


- Install the anti-rattle spring [A] in the caliper as shown.
- Install the piston insulator.
- Install the pads (see Rear Brake Pad Installation).
- Wipe up any spilled brake fluid on the caliper with wet cloth.

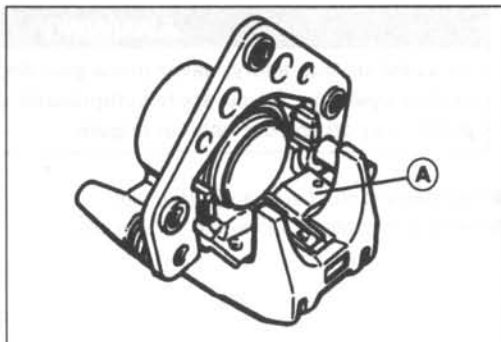


## Brake Pads

### Front Brake Pad Removal

- Unscrew the pad spring screws [A], and remove the pad spring [B].

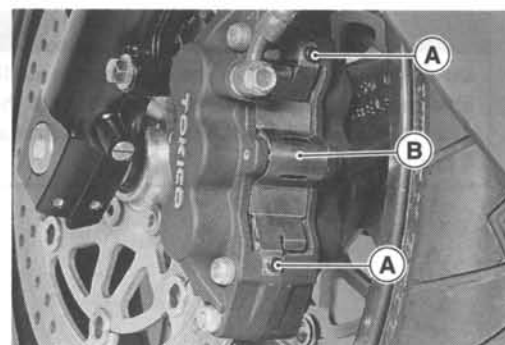

- Draw out the clip [A], and take off the pad pin [B].
- Remove the brake pads [C].

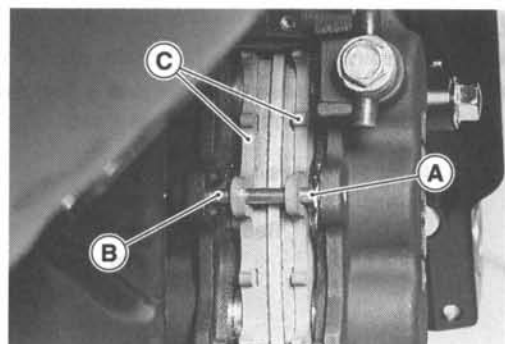

### Front Brake Pad Installation

- Push the caliper pistons in by hand as far as they will go.
- Install the brake pads.
- Install the pad pin and clip. The clip must be "outside" of the pads.
- Install the caliper (see Caliper Installation).


**Torque – Front Brake Pad Spring Bolts: 2.9 N-m (0.30 kg-m, 26 in-lb)**

#### ⚠ WARNING

Do not attempt to drive the motorcycle until a full brake lever is obtained by pumping the brake lever until the pads are against the disc. The brake will not function on the first application of the lever if this is not done.

### Rear Brake Pad Removal

- Unscrew the caliper mounting bolts.
- Detach the caliper from the disc.
- Draw out the clip [A], and take off the pad pin [B].
- Remove the brake pads [C].

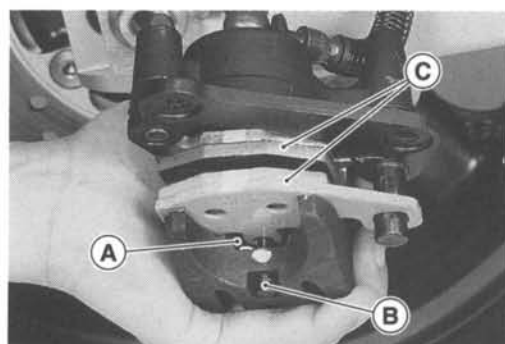

### Rear Brake Pad Installation

- Push the caliper piston in by hand as far as it will go.
- Install the anti-rattle spring in place.
- Install the brake pads.
- Install the pad pin and clip. The clip must be "outside" of the pads.
- Install the caliper (see Caliper Installation).

**⚠ WARNING**


Do not attempt to drive the motorcycle until a full brake pedal is obtained by pumping the brake pedal until the pads are against the disc. The brake will not function on the first application of the pedal if this is not done.

**Lining Wear**

- Check the lining thickness [A] of the pads in each caliper.
- ★ If the lining thickness of either pad is less than the service limit [B], replace both pads in the caliper as a set.

**Pad Lining Thickness**

<b>Standard:</b>	<b>Front</b>	<b>4 mm</b>
	<b>Rear</b>	<b>5 mm</b>
<b>Service Limit</b>		<b>1 mm</b>

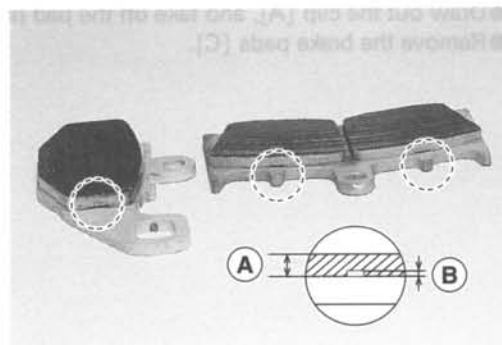


## Master Cylinder

### Front Master Cylinder Removal

- Loosen the reservoir bracket bolts [A].




- Disconnect the front brake light switch connectors.
- Remove the banjo bolt [A] to disconnect the brake hose from the master cylinder (see Brake Hose Removal/Installation).
- Unscrew the clamp bolts [B], and take off the master cylinder [C] as an assembly with the reservoir, brake lever, and brake switch installed.

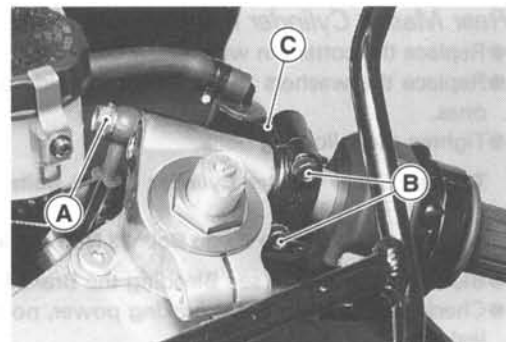

### Front Master Cylinder Installation

- Install the front master cylinder so that the mating surface [A] of the throttle housing is aligned with the mating surface [B] of the master cylinder clamp to level the reservoir.
- The master cylinder clamp must be installed with the arrow mark [C] upward.
- Apply grease to the clamp bolts.
- Tighten the upper clamp bolt [D] first, and then the lower clamp bolt [E]. There will be a gap at the lower part of the clamp after tightening.

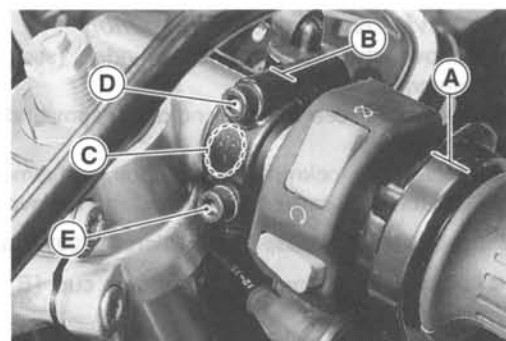

**Torque – Front Master Cylinder Clamp Bolts: 8.8 N-m (0.9 kg-m, 78 in-lb)**


- Replace the washers that are on each side of the hose fitting with new ones.
- Tighten the brake hose banjo bolt.

**Torque – Brake Hose Banjo Bolt: 25 N-m (2.5 kg-m, 18.0 ft-lb)**

- Bleed the brake line (see Bleeding the Brake Line).
- Check the brake for good braking power, no brake drag, and no fluid leakage.

### Rear Master Cylinder Removal

- Unscrew the brake hose banjo bolt [A] on the master cylinder (see Brake Hose Removal/Installation).
- Pull off the reservoir hose lower end [B], and drain the brake fluid into a container.
- Loosen the guard bracket bolts [C] lightly.
- Remove the footpeg bracket bolts [D].

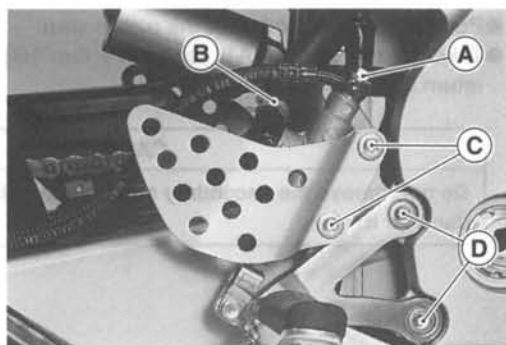


## 11-14 BRAKES

- Remove the cotter pin [A].
- Pull off the joint pin [B].

### NOTE

○ Pull off the joint pin while pressing down the brake pedal.

- Unscrew the guard bracket bolts [C], and take off the guard bracket [D] with master cylinder [E].

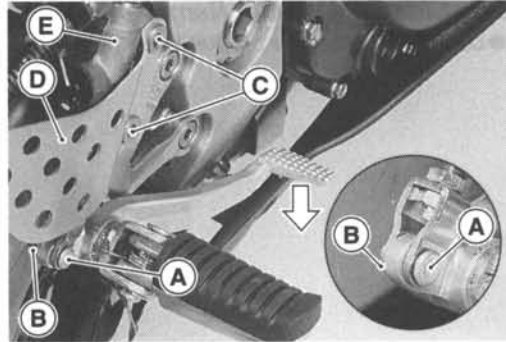

### Rear Master Cylinder Installation

- Replace the cotter pin with a new one.
- Replace the washers that are on each side of hose fitting with new ones.
- Tighten the following bolts.

**Torque – Rear Master Cylinder Guard Bolts:** 23 N-m (2.3 kg-m, 16.5 ft-lb)

**Brake Hose Banjo Bolt:** 25 N-m (2.5 kg-m, 18.0 ft-lb)


- Bleed the brake line (see Bleeding the Brake Line).
- Check the brake for good braking power, no brake drag, and no fluid leakage.

### Front Master Cylinder Disassembly

- Remove the front master cylinder (see Front Master Cylinder Removal).
- Remove the reservoir cap and diaphragm, and pour the brake fluid into a container.
- Unscrew the locknut and pivot bolt, and remove the brake lever.
- Push the dust cover out of place, and remove the circlip.

**Special Tool – Inside Circlip Pliers:** 57001-143

- Pull out the piston [A], secondary cup [B], primary cup [C], and return spring [D].

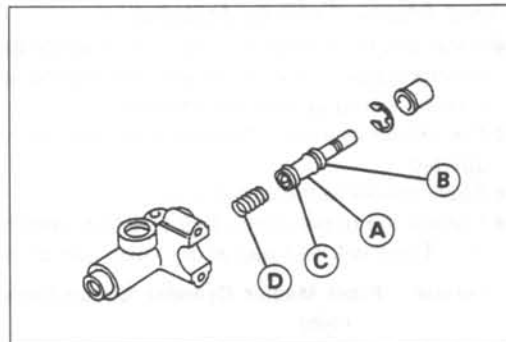

### CAUTION


Do not remove the secondary cup from the piston since removal will damage it.

### Rear Master Cylinder Disassembly

- Remove the rear master cylinder (see Rear Master Cylinder Removal).
- Slide the dust cover on the push rod out of place, and remove the circlip.

**Special Tool – Inside Circlip Pliers:** 57001-143

- Pull out the push rod with the piston stop.
- Take off the piston [A], secondary cup [B], primary cup [C], and return spring [D].

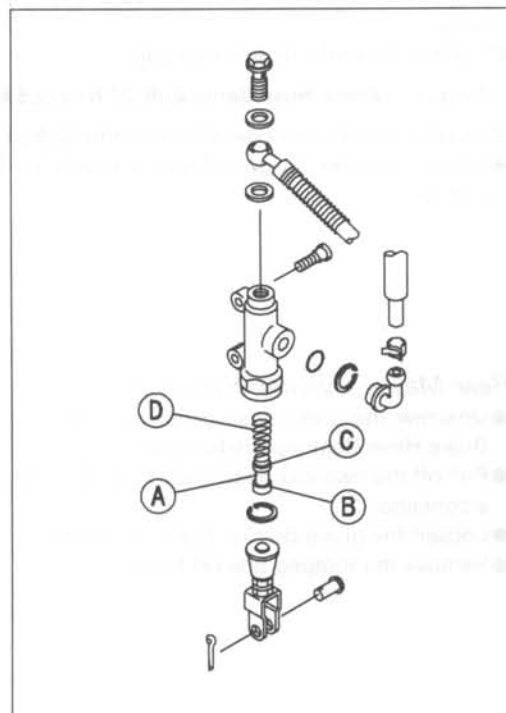

### CAUTION

Do not remove the secondary cup from the piston since removal will damage it.

### Master Cylinder Assembly

- Before assembly, clean all parts including the master cylinder with brake fluid or alcohol.

#### CAUTION

Except for the disc pads and disc, use only disc brake fluid, isopropyl alcohol, or ethyl alcohol for cleaning brake parts. Do not use any other fluid for cleaning these parts. Gasoline, engine oil, or any other petroleum distillate will cause deterioration of the rubber parts. Oil spilled on any part will be difficult to wash off completely, and will eventually deteriorate the rubber used in the disc brake.



- Apply brake fluid to the removed parts and to the inner wall of the cylinder.
- Take care not to scratch the piston or the inner wall of the cylinder.
- Tighten the brake lever pivot bolt and the locknut.

**Torque – Brake Lever Pivot Bolt: 1.0 N-m (0.10 kg-m, 9 in-lb)**

**Brake Lever Pivot Bolt Locknut: 5.9 N-m (0.60 kg-m, 52 in-lb)**

### Master Cylinder Inspection (Visual Inspection)

- Disassemble the front and rear master cylinders.
- Check that there are no scratches, rust or pitting on the inner wall of each master cylinder [A] and on the outside of each piston [B].
- ★ If a master cylinder or piston shows any damage, replace them.
- Inspect the primary [C] and secondary [D] cups.
- ★ If a cup is worn, damaged softened (rotted), or swollen, the piston assembly should be replaced to renew the cups.
- ★ If fluid leakage is noted at the brake lever, the piston assembly should be replaced to renew the cups.
- Check the dust covers [E] for damage.
- ★ If they are damaged, replace them.
- Check that relief [F] and supply [G] ports are not plugged.
- ★ If the relief port becomes plugged, the brake pads will drag on the disc. Blow the ports clean with compressed air.
- Check the piston return springs [H] for any damage.
- ★ If the springs are damaged, replace them.

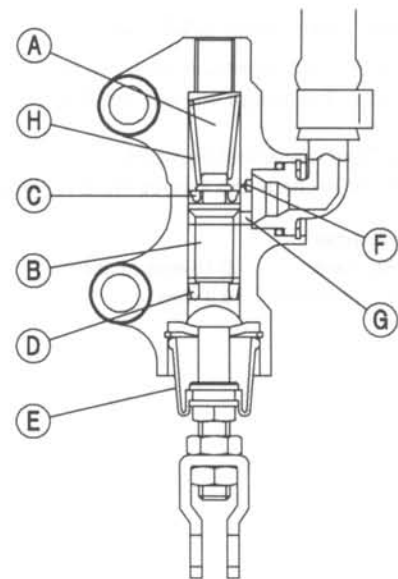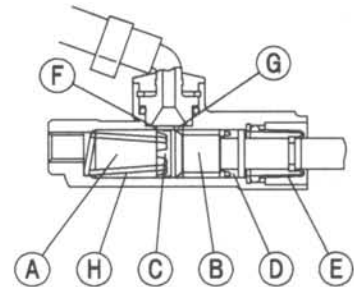


## 11-16 BRAKES

### Brake Disc

#### Brake Disc Removal

- Remove the wheel (see Wheels/Tires chapter).
- Unscrew the mounting bolts [A], and take off the disc [B].

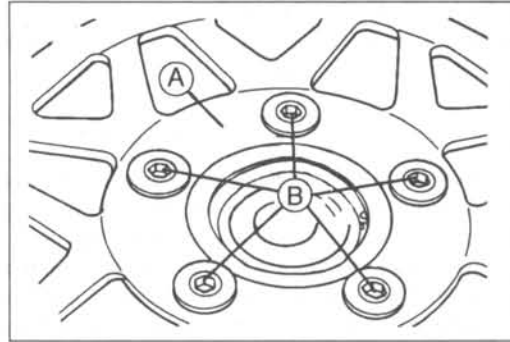

#### Brake Disc Installation

- Install the brake disc on the wheel so that the marked side faces out.
- Apply a non-permanent locking agent to the threads of the rear brake disc mounting bolts.
- Tighten the mounting bolts.

**Torque – Brake Disc Mounting bolts: 23 N-m (2.3 kg-m, 16.5 ft-lb)**

#### Brake Disc Wear


- Measure the thickness of each disc at the point where it has worn the most.
- ★ Replace the disc [A] if it has worn past the service limit.  
[B] Measuring Area

##### Front Disc Thickness

**Standard:** 3.8 ~ 4.2 mm  
**Service Limit:** 3.5 mm

##### Rear Disc Thickness

**Standard:** 5.8 ~ 6.2 mm  
**Service Limit:** 5.5 mm

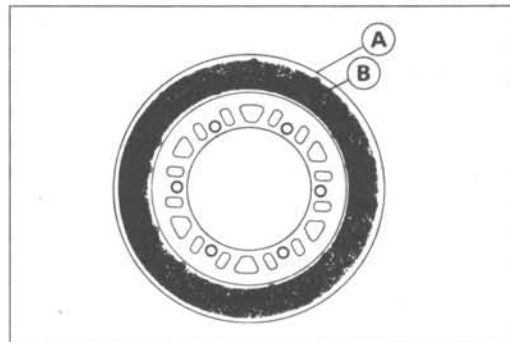


#### Brake Disc Warp

- Jack up the motorcycle so that the wheel is off the ground.
- Special Tool – Jack: 57001-1238**
- For front disc inspection, turn the handlebar fully to one side.
- Set up a dial gauge against the disc [A] as shown and measure disc runout.  
[B] Turn the wheel by hand.
- ★ If runout exceeds the service limit, replace the disc.

##### Disc Runout

**Standard:** 0.15 mm or less  
**Service Limit:** 0.3 mm

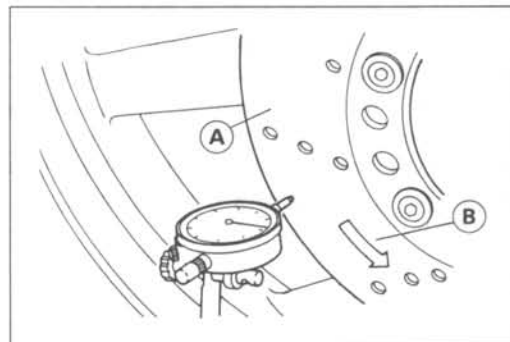

## Brake Fluid


### Level Inspection

- Check that the brake fluid level in the front brake reservoir [A] is above the lower level line [B].

#### NOTE


- Hold the reservoir horizontal by turning the handlebar when checking brake fluid level.

- ★ If the fluid level is lower than the lower level line, fill the reservoir to the upper level line [C] in the reservoir.

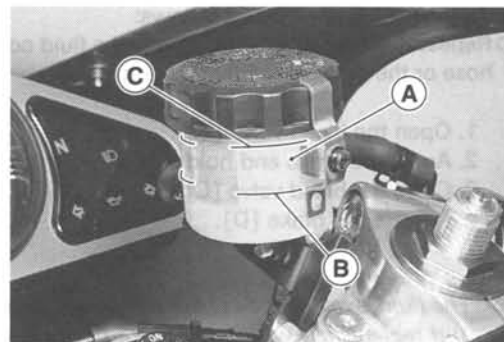

- Check that the brake fluid level in the rear brake reservoir [A] is between the upper [B] and the lower [C] level lines.

- ★ If the fluid level is lower than the lower level line, remove the seats and fill the reservoir to the upper level line.

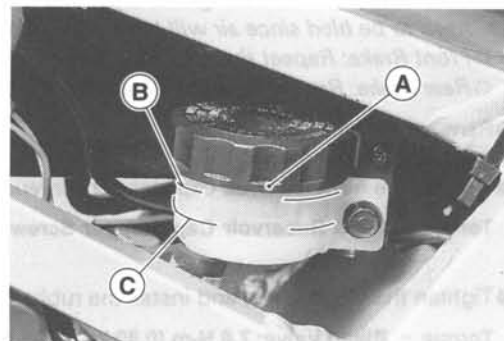

#### ⚠ WARNING

Change the brake fluid in the brake line completely if the brake fluid must be refilled but the type and brand of the brake fluid that is already in the reservoir are unidentified. After changing the fluid, use only the same type and brand of fluid thereafter.

### Recommended Disc Brake Fluid

Grade: D.O.T.4

Brand: Castrol Girling-Universal

Castrol GT (LMA)

Castrol Disc Brake Fluid


Check Shock Premium Heavy Duty

### Brake Fluid Change

#### NOTE

- The procedure to change the front brake fluid is as follows.  
Changing the rear brake fluid is the same as for the front brake.

- Level the brake fluid reservoir.
- Remove the reservoir cap.
- Remove the rubber cap from the bleed valve [A] on the caliper.
- Attach a clear plastic hose [B] to the bleed valve, and run the other end of the hose into a container.
- Fill the reservoir with fresh specified brake fluid.

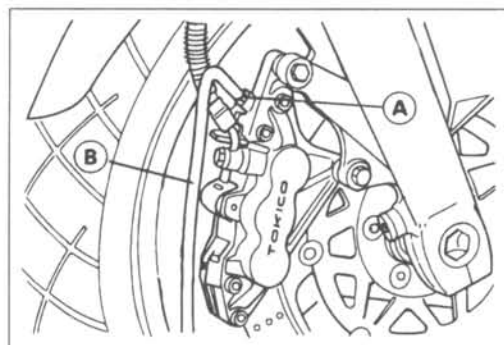



## 11-18 BRAKES

- Change the brake fluid as follows:
- Repeat this operation until fresh brake fluid comes out from the plastic hose or the color of the fluid changes.

1. Open the bleed valve [A].
2. Apply the brake and hold it [B].
3. Close the bleed valve [C].
4. Release the brake [D].

### NOTE

○ The fluid level must be checked often during the changing operation and replenished with fresh brake fluid. If the fluid in the reservoir runs out any time during the changing operation, the brakes will need to be bled since air will have entered the brake line.

○ Front Brake: Repeat the above steps for the other caliper.

○ Rear Brake: Repeat the above steps for the other bleed valve.

- Remove the clear plastic hose.
- Install the reservoir cap.
- Tighten the front reservoir cap stopper screw.


**Torque – Front Reservoir Cap Stopper Screw: 1.5 N-m (0.15 kg-m, 13 in-lb)**

- Tighten the bleed valve, and install the rubber cap.

**Torque – Bleed Valve: 7.8 N-m (0.80 kg-m, 69 in-lb)**

- After changing the fluid, check the brake for good braking power, no brake drag, and no fluid leakage.

★ If necessary, bleed the air from the lines.

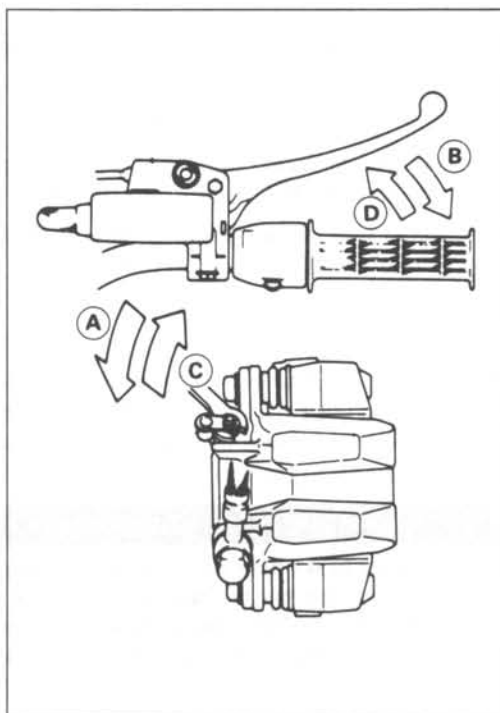

### Bleeding the Brake Line

The brake fluid has a very low compression coefficient so that almost all the movement of the brake lever or pedal is transmitted directly to the caliper for braking action. Air, however, is easily compressed. When air enters the brake lines, brake lever or pedal movement will be partially used in compressing the air. This will make the lever or pedal feel spongy, and there will be a loss in braking power.

#### ⚠ WARNING


Be sure to bleed the air from the brake line whenever brake lever or pedal action feels soft or spongy after the brake fluid is changed, or whenever a brake line fitting has been loosened for any reason.

**NOTE**

- *The procedure to bleed the front brake line is as follows. Bleeding the rear brake line is the same as for the front brake.*
- Remove the reservoir cap, and fill the reservoir with fresh brake fluid to the upper level line in the reservoir.
- With the reservoir cap off, slowly pump the brake lever several times until no air bubbles can be seen rising up through the fluid from the holes at the bottom of the reservoir.
- Bleed the air completely from the master cylinder by this operation.
- Install the reservoir cap.
- Remove the rubber cap from the bleed valve on the caliper.
- Attach a clear plastic hose to the bleed valve, and run the other end of the hose into a container.
- Bleed the brake line and the caliper as follows:
- Repeat this operation until no more air can be seen coming out into the plastic hose.
  1. Pump the brake lever until it becomes hard, and apply the brake and hold it [A].
  2. Quickly open and close [B] the bleed valve while holding the brake applied.
  3. Release the brake [C].

**NOTE**

- *The fluid level must be checked often during the bleeding operation and replenished with fresh brake fluid as necessary. If the fluid in the reservoir runs completely out any time during bleeding, the bleeding operation must be done over again from the beginning since air will have entered the line.*
  - *Tap the brake hose lightly from the caliper to the reservoir for more complete bleeding.*
  - *Front Brake: Repeat the above steps for the other caliper.*
  - *Rear Brake: Repeat the above steps for the other bleed valve.*
  - Remove the clear plastic hose.
  - Install the reservoir cap.
  - Tighten the front reservoir cap stopper screw.
- Torque – Front Reservoir Cap Stopper Screw: 1.5 N-m (0.15 kg-m, 13 in-lb)**
- Tighten the bleed valve, and install the rubber cap.
- Torque – Bleed Valve: 7.8 N-m (0.80 kg-m, 69 in-lb)**
- Check the fluid level.
  - After bleeding is done, check the brake for good braking power, no brake drag, and no fluid leakage.

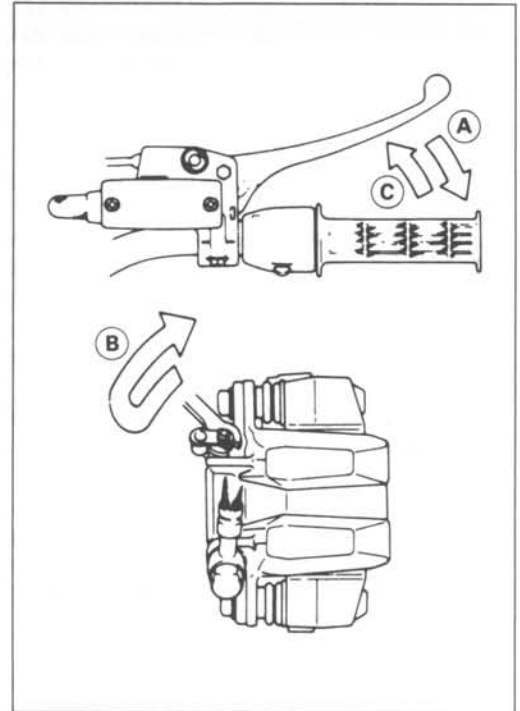

### ⚠WARNING

When working with the disc brake, observe the precautions listed below.

1. Never reuse old brake fluid.
2. Do not use fluid from a container that has been left unsealed or that has been open for a long time.
3. Do not mix two types and brands of fluid for use in the brake. This lowers the brake fluid boiling point and could cause the brake to be ineffective. It may also cause the rubber brake parts to deteriorate.
4. Don't leave the reservoir cap off for any length of time to avoid moisture contamination of the fluid.
5. Don't change the fluid in the rain or when a strong wind is blowing.
6. Except for the disc pads and disc, use only disc brake fluid, isopropyl alcohol, or ethyl alcohol for cleaning brake parts. Do not use any other fluid for cleaning these parts. Gasoline, engine oil, or any other petroleum distillate will cause deterioration of the rubber parts. Oil spilled on any part will be difficult to wash off completely and will eventually deteriorate the rubber used in the disc brake.
7. When handling the disc pads or disc, be careful that no disc brake fluid or any oil gets on them. Clean off any fluid or oil that inadvertently gets on the pads or disc with a high-flash point solvent. Do not use one which will leave an oily residue. Replace the pads with new ones if they cannot be cleaned satisfactorily.
8. Brake fluid quickly ruins painted surfaces; any spilled fluid should be completely wiped up immediately.
9. If any of the brake line fittings or the bleed valve is opened at any time, the **AIR MUST BE BLED FROM THE BRAKE LINE.**

---

## Brake Hose

---

### *Brake Hose Removal/Installation*

CAUTION
Brake fluid quickly ruins painted or plastic surfaces; any spilled fluid should be completely wiped up immediately with wet cloth.

- When removing the brake hose, take care not to spill the brake fluid on the painted or plastic parts.
- When removing the brake hose, temporarily secure the end of the brake hose to some high place to keep fluid loss to a minimum.
- There are washers on each side of the brake hose fitting. Replace them with new ones when installing.
- When installing the hoses, avoid sharp bending, kinking, flattening or twisting, and route the hoses according to Hose Routing section in General Information chapter.
- Tighten the banjo bolts at the hose fittings.

**Torque – Brake Hose Banjo Bolts: 25 N-m (2.5 kg-m, 18.0 ft-lb)**

- Bleed the brake line after installing the brake hose (see Bleeding the Brake Line).

### *Brake Hose Inspection*

- The high pressure inside the brake line can cause fluid to leak or the hose to burst if the line is not properly maintained. Bend and twist the rubber hose while examining it.
- ★ Replace it if any cracks or bulges are noticed.


# Suspension

## Table of Contents

Exploded View .....	12-2
Specifications .....	12-4
Front Fork .....	12-5
Rebound Damping Force Adjustment .....	12-5
Compression Damping Force Adjustment .....	12-5
Spring Preload Adjustment .....	12-6
Front Fork Removal (each fork leg) .....	12-6
Front Fork Installation .....	12-7
Fork Oil Change .....	12-7
Front Fork Disassembly .....	12-10
Front Fork Assembly .....	12-11
Inner Tube Inspection .....	12-11
Dust Seal Inspection .....	12-12
Spring Tension .....	12-12
Rear Shock Absorber .....	12-13
Rebound Damping Force Adjustment .....	12-13
Compression Damping Force Adjustment .....	12-13
Spring Preload Adjustment .....	12-13
Rear Shock Absorber Removal .....	12-14
Rear Shock Absorber Installation .....	12-15
Rear Shock Absorber Scrapping .....	12-15
Swingarm .....	12-16
Swingarm Removal .....	12-16
Swingarm Installation .....	12-16
Swingarm Bearing Removal .....	12-17
Swingarm Bearing Installation .....	12-17
Tie-Rod, Rocker Arm .....	12-18
Tie-Rod Removal .....	12-18
Tie-Rod Installation .....	12-18
Rocker Arm Removal .....	12-18
Rocker Arm Installation .....	12-18
Needle Bearing Inspection .....	12-18
Tie-Rod, Rocker Arm Sleeve Inspection .....	12-19


## 12-2 SUSPENSION

### Exploded View

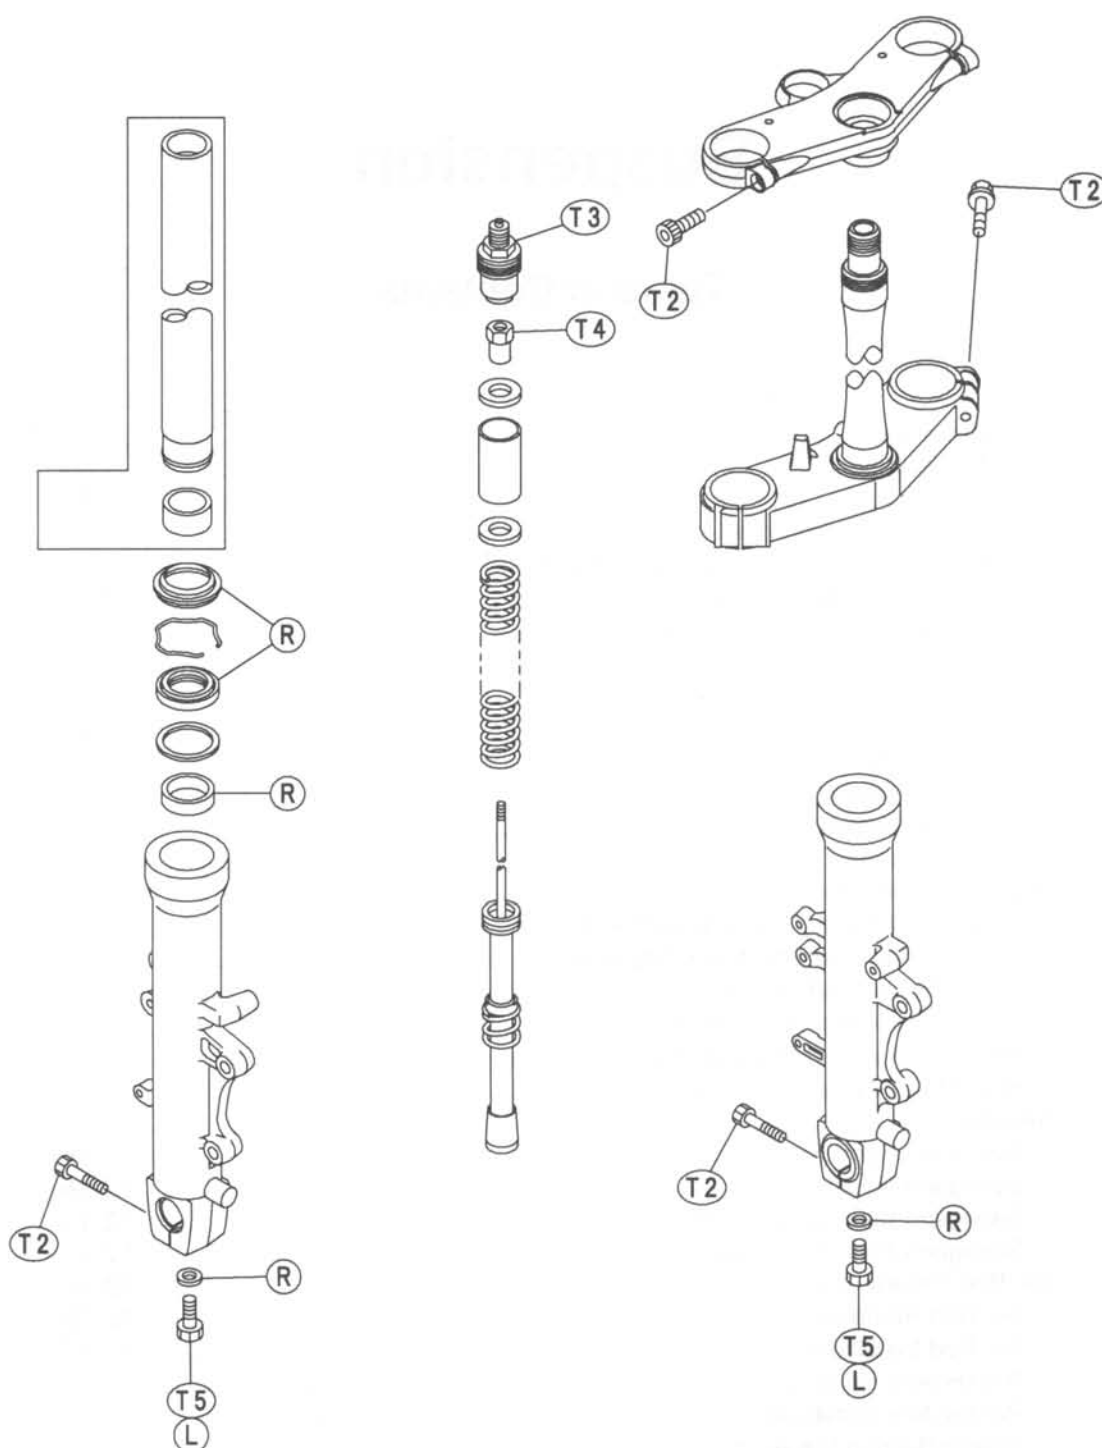

L: Apply a non-permanent locking agent.  
R: Replacement Parts

T1: 15 N-m (1.5 kg-m, 11.0 ft-lb)  
T2: 20 N-m (2.0 kg-m, 14.5 ft-lb)  
T3: 23 N-m (2.3 kg-m, 16.5 ft-lb)  
T4: 27 N-m (2.8 kg-m, 20 ft-lb)  
T5: 39 N-m (4.0 kg-m, 29 ft-lb)

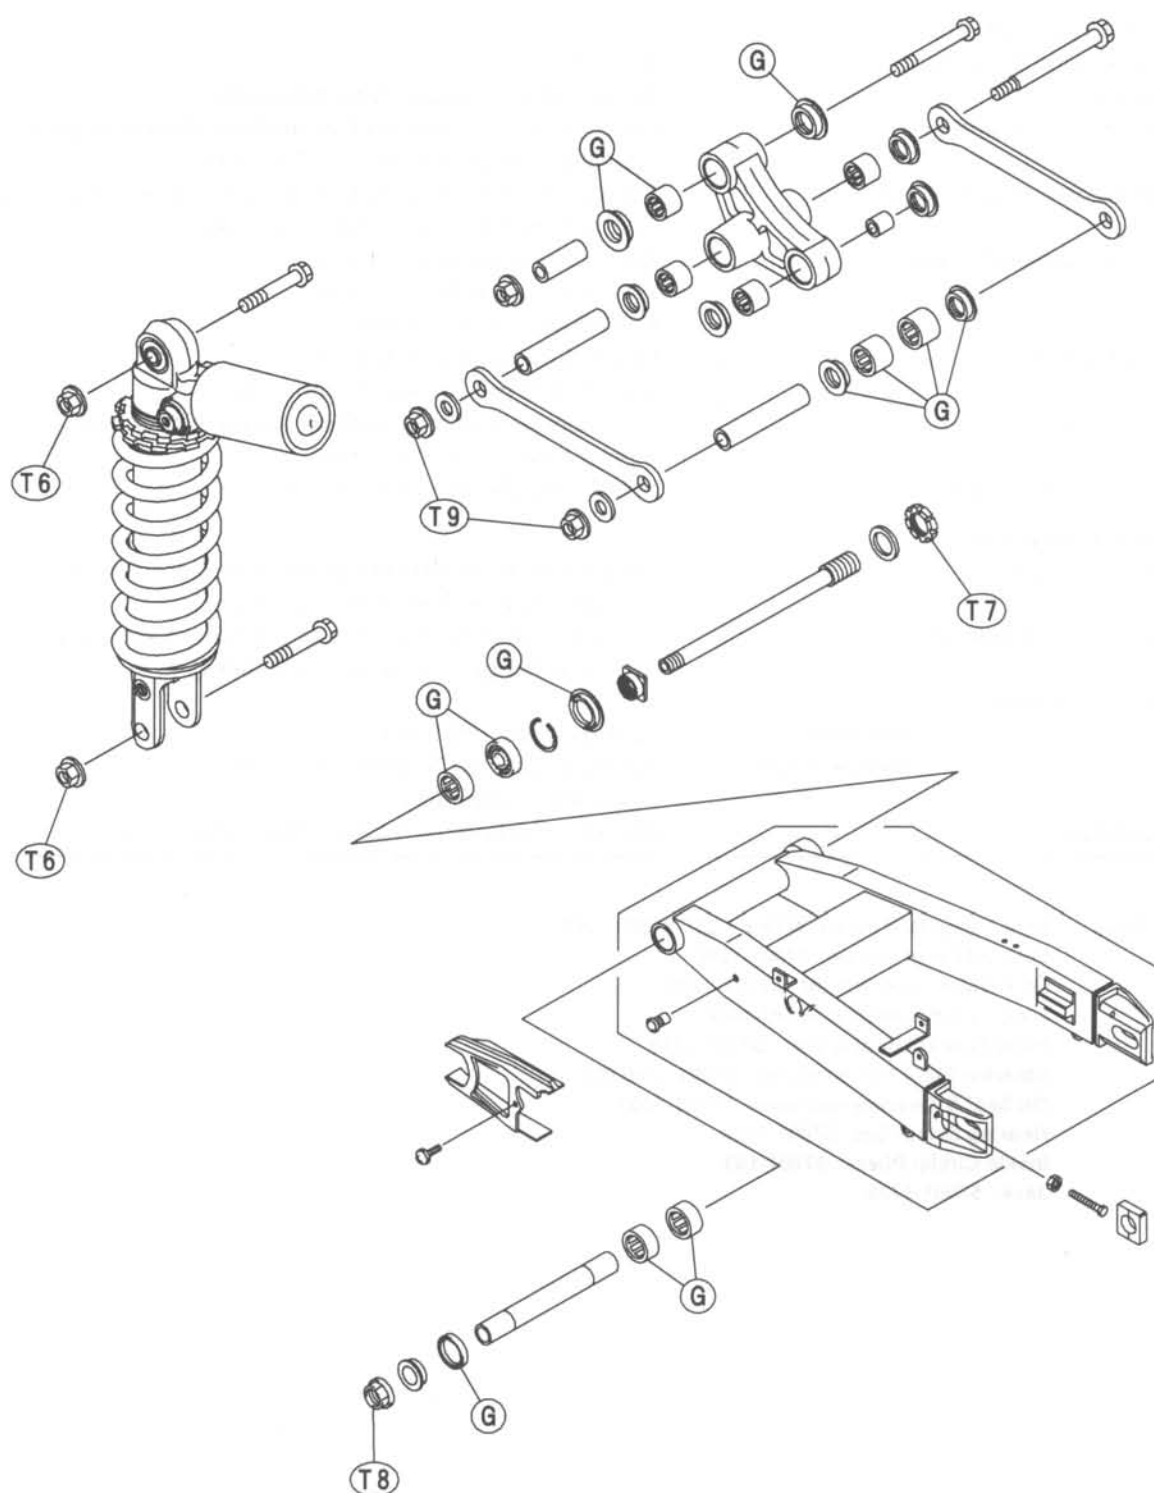

G: Apply grease.

T6: 34 N-m (3.5 kg-m, 25 ft-lb)  
 T7: 98 N-m (10.0 kg-m, 72 ft-lb)  
 T8: 110 N-m (11.0 kg-m, 80 ft-lb)  
 T9: 59 N-m (6.0 kg-m, 43 ft-lb)

## 12-4 SUSPENSION

### Specifications

Item	Standard
<b>Front Fork (per one unit):</b>	
Fork inner tube diameter	φ46 mm
Air Pressure	Atmospheric pressure (Non-adjustable)
Rebound damper setting	5th click from the first click of the fully clockwise position (Usable Range: 1 ↔ 12 ~ 14 clicks)
Compression damper setting	7th click from the first click of the fully clockwise position (Usable Range: 1 ↔ 10 ~ 12 clicks)
Fork spring preload setting	Adjuster protrusion is 17 mm (Usable Range: 5 ~ 20 mm)
Fork oil viscosity	KAYABA G10 (SAE10W)
Fork oil capacity	565 ± 4 mL (completely dry) approx. 479 mL (when changing oil)
Fork oil level	Fully compressed, without fork spring, below from inner tube top 123 ± 2 mm
Fork spring free length	289.1 mm (Service limit 283 mm)
<b>Rear Shock Absorber:</b>	
Rebound damper set	5th click from the first click of the fully clockwise position (Usable Range: 1 ↔ 20 ~ 22 clicks)
Compression damper set	12th click from the first click of the fully clockwise position (Usable Range: 1 ↔ 20 ~ 22 clicks)
Spring setting position	
Standard	Spring length 192.5 mm
Usable range	Spring length 181.5 mm to 202.5 mm (weaker to stronger)
Gas pressure	980 kPa (10 kg/cm <sup>2</sup> , 142 psi, Non-adjustable)

**Special Tools – Fork Piston Rod Puller, M12 x 1.25: 57001-1289**

**Fork Oil Level Gauge: 57001-1290**

**Fork Outer Tube Weight: 57001-1218**

**Fork Cylinder Holder: 57001-1406**

**Front Fork Oil Seal Driver: 57001-1219**

**Steering Stem Nut Wrenches: 57001-1100 (2)**

**Oil Seal & Bearing Remover: 57001-1058**

**Bearing Driver Set: 57001-1129**

**Inside Circlip Pliers: 57001-143**

**Jack: 57001-1238**



## Front Fork

### Rebound Damping Force Adjustment

- To adjust the rebound damping force, turn the rebound damping adjuster [A] until you feel a click.
- The standard adjuster setting for the average-build rider of 68 kg (150 lb) with no passenger and no accessories is the **5th click** from the 1st click of the fully clockwise position.

#### ⚠ WARNING

**If both adjusters are not adjusted equally, handling may be impaired and a hazardous condition may result.**

- The damping force can be left soft for average riding. But it should be adjusted harder for high speed riding or riding with a passenger. If the damping feels too soft or too stiff, adjust it in accordance with the following table.

#### Rebound Damping Force Adjustment

Adjuster Position	Damping Force	Setting	Load	Road	Speed
12 ~ 14 ↑ ↓ 1	Weak ↑ ↓ Strong	Soft ↑ ↓ Hard	Light ↑ ↓ Heavy	Good ↑ ↓ Bad	Low ↑ ↓ High

### Compression Damping Force Adjustment

- To adjust the compression damping force, turn the compression damping adjuster [A] until you feel a click.
- The standard adjuster setting for the average-build rider of 68 kg (150 lb) with no passenger and no accessories is the **7th click** from the 1st click of the fully clockwise position.


#### ⚠ WARNING

**If both adjusters are not adjusted equally, handling may be impaired and a hazardous condition may result.**

- The damping force can be left soft for average riding. But it should be adjusted harder for high speed riding or riding with a passenger. If the damping feels too soft or too stiff, adjust it in accordance with the following table.

#### Compression Damping Force Adjustment

Adjuster Position	Damping Force	Setting	Load	Road	Speed
10 ~ 12 ↑ ↓ 1	Weak ↑ ↓ Strong	Soft ↑ ↓ Hard	Light ↑ ↓ Heavy	Good ↑ ↓ Bad	Low ↑ ↓ High

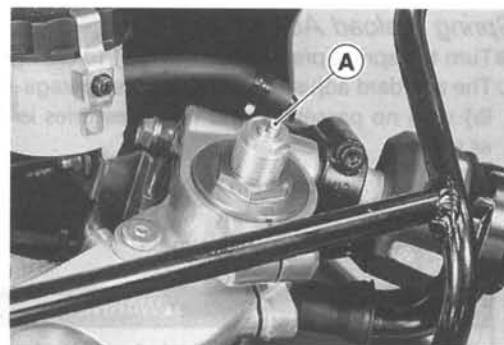

**Spring Preload Adjustment**

- Turn the spring preload adjuster [A] to change spring preload setting.
- The standard adjuster setting for the average-build rider of 68 kg (150 lb) with no passenger and no accessories is the 15mm [B] from top as shown.


**Adjuster Protrusion (from top)**

Standard: 15 mm

Usable Range 5 ~ 20 mm

**⚠ WARNING**

**If both adjusters are not adjusted equally, handling may be impaired and a hazardous condition may result.**

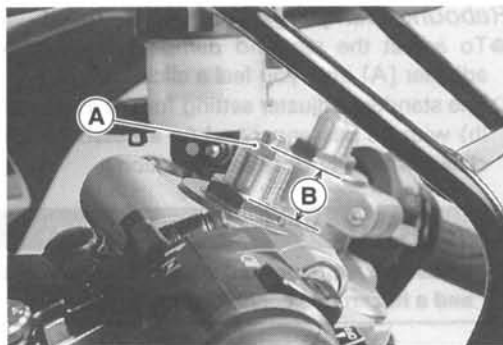

- The spring preload can be left soft for average riding. But it should be adjusted harder for high speed riding or riding with a passenger. If the spring action feels too soft or too stiff, adjust it in accordance with the following table.

**Spring Action**



Adjuster Position	Dumping Force	Setting	Load	Road	Speed
20 mm	Weak	Soft	Light	Good	Low
↑	↑	↑	↑	↑	↑
↓	↓	↓	↓	↓	↓
5 mm	Strong	Hard	Heavy	Bad	High

**Front Fork Removal (each fork leg)**

- Remove:
  - Lower, Middle, and Upper Fairings (see Frame chapter)
  - Front Wheel (see Wheels/Tires chapter)
  - Front Fender (see Frame chapter)
- ★ Loosen the handlebar holder bolt [A], upper fork clamp bolt [B] and fork top plug [C] before-hand if the fork leg is to be disassembled.

**NOTE**

- Loosen the top plug after loosening the handlebar holder bolt and upper fork clamp bolt.
- Loosen the handlebar holder bolt [A], upper fork clamp bolt [B] and lower fork clamp bolts [C].
- With a twisting motion, work the fork leg down and out.

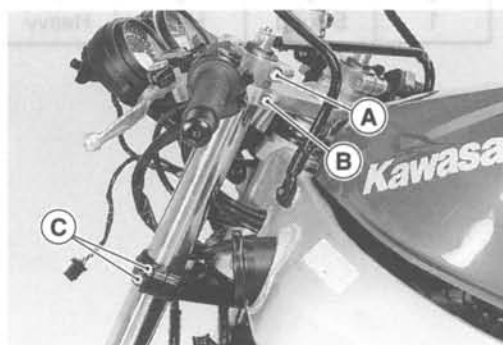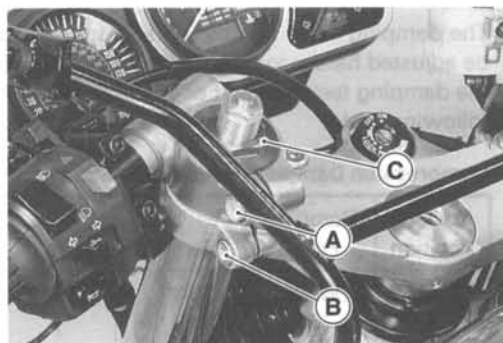

### Front Fork Installation

- Install the fork so that the top end [A] of the inner tube is flush with the upper surface [B] of the handlebar holder.
- Tighten the lower fork clamp bolt and fork top bolt.


**Torque – Front Fork Clamp Bolt (Lower): 20 N-m (2.0 kg-m, 14.5 ft-lb)**  
**Front Fork Top Plug: 23 N-m (2.3 kg-m, 16.5 ft-lb)**

- Tighten the handlebar holder bolt and upper fork clamp bolt.

**Torque – Handlebar Holder Bolt: 23 N-m (2.3 kg-m, 16.5 ft-lb)**  
**Front Fork Clamp Bolt (Upper): 20 N-m (2.0 kg-m, 14.5 ft-lb)**


### NOTE

- Tighten the top plug before tightening the handlebar holder bolt and upper fork clamp bolt.
- Install the removed parts (see appropriate chapters).
- Adjust the spring preload and the damping force.

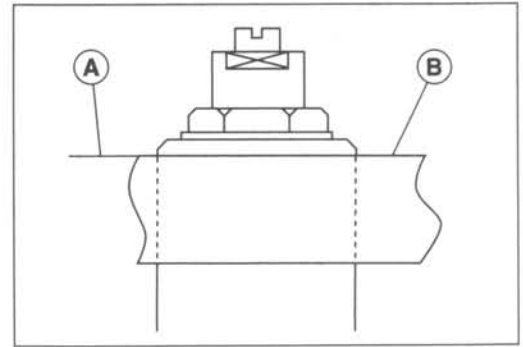


### Fork Oil Change


- Remove the front fork (see Front Fork Removal).
- Turn the spring preload adjuster [A] counterclockwise until the fully position.
- Unscrew the top plug [B] out of the inner tube.

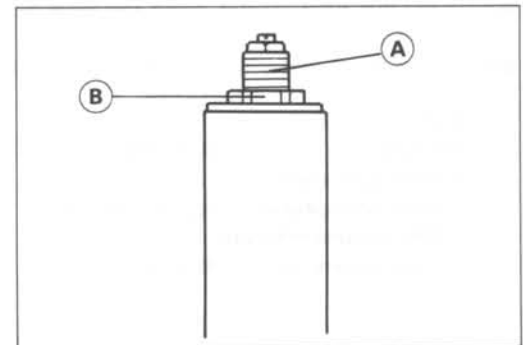

- Holding the piston rod nut [A] with a wrench [B], remove the fork top plug from the piston rod.

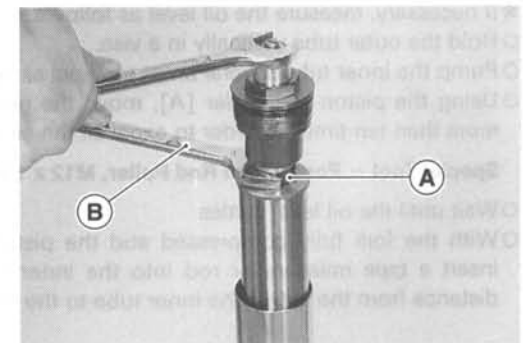


- Remove:
  - Rebound Damping Adjuster Rod [A]
  - Washer [B]
  - Spacer [C]

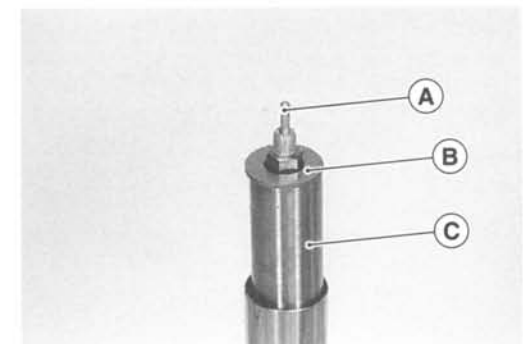


## 12-8 SUSPENSION

Washer [B]  
Fork Spring [A]

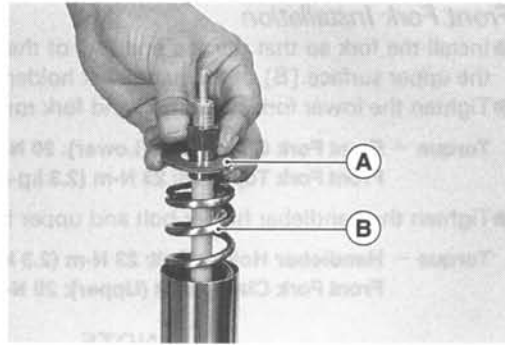

- Drain the fork oil into a suitable container.
- Pump the piston rod [A] up and down at least ten times to expel the oil from the fork.

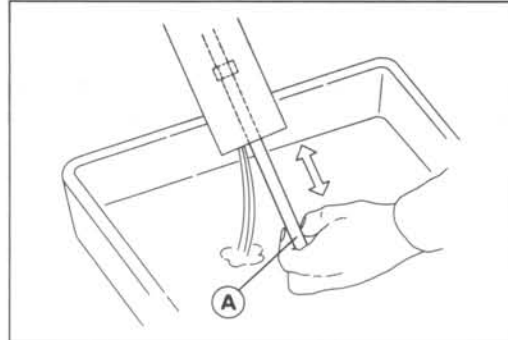

- Hold the fork tube upright, press the inner tube and the piston rod all the way down.
- Pour in the type and amount of fork oil specified.


### Fork Oil

Viscosity: SAE 10W  
Amount (per side)  
When changing oil: approx. 479 mL  
After disassembly and completely dry:  $565 \pm 4$  mL

- ★ If necessary, measure the oil level as follows.
- Hold the outer tube vertically in a vise.
- Pump the inner tube several times to expel air bubbles.
- Using the piston rod puller [A], move the piston rod up and down more than ten times in order to expel all the air from the fork oil.

**Special Tool – Fork Piston Rod Puller, M12 x 1.25: 57001-1289**

- Wait until the oil level settles.
- With the fork fully compressed and the piston rod fully pushed in, insert a tape measure or rod into the inner tube, and measure the distance from the top of the inner tube to the oil.

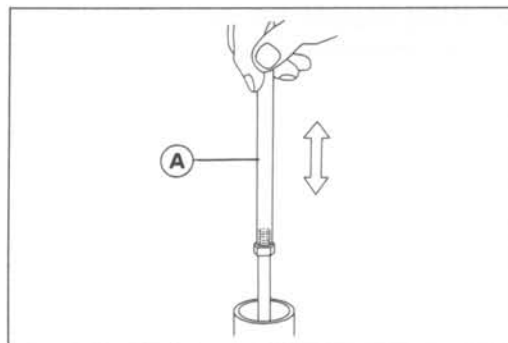

**Oil Level (fully compressed, without spring)**


**Standard:**  $123 \pm 2$  mm (from the top of the inner tube)

**NOTE**


○ Fork oil level may also be measured using the fork oil level gauge.

**Special Tool – Fork Oil Level Gauge: 57001-1290 [A]**

- With the fork fully compressed and without fork spring, insert the gauge tube into the inner tube [B] and position the stopper across the top end of the inner tube.
- Set the gauge stopper [C] so that its lower side shows the oil level distance specified [D].
- Pull the handle slowly to pump out the excess oil until the oil no longer comes out.
- ★ If no oil is pumped out, there is insufficient oil in the inner tube. Pour in enough oil, then pump out the excess oil as shown above.

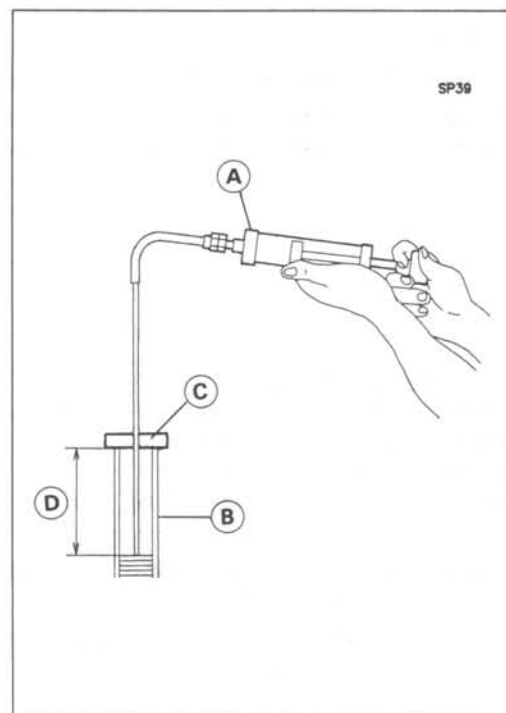

- Pull the piston rod [A] up above the inner tube top.
- Screw the rod nut [B] on to the piston rod with the chamfered side [C] down.
- Check that the visible thread length is at least 12 mm [D].

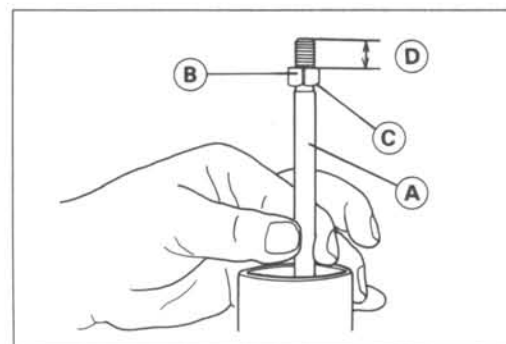


- Insert the rebound damping adjuster rod into the piston rod.
- Screw the fork piston rod puller onto the end of the rod.

**Special Tool – Fork Piston Rod Puller, M12 x 1.25: 57001-1289**

- Install the fork spring with the smaller end facing upward.
- Install:
  - Washer
  - Spacer
  - Washer

- Check the O-ring [A] on the top plug and replace it with a new one if damaged.
- Screw in the damper adjuster [B] of the top plug so that the distance between the adjuster bottom and the spring adjuster [C] end is 25 mm [D].

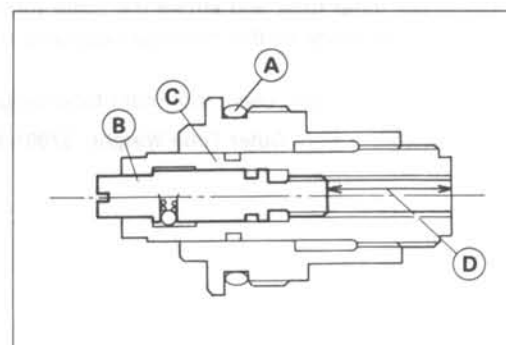


## 12-10 SUSPENSION

- Holding the top plug [A] with a wrench, tighten the piston rod nut [B] against the top plug.

**Torque – Piston Rod Nut: 27 N-m (2.8 kg-m, 20 ft-lb)**

- Raise the outer tube and screw the top plug into it.
- Install the front fork (see Front Fork Installation).

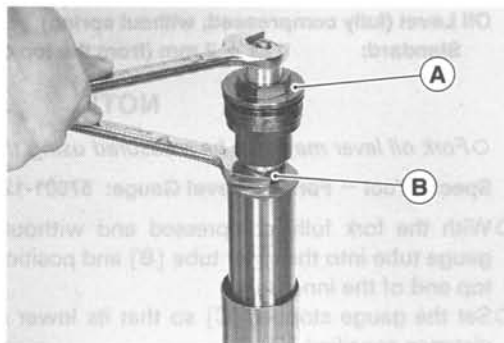


### Front Fork Disassembly


- Remove the front fork (see Front Fork Removal).
- Drain the fork oil (see Fork Oil Change).
- Hold the front fork in a vise [A].
- Stop the cylinder [B] from turning by using the fork cylinder holder [C].

**Special Tool – Fork Cylinder Holder: 57001-1406**  
**57001 1406**


- Unscrew the Allen bolt [D], then take the bolt and gasket out of the bottom of the inner tube.

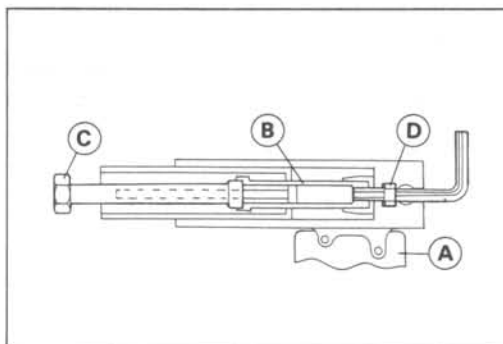

- Take the cylinder unit [A].
- Do not disassemble the cylinder unit.

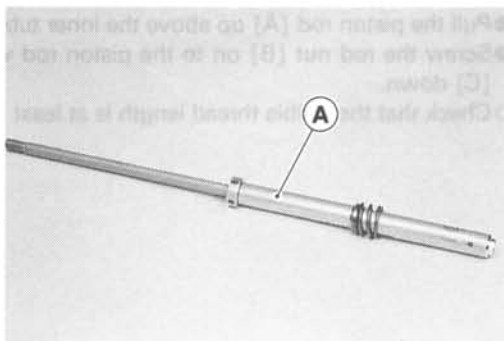


- Separate the inner tube from the outer tube as follows.
- Slide up the dust seal [A].
- Remove the retaining ring [B] from the outer tube.

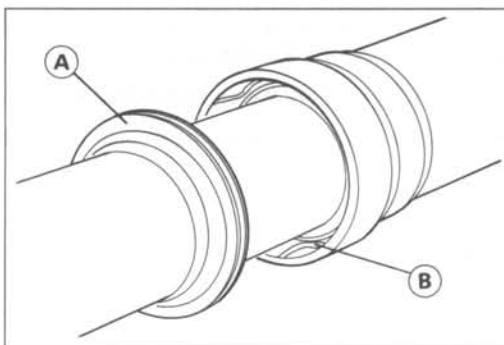


- Grasp the inner tube and stroke the outer tube up and down several times. The shock to the fork seal separates the inner tube from the outer tube.

★ If the tubes are tight, use a fork outer tube weight [A].

**Special Tool – Fork Outer Tube Weight: 57001-1218**

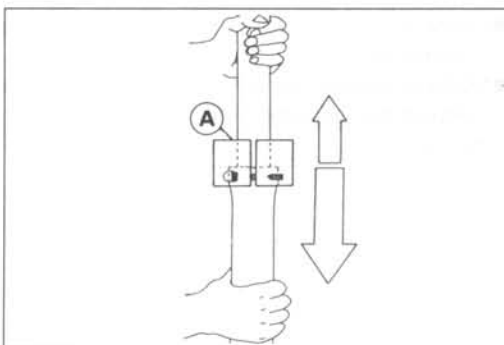


- Remove the inner tube guide bushing [A], outer tube guide bushing [B], washer [C], oil seal [D] from the inner tube.
- Remove the cylinder base from the bottom of the outer tube.

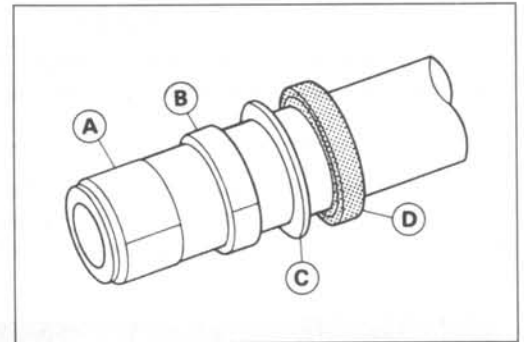

### Front Fork Assembly

- Replace the following parts with new one.
    - Oil Seal
    - Guide Bushings
  - Install the following parts onto the inner tube.
    - Dust Seal
    - Retaining Ring
    - Oil Seal
    - Washer
    - Outer Tube Guide Bushing
    - Inner Tube Guide Bushing
  - Insert the cylinder unit [A] into the inner tube [B].
  - Install the cylinder base [C] on the cylinder unit.
  - Insert the inner tube, cylinder unit, cylinder base as a set into the outer tube [D].
  - Replace the bottom Allen bolt gasket with a new one.
  - Stop the cylinder from turning by using the fork cylinder holder.
- Special Tool – Fork Cylinder Holder: 57001-1406**
- Apply a non-permanent locking agent to the Allen bolt and tighten it.
- Torque – Front Fork Bottom Allen Bolt: 39 N-m (4.0 kg-m, 29 ft-lb)**
- Fit the new outer guide bush [A] into the outer tube.

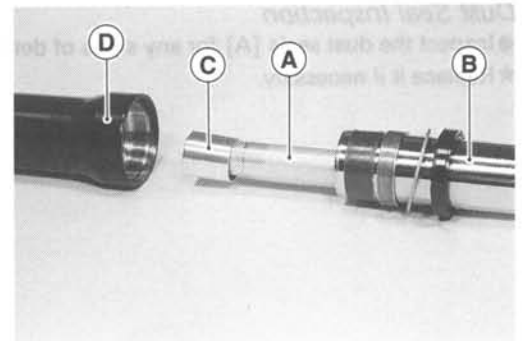


### NOTE

- When assembling the new outer tube guide bushing, hold the used guide bushing [B] against the new bushing and tap the used guide bushing with the fork oil seal driver [C] until it stops.

**Special Tool – Front Fork Oil Seal Driver: 57001-1219**

- After installing the washer, install the oil seal by using the fork oil seal driver.
- Install the retaining ring and dust seal by hand.
- Pour in the specified type of oil (see Fork Oil Change).

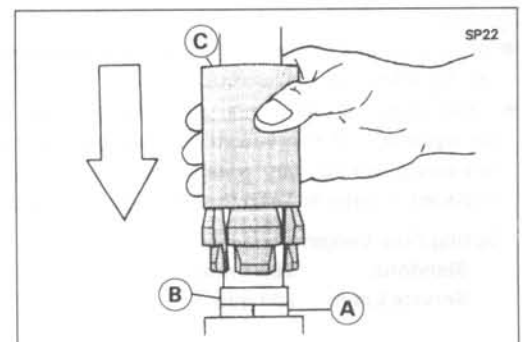

### Inner Tube Inspection

- Visually inspect the inner tube, and repair any damage.
- Nicks or rust damage can sometimes be repaired by using a wet-stone to remove sharp edges or raised areas which cause seal damage.
- ★ If the damage is not repairable, replace the inner tube. Since damage to the inner tube damages the oil seal, replace the oil seal whenever the inner tube is repaired or replaced.

## 12-12 SUSPENSION

### CAUTION

If the inner tube is badly bent or creased, replace it. Excessive bending, followed by subsequent straightening, can weaken the inner tube.


- Temporarily assemble the inner and outer tubes, and pump them back and forth manually to check for smooth operation.
- If you feel binding or catching, the inner and outer tubes must be replaced.

### ⚠WARNING

A straightened inner or outer fork tube may fall in use, possibly causing an accident. Replace a badly bent or damaged inner or outer tube and inspect the other tube carefully before reusing it.

### Dust Seal Inspection

- Inspect the dust seals [A] for any signs of deterioration or damage.
- ★ Replace it if necessary.

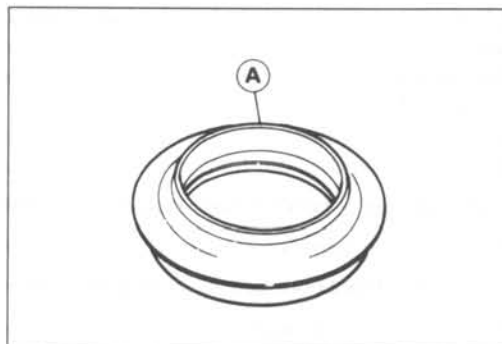


### Spring Tension

- Since a spring becomes shorter as it weakens, check its free length [A] to determine its condition.
- ★ If the spring of either fork leg is shorter than the service limit, it must be replaced. If the length of a replacement spring and that of the remaining spring vary greatly, the remaining spring should also be replaced in order to keep the fork legs balanced for motorcycle stability.

#### Spring Free Length

Standard: 289.1 mm  
Service Limit: 283 mm

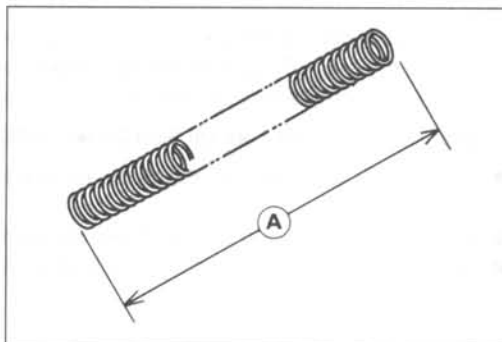




## Rear Shock Absorber

### Rebound Damping Force Adjustment

- To adjust the rebound damping force, turn the rebound damping adjuster [A] until you feel a click.
- The standard adjuster setting for an average-build rider of 68 kg (150 lb) with no passenger and no accessories is the **5th click** from the 1st click of the fully clockwise position.
- ★ If the damping feels too soft or too stiff, adjust it.

#### Rebound Damping Force Adjustment

Adjuster Position	Damping Force	Setting	Load	Road	Speed
20 ~ 22 ↑ ↓ 1	Weak ↑ ↓ Strong	Soft ↑ ↓ Hard	Light ↑ ↓ Heavy	Good ↑ ↓ Bad	Low ↑ ↓ High

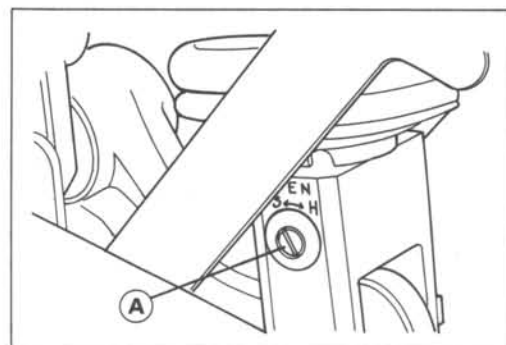

### Compression Damping Force Adjustment

- To adjust the compression damping force, turn the compression damping adjuster [A] on the gas reservoir until you feel a click.
- The standard adjuster setting for the average-build rider of 68 kg (150 lb) with no passenger and no accessories is the **12th click** from the 1st click of the fully clockwise position.
- The damping force can be left soft for average riding. But it should be adjusted harder for high speed riding or riding with a passenger. If the damping feels too soft or too stiff, adjust it in accordance with the following table.

#### Compression Damping Force Adjustment

Adjuster Position	Damping Force	Setting	Load	Road	Speed
20 ~ 22 ↑ ↓ 1	Weak ↑ ↓ Strong	Soft ↑ ↓ Hard	Light ↑ ↓ Heavy	Good ↑ ↓ Bad	Low ↑ ↓ High



### Spring Preload Adjustment

- Remove the rear shock absorber from the frame (see Rear Shock Absorber Removal).
- Loosen the locknut and turn out the adjusting nut to free the spring.

**Special Tool – Steering Stem Nut Wrenches: 57001-1100 (2)**

- Measure the spring free length.

#### Spring Free Length

**Standard: 204.5 mm**

## 12-14 SUSPENSION

- To adjust the spring preload, turn in the adjusting nut [A] to the desired position and tighten the locknut [B].  
[C] Spring Length

### Spring Preload Setting

**Standard:** Spring length 192.5 mm  
**Usable Range:** Spring length 181.5 to 202.5 mm  
 (weaker to stronger)



- The standard adjusting nut setting for an average-build rider of 68 kg (150 lb) with no passenger and no accessories is 192.5 mm spring length.

- ★ If the spring action feels too soft or too stiff, adjust it.

**Special Tool – Hook Wrench: 57001-1101 [A]**

### Spring Adjustment

Adjuster Position	Damping Force	Setting	Load	Road	Speed
181.5 mm	Weak	Soft	Light	Good	Low
↑	↑	↑	↑	↑	↑
↓	↓	↓	↓	↓	↓
202.5 mm	Strong	Hard	Heavy	Bad	High

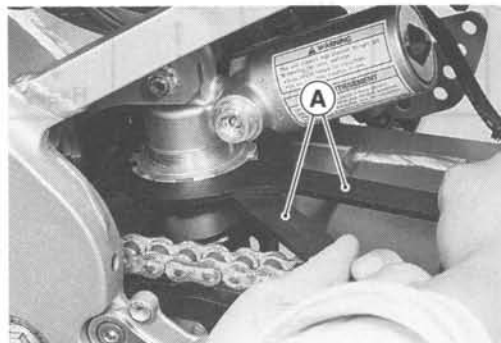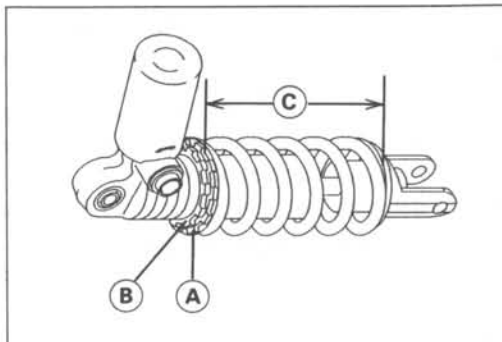


### Rear Shock Absorber Removal

- Using the jack, raise the rear wheel off the ground.

**Special Tool – Jack: 57001-1238**

- Remove:


Lower Shock Absorber Nut [A]  
 Lower shock Absorber Bolt [B]

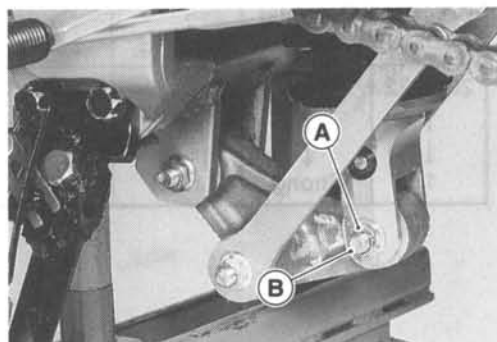

- Remove:

Upper Shock Absorber Nut [A]  
 Upper Shock Absorber Bolt [B]

- Remove the shock absorber from upside.

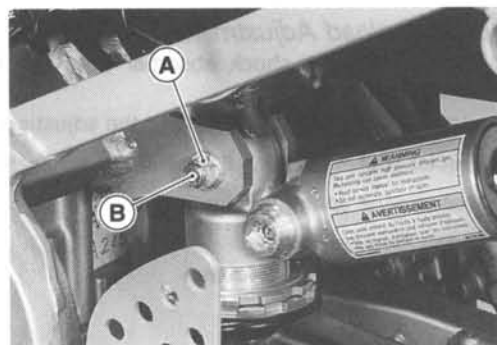

### Rear Shock Absorber Installation

- Pack the rocker arm needle bearings with grease.
- Tighten the following nuts:

**Torque – Rear Shock Absorber Nuts: 34 N-m (3.5 kg-m, 25 ft-lb)**

**Tie-Rod Nuts: 59 N-m (6.0 kg-m, 43 ft-lb)**

### Rear Shock Absorber Scrapping


#### ⚠WARNING

Since the reservoir tank of the rear shock absorber contains nitrogen gas, do not incinerate the reservoir tank without first releasing the gas or it may explode.

- Remove the shock absorber (see Rear Shock Absorber Removal).
- Remove the valve cap [A] and release the nitrogen gas completely from the gas reservoir.
- Remove the valve.

#### ⚠WARNING

Since the high pressure gas is dangerous, do not point the valve toward your face or body.

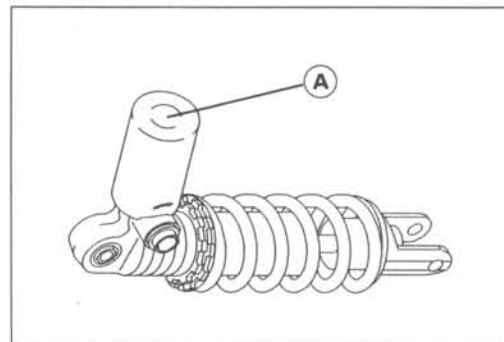

## 12-16 SUSPENSION

### Swingarm


#### Swingarm Removal

● Remove:

- Rear Wheel (see Wheels/Tires chapter)
- Chain Cover (see Final Drive chapter)
- Brake Hose Rubber Clamp [A]




- Lower Shock Absorber Nut and Bolt [A]
- Upper Tie-Rod Nut and Bolt [B]

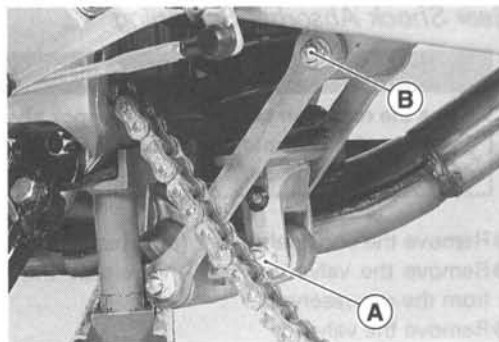


- Loosen the upper shock absorber nut.
- Unscrew the swingarm pivot locknut [A], using the socket wrench [B].
- Do not use the socket wrench washer.

**Special Tool – Socket Wrench: 57001-1354**

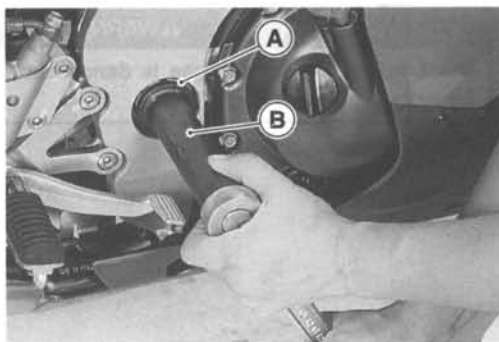


- Unscrew the swingarm pivot nut [A] and loosen the swingarm pivot shaft [B].
- Pull off the pivot shaft and remove the swingarm.

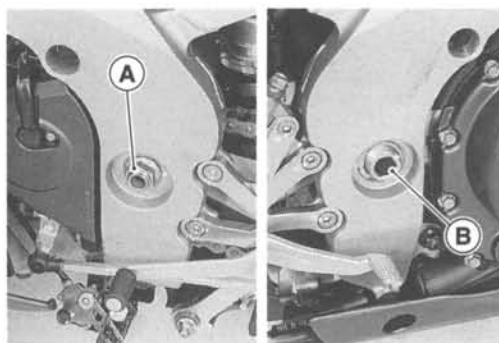

#### Swingarm Installation

- Apply plenty of grease to the ball bearing, needle bearings and grease seals.
- Install the collars [A].

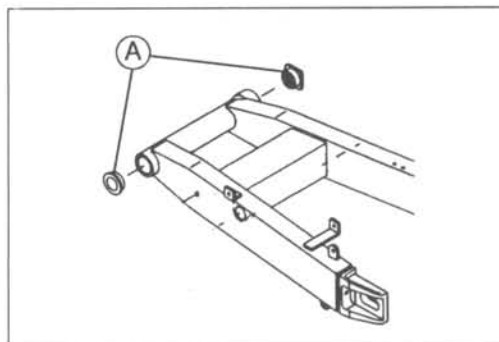

- Place the right collar [A] on the stopper [B] inside the frame [C].
- Insert the pivot shaft into the frame from the left side.
- Tighten the pivot shaft.

**Torque – Swingarm Pivot Shaft:** 15 ~ 20 N-m (1.5 ~ 2.0 kg-m, 11 ~ 14.5 ft-lb)


- Tighten the pivot nut.

**Torque – Swingarm Pivot Nut:** 110 N-m (11.0 kg-m, 80 ft-lb)

- Install the removed parts (see appropriate chapters).
- Tighten the pivot locknut, using the socket wrench.

**Special Tool – Socket Wrench:** 57001-1354

**Torque – Swingarm Pivot Locknut:** 98 N-m (10.0 kg-m, 72 ft-lb)

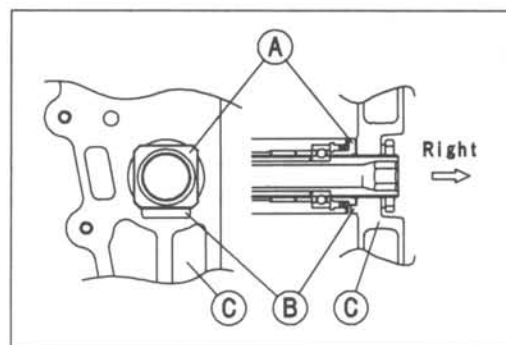


### Swingarm Bearing Removal

- Remove:


Swingarm  
Collars [A]  
Grease Seals [B]  
Sleeve [C]  
Circlip (right side) [D]

**Special Tool – Inside Circlip Pliers:** 57001-143

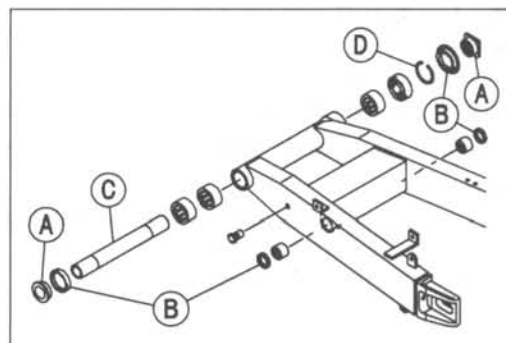

- Remove the ball bearing and needle bearings using the oil seal & bearing remover [A].


**Special Tool – Oil Seal & Bearing Remover:** 57001-1058

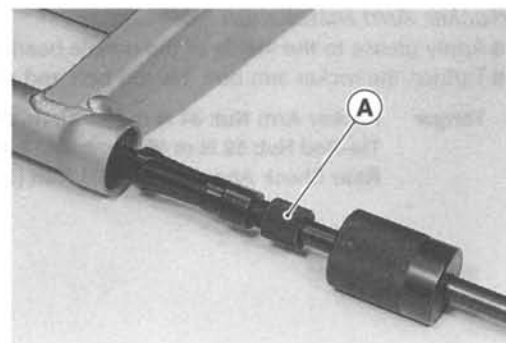

### Swingarm Bearing Installation

- Apply plenty of grease to the ball bearing and needle bearings.
- Install the needle bearings so that the manufacturer's marks face in.
- Install the ball bearing so that the manufacturer's marks faces out.

**Special Tool – Bearing Driver Set:** 57001-1129 [A]

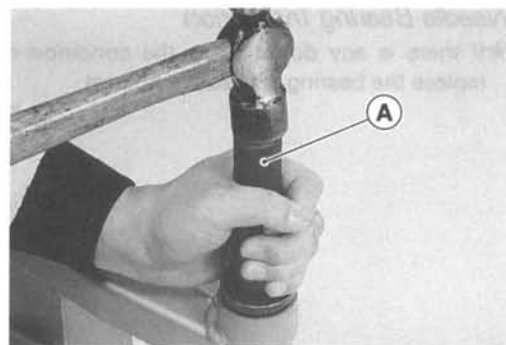

## 12-18 SUSPENSION

### Tie-Rod, Rocker Arm


#### *Tie-Rod Removal*

- Using the jack, raise the rear wheel off the ground.

**Special Tool – Jack: 57001-1238**

- Remove:

Lower Rear Shock Absorber Bolt and Nut [A]  
Upper and Lower Tie-Rod Bolts and Nuts [B]  
Tie-Rods [C]

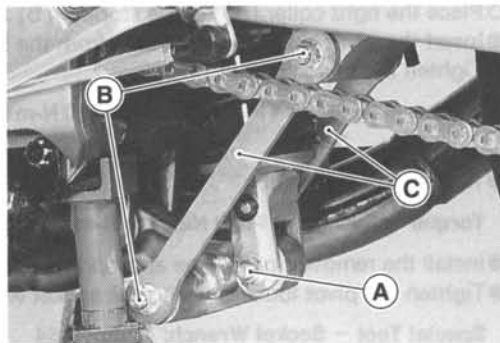

#### *Tie-Rod Installation*

- Apply grease to the inside of the needle bearings and oil seals.
- Install the tie-rods so that the chamfered side faces the bolts and nuts.
- Tighten the upper and lower tie-rod bolts.

**Torque – Tie-Rod Nuts: 59 N-m (6.0 kg-m, 43 ft-lb)**

**Rear Shock Absorber Nut: 34 N-m (3.5 kg-m, 25 ft-lb)**

#### *Rocker Arm Removal*

- Remove:


Muffler (see Engine Top End chapter)

- Using the jack, raise the rear wheel off the ground.

**Special Tool – Jack: 57001-1238**

- Remove:

Lower Rear Shock Absorber Bolt and Nut [A]  
Lower Tie-Rod Bolt and Nut [B]  
Rocker Arm Bolt and Nut [C]  
Rocker Arm [D]

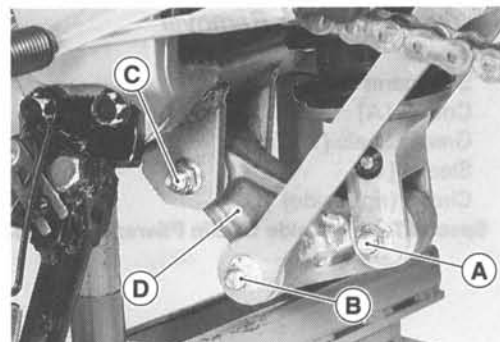

#### *Rocker Arm Installation*

- Apply grease to the inside of the needle bearings and oil seal lips.
- Tighten the rocker arm bolt, tie-rod bolt and shock absorber bolt.

**Torque – Rocker Arm Nut: 34 N-m (3.5 kg-m, 25 ft-lb)**

**Tie-Rod Nut: 59 N-m (6.0 kg-m, 43 ft-lb)**

**Rear Shock Absorber Nut: 34 N-m (3.5 kg-m, 25 ft-lb)**

#### *Needle Bearing Inspection*

- ★ If there is any doubt as to the condition of either needle bearing, replace the bearing and sleeve as a set.

*Tie-Rod, Rocker Arm Sleeve Inspection*

★ If there is visible damage, replace the sleeve and needle bearing as a set.

# Steering


## Table of Contents

Exploded View .....	13-2
Specifications .....	13-3
Steering .....	13-4
Steering Inspection .....	13-4
Steering Adjustment .....	13-4
Steering Stem .....	13-5
Stem, Stem Bearing Removal .....	13-5
Stem, Stem Bearing Installation .....	13-5
Stem Bearing Lubrication .....	13-7
Handlebar .....	13-8
Handlebar Removal .....	13-8
Handlebar Installation .....	13-8



## 13-2 STEERING

### Exploded View

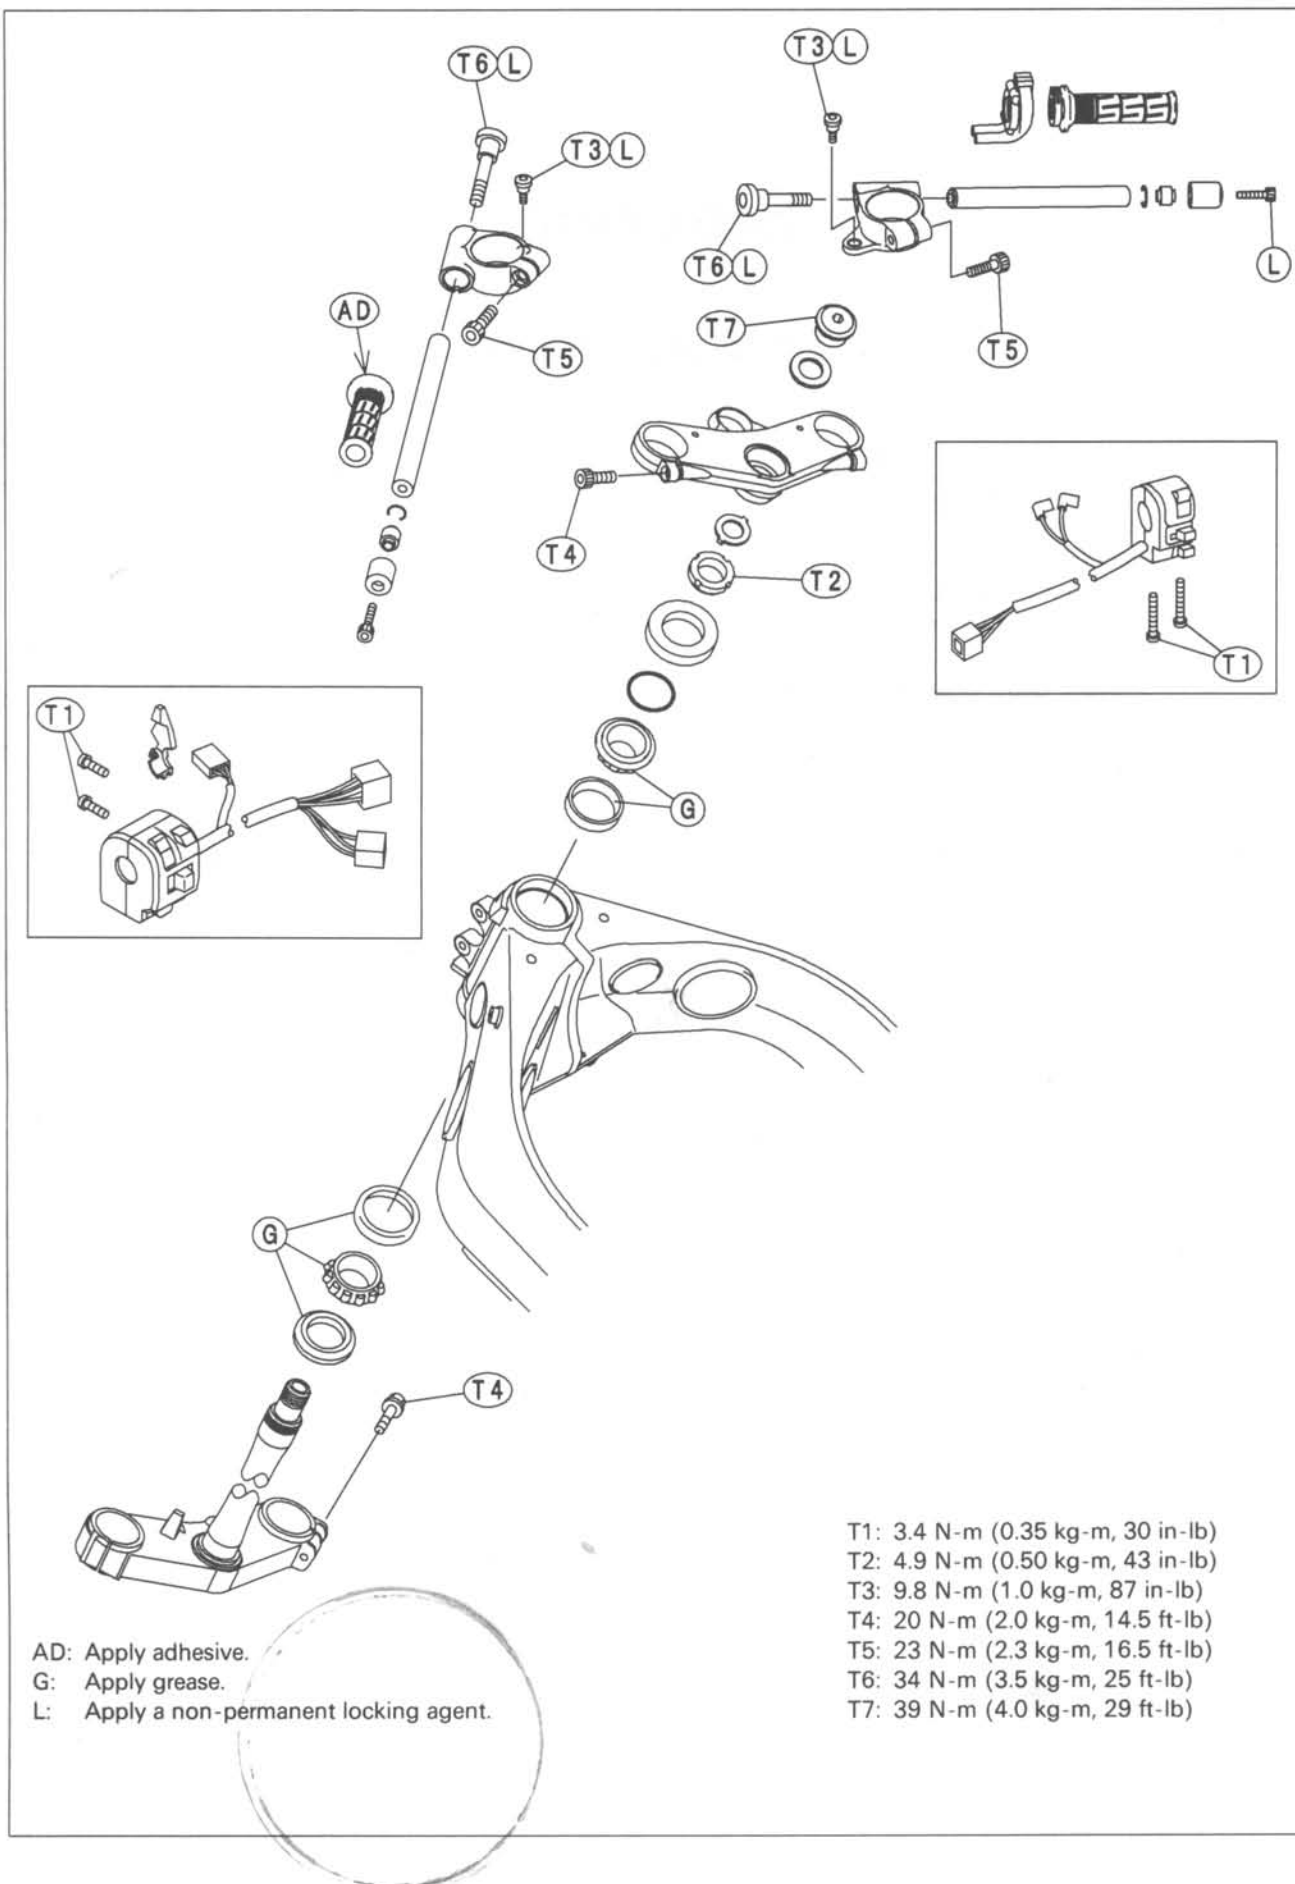

---

**Specifications**

---

**Special Tools –** Steering Stem Nut Wrench: 57001-1100  
Head Pipe Outer Race Press Shaft: 57001-1075  
Head Pipe Outer Race Driver: 57001-1077 (2)  
Steering Stem Bearing Driver: 57001-1344  
Steering Stem Bearing Driver Adapter: 57001-1345  
Jack: 57001-1238

## 13-4 STEERING

### Steering

#### Steering Inspection

- Check the steering.
- Lift the front wheel off the ground using the jack.

**Special Tool – Jack: 57001-1238**

- With the front wheel pointing straight ahead, alternately tap each end of the handlebar. The front wheel should swing fully left and right from the force of gravity until the fork hits the stop.
- ★ If the wheel binds or catches before the stop, the steering is too tight.
- Feel for steering looseness by pushing and pulling the forks.
- ★ If you feel looseness, the steering is too loose.



#### NOTE


- The cables and wiring will have some effect on the motion of the fork which must be taken into account.  
Be sure the wires and cables are properly routed.
- The bearings must be in good condition and properly lubricated in order for any test to be valid.

#### Steering Adjustment

- Remove:
  - Upper fairing (see Frame chapter)
  - Fuel Tank (see Fuel System chapter)
- Loosen:
  - Lower Fork Clamp Bolts (both sides)
  - Stem Head Nut [A]
- Adjust the steering.

**Special Tool – Steering Stem Nut Wrench: 57001-1100 [B]**

- ★ If the steering is too tight, loosen the stem nut a fraction of a turn.
- ★ If the steering is too loose, tighten the nut a fraction of a turn.

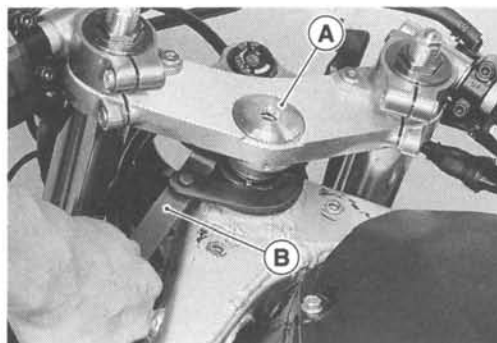

#### NOTE


- Turn the stem nut  $1/8$  turn at a time maximum.
- Tighten the steering stem head nut and lower fork clamp bolts.  
**Torque – Steering Stem Head Nut: 39 N-m (4.0 kg-m, 29 ft-lb)**  
**Front Fork Clamp Bolts (Lower): 20 N-m (2.0 kg-m, 14.5 ft-lb)**
- Check the steering again.
- ★ If the steering is still too tight or too loose, repeat the adjustment.

## Steering Stem


### Stem, Stem Bearing Removal

● Remove:

- Fairings (see Frame chapter)
- Fuel Tank (see Fuel System chapter)
- Air Cleaner Housing (see Fuel System chapter)
- Rear View Mirror Bracket
- Brake Hose Joint Bolts [A]
- Front Wheel (see Wheels/Tires chapter)
- Front Fork (see Suspension chapter)
- Steering Stem Head Nut and Washer
- Steering Stem Head

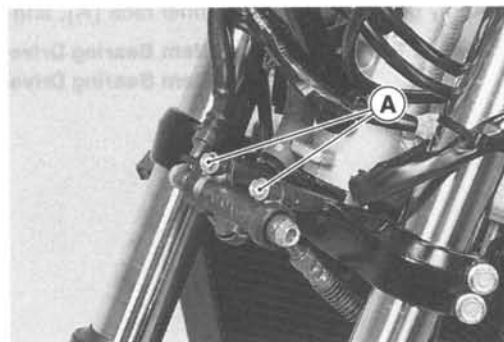

- Pushing up the stem base, and remove the locking washer [A], steering stem locknut [B], stem cap [C] and O-ring, then remove the steering stem [D] and stem base.

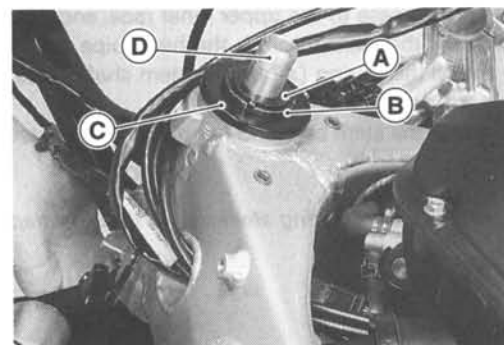


**Special Tool – Steering Stem Nut Wrench: 57001-1100**

- Remove the upper stem bearing inner race.

- To remove the bearing outer races [A] pressed into the head pipe [B], insert a bar [C] into the head pipe, and hammer evenly around the circumference of the opposite race to drive it out.

### NOTE

- If either steering stem bearing is damaged, it is recommended that both the upper and lower bearings (including outer races) should be replaced with new ones.

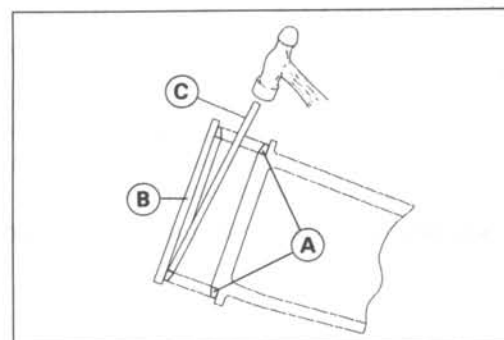


- Remove the lower stem bearing (with its grease seal) which is pressed onto the steering stem with a suitable commercially available bearing puller.

### Stem, Stem Bearing Installation

- Apply grease to the outer races, and drive them into the head pipe at the same time.


**Special Tools – Head Pipe Outer Race Press Shaft: 57001-1075 [A]  
Head Pipe Outer Race Drivers: 57001-1077 [B] (2)**

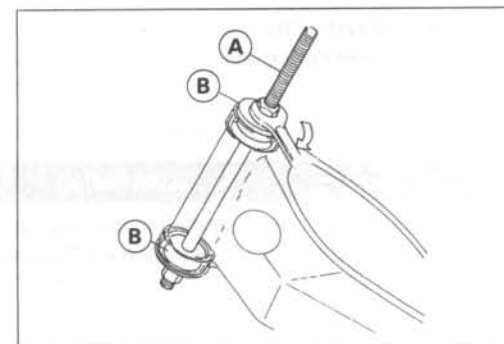

## 13-6 STEERING

- Apply grease to the lower inner race [A], and drive it onto the stem.


**Special Tools – Steering Stem Bearing Driver: 57001-1344 [B]  
Steering Stem Bearing Driver Adapter: 57001-1345 [C]**

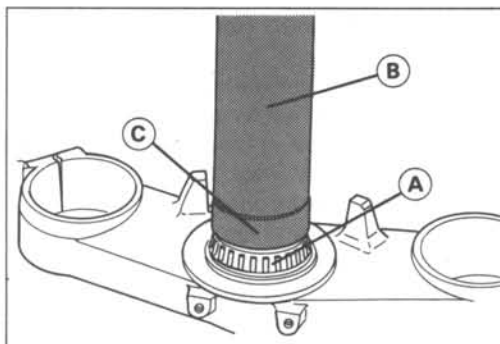

- Apply grease to the upper inner race, and install it in the head pipe.
- Install the stem through the head pipe and the upper inner race, and install the O-ring [A] on the stem shaft while pushing up on the stem base.
- Install the stem cap, and hand tighten the steering stem locknuts.


### NOTE

○ Install the steering stem nut so that the stepped side faces down.

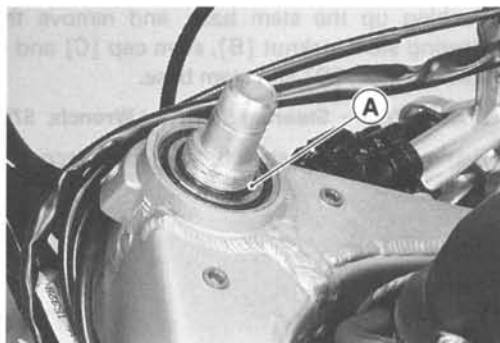

- Install the stem head.
- Install the washer, and tighten the stem head nut lightly.
- Settle the inner races in place as follows:
  - Tighten the steering stem locknut to 39 N-m (4.0 kg-m, 29 ft-lb) of torque. (To tighten the steering stem locknut to the specified torque, hook the wrench on the stem locknut, and pull the wrench at the hole by 22.2 kg force in the direction shown.)

**Special Tool – Steering Stem Nut Wrench: 57001-1100 [B]**

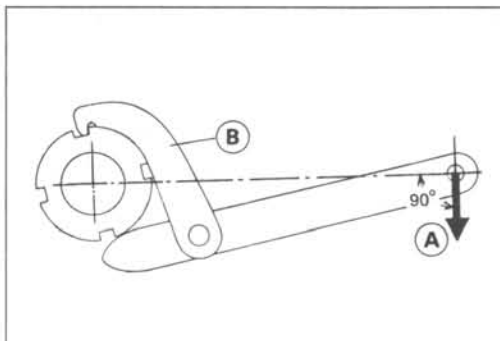

- Check that there is no play and the steering stem turns smoothly without rattles. If not, the bearings on the inner races may be damaged.
- Again back out the stem locknut a fraction of a turn until it turns lightly.
- Turn the stem locknut lightly clockwise until it just becomes hard to turn. Do not overtighten, or the steering will be too tight.

**Torque – Steering Stem Nut: 4.9 N-m (0.50 kg-m, 43 in-lb)**

- Install the front fork (see Suspension chapter).

### NOTE

○ Tighten the fork upper clamp bolts first, next the stem head nut, last the fork lower clamp bolts.

**Torque – Steering Stem Head Nut: 39 N-m (4.0 kg-m, 29 ft-lb)**

**Front Fork Clamp Bolts (Upper): 20 N-m (2.0 kg-m, 14.5 ft-lb)**

**(Lower): 20 N-m (2.0 kg-m, 14.5 ft-lb)**


- Install the removed parts (see appropriate chapters).

### ⚠ WARNING

**Do not impede the handlebar turning by routing the cables, harnesses and hoses improperly (see General Information chapter).**

***Stem Bearing Lubrication***

- Remove the steering stem.
- Using a high flash-point solvent, wash the upper and lower tapered roller bearings in the cages, and wipe the upper and lower outer races, which are press-fitted into the frame head pipe, clean off grease and dirt.
- Visually check the outer races and the rollers.
- ★ Replace the bearing assemblies if they show wear or damage.
- Pack the upper and lower tapered roller bearings [A] in the cages with grease, and apply a light coat of grease to the upper and lower outer races.
- Install the steering stem, and adjust the steering.

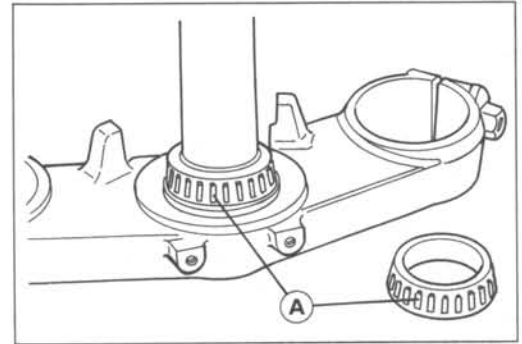


## 13-8 STEERING

### Handlebar


#### Handlebar Removal

- Remove:
  - Clutch Lever Assembly
  - Left Handlebar Switch Housing
  - Front Brake Master Cylinder
  - Right Handlebar Switch Housing
  - Throttle Case and Grip
  - Handlebar Bolts [A]
  - Handlebar Holder Position Bolts [B]
  - Handlebar Holder Bolts [C]
- Remove the handlebar holders [D] from the front fork, and then pull out the handlebars [E].

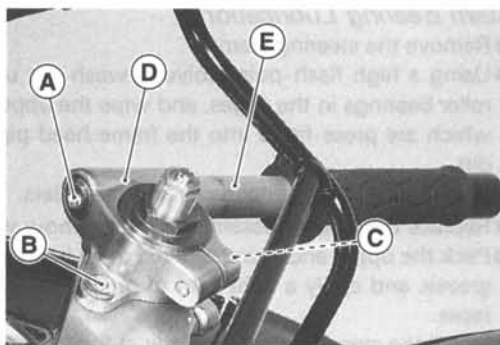

#### Handlebar Installation

- Fit the pin [A] of the handlebar in the handlebar holder recess [B].
- Apply a non-permanent locking agent to the threads of handlebar holder position bolts and handlebar bolts, and tighten the following bolts.
  - Torque – Handlebar Holder Bolts: 23 N-m (2.3 kg-m, 16.5 ft-lb)**
  - Handlebar Holder Position Bolts: 9.8 N-m (1.0 kg-m, 87 in-lb)**
  - Handlebar Bolts: 34 N-m (3.5 kg-m, 25 ft-lb)**
- Install the removed parts (see appropriate chapters).

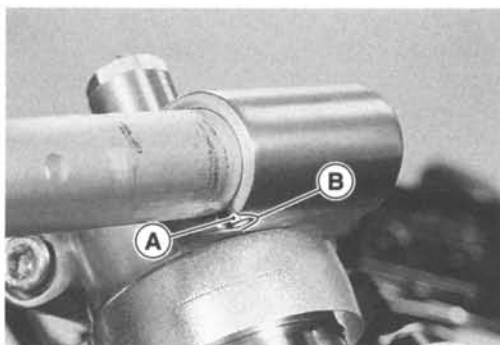

# Frame


## Table of Contents

Exploded View .....	14-2
Seats .....	14-5
Rear Seat Removal .....	14-5
Rear Seat Installation .....	14-5
Front Seat Removal .....	14-5
Front Seat Installation .....	14-5
Seat Covers .....	14-6
Seat Cover Removal .....	14-6
Fairings .....	14-7
Lower Fairing Removal .....	14-7
Lower Fairing Installation .....	14-7
Middle Fairing Removal .....	14-7
Middle Fairing Installation .....	14-7
Inner Fairing Removal .....	14-7
Upper Fairing Removal .....	14-8
Air Intake Duct Removal .....	14-8
Fenders .....	14-9
Front Fender Removal .....	14-9
Rear Fender Removal .....	14-9




## 14-2 FRAME






### Exploded View

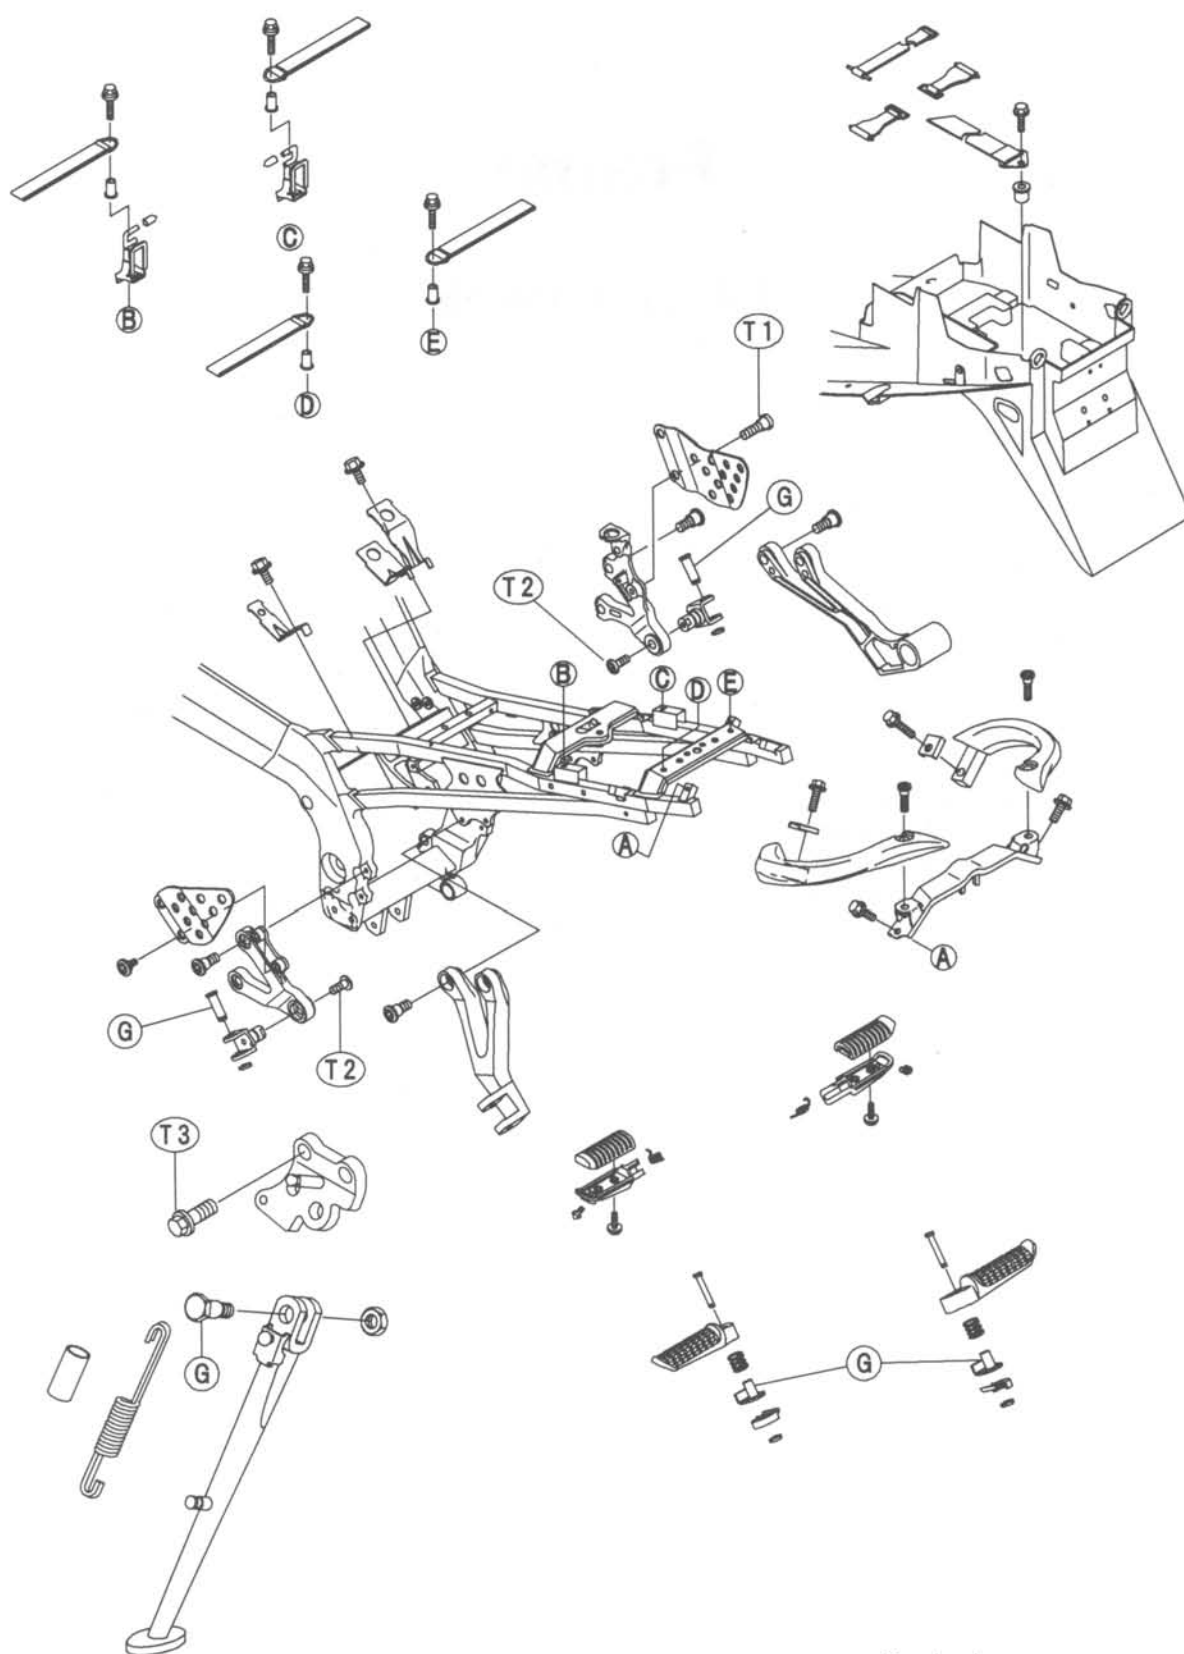

G: Apply grease.  
T1: 23 N-m (2.3 kg-m, 16.5 ft-lb)  
T2: 34 N-m (3.5 kg-m, 25 ft-lb)  
T3: 49 N-m (5.0 kg-m, 36 ft-lb)

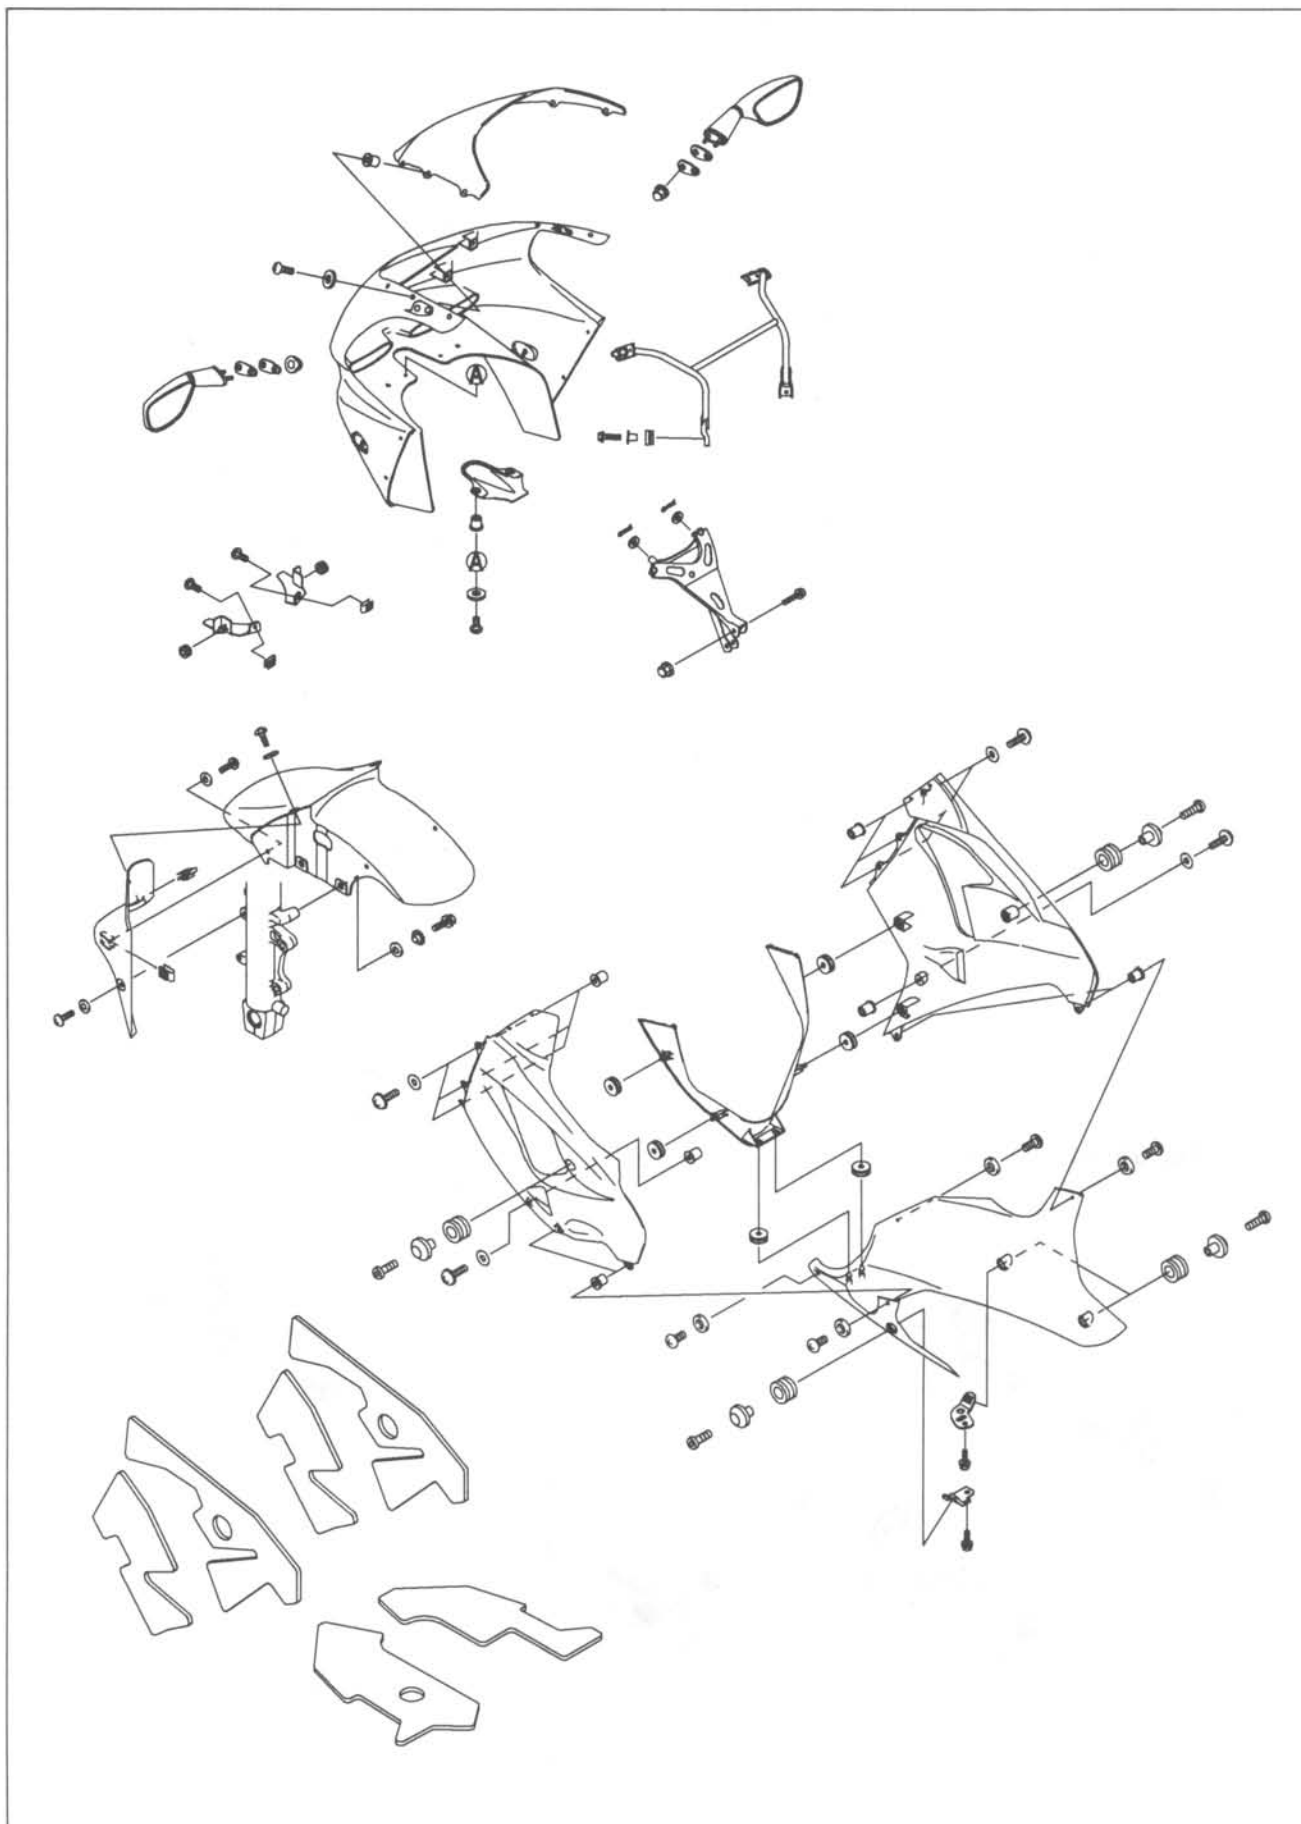

## 14-4 FRAME

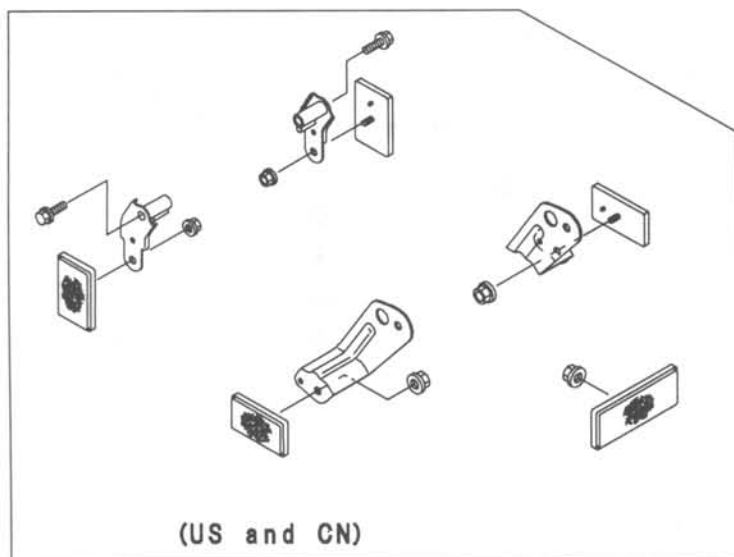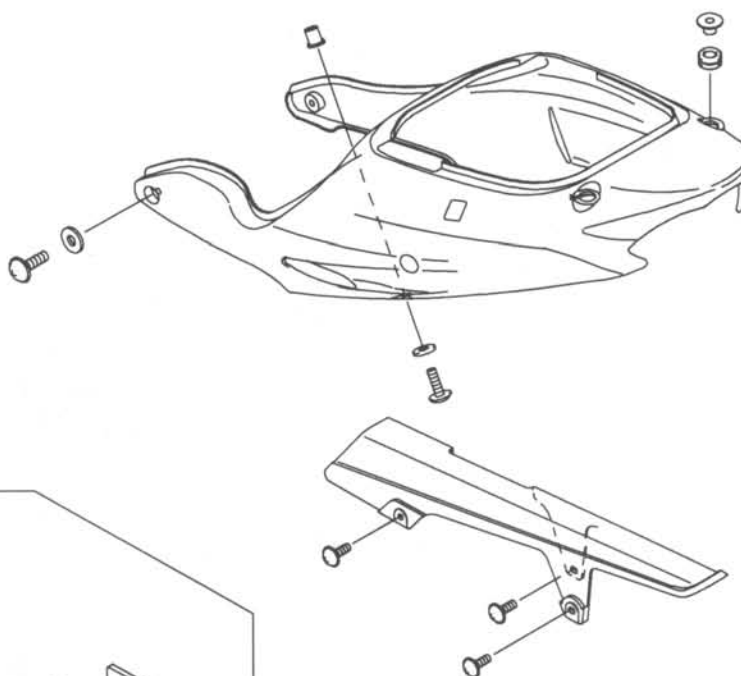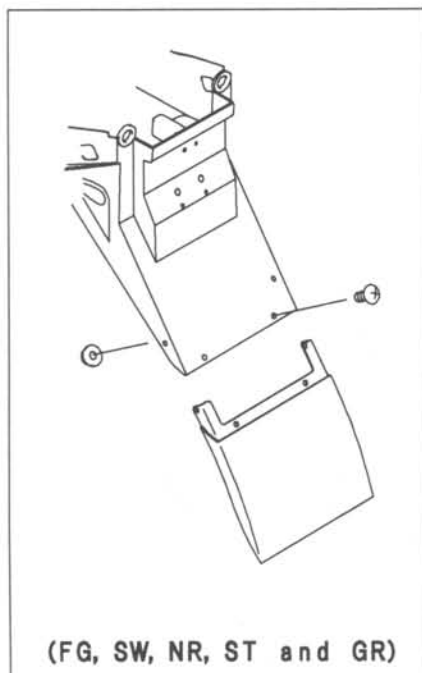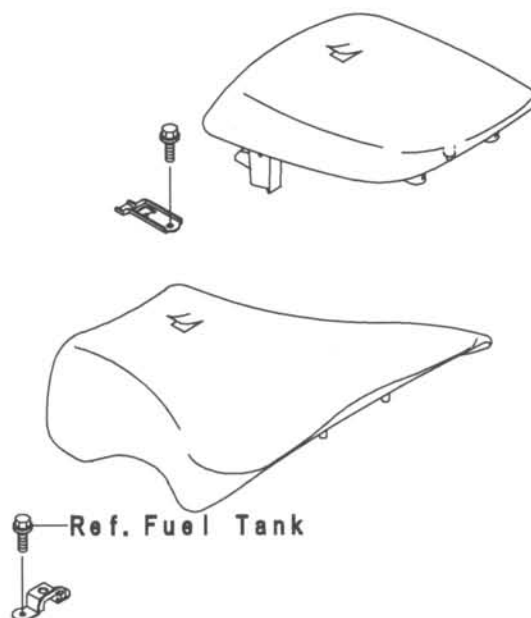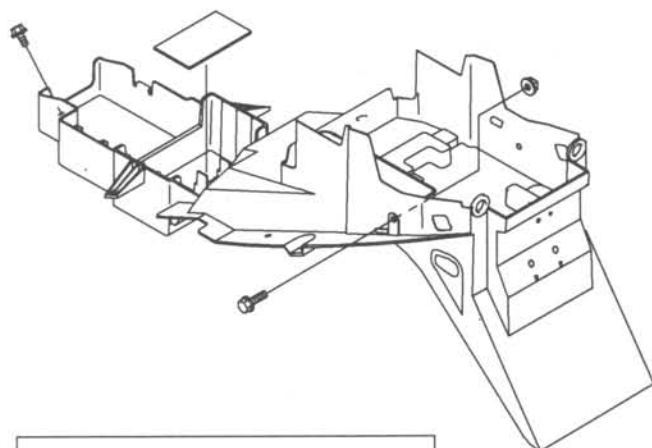


CN: Canada  
 FG: Germany  
 GR: Greece  
 IT: Italy  
 NR: Norway  
 SW: Sweden  
 ST: Switzerland  
 US: U.S.A.

## Seats


### Rear Seat Removal

- Insert the ignition switch key into the seat lock [A], turning the key counterclockwise, pulling up on the rear of the seat [B], and pulling the seat backward.

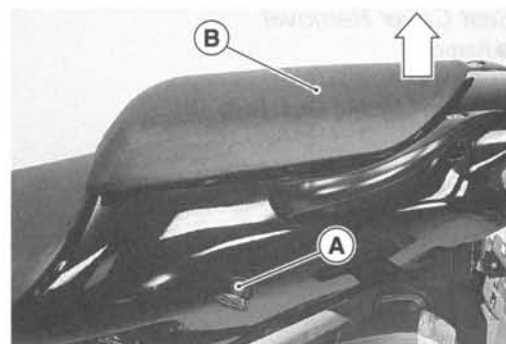


### Rear Seat Installation

- Slip the rear seat hooks [A] into the hollow-cubic bracket [B] on the frame.
- Insert the seat pin [C] into the latch hole [D].
- Push down the rear part of the seat until the lock clicks.

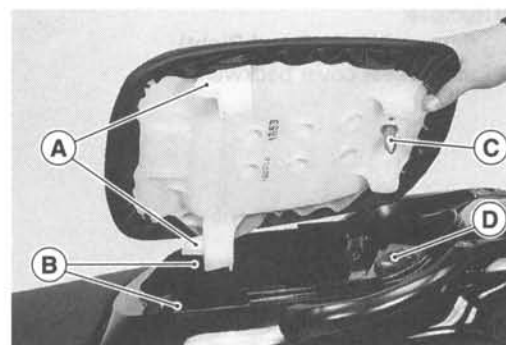


### Front Seat Removal

- Remove:
  - Rear Seat (see Rear Seat Removal)
  - Mounting Bolt [A]
  - Set Bracket [B]
- Remove the front seat [C] by pulling it up on the rear and to the rear.

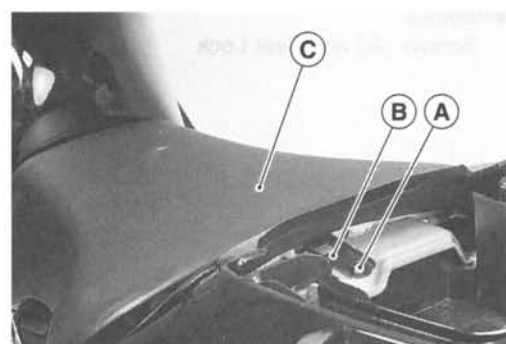

### Front Seat Installation

- Slip the front seat hook [A] under the brace [B] on the fuel tank bracket.

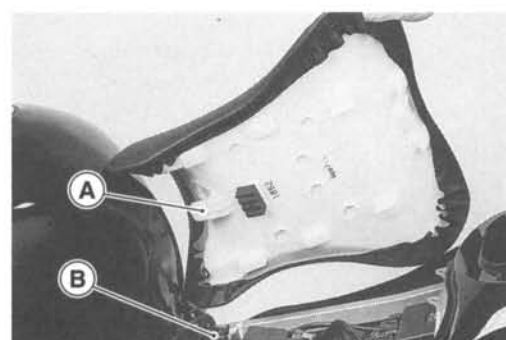


## 14-6 FRAME


### Seat Covers

#### Seat Cover Removal


- Remove:
  - Seats
  - Bolts [A] and Grab Rails [B]

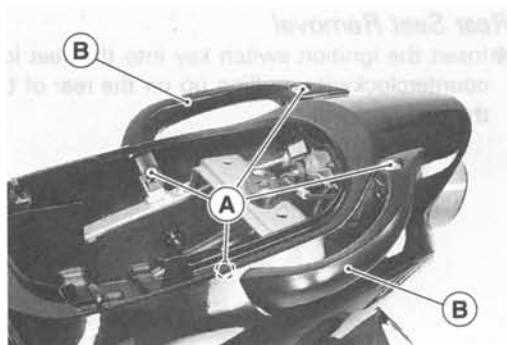

- Remove:
  - Screws [A] (Left and Right)
- Pull the seat cover backward.

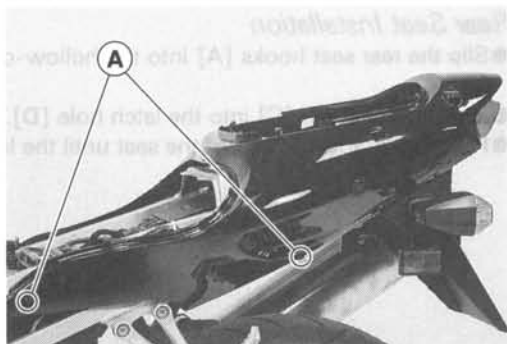


- Remove:
  - Screws [A] and Seat Lock

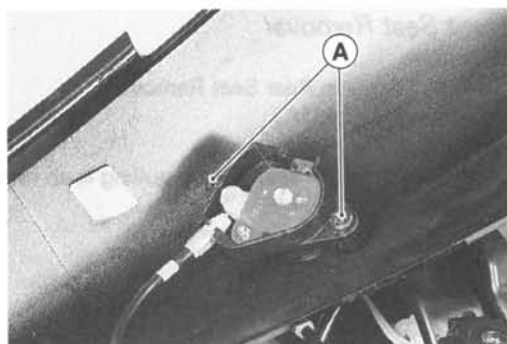

## Fairings


### Lower Fairing Removal

- Removal:
  - Screws [A]
  - Allen Bolts [B]
- Pull the front part of the lower fairing downward to clear the projections.

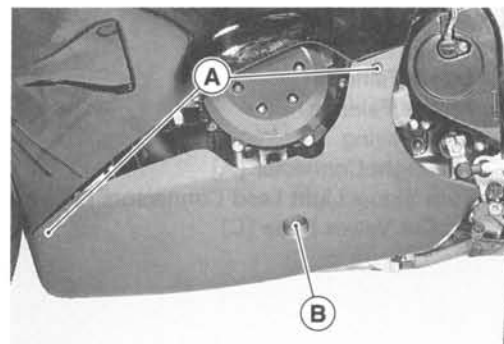


### Lower Fairing Installation

- Fit the projections [A] on the lower fairing [B] into the holes [C] in the inner fairing [D].
- Install:
  - Screws
  - Allen Bolts

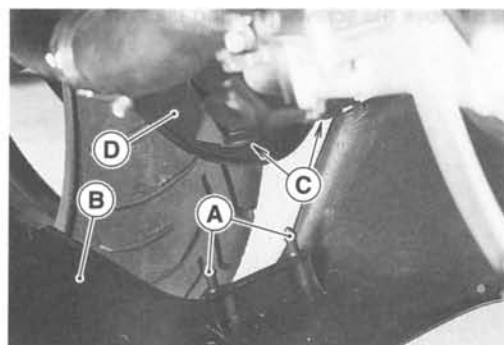


### Middle Fairing Removal

- Remove:
  - Lower Fairing
  - Screws [A]
  - Allen Bolt [B] (Right side fairing is two Allen bolt)
- Pull the front part of the middle fairing outward to clear the stoppers [C].

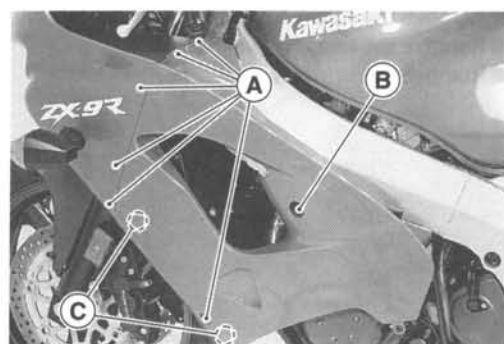


### Middle Fairing Installation

- Fit the projections [A] on the inner fairing [B] into the holes [C] in the middle fairing [D].
- Install:
  - Screws
  - Allen Bolt (Right side fairing is two Allen bolt)
  - Lower Fairing

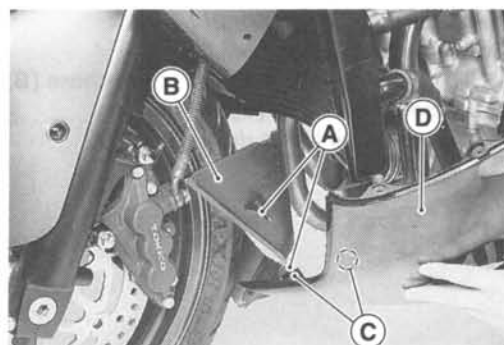

### Inner Fairing Removal


- Remove:
  - Lower Fairing
  - Middle Fairing (Left or Right)
- Pull out each stopper part [A] of the inner fairing [B] inward.

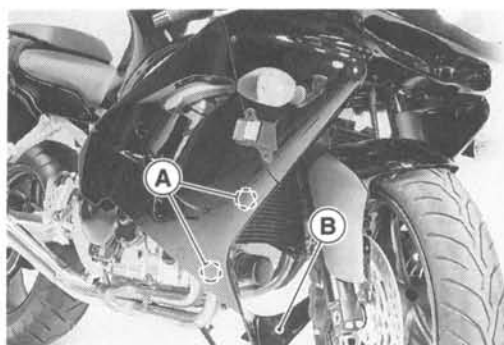


### Upper Fairing Removal

● Remove:


- Lower Fairing
- Middle Fairings
- Inner Fairing
- Headlight Connector [A]
- Turn Signal Light Lead Connectors [B]
- Air Cut Valves Hose [C]

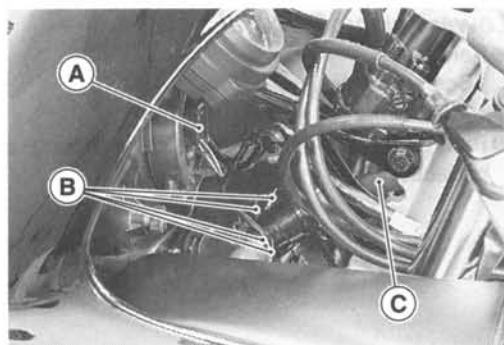

- Remove the screws [A] and take off the wind shield [B].

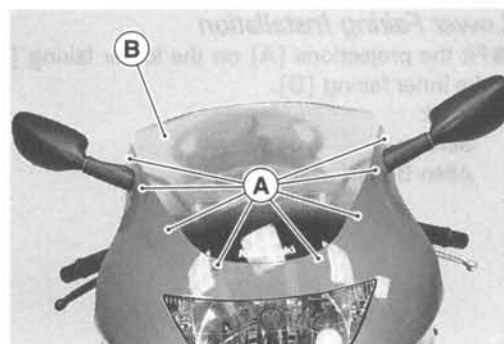


- Remove the nuts [A] and take off the left and right rear view mirrors.
- Remove the clip and washer [B].
- Remove the upper fairing.

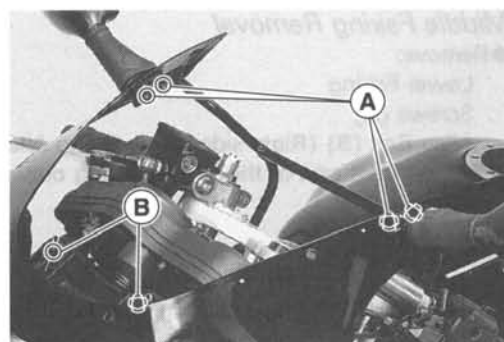

### Air Intake Duct Removal


- Remove the upper fairing.
- Slide the clamp [A] and pull out the hose [B].
- Unscrew the screws [C].
- Remove the air intake duct [D].

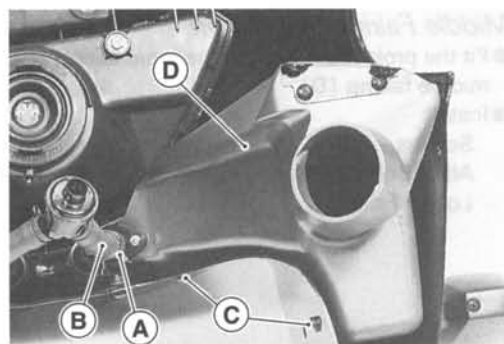

## Fenders


### Front Fender Removal

- Remove:
  - Brake Hose Clamps [A] (Left and Right)
  - Bolts [B] and Screws [C]
- Remove the front fender [D].

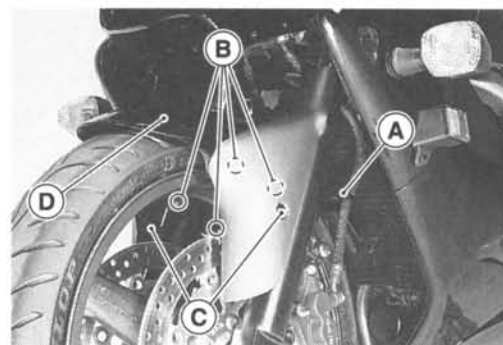


### Rear Fender Removal

- Remove:
  - Seats
  - Fuel Tank
  - Seat Cover
  - Tail Light
  - Junction Box Connector
  - Starter Relay Assy
  - Turn Signal Relay
  - Fuel Pump Relay
  - Battery
  - Rear Brake Reservoir Mounting Bolt
  - Turn Signal Light Lead Connectors
  - Igniter Lead Connector
  - Bolts [A]

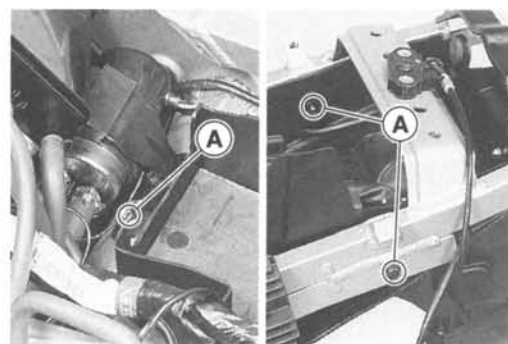

- Push the stopper [A] to clear the frame.
- Remove the rear fender rearward.

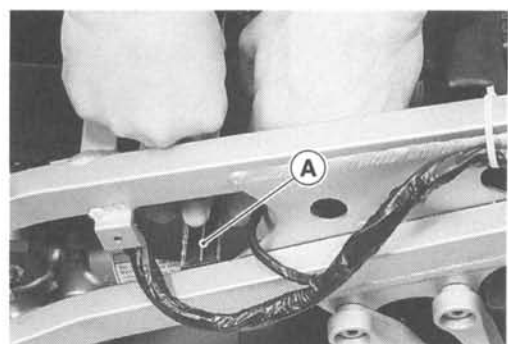





# Electrical System

## Table of Contents

Parts Location .....	15-2	Starter Motor Assembly .....	15-38
Exploded View .....	15-3	Brush Inspection .....	15-39
Wiring Diagram (US and Canada) .....	15-6	Commutator Cleaning and Inspection .....	15-39
Wiring Diagram (Australia) .....	15-8	Armature Inspection .....	15-39
Wiring Diagram (Other than US, Canada, and Australia) .....	15-10	Brush Lead Inspection .....	15-40
Wiring Diagram (D-Type) .....	15-12	Brush Plate and Terminal Bolt Inspection .....	15-40
Specifications .....	15-14	Starter Relay Inspection .....	15-40
Precautions .....	15-15	Lighting System .....	15-42
Electrical Wiring .....	15-16	Headlight Beam Horizontal Adjustment .....	15-42
Wiring Inspection .....	15-16	Headlight Beam Vertical Adjustment .....	15-42
Battery .....	15-17	Headlight Bulb Replacement .....	15-42
Battery Removal .....	15-17	Turn Signal Relay Inspection .....	15-45
Electrolyte Filling .....	15-17	Fuel Pump .....	15-46
Initial Charge .....	15-19	Removal/Installation .....	15-46
Precautions .....	15-19	Fuel Pump Relay Inspection .....	15-46
Interchange .....	15-19	Fuel Pump Operational Inspection .....	15-46
Charging Condition Inspection .....	15-20	Fuel Cut Valve .....	15-48
Refreshing Charge .....	15-20	Fuel Cut Valve Removal .....	15-48
Charging System .....	15-22	Fuel Cut Valve Installation .....	15-48
Alternator Cover Removal .....	15-22	Fuel Cut Valve Inspection .....	15-48
Alternator Cover Installation .....	15-22	Radiator Fan System .....	15-50
Stator Coil Removal .....	15-22	Fan System Circuit Inspection .....	15-50
Stator Coil Installation .....	15-22	Fan Motor Inspection .....	15-50
Alternator Rotor Removal .....	15-23	Meter .....	15-51
Alternator Rotor Installation .....	15-23	Meter Unit Removal .....	15-51
Alternator Inspection .....	15-24	Meter, Gauge Disassembly .....	15-51
Regulator/Rectifier Inspection .....	15-25	Bulb Replacement .....	15-51
Rectifier Circuit Check: .....	15-25	Electronic Combination Meter	
Regulator Circuit Check: .....	15-26	Unit Inspection .....	15-52
Regulator/Rectifier Output		Liquid Crystal Display (LCD) Segments	
Voltage Inspection .....	15-27	Operate Confirmation: .....	15-52
Ignition System .....	15-29	Mode/Reset Switch Operate	
Pickup Coil Removal .....	15-29	Confirmation: .....	15-52
Pickup Coil Installation .....	15-29	Switches and Sensors .....	15-56
Pickup Coil Inspection .....	15-30	Brake Light Timing Inspection .....	15-56
Stick Coil (Ignition Coil together with Spark Plug Cap) Removal .....	15-30	Brake Light Timing Adjustment .....	15-56
Stick Coil (Ignition Coil together with Spark Plug Cap) Installation .....	15-30	Switch Inspection .....	15-56
Stick Coil (Ignition Coil together with Spark Plug Cap) Inspection .....	15-31	Radiator Fan Switch Inspection .....	15-57
Spark Plug Removal .....	15-31	Water Temperature Sensor Inspection .....	15-57
Spark Plug Installation .....	15-31	Throttle Sensor Removal/Installation .....	15-57
Spark Plug Gap Inspection .....	15-31	Throttle Sensor Inspection .....	15-58
Cam Sensor Removal .....	15-32	Throttle Sensor Position Adjustment .....	15-58
Cam Sensor Inspection .....	15-32	Junction Box .....	15-59
IC Igniter Inspection .....	15-32	Junction Box Fuse Circuit Inspection .....	15-59
Electric Starter System .....	15-37	Starter Circuit/Headlight Relay	
Starter Motor Removal .....	15-37	Inspection .....	15-59
Starter Motor Installation .....	15-37	Diode Circuit Inspection .....	15-60
Starter Motor Disassembly .....	15-37	Fuse .....	15-62
		30A Main Fuse Removal .....	15-62
		Junction Box Fuse Removal .....	15-62
		Fuse Installation .....	15-62
		Fuse Inspection .....	15-62


## 15-2 ELECTRICAL SYSTEM


### Parts Location

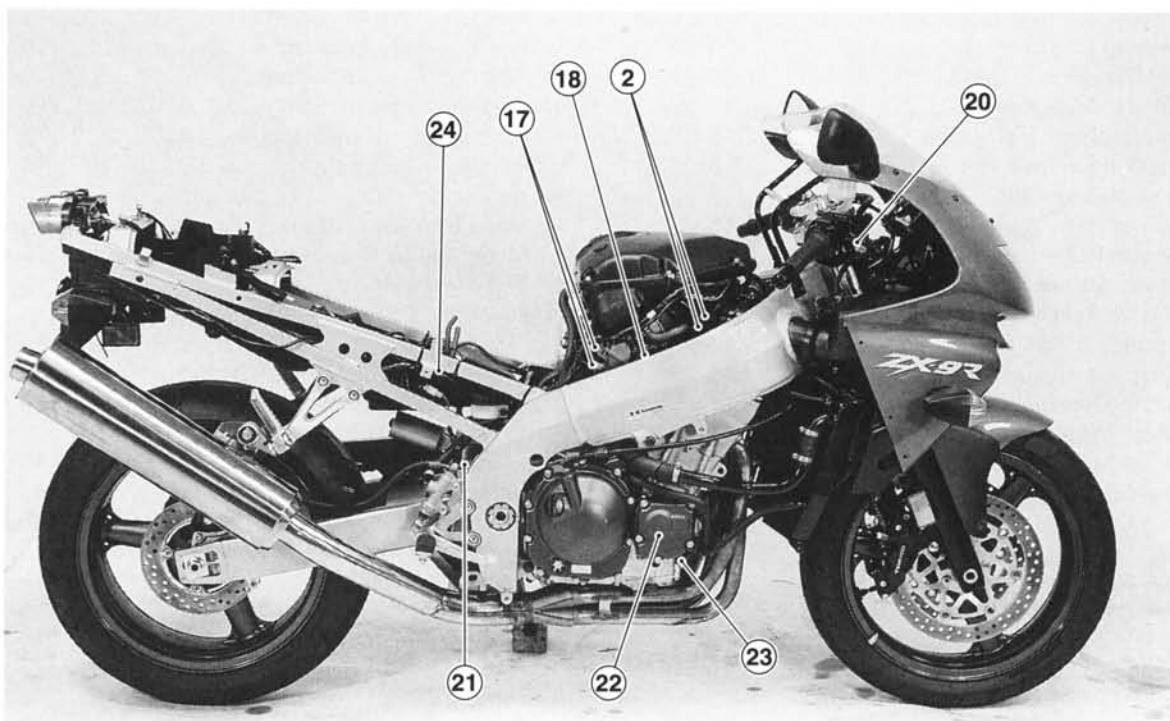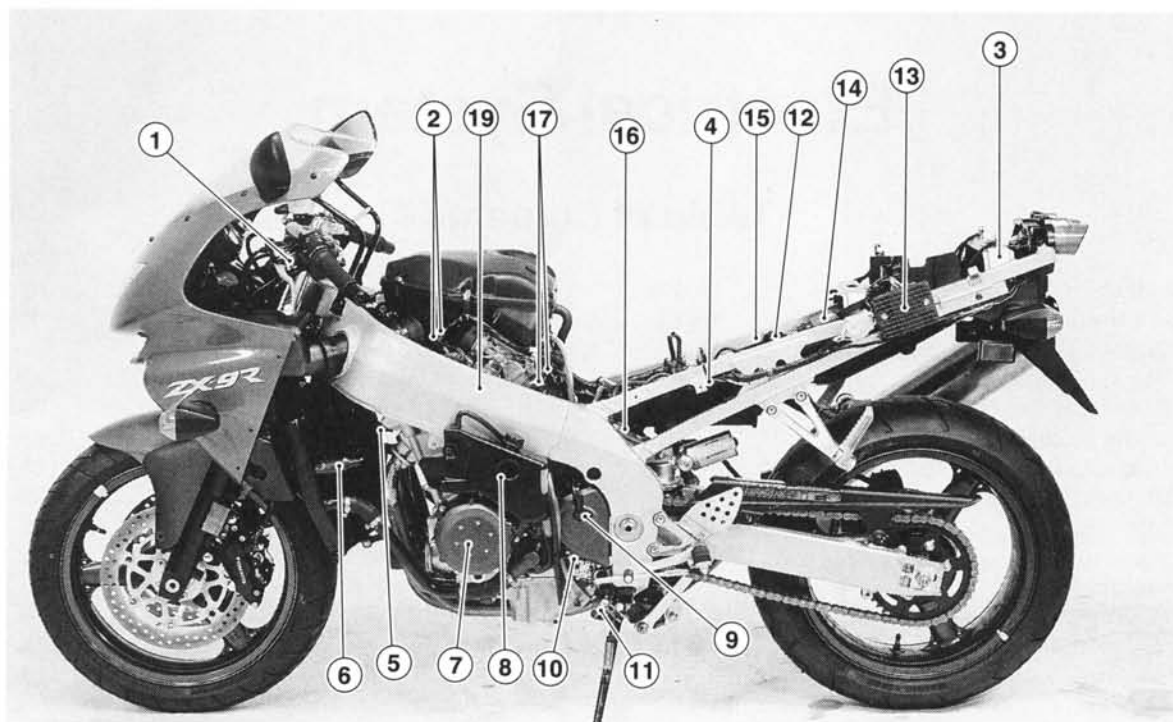

- |                           |                                 |                              |
|---------------------------|---------------------------------|------------------------------|
| 1. Starter Lockout Switch | 10. Neutral Switch              | 18. Throttle Sensor          |
| 2. Stick Coils            | 11. Side Stand Switch           | 19. Water Temperature Sensor |
| 3. Fuel Pump Relay        | 12. Starter Relay and Main Fuse | 20. Front Brake Light Switch |
| 4. Turn Signal Relay      | 13. Regulator/Rectifier         | 21. Rear Brake Light Switch  |
| 5. Cam Sensor             | 14. IC Igniter                  | 22. Pickup Coil              |
| 6. Radiator Fan Switch    | 15. Junction Box                | 23. Oil Pressure Switch      |
| 7. Alternator             | 16. Fuel Pump                   | 24. Headlight Relay          |
| 8. Starter Motor          | 17. Fuel Cut Valves             | (Except AS, CN, US)          |
| 9. Speed Sensor           | (CA, D-Type Models)             |                              |

## Exploded View

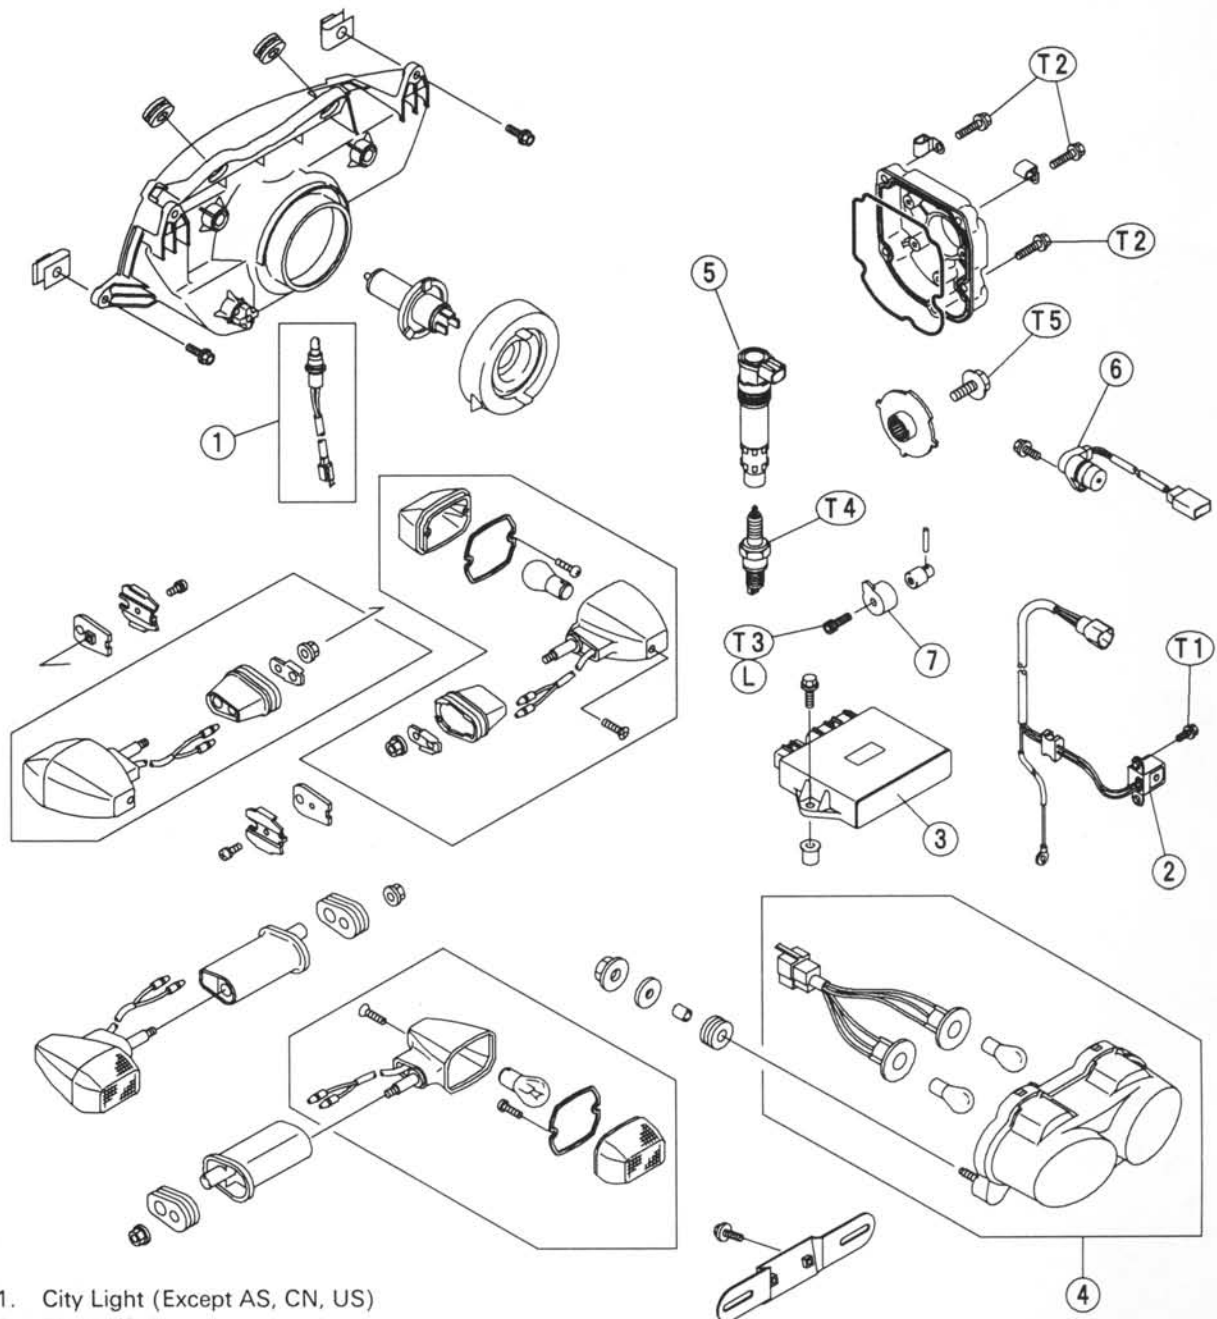


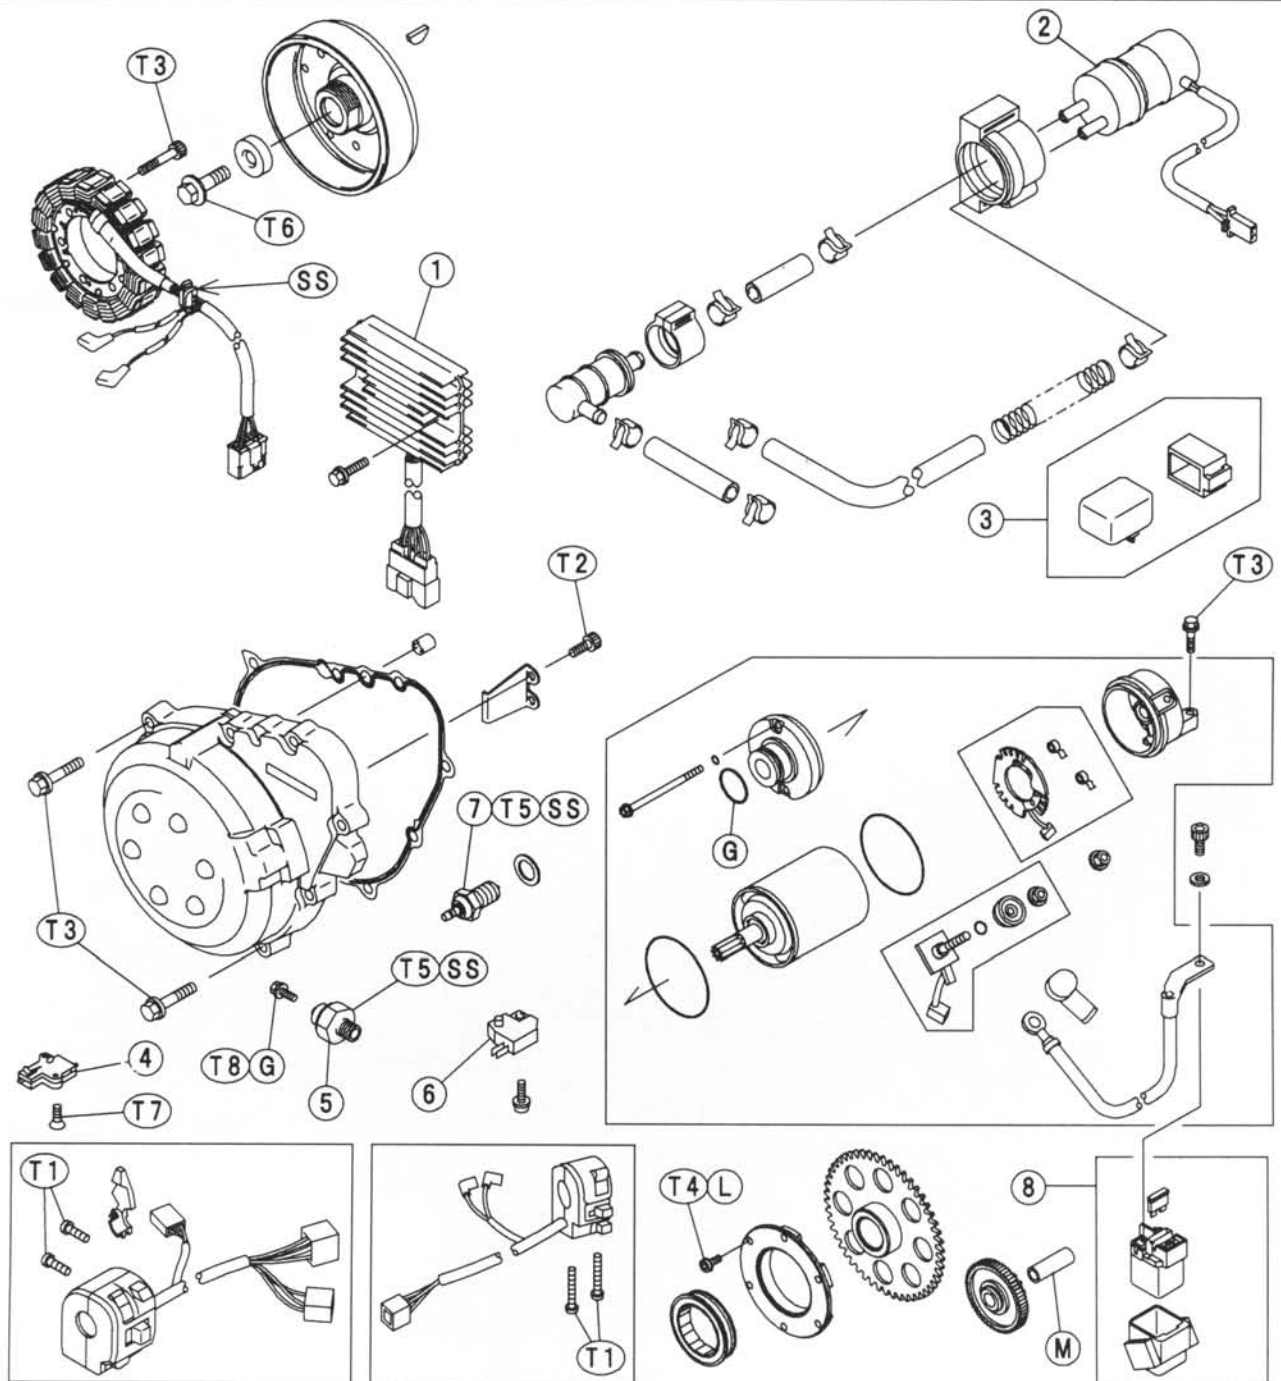

1. Regulator/Rectifier
2. Fuel Pump
3. Fuel Pump Relay
4. Starter Lockout Switch
5. Oil Pressure Switch
6. Front Brake Light Switch
7. Neutral Switch
8. Starter Relay/Main Fuse

L: Apply a non-permanent locking agent.  
 SS: Apply silicone sealant  
 M: Apply molybdenum disulfide grease.  
 G: Apply grease or engine oil.


- T1: 3.4 N-m (0.35 kg-m, 30 in-lb)  
 T2: 8.3 N-m (0.85 kg-m, 74 in-lb)  
 T3: 11 N-m (1.1 kg-m, 95 in-lb)  
 T4: 12 N-m (1.2 kg-m, 104 in-lb)  
 T5: 15 N-m (1.5 kg-m, 11.0 ft-lb)  
 T6: 110 N-m (11.0 kg-m, 80 ft-lb)  
 T7: 1.0 N-m (0.1 kg-m, 9 in-lb)  
 T8: 1.5 N-m (0.15 kg-m, 13 in-lb)

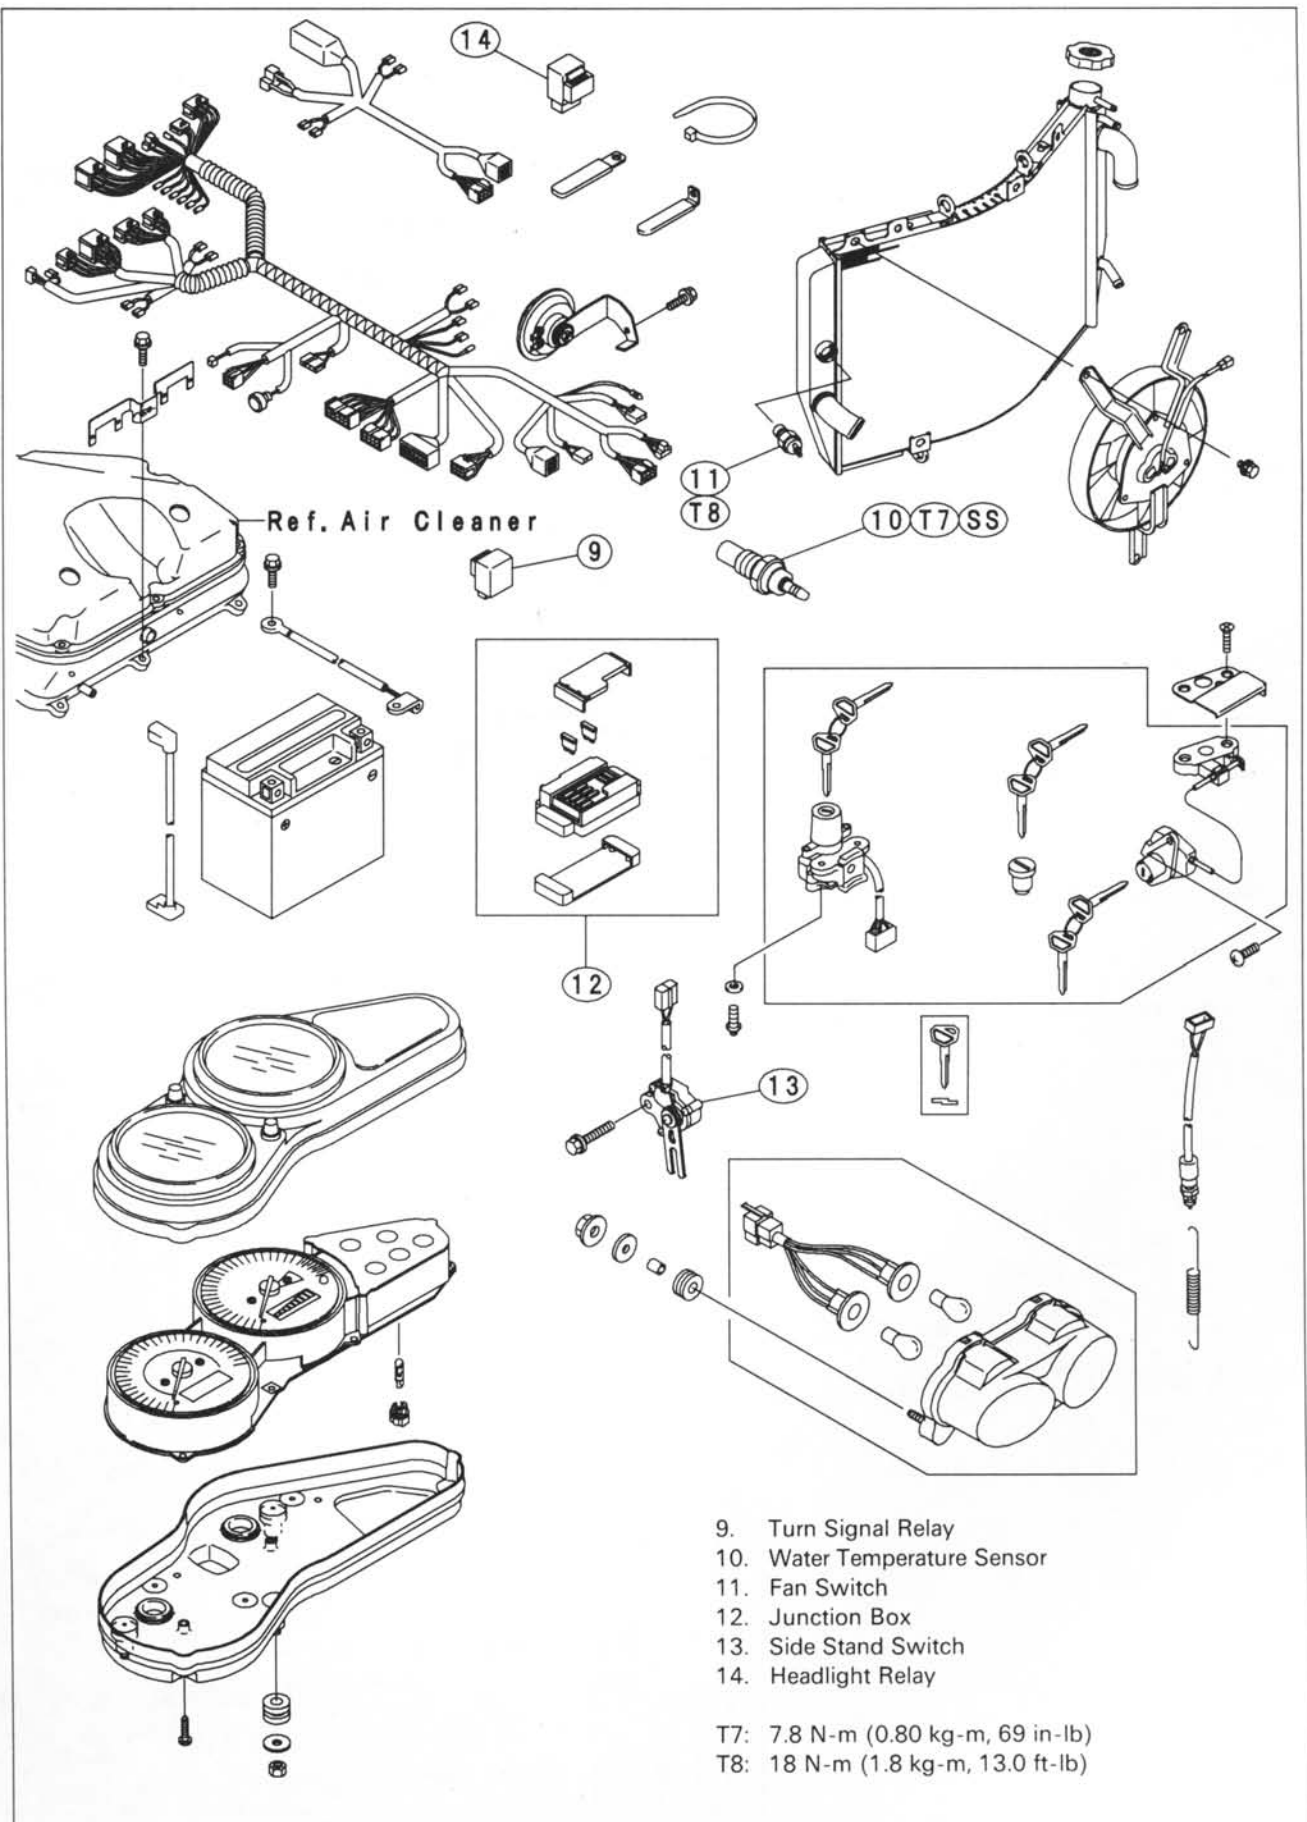




# 15-6 ELECTRICAL SYSTEM

## Wiring Diagram (US and Canada)

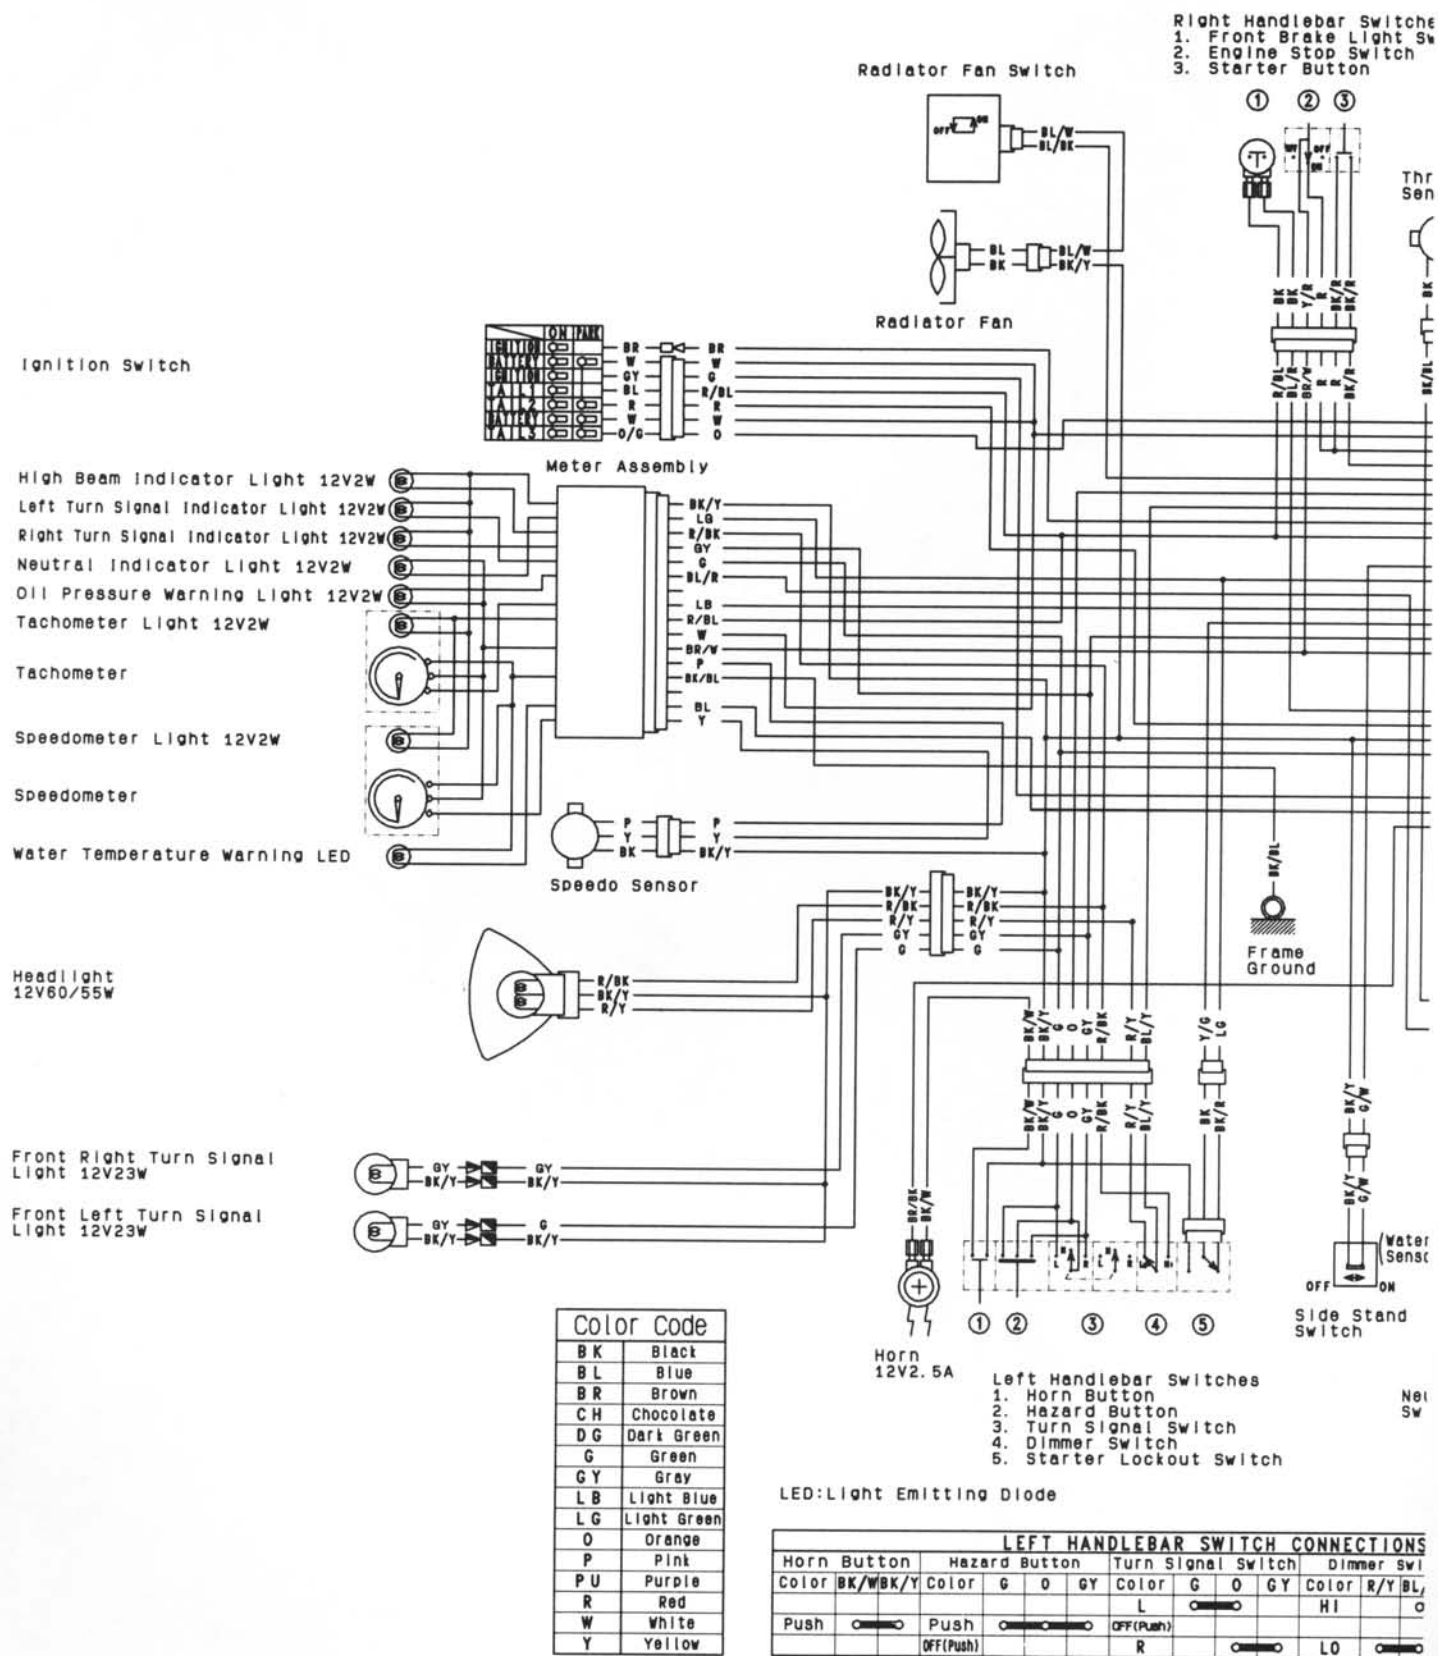

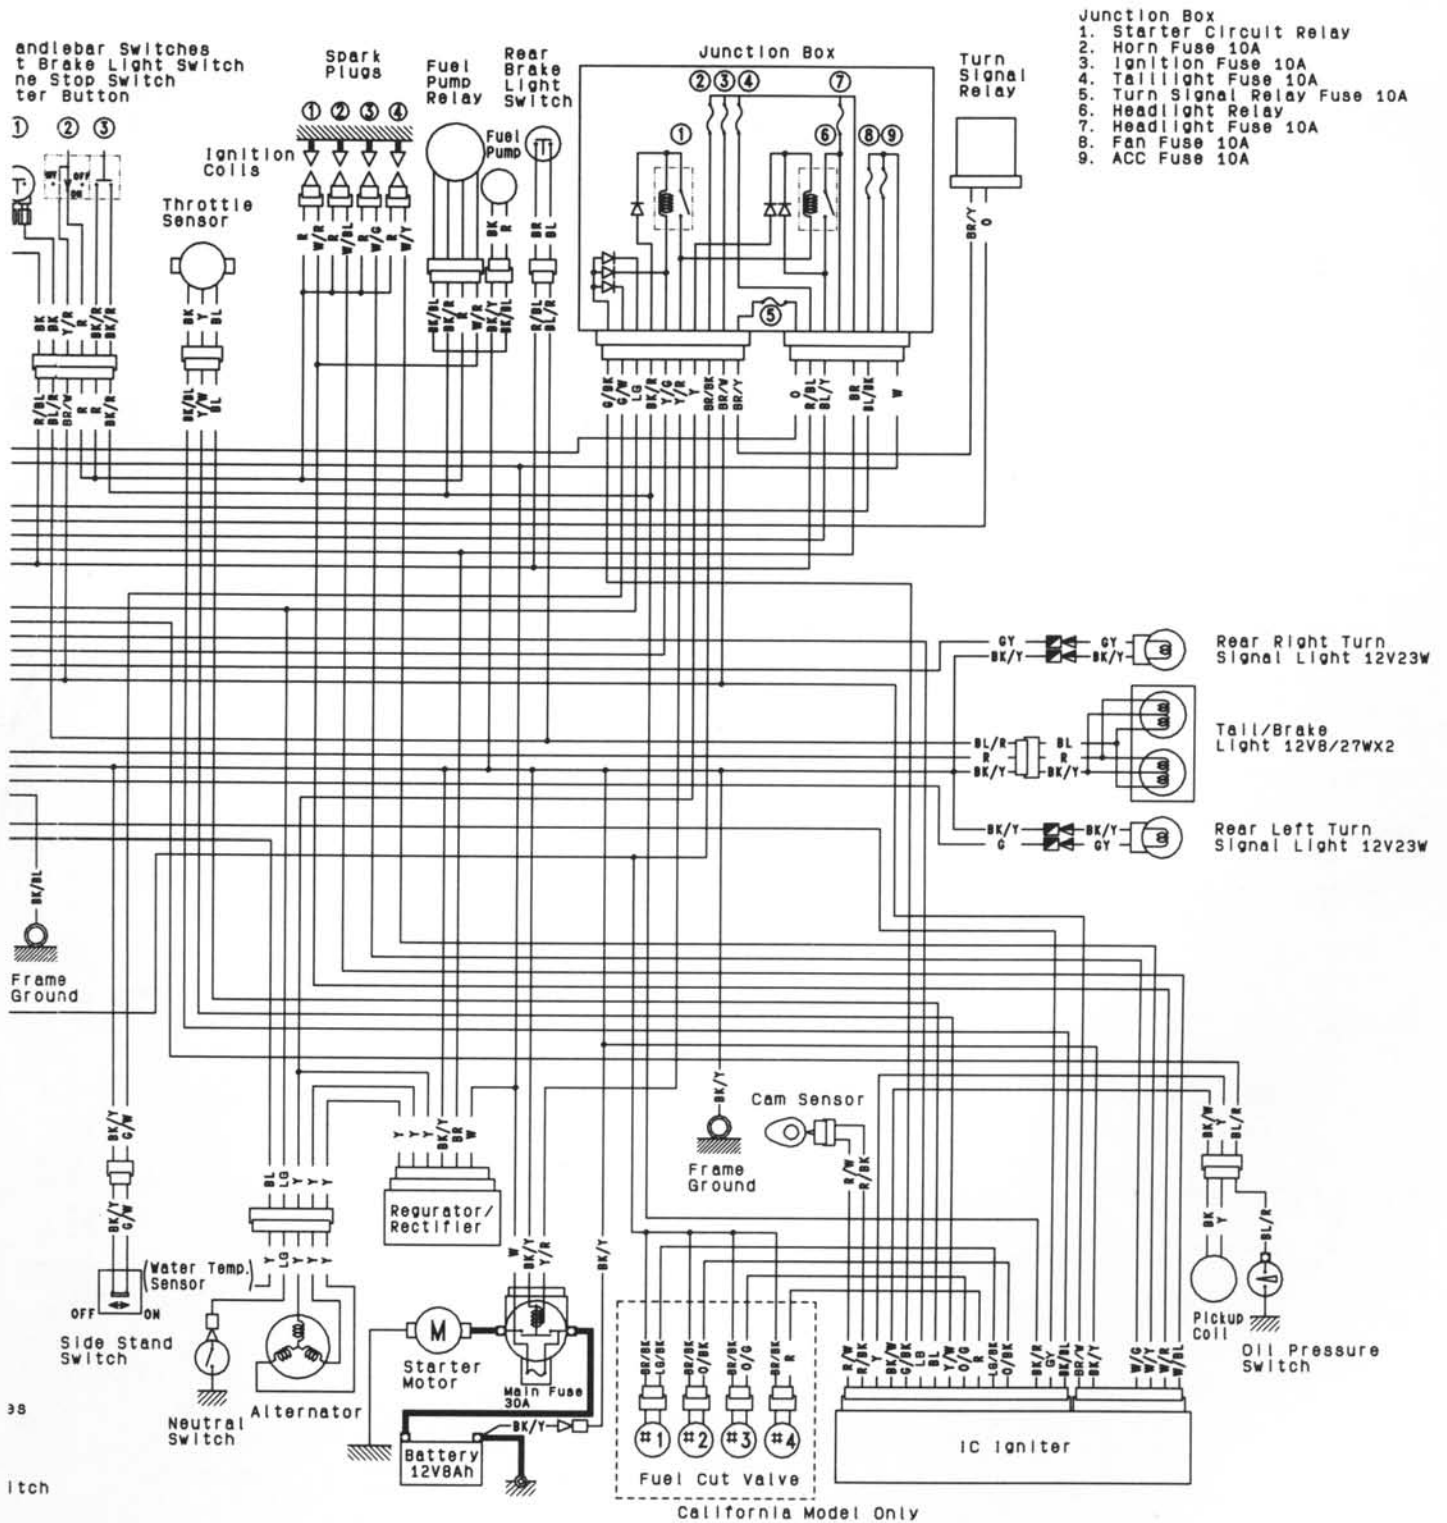

## TCH CONNECTIONS

Switch	Dimmer Switch	Starter Lockout Switch
GY Color	R/Y BL/YR/BK	Color BK/Y BK BK/R
HI	Clutch Lever	Released
LO	Pulled In	Pulled In

## IGNITION SWITCH CONNECTIONS

	Ignition	Battery	Ignition	Tail 1	Tail 2
Color	BR	W	GY	BL	R
OFF, LOCK					
ON					
P					


## RIGHT HANDLEBAR SWITCH CONNECTIONS

Front Brake Light Switch	Engine Stop Switch	Starter Button
Color BK BK	Color Y/R R	Color BK/R BK/R
Brake Lever	OFF	Push
Pulled In	RUN	Push


(98051-1689A)

# 15-8 ELECTRICAL SYSTEM

## Wiring Diagram (Australia)

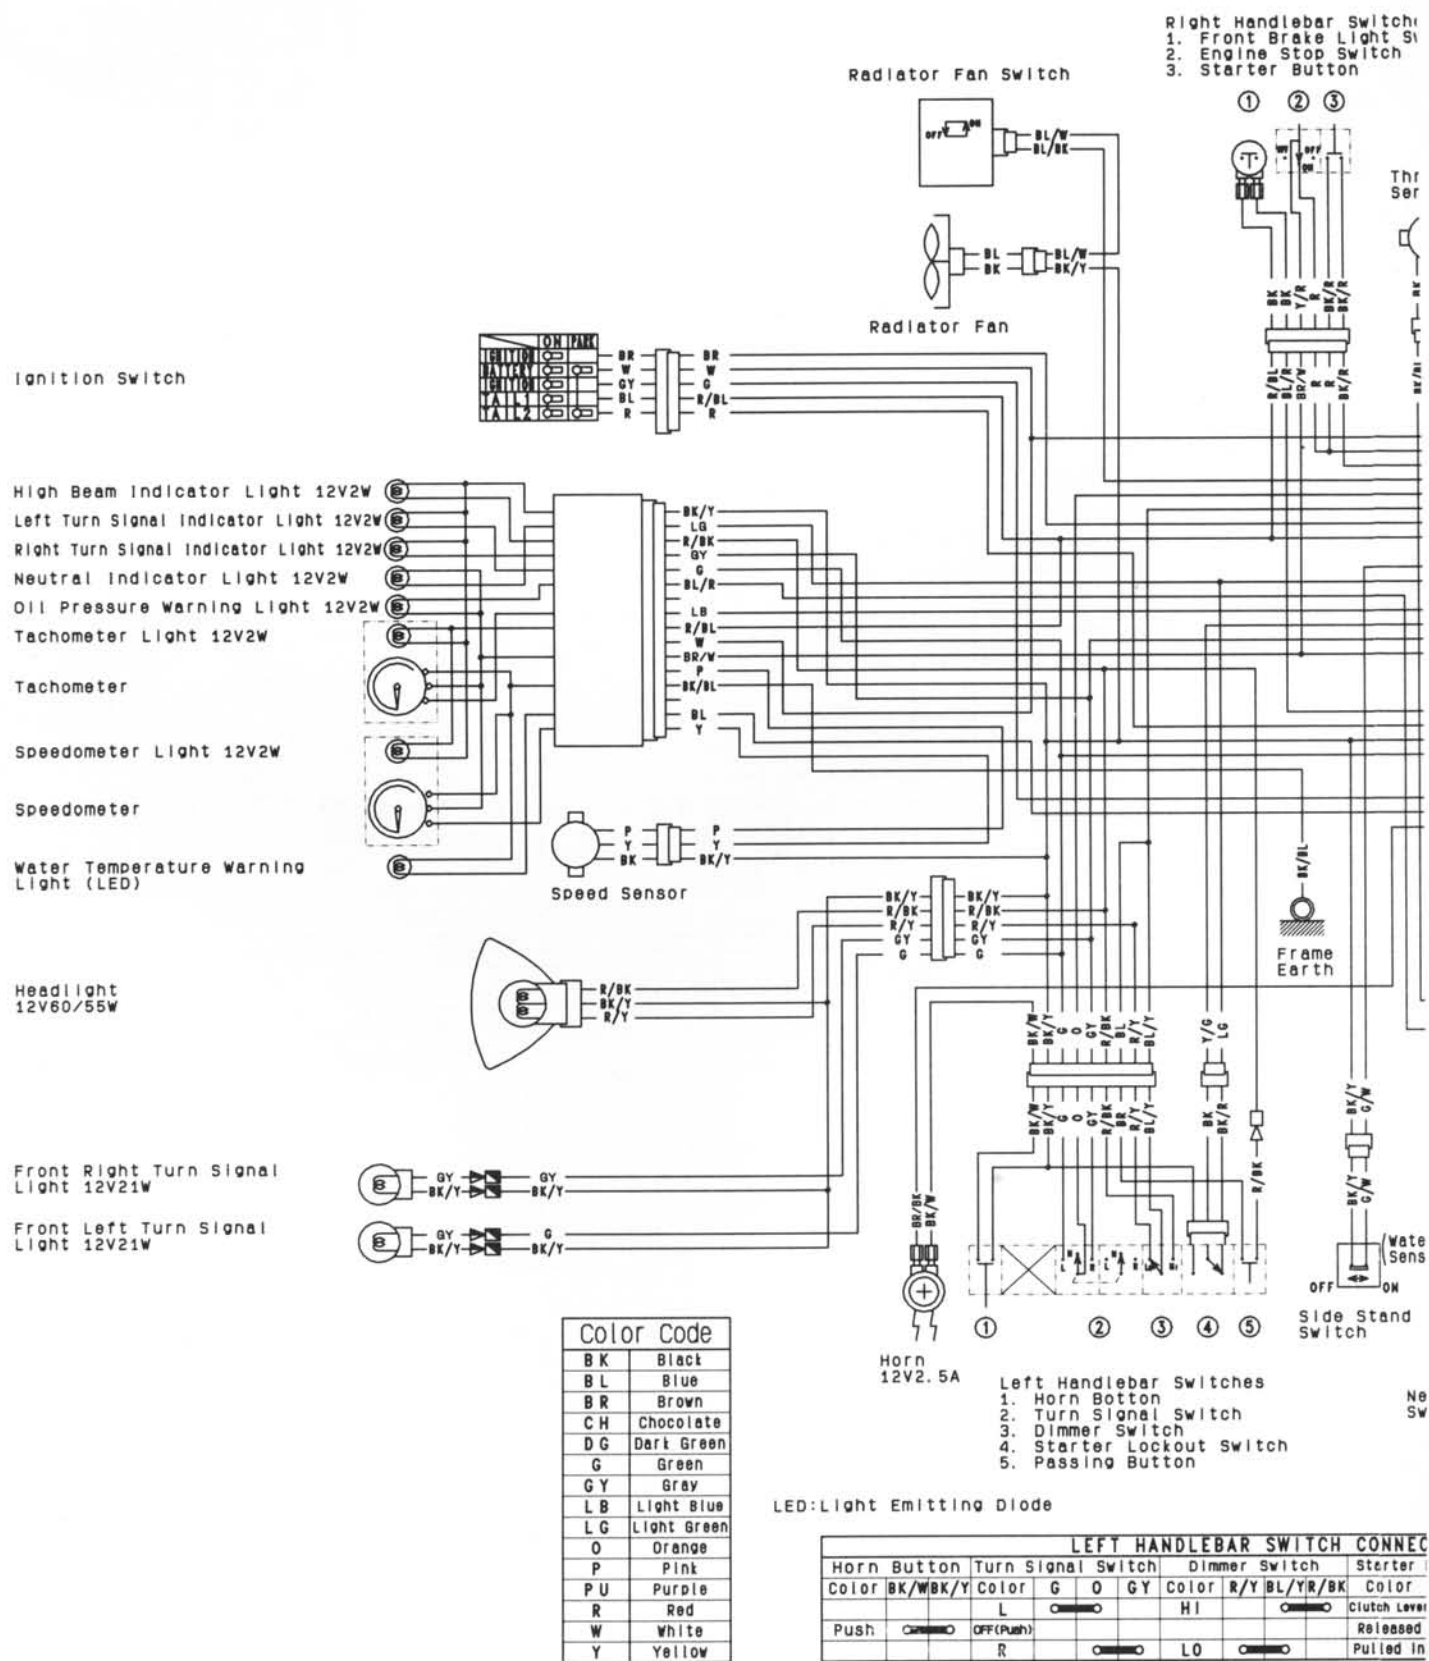



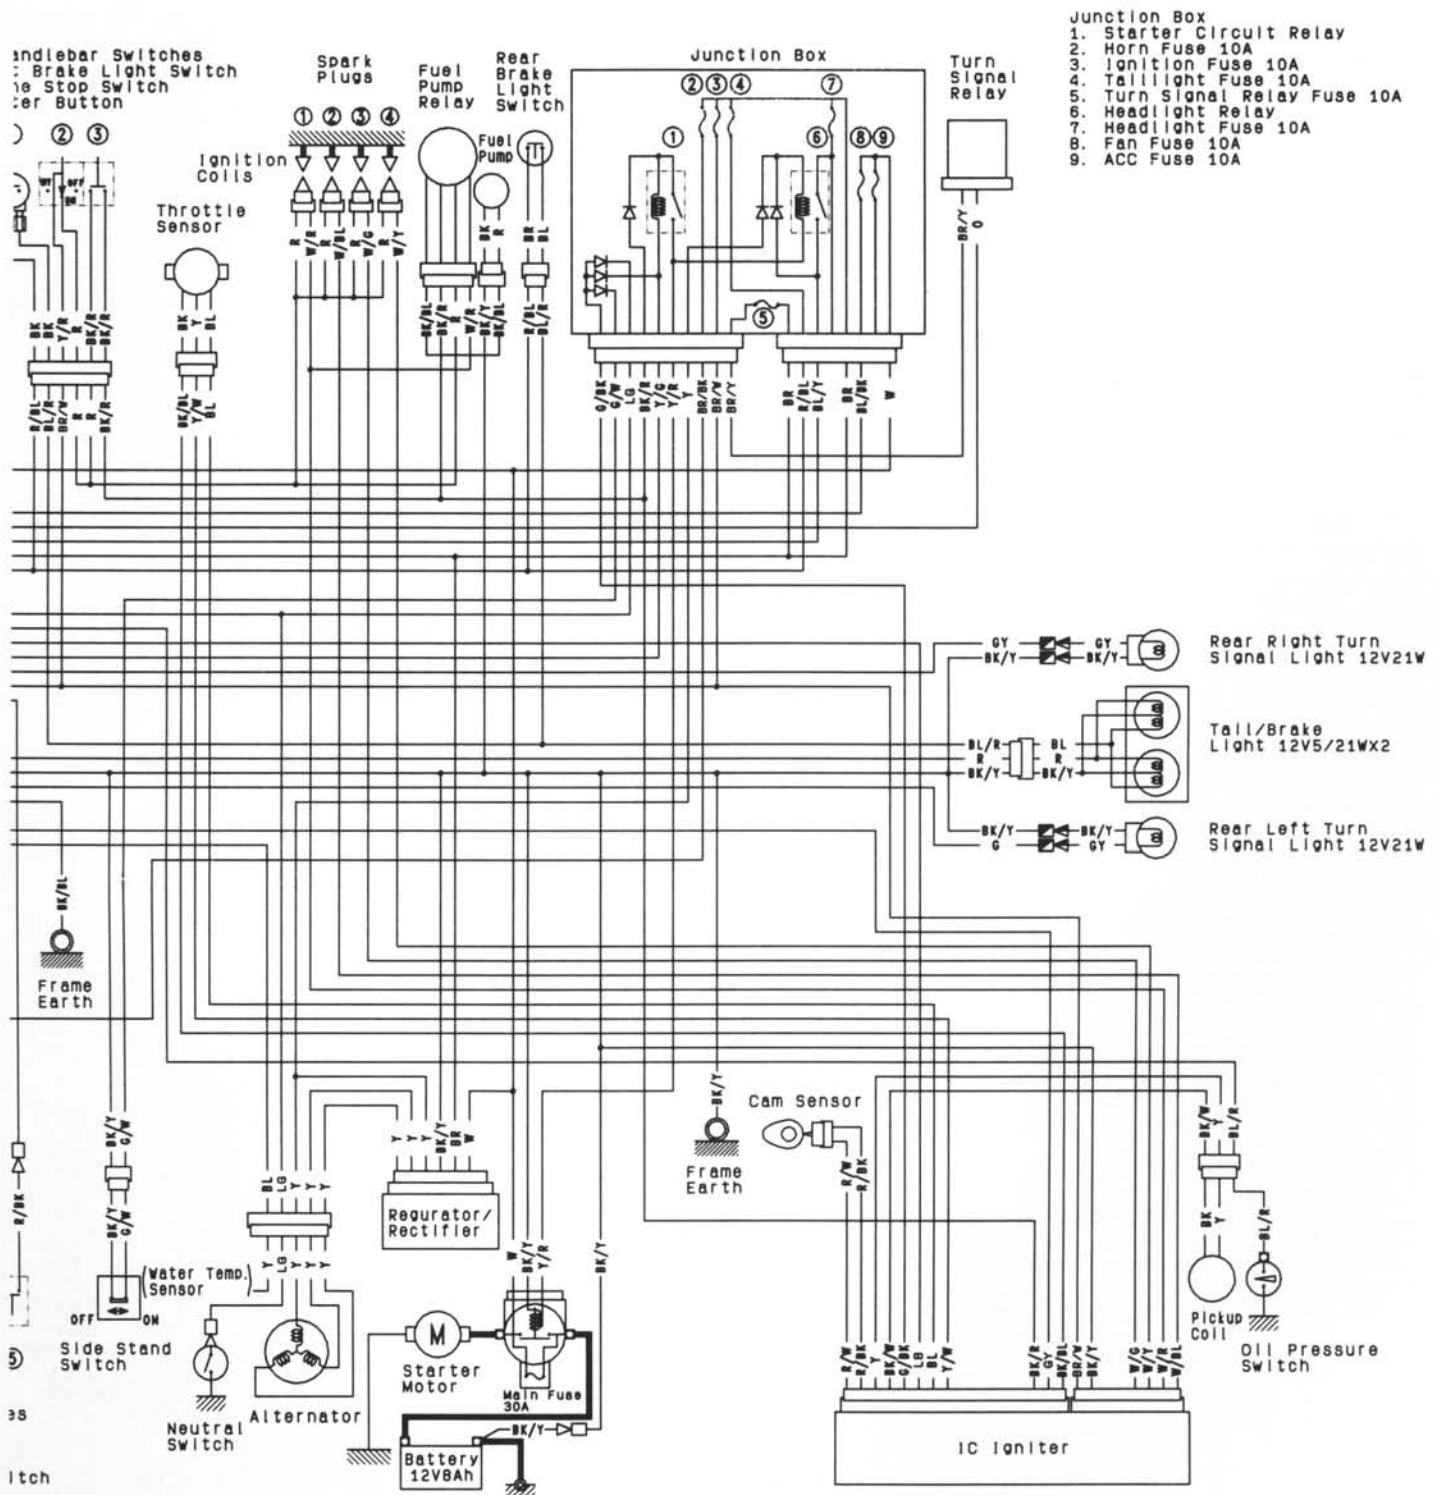

SWITCH CONNECTIONS					
Switch	Starter Lockout Switch	Passing Button			
Y BL/YR/BK	Color	BK/Y BK BK/R	Color	BR R/BK	
	Clutch Lever				
	Released		Push		
	Pulled In				


IGNITION SWITCH CONNECTIONS					
	Ignition	Battery	Ignition	Tail 1	Tail 2
Color	BR	W	GY	BL	R
OFF, LOCK					
ON					
P					


RIGHT HANDLEBAR SWITCH CONNECTIONS					
Front Brake Light Switch	Engine Stop Switch	Starter Button			
Color	BK BK	Color	Y/R R	Color	BK/R BK/R
Brake Lever		OFF			
Pulled In		RUN		Push	

(98051-1726A)

# 15-10 ELECTRICAL SYSTEM

## Wiring Diagram (Other than US, Canada, and Australia)

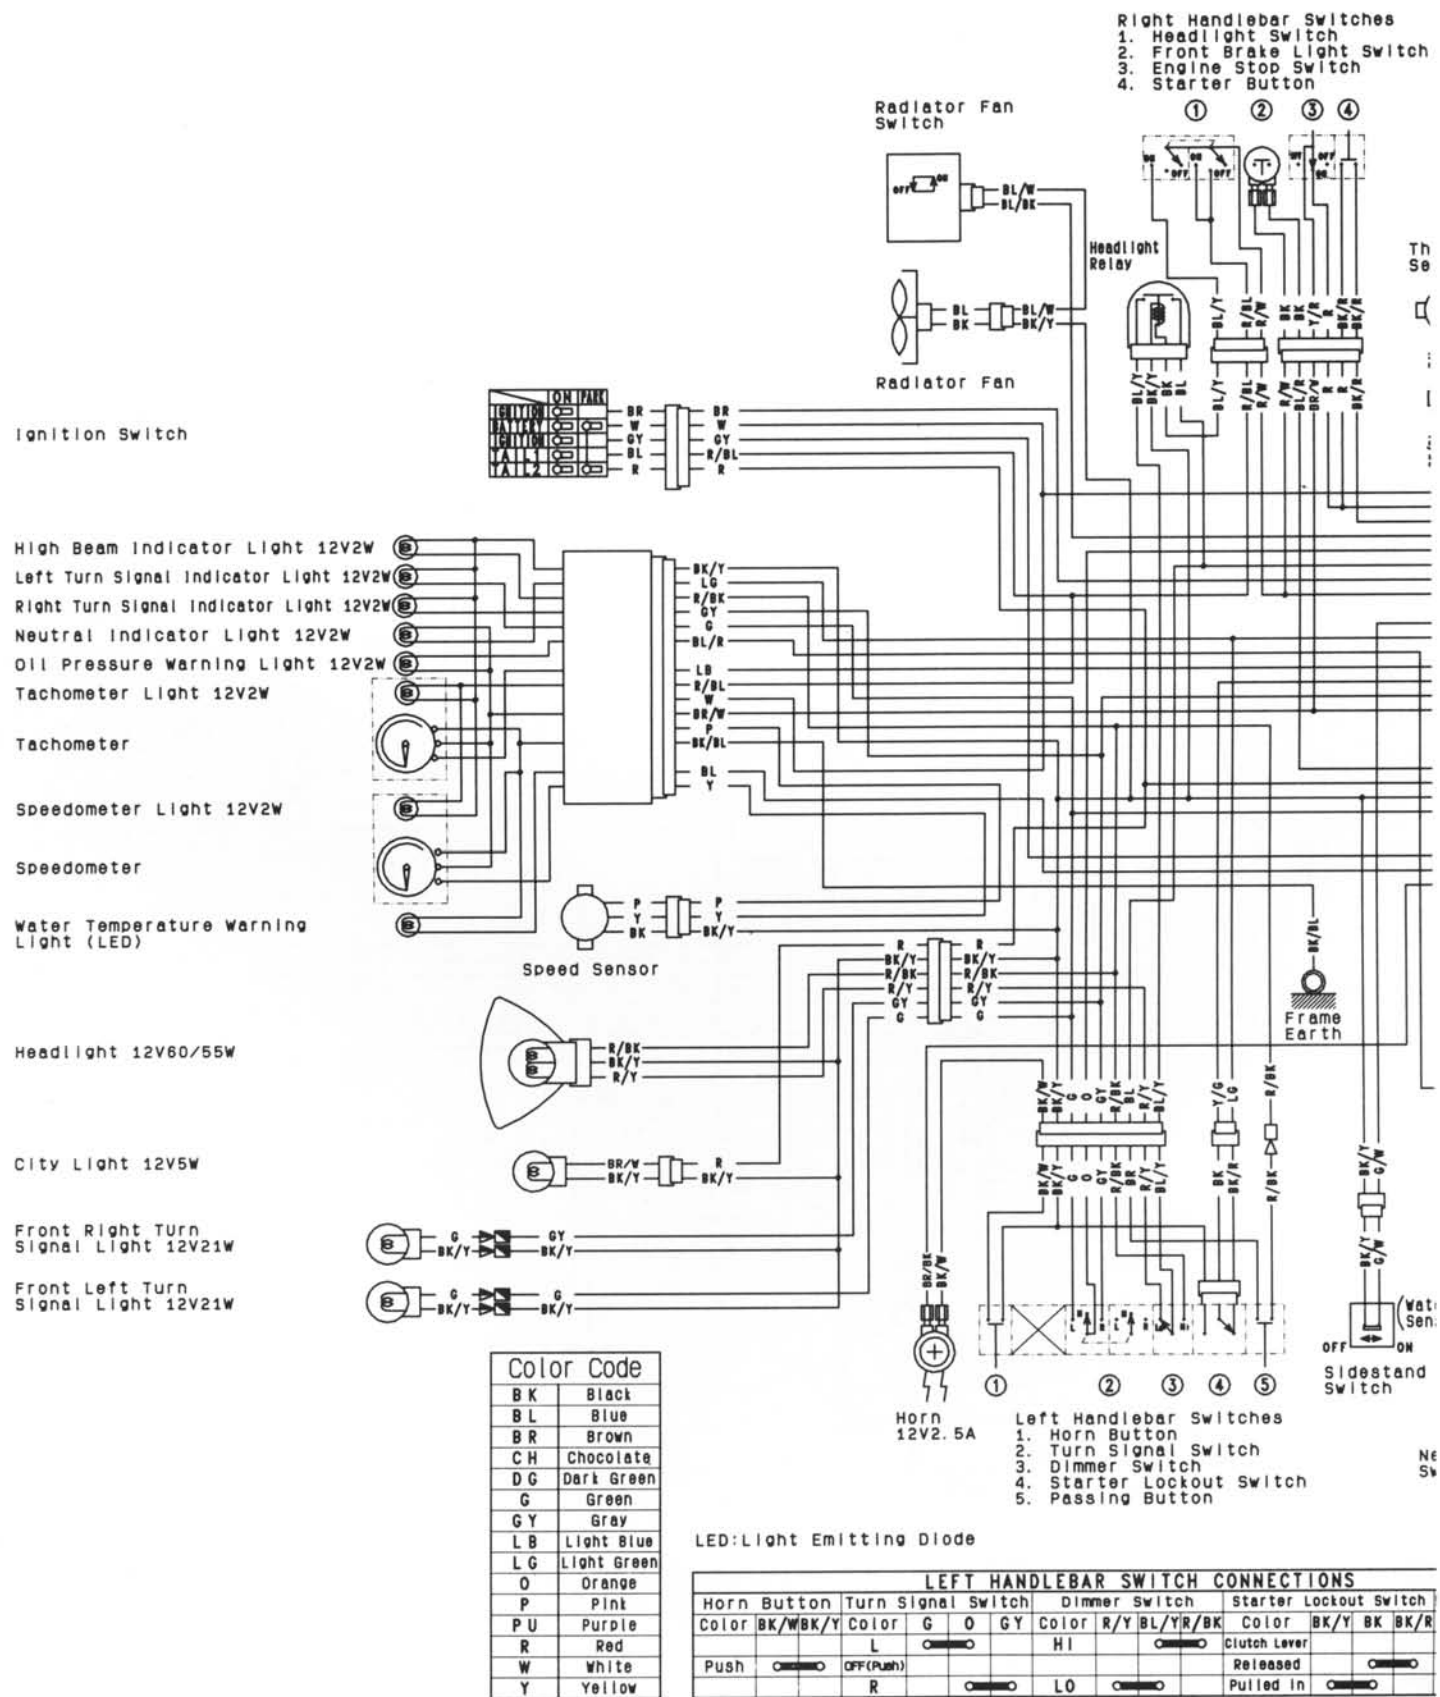

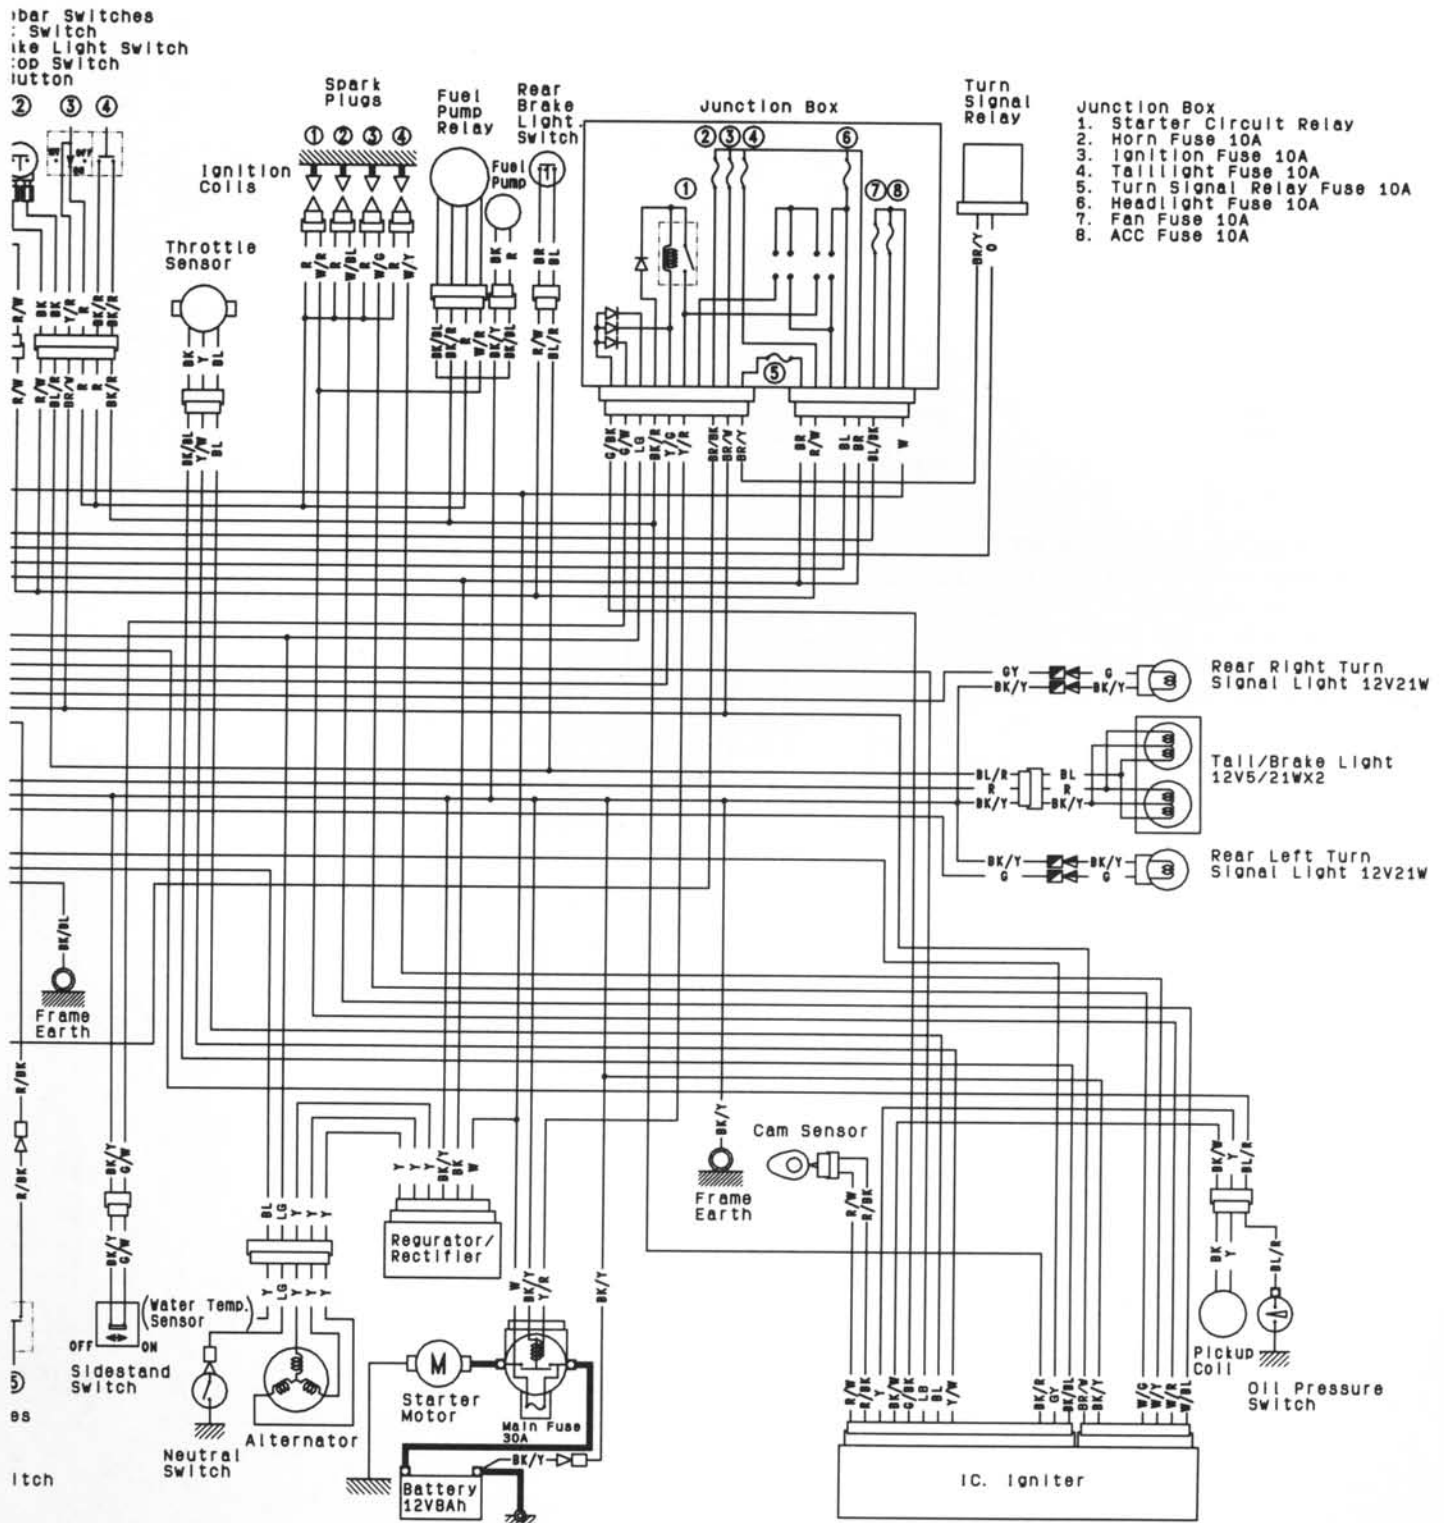

## ACTIONS

Master Lockout Switch	Passing Button
Color BK/Y BK BK/R	Color BR R/BK
Lever	Push
Used	
Used In	

## IGNITION SWITCH CONNECTIONS

	Ignition	Battery	Ignition	Tail 1	Tail 2
Color	BR	W	GY	BL	R
OFF, LOCK					
ON					
P					


## RIGHT HANDLEBAR SWITCH CONNECTIONS


Headlight Switch	Front Brake Light Switch	Engine Stop Switch	Starter Button
Color R/W R/BL BL/Y	Color BK BK	Color Y/R R	Color BK/R BK/R
OFF	Brake Lever	OFF	
	Pulled In		Push
ON		RUN	

(98051-1688A)

# 15-12 ELECTRICAL SYSTEM

## Wiring Diagram (D-Type)

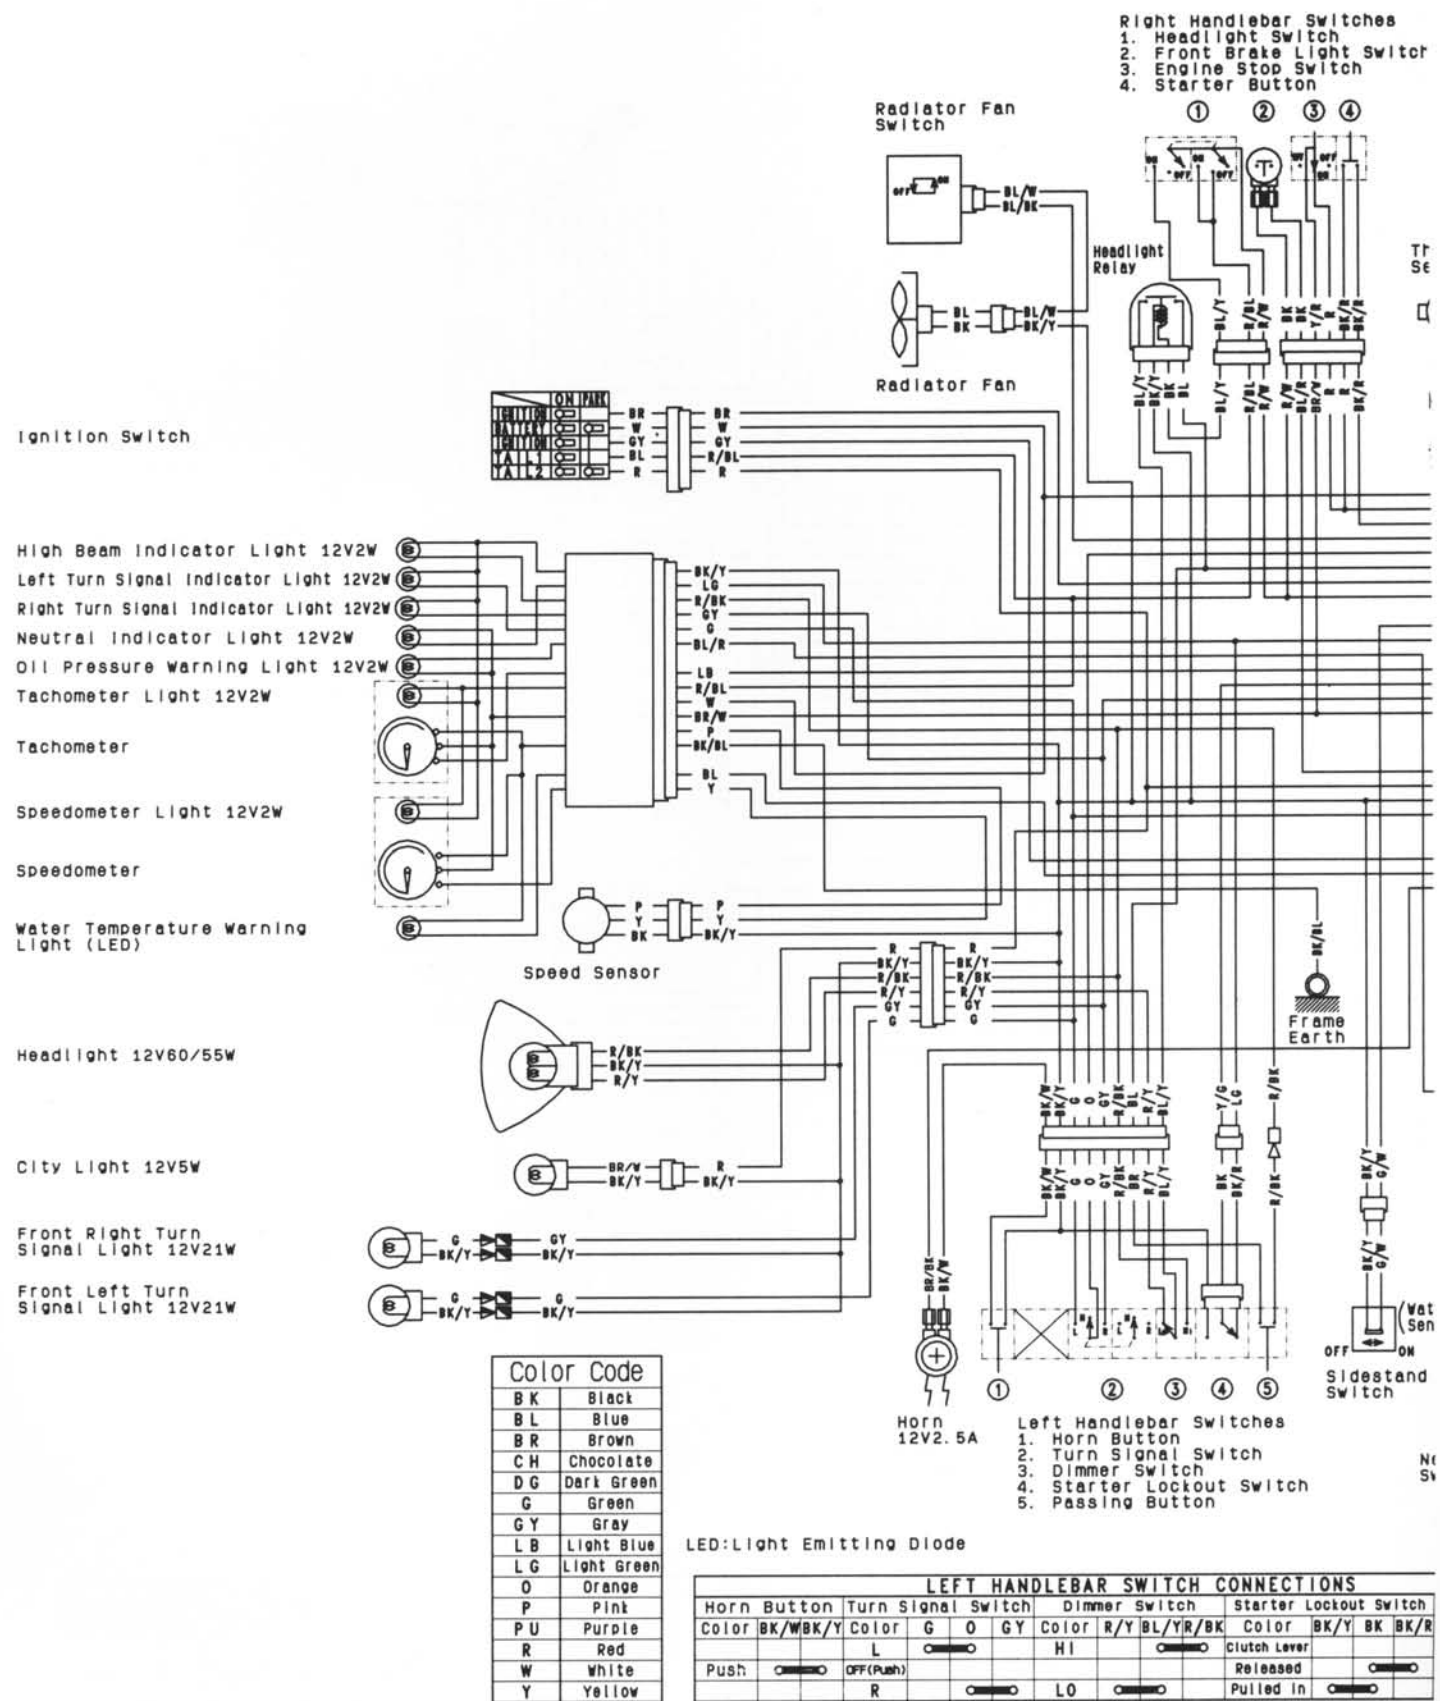

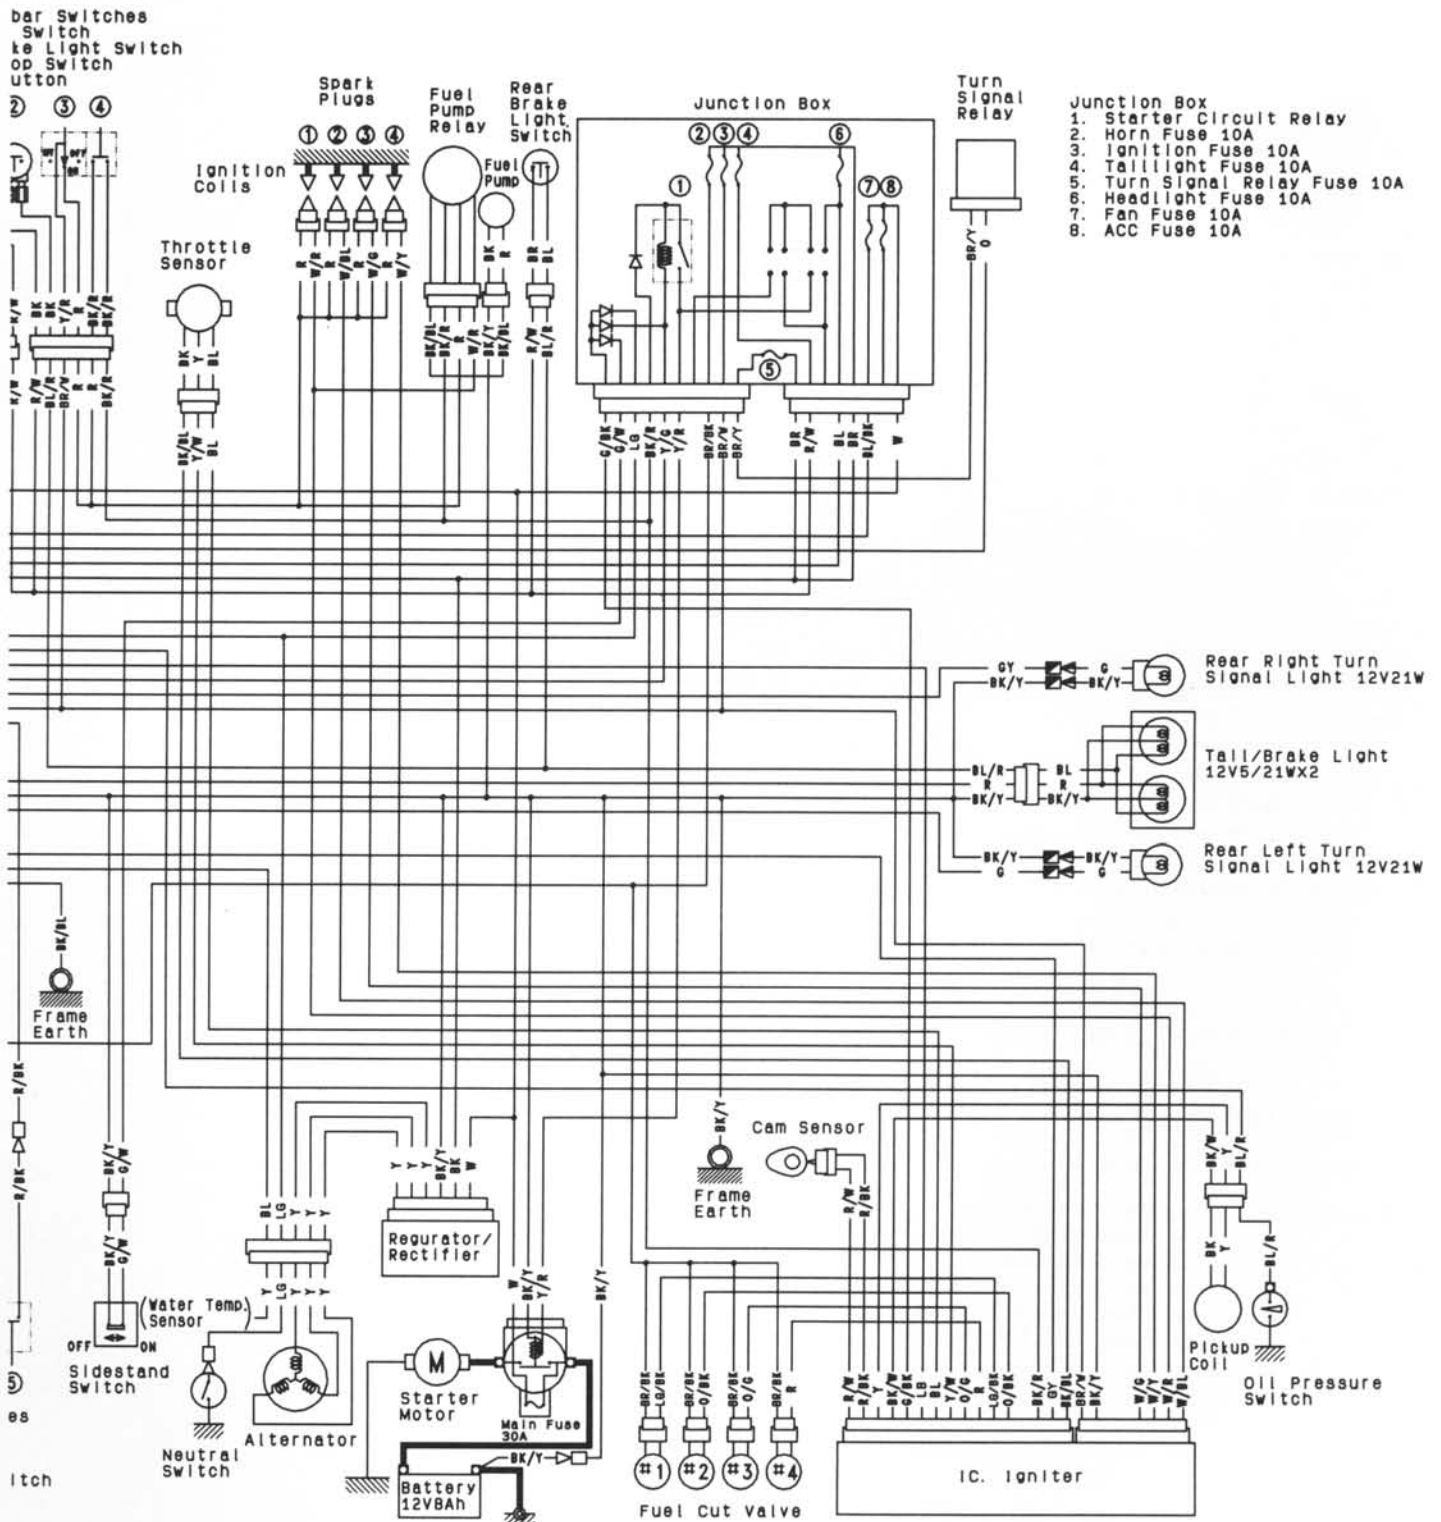

## ECTIONS

Master Lockout Switch	Passing Button
Color BK/Y BK BK/R Color BR R/BK	
OFF LOCK	
ON	Push
P	

## IGNITION SWITCH CONNECTIONS

	Ignition	Battery	Ignition	Tail 1	Tail 2
Color	BR	W	GY	BL	R
OFF. LOCK					
ON					
P					

## RIGHT HANDLEBAR SWITCH CONNECTIONS

Headlight Switch	Front Brake Light Switch	Engine Stop Switch	Starter Button
Color R/W/R/BL/BL/Y	Color BK BK	Color Y/R R	Color BK/R BK/R
OFF	Brake Lever	OFF	
ON	Pulled In	RUN	Push

(98051-1687A)

## 15-14 ELECTRICAL SYSTEM

### Specifications

Item	Standard
<b>Battery:</b> Type Capacity Voltage	MF (Maintenance Free) Battery 12 V 8 Ah 12.8 V or more
<b>Charging System:</b> Type Alternator output voltage Stator coil resistance Charging voltage (regulator/rectifier output voltage)	Three-phase AC 45 V or more 0.2 ~ 0.6 $\Omega$ 14.7 $\pm$ 0.5 V
<b>Ignition System:</b> Pickup coil resistance Stick coil: Primary winding resistance Secondary winding resistance Spark plug: Spark plug gap IC igniter internal resistance	375 ~ 565 $\Omega$ 0.85 ~ 1.15 $\Omega$ 9.6 ~ 14.4 k $\Omega$ 0.7 ~ 0.8 mm in the text
<b>Electric Starter System:</b> Starter motor: Brush length Commutator diameter	12 mm (Service limit 8.5 mm) 28 mm (Service limit 27 mm)
<b>Fuel Pump:</b> Fuel pump relay internal resistance Fuel pump pressure	in the text 11 ~ 16 kPa (0.11 ~ 0.16 kg/cm <sup>2</sup> , 1.6 ~ 2.3 psi)
<b>Switch and Sensor:</b> Cam sensor Speedometer sensor Rear brake light switch timing Engine oil pressure switch connections Fan switch connections Rising temperature Falling temperature Water temperature sensor resistance Throttle sensor output voltage	400 ~ 460 $\Omega$ in the text ON after about 10 mm pedal travel When engine is stopped: ON When engine is running: OFF From OFF to ON @ 96 ~ 100°C (205 ~ 212°F) From ON to OFF @ above 91°C (196°F) ON: Less than 0.5 $\Omega$ OFF: More than 1 M $\Omega$ 50°C (122°F) 9.18 ~ 9.94 k $\Omega$ 80°C (176°F) 2.50 ~ 3.06 k $\Omega$ 120°C (248°F) 0.65 ~ 0.73 k $\Omega$ When engine is idling: 0.9 ~ 1.1 V When engine is fully opened: 4.06 ~ 4.26 V

**Special Tools – Hand Tester:** 57001-1394  
**Rotor Puller, M16/M18/M20/M22 x 1.5:** 57001-1216  
**Flywheel Puller, M38 X 1.5:** 57001-1405  
**Flywheel Holder:** 57001-1313  
**Spark Plug Wrench, 16mm:** 92110-1146  
**Carburetor Drain Plug Wrench, Hex 3:** 57001-1269  
**Sealant – Kawasaki Bond (Silicone Sealant):** 56019-120



## Precautions

There are a number of important precautions that are musts when servicing electrical systems. Learn and observe all the rules below.


- Do not reverse the battery lead connections. This will burn out the diodes on the electrical parts.
- Always check battery condition before condemning other parts of an electrical system. A fully charged battery is a must for conducting accurate electrical system tests.
- The electrical parts should never be struck sharply, as with a hammer, or allowed to fall on a hard surface. Such a shock to the parts can damage them.
- To prevent damage to electrical parts, do not disconnect the battery leads or any other electrical connections when the ignition switch is on, or while the engine is running.
- Because of the large amount of current, never keep the starter button pushed when the starter motor will not turn over, or the current may burn out the starter motor windings.
- Do not use a meter illumination bulb rated for other than voltage or wattage specified in the wiring diagram, as the meter or gauge panel could be warped by excessive heat radiated from the bulb.
- Take care not to short the leads that are directly connected to the battery positive (+) terminal to the chassis ground.
- Troubles may involve one or in some cases all items.  
Never replace a defective part without determining what CAUSED the failure. If the failure was caused by some other item or items, they too must be repaired or replaced, or the new replacement will soon fail again.
- Make sure all connectors in the circuit are clean and tight, and examine wires for signs of burning, fraying, etc. Poor wires and bad connections will affect electrical system operation.
- Measure coil and winding resistance when the part is cold (at room temperature).

○ Color Codes:


BK Black	G Green	P Pink
BL Blue	GY Gray	PU Purple
BR Brown	LB Light blue	R Red
CH Chocolate	LG Light green	W White
DG Dark green	O Orange	Y Yellow

○ Electrical Connectors

Female Connectors [A]

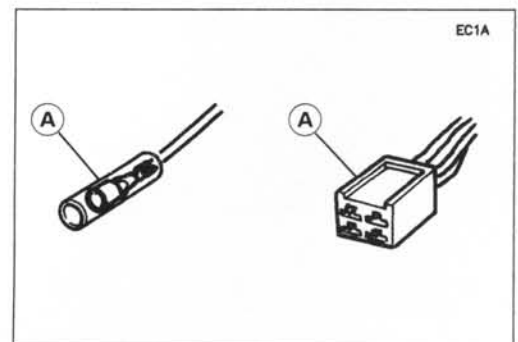

Male Connectors [B]

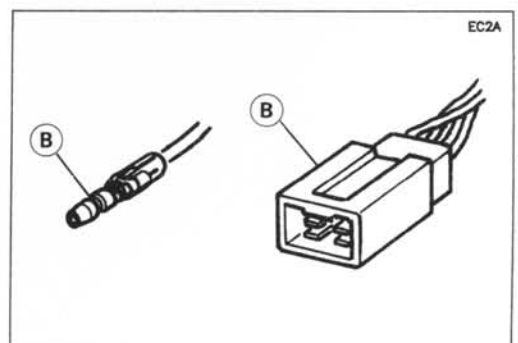

## 15-16 ELECTRICAL SYSTEM


### Electrical Wiring

#### Wiring Inspection

- Visually inspect the wiring for signs of burning, fraying, etc.
- ★ If any wiring is poor, replace the damaged wiring.
- Pull each connector [A] apart and inspect it for corrosion, dirt, and damage.
- ★ If the connector is corroded or dirty, clean it carefully. If it is damaged, replace it.
- Check the wiring for continuity.
- Use the wiring diagram to find the ends of the lead which is suspected of being a problem.
- Connect the hand tester between the ends of the leads.

#### Special Tool – Hand Tester: 57001-1394

- Set the tester to the x 1  $\Omega$  range, and read the tester.
- ★ If the tester does not read 0  $\Omega$ , the lead is defective. Replace the lead or the wiring harness [B] if necessary.

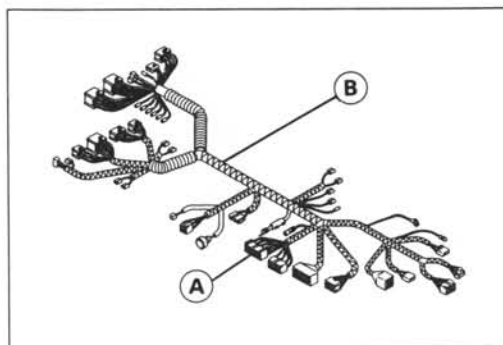



## Battery


### Battery Removal

- Remove:
  - Seats (see Frame Chapter)
- Disconnect the negative terminal lead [A] and then positive terminal lead [B].

#### CAUTION

Be sure to disconnect the negative terminal lead first.

- Remove the battery.

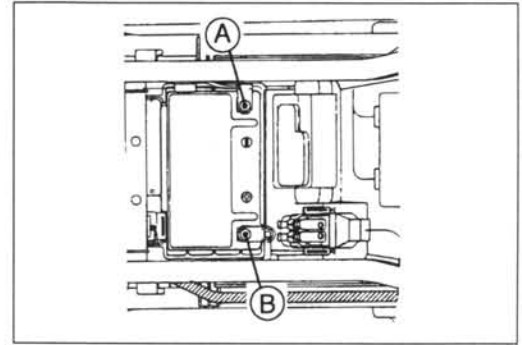

### Electrolyte Filling


#### CAUTION

Do not remove the aluminum seal sheet sealing the filler ports until just before use.  
Be sure to use the dedicated electrolyte container for correct electrolyte volume.

- Check to see that there is no peeling, tears or holes in the sealing sheet.
- Place the battery on a level surface.
- Remove the sealing sheet [A].
- When removing, check to hear an air-sucking sound "Shoosh!" from filler ports [B].

#### NOTE


- A battery whose sealing sheet has any peeling, tears, holes, or from which the air-sucking sound was not heard requires a refreshing charge (initial charge).

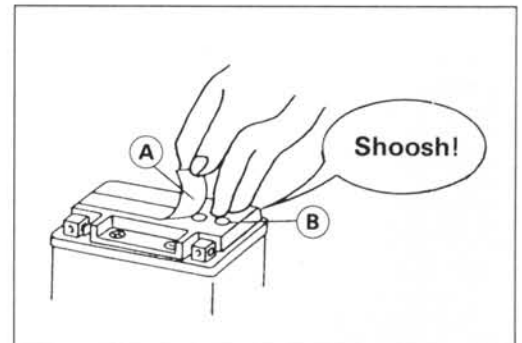

- Take the electrolyte container out of the vinyl bag.
- Detach the strip of caps [A] from the container.

#### NOTE


- Do not discard the strip of caps because it is used as the battery plugs later.
- Do not peel back or pierce the sealed areas [B].

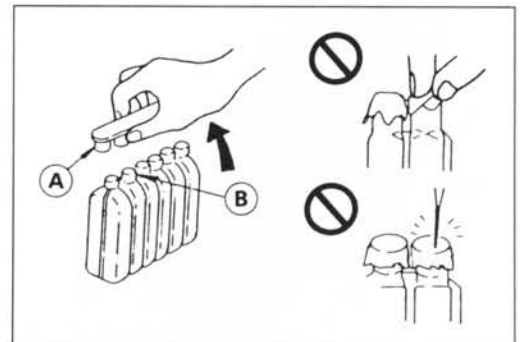

- Place the electrolyte container upside down with the six sealed areas in line with the six battery filler ports.
- Push the container down strongly enough to break the seals. Now the electrolyte should start to flow into the battery.

#### NOTE

- Do not tilt the container as the electrolyte flow may be interrupted.

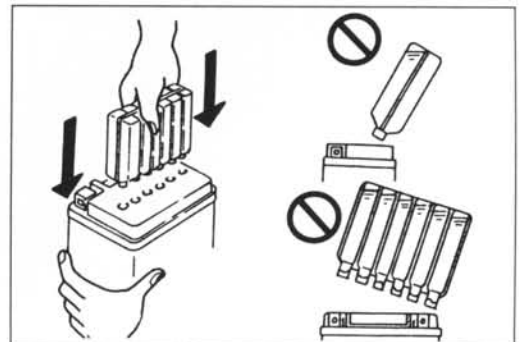

## 15-18 ELECTRICAL SYSTEM


- Make sure air bubbles [A] are coming up from all six filler ports.
- Leave the container this way for 5 minutes or longer.

### NOTE

- If no air bubbles are coming up from a filler port, tap [B] the bottom of the bottle two or three times. Never remove the container from the battery.

### CAUTION

Fill until the container is completely emptied.

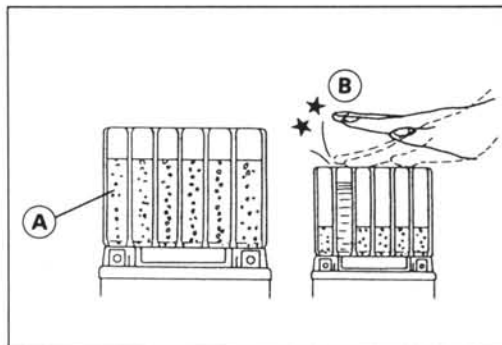


- Be certain that all the electrolyte has flowed out.
- Tap the bottom the same way as above if there is any electrolyte left in the container.
- Now pull the container gently out of the battery.
- Let the battery sit for **20** minutes. During this time, the electrolyte permeates the special separators and the gas generated by chemical reaction is released.
- Fit the strip of caps [A] tightly into the filler ports until the strip is at the same level as the top of the battery.

### NOTE

- Do not hammer. Press down evenly with both hands.

### CAUTION

Once you install the strip of caps after filling the battery, never remove it, nor add any water or electrolyte.

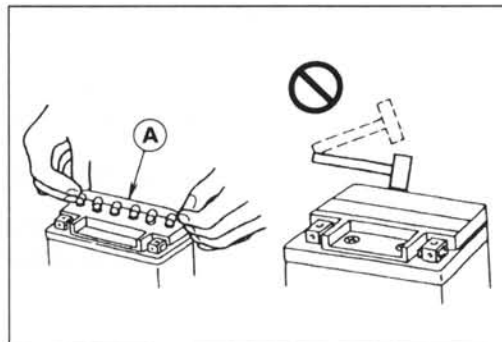

### Initial Charge

While a maintenance free battery can be used after only filling with electrolyte, a battery may not be able to sufficiently move a starter motor to start an engine in the cases shown in the table below, where an initial charge is required before use. However, if a battery shows a terminal voltage of higher than 12.5 V after 10 minutes of filling (Note 1), no initial charge is necessary.

Condition requiring initial charge	Charging method
At low temperatures (lower than 0°C)	0.9 A × 2 ~ 3 hours
Battery has been stored in high temperature and humidity.	0.9 A × 15 ~ 20 hours
Seal has been removed, or broken – peeling, tear or hole. (If you did not hear the air-sucking sound "Shoosh!" as you removed the seal.)	
Battery as old as 2 years or more after manufacture. Battery manufacturing date is printed on battery top. Example) <u>12</u> <u>10</u> <u>93</u> <u>T1</u> Day      Month      Year      Mfg. location	

Note 1 : Terminal voltage – To measure battery terminal voltage, use a digital voltmeter.

### Precautions

- 1) No need of topping-up  
No topping-up is necessary in this battery until it ends its life under normal use. Forcibly prying off the sealing plug to add water is very dangerous. Never do that.
- 2) Refreshing charge  
If an engine will not start, a horn sounds weak, or lamps are dim, it indicates the battery has been discharged. Give refresh charge for 5 to 10 hours with charge current shown in the specification (see the Electrical System chapter). When a fast charge is inevitably required, do it following precisely the maximum charge current and time conditions indicated on the battery.

CAUTION
<p><b>This battery is designed to sustain no unusual deterioration if refresh-charged according to the method specified above. However, the battery's performance may be reduced noticeably if charged under conditions other than given above. Never remove the sealing plug during refresh charge.</b></p> <p><b>If by chance an excessive amount of gas is generated due to overcharging, the safety valve operates to keep the battery safe.</b></p>

- 3) When you do not use the motorcycle for months  
Give a refresh charge before you store the motorcycle and store it with the negative lead removed. Give a refresh charge every month during storage.
- 4) Battery life  
If the battery will not start the engine even after several refresh charges, the battery has exceeded its useful life. Replace it. (Provided, however, the vehicle's starting system has no problem.)

⚠WARNING
<p><b>Keep the battery away from sparks and open flames during charging, since the battery gives off an explosive gas mixture of hydrogen and oxygen. When using a battery charger, connect the battery to the charger before turning on the charger. This procedure prevents sparks at the battery terminals which could ignite any battery gases.</b></p> <p><b>No fire should be drawn near the battery, or no terminals should have the tightening loosened.</b></p> <p><b>The electrolyte contains sulfuric acid. Be careful not to have it touch your skin or eyes. If touched, wash it off with liberal amount of water. Get medical attention if severe.</b></p>

### Interchange

A maintenance free battery can fully display its performance only when combined with a proper vehicle electric system. Therefore, replace a maintenance free battery only on a motorcycle which was originally equipped with a maintenance free battery.

Be careful, if a maintenance free battery is installed on a motorcycle which had an ordinary battery as original equipment, the maintenance free battery's life will be shortened.

### Charging Condition Inspection

Battery charging condition can be checked by measuring battery terminal voltage.

- Remove the seats (see Frame chapter).
- Disconnect the battery terminal leads.

#### CAUTION

Be sure to disconnect the negative terminal lead first.

- Measure the battery terminal voltage.



#### NOTE

○ Measure with a digital voltmeter [A] which can be read to one decimal place voltage.

★ If the reading is below the specified, refreshing charge is required.

#### Battery Terminal Voltage

Standard: 12.8 V or more

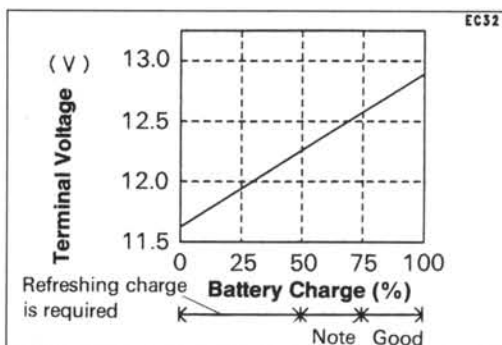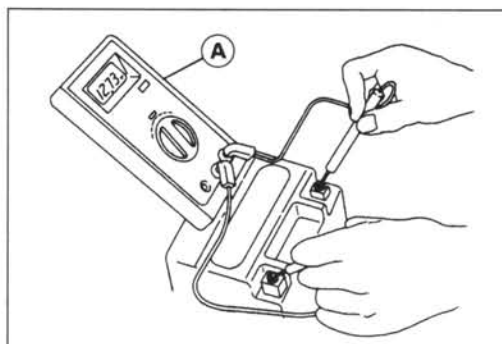


### Refreshing Charge

- Disconnect the battery terminal leads (see Charging Condition Inspection).
- Remove the battery [A].
- Refresh-charge by following method according to the battery terminal voltage.

#### ⚠ WARNING

This battery is sealed type. Never remove sealing caps [B] even at charging. Never add water. Charge with current and time as stated below.

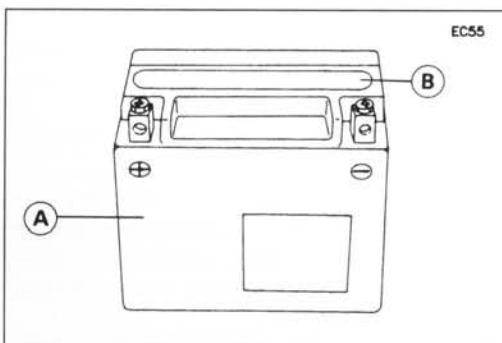

Terminal Voltage: 11.5 ~ less than 12.8 V

#### Standard Charge

0.9 A x 5 ~ 10 h (see following chart)

#### Quick Charge

4.0 A x 1.0 h

#### CAUTION

If possible, do not quick charge. If the quick charge is done due to unavoidable circumstances, do standard charge later on.

Terminal Voltage : less than 11.5 V

Charging Method : 0.9 A x 20 h


#### NOTE

○ Raise the voltage initially (25 V as maximum), and charge for about 5 minutes as a yardstick. If ammeter shows no change in current after 5 minutes, you need a new battery. The current, if it can flow into the battery, tends to become excessive. Adjust the voltage as often as possible to keep the current at standard value (1.2 A).


Battery [A]

Battery Charger [B]

Standard Value [C]

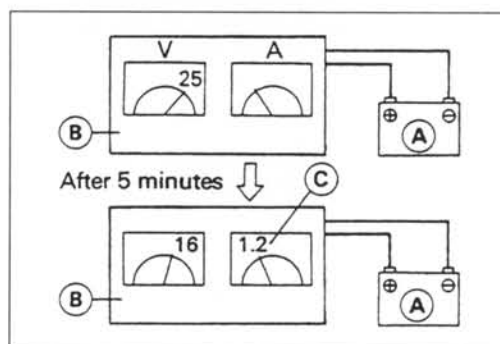

Battery Standard Charge Time Chart

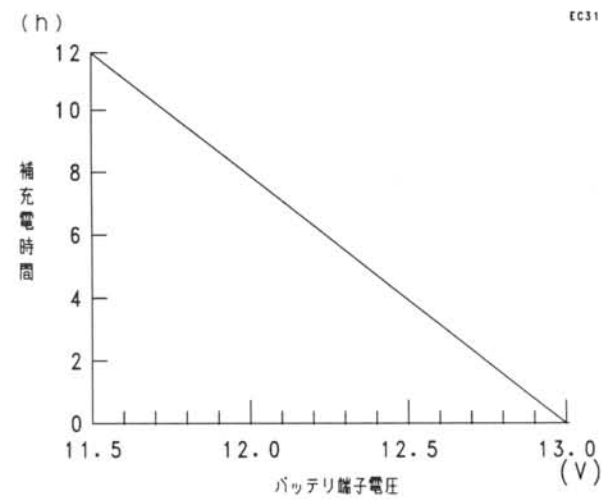

- Determine battery condition after refreshing charge.
- Determine the condition of the battery 30 minutes after completion of the charge by measuring the terminal voltage according to the table below.


Criteria	Judgement
12.8 V or higher	Good
12.0 ~ 12.8 V or lower	Charge insufficient → Recharge.
12.0 V or lower	Unserviceable → Replace

## 15-22 ELECTRICAL SYSTEM

### Charging System

#### Alternator Cover Removal


- Remove:
  - Lower Fairing (see Frame chapter)
  - Left Middle Fairing (see Frame chapter)
  - Coolant Reserve Tank [A]
  - Fuel Tank (see Fuel System chapter)
  - Neutral Lead Connector
  - Water Temperature Lead Connector
  - Alternator Lead Connector [B]
- Place a suitable container under the alternator cover [C], and remove the cover.

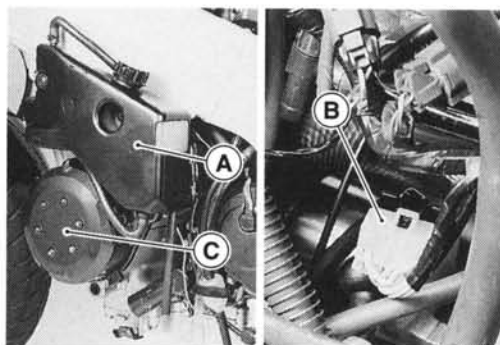

#### Alternator Cover Installation


- Apply silicone sealant to the alternator lead grommet and crankcase halves mating surface [A] on the front and rear sides of the cover mount.
- Sealant – Kawasaki Bond (Silicone Sealant): 56019-120**
- Check that knock pins [B] are in place on the crankcase.
- Install a new gasket and the alternator cover.
- Tighten the cover bolts.

**Torque – Alternator Cover Bolts: 11 N-m (1.1 kg-m, 95 in-lb)**

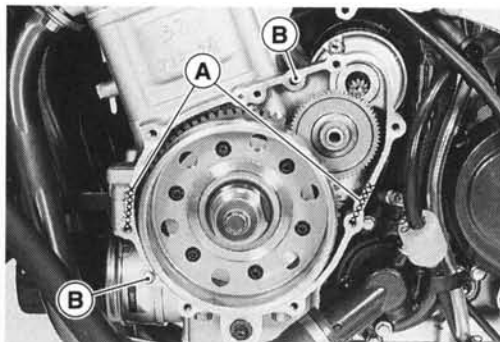

#### Stator Coil Removal

- Remove:
  - Alternator Cover (see Alternator Cover Removal)
  - Holding Plate Bolts [A] and Plate
  - Alternator Lead Grommet [B]
  - Stator Coil Bolts [C]
- Remove the stator coil [D] from the alternator cover.

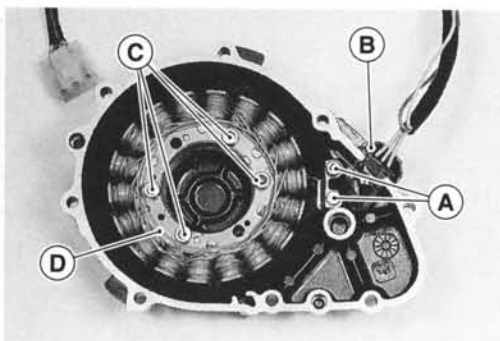


#### Stator Coil Installation

- Tighten the stator coil bolts.
- Torque – Stator Coil Bolts: 11 N-m (1.1 kg-m, 95 in-lb)**
- Apply silicone sealant to the circumference of the alternator lead grommet, and fit the grommet into the notch of the cover securely.
- Sealant – Kawasaki Bond (Silicone Sealant): 56019-120**
- Secure the alternator lead with a holding plate, and tighten the bolts.
- Torque – Alternator Lead Holding Plate Bolts: 8.3 N-m (0.85 kg-m, 74 in-lb)**
- Install the alternator cover (see Alternator Cover Installation).

**Alternator Rotor Removal**

- Remove:  
Alternator cover (see Alternator Cover Removal)
- Wipe oil off the outer circumference of the rotor.
- Hold the alternator rotor steady with the flywheel holder [A], and remove the rotor bolt [B].

**Special Tool – Flywheel Holder: 57001-1313**

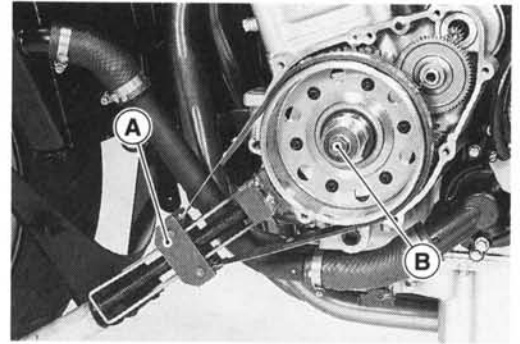


- Using the flywheel puller [A] and rotor puller [B], remove the alternator rotor from the crankshaft.

**Special Tools – Flywheel Puller, M38 x 1.5: 57001-1405**

**Rotor Puller, M16/M18/M20/M22 x 1.5: 57001-1216**

**NOTE**


- Screw in the puller while tapping the head [C] of the puller with a hammer.

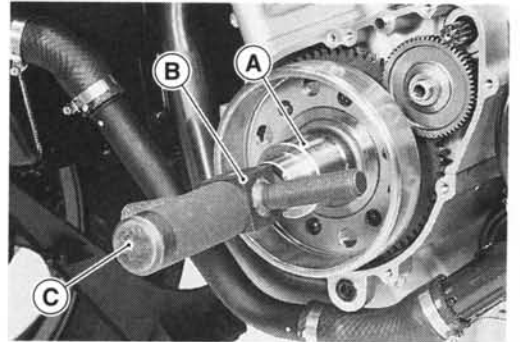**CAUTION**


**Do not attempt to strike the alternator rotor itself. Striking the rotor can cause the magnets to lose their magnetism.**

**Alternator Rotor Installation**

- Using a cleaning fluid, clean off any oil or dirt on the following portions and dry them with a clean cloth.  
[A] Crankshaft Tapered Portion  
[B] Alternator Rotor Tapered Portion
- Apply a thin coat of molybdenum disulfide grease to the crankshaft [C].

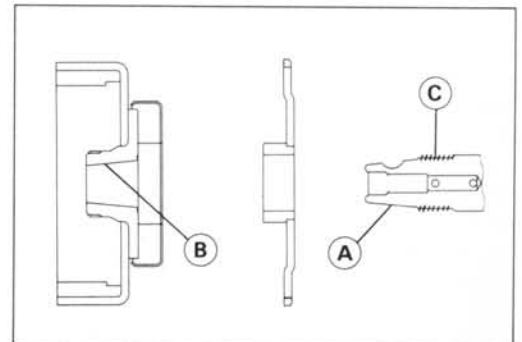


- Install the starter gear [A].
- Again, clean the crankshaft tapered portion [B] and dry there.
- Fit the woodruff key [C] securely in the slot in the crankshaft before installing the alternator rotor.

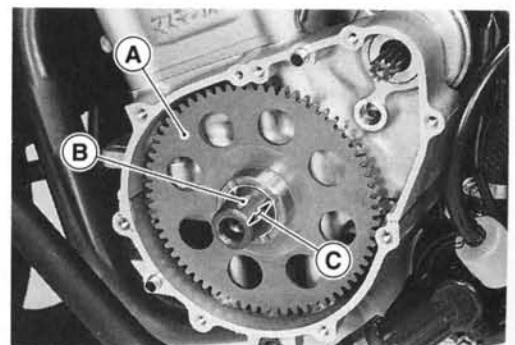




- Install the alternator rotor [A] while turning [B] the starter gear [C].

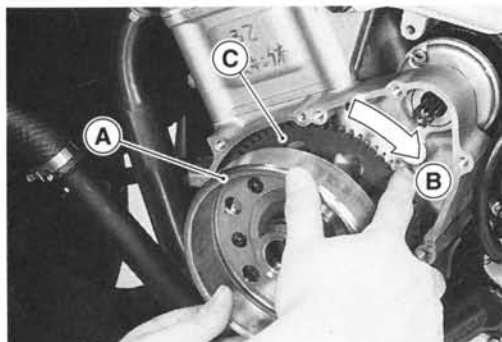

- Install the washer [A] so that the chamfer side [B] faces outward.

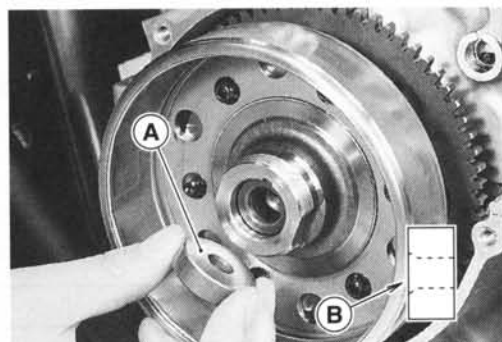


- Tighten the alternator rotor bolt while holding the alternator rotor steady with the flywheel holder.

**Special Tool – Flywheel Holder: 57001-1313**

**Torque – Alternator Rotor Bolt: 110 N-m (11.0 kg-m, 80 ft-lb)**

- Install the shaft [A] and starter idle gear [B].
- Install the alternator cover (see Alternator Cover Installation).

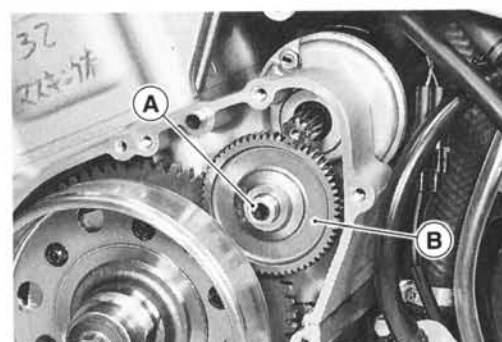


### Alternator Inspection

There are three types of alternator failures: short, open (wire burned out), or loss in rotor magnetism. A short or open in one of the coil wires will result in either a low output, or no output at all. A loss in rotor magnetism, which may be caused by dropping or hitting the alternator, by leaving it near an electromagnetic field, or just by aging, will result in low output.

- To check the alternator output voltage, do the following procedures.
  - Turn off the ignition switch.
  - Remove the fuel tank (see Fuel System chapter).
  - Supply fuel to the carburetors with an auxiliary fuel tank.
  - Disconnect the alternator lead connector [A].
  - Connect the hand tester as shown in the table 1.
  - Start the engine.
  - Run it at the rpm given in the table 1.
  - Note the voltage readings (total 3 measurements).

**Table 1 Alternator Output Voltage**

Tester Range	Connections		Reading @ 4,000 rpm
	Tester (+) to	Tester (-) to	
250 V AC	One Yellow lead	Another Yellow lead	45 V or more

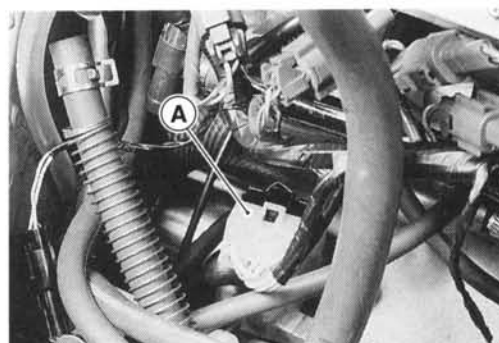



★ If the output voltage shows the value in the table, the alternator operates properly and the regulator/rectifier is damaged. A much lower reading than that given in the table indicates that the alternator is defective.

- Check the stator coil resistance as follows.
- Stop the engine.
- Connect the hand tester as shown in the table 2.
- Note the readings (total 3 measurement).

**Table 2 Stator Coil Resistance**

Tester Range	Connections		Reading
	Tester (+) to	Tester (-) to	
$\times 1 \Omega$	One Yellow lead	Another Yellow lead	$0.2 \sim 0.6 \Omega$

★ If there is more resistance than shown in the table, or no hand tester reading (infinity) for any two leads, the stator has an open lead and must be replaced. Much less than this resistance means the stator is shorted, and must be replaced.

● Using the highest resistance range of the hand tester, measure the resistance between each of the Yellow leads and chassis ground.


★ Any hand tester reading less than infinity ( $\infty$ ) indicates a short, necessitating stator replacement.

★ If the stator coils have normal resistance, but the voltage check showed the alternator to be defective; then the rotor magnets have probably weakened, and the rotor must be replaced.

**Special Tool – Hand Tester: 57001-1394**

### Regulator/Rectifier Inspection

- Remove:
  - Seat Cover (see Frame chapter)
  - Connector [A] (disconnect)
  - Bolts [B]
  - Regulator/Rectifier [C]

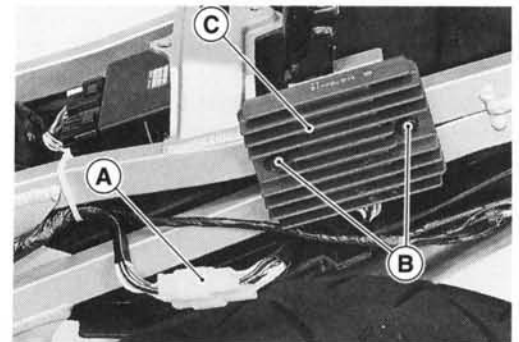


### Rectifier Circuit Check:

- Check conductivity of the following pair of terminals.

#### Rectifier Circuit Inspection

Tester connection	W-Y1,	W-Y2,	W-Y3
	BK/Y-Y1,	BK/Y-Y2,	BK/Y-Y3

★ The resistance should be low in one direction and more than ten times as much in the other direction. If any two leads are low or high in both directions, the rectifier is defective and must be replaced.

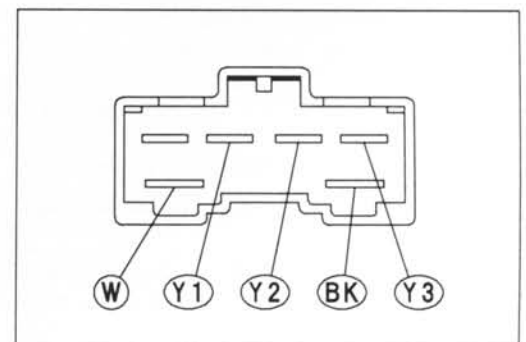

### NOTE

○ The actual meter reading varies with the meter used and the individual rectifier, but, generally speaking the lower reading should be from zero to one half the scale.

### Regulator Circuit Check:

To test the regulator out of circuit, use three 12 V batteries and a test light (12 V 3 ~ 6 W bulb in a socket with leads).


### CAUTION

The test light works as an indicator and also a current limiter to protect the regulator/rectifier from excessive current. Do not use an ammeter instead of a test light.

- Check to be sure the rectifier circuit is normal before continuing.


### Regulator Circuit Test-1st Step:

- Connect the test light and the 12 V battery to the regulator/rectifier as shown.
- Check Y 1, Y2, and Y3 terminal respectively.
- ★ If the test light turns on, the regulator/rectifier is defective. Replace it.
- ★ If the test light does not turn on, continue the test.

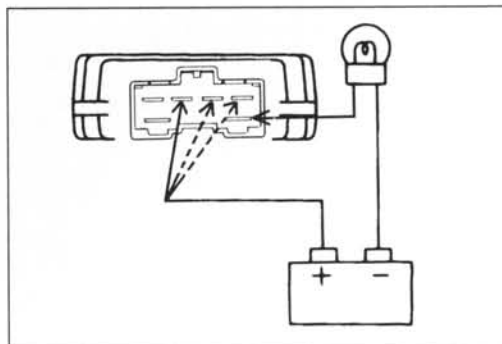

### Regulator Circuit Test-2nd Step:

- Connect the test light and the 12 V battery in the same manner as specified in the "Regulator Circuit Test-1st Step".
- Apply 12 V to the voltage detection terminal.
- Check Y 1, Y2, and Y3 terminal respectively.
- ★ If the test light turns on, the regulator/rectifier is defective. Replace it.
- If the test light does not turn on, continue the test.

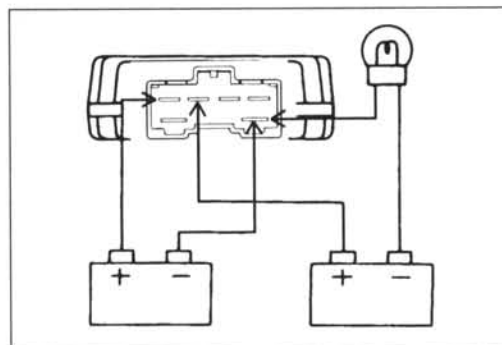


### Regulator Circuit Test-3rd Step:

- Connect the test light and the 12 V battery in the same manner as specified in the "Regulator Circuit Test-1st Step".
- Momentarily apply 24 V to the voltage monitoring terminal by adding a 12 V battery.
- Check Y 1, Y2, and Y3 terminals respectively.

### CAUTION


Do not apply more than 24 V to the regulator/rectifier and do not leave the 24 V applied for more than a few seconds, or the unit will be damaged.

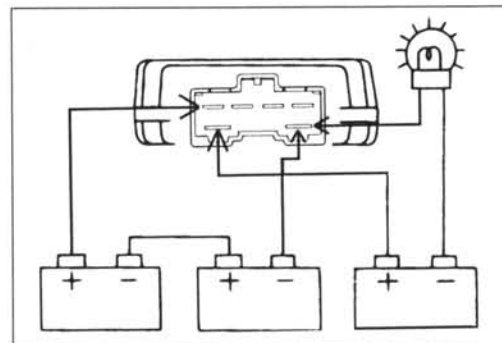

- ★ If the test light did not light when the 24 V was applied momentarily to the voltage monitoring terminal, the regulator/rectifier is defective. Replace it.
- ★ If the regulator/rectifier passes all of the tests described, it may still be defective. If the charging system still does not work properly after checking all of the components and the battery, test the regulator/rectifier by replacing it with a known good unit.

### *Regulator/Rectifier Output Voltage Inspection*

- Check the battery condition (see Battery section).
- Warm up the engine to obtain actual alternator operating conditions.
- Remove the side covers (see Frame chapter).
- Check that the ignition switch is turned off, and connect the hand tester [A] as shown in the table.
- Start the engine, and note the voltage readings at various engine speeds with the headlight turned on and then turned off. (To turn off the headlight of US, Canada and Australia models, disconnect the headlight connector in the upper fairing.) The readings should show nearly battery voltage when the engine speed is low, and, as the engine speed rises, the readings should also rise. But they must be kept under the specified voltage.

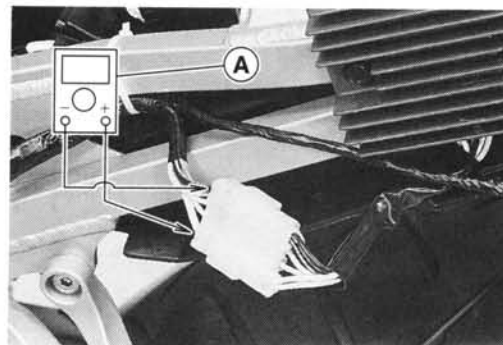


### **Regulator/Rectifier Output Voltage**

Tester Range	Connections		Reading
	Tester (+) to	Tester (-) to	
25 V DC	White	Black/Yellow	14.2 ~ 15.2 V

- Turn off the ignition switch to stop the engine, and disconnect the hand tester.
- ★ If the regulator/rectifier output voltage is kept between the values given in the table, the charging system is considered to be working normally.
- ★ If the output voltage is much higher than the values specified in the table, the regulator/rectifier is defective or the regulator/rectifier leads are loose or open.
- ★ If the battery voltage does not rise as the engine speed increases, then the regulator/rectifier is defective or the alternator output is insufficient for the loads. Check the alternator and regulator/rectifier to determine which part is defective.

Charging System Circuit

EC133

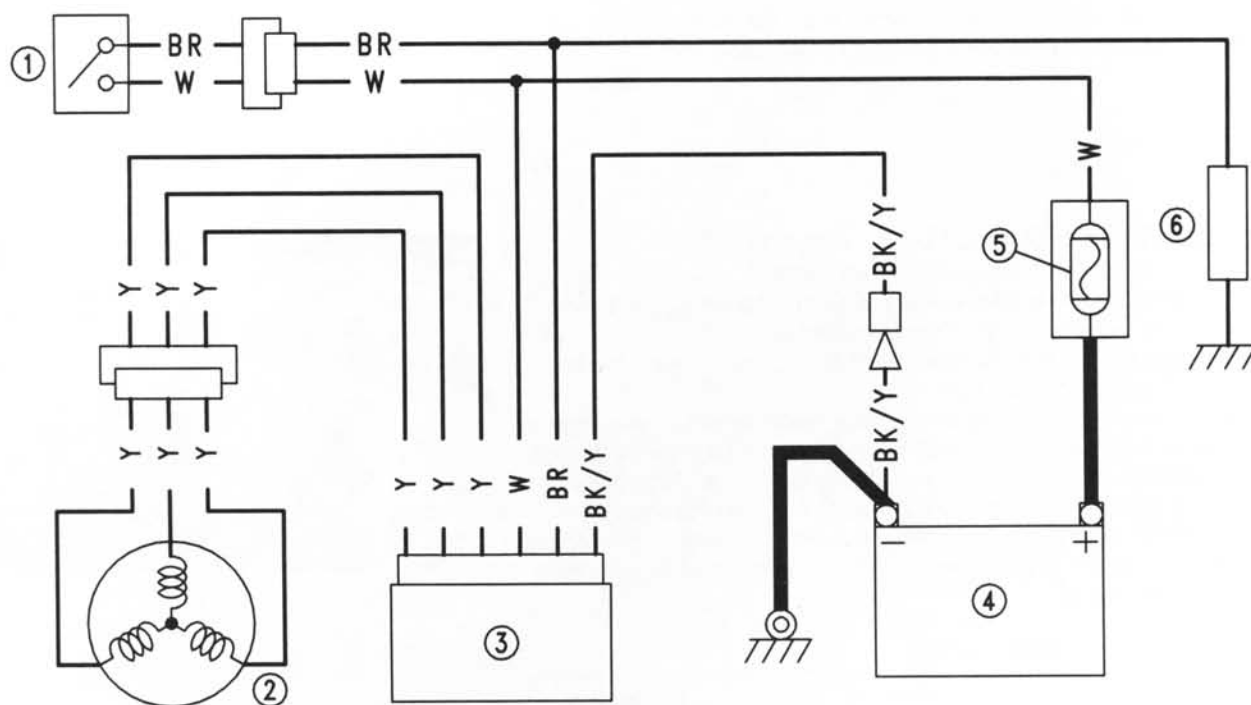

1. Ignition Switch  
2. Alternator

3. Regulator/Rectifier  
4. Battery

5. Main Fuse 30A  
6. Load

## Ignition System

### ⚠ WARNING

The ignition system produces extremely high voltage. Do not touch the spark plugs or stick coils while the engine is running, or you could receive a severe electrical shock.

### CAUTION

Do not disconnect the battery leads or any other electrical connections when the ignition switch is on, or while the engine is running. This is to prevent IC igniter damage.  
Do not install the battery backwards. The negative side is grounded. This is to prevent damage to the diodes and IC igniter.

### Pickup Coil Removal




#### ● Remove:

- Fuel Tank (see Fuel System chapter)
- Lower Fairing (see Frame chapter)
- Right Middle Fairing (see Frame chapter)
- Pickup Coil Lead Connector [A]

Pickup Coil Cover Bolts [A] with Clamps [B]  
Pickup Coil Cover [C]

Oil Pressure Switch Terminal [A]

- Remove the pickup coil [B] by taking off the pickup coil bolts [C].

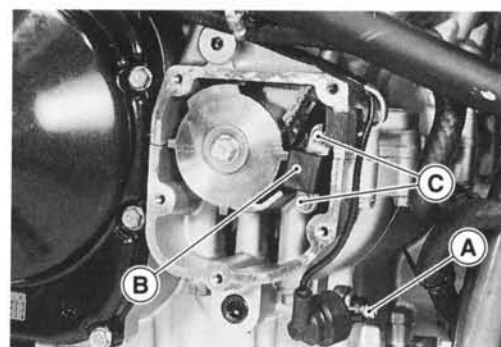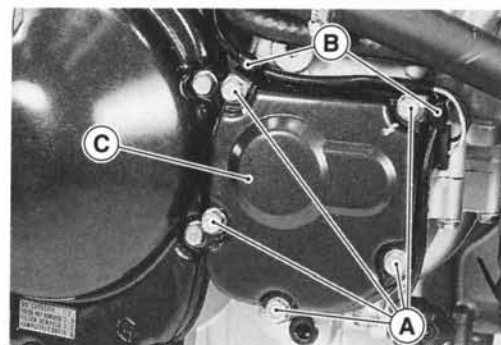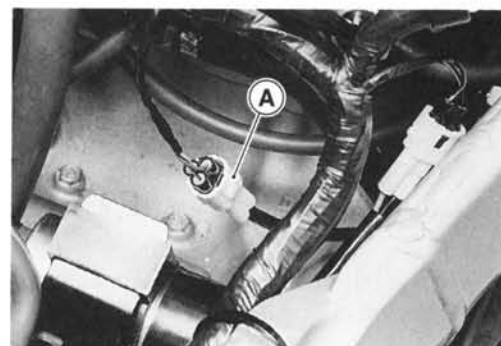


### Pickup Coil Installation

- Route the pickup coil lead correctly (see Cable, Wire, and Hose Routing in General/Information chapter).
- Install the pickup coil and tighten the pickup coil bolts.

**Torque – Pickup Coil Bolts: 5.9 N-m (0.60 kg-m, 52 in-lb)**

- Apply silicone sealant [A] to the pickup coil lead grommet and crankcase halves mating surface on the front and rear sides of the pickup coil cover mount.

**Sealant – Kawasaki Bond (Silicone Sealant): 56019-120**

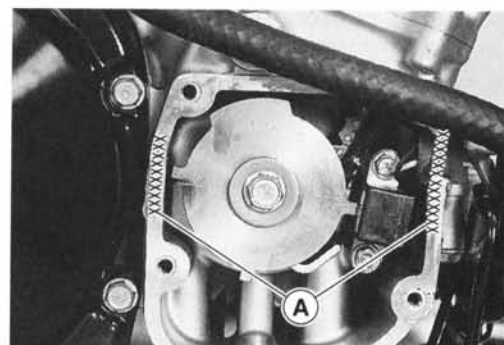

- Tighten the pickup coil cover bolts.

**Torque – Pickup Coil Cover Bolts:** 11 N-m (1.1 kg-m, 95 in-lb)

- Install oil pressure switch terminal securely.
- Install the other removed parts.

## Pickup Coil Inspection



- Remove:
  - Fuel Tank (see Fuel System chapter)
  - Pickup Coil Lead Connector [A]
- Set the hand tester to the  $\times 100 \Omega$  range and connect it to the Y [B] and BK [C] Leads in the connector.

**Special Tool – Hand Tester:** 57001-1394

- ★ If there is more resistance than the specified value, the coil has an open lead and must be replaced. Much less than this resistance means the coil is shorted, and must be replaced.

**Pickup Coil Resistance:** 375 ~ 565  $\Omega$

- Using the highest resistance range of the tester, measure the resistance between the pickup coil leads and chassis ground.
- ★ Any tester reading less than infinity ( $\infty$ ) indicates a short, necessitating replacement of the pickup coil assembly.

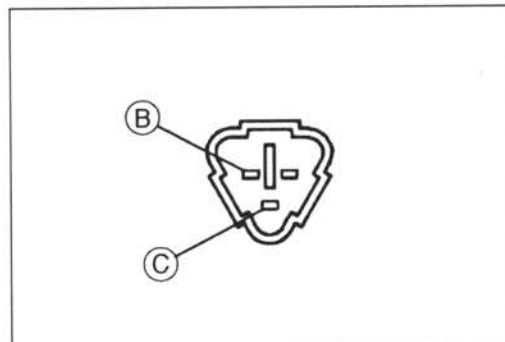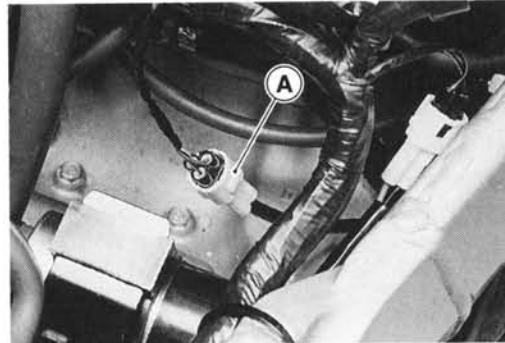


## Stick Coil (Ignition Coil together with Spark Plug Cap) Removal

- Remove the air cleaner housing (see Fuel System chapter).
- Disconnect the stick coil connectors [A].
- Pull the stick coils [B] off the spark plugs.

### CAUTION

Do not pry the connector part of the coil while removing the coil.

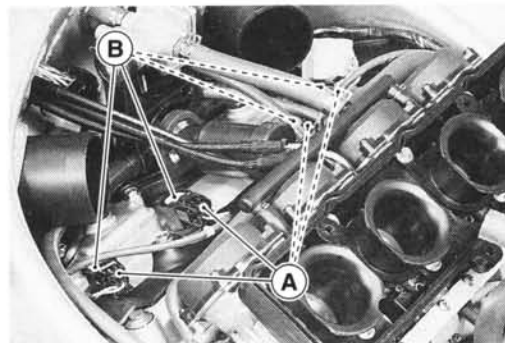


## Stick Coil (Ignition Coil together with Spark Plug Cap) Installation

- Install the coil using the following steps.
  - Insert the coil as shown being careful of the coil head [A] direction.
  - Connect the connector.

### CAUTION

Do not tap the coil head while installing the coil.

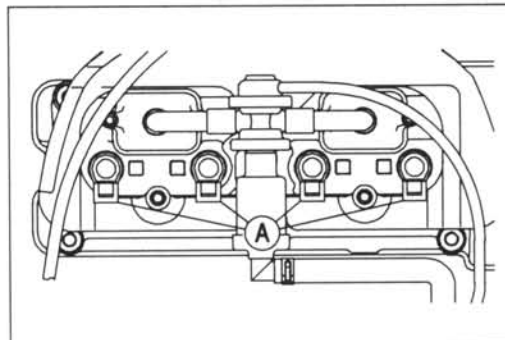

### Stick Coil (Ignition Coil together with Spark Plug Cap) Inspection


- Remove the stick coils (see this chapter).
- Measure the primary winding resistance [A] as follows.
  - Connect the hand tester between the coil terminals.
  - Set the tester to the  $\times 1 \Omega$  range, and read the tester.
- Measure the secondary winding resistance [B] as follows.
  - Connect the tester between the plug terminal and (–) coil terminal.
  - Set the tester to the  $\times 1 \text{ k}\Omega$  range and read the tester.

#### Ignition Coil Winding Resistance

Primary Windings:  $0.85 \sim 1.15 \Omega$

Secondary Windings:  $9.6 \sim 14.4 \text{ k}\Omega$

★ If the tester does not read as specified, replace the coil.

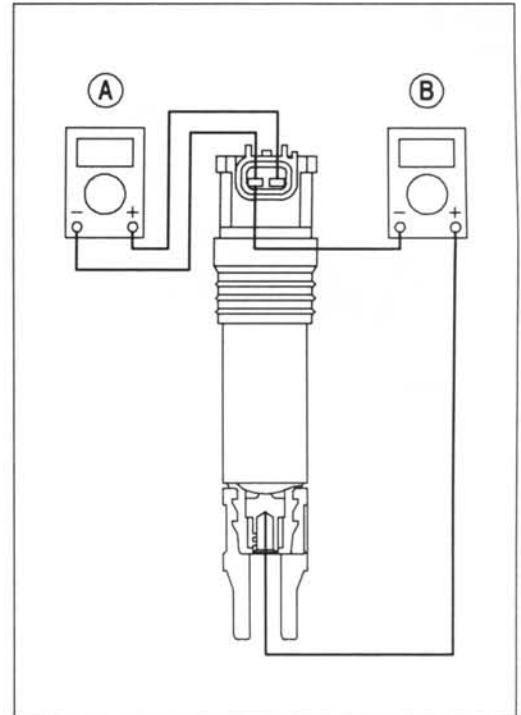


### Spark Plug Removal

- Remove:
    - Air Cleaner Housing (see Fuel System chapter)
    - Stick Coils
  - Remove the spark plugs using the 16 mm plug wrench.
- Owner's Tool – Spark Plug Wrench, 16 mm: 92110-1146**

### Spark Plug Installation


- Insert the spark plug vertically into the plug hole with the plug [A] installed in the plug wrench [B].
- Owner's Tool – Spark Plug Wrench, 16mm: 92110-1146**
- Tighten the plugs.
- Torque – Spark Plugs: 13 N-m (1.3 kg-m, 113 in-lb)**
- Fit the stick coils securely.

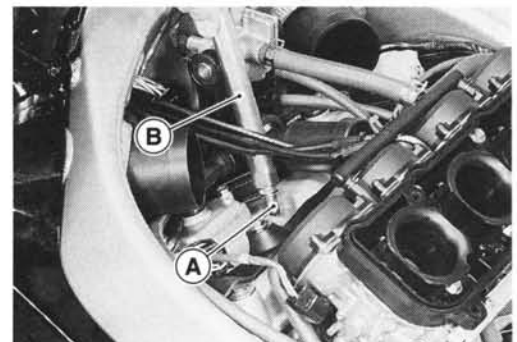

### Spark Plug Gap Inspection

- Measure the gap [A] with a wire-type thickness gauge.
- ★ If the gaps are incorrect, carefully bend the side electrode [B] with a suitable tool to obtain the correct gaps.

**Spark Plug Gap :  $0.7 \sim 0.8 \text{ mm}$**

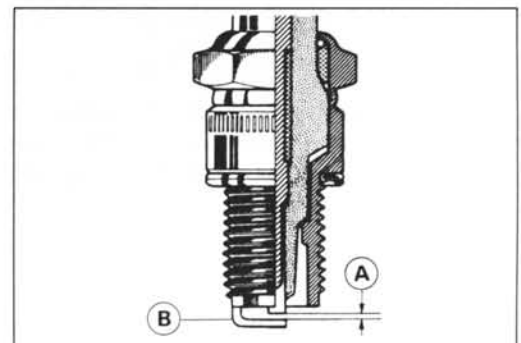



### Cam Sensor Removal



- Remove:
  - Seats (see Frame chapter)
  - Fuel Tank (see Fuel System chapter)
- Disconnect the cam sensor connector [A].
- Unscrew the bolt [B] and remove the cam sensor [C].

### Cam Sensor Inspection

- Remove:
  - Fuel Tank (see Fuel System chapter)
- Disconnect the cam sensor connector [A].
- Set the hand tester to the  $\times 100 \Omega$  range and connect it to the red/white and red/black leads in the connector.
- ★ If there is more resistance than the specified value, the sensor has an open lead and must be replaced. Much less than this resistance means the sensor is shorted, and must be replaced.

**Cam Sensor Resistance:  $400 \sim 460 \Omega$**

- Using the highest resistance range of the tester, measure the resistance between the cam sensor leads and chassis ground.
- ★ Any tester reading less than infinity ( $\infty$ ) indicates a short, necessitating replacement of the cam sensor.

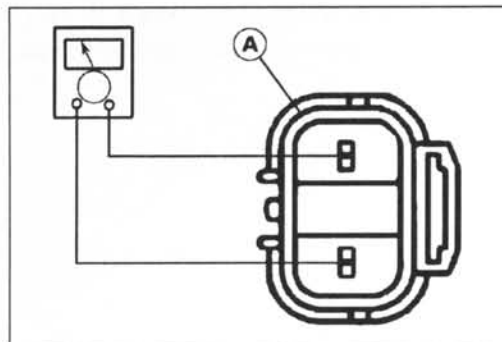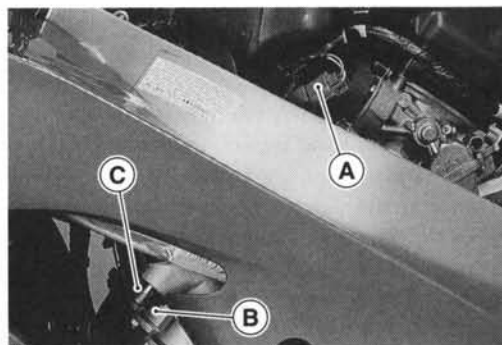

### IC Igniter Inspection

#### CAUTION


When inspecting the IC igniter observe the following to avoid damage to the IC igniter.  
 Do not disconnect the IC igniter with the ignition switch on. This may damage the IC igniter.  
 Do not disconnect the battery leads while the engine is running. This may damage the IC igniter.




- Remove the seats (see Frame chapter).
- Remove the IC igniter [A] and disconnect the connectors.
- Set the hand tester to the  $\times 1 \text{ k}\Omega$  range and make the measurements shown in the table.

**Special Tool – Igniter Checker Assembly: 57001-1378**

#### ZX900-C Model

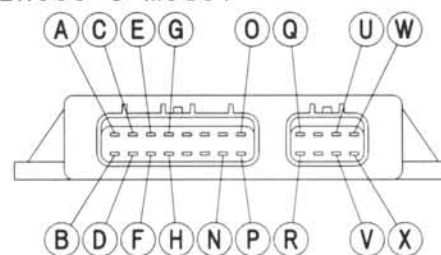

#### ZX900-D and California Models

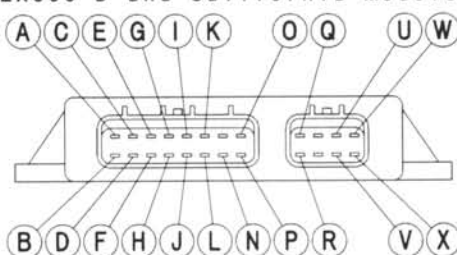

- ★ If the tester readings are not as specified, replace the IC igniter.

#### CAUTION

Use only Hand Tester 57001-1378 for this test. A tester other than the Kawasaki Hand Tester may show different readings.  
 If a megger or a meter with a large-capacity battery is used, the IC igniter will be damaged.



IC Igniter Internal Resistance

Unit:k $\Omega$ 

Terminal	Tester (+) Lead Connection										
	A	B	C	D	E	F	G	H	I	J	K
A	—	12~48	14~56	12~48	16~64	14~56	13~52	18~72	18~72	18~72	18~72
B	4.5~18	—	1.5~6	0.01~0.05	3~13	2~7	0.5~3	13~52	4~16	4~16	4~16
C	5.5~13	1.5~6	—	1.5~6	4.5~18	3~12.5	2~10	15~60	5~22	5~22	5~22
D	4.5~18	0.01~0.05	1.5~6	—	3~13	1.5~7	1~4	11.5~46	4~16	4~16	4~16
E	8~32	3~13	4.5~19	3~13	—	5~20	2.5~10	17~68	8~32	8~32	8~32
F	6~24	1~5	3~12	1.5~7	5~20	—	2.5~10	15~60	6.5~28	6.5~28	6.5~28
G	5~21	1~4	2.5~10	0.5~4	2.5~10	2.5~10	—	14~56	5~20	5~20	5~20
H	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	—	$\infty$	$\infty$	$\infty$
I	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	—	$\infty$	$\infty$
J	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	—	$\infty$
K	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	—
L	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$
N	17~68	12~48	13~54	12~48	16~64	14~56	13~52	26.5~106	18~72	18~72	18~72
O	4.5~18	0.4~1.6	2~8	0.2~1	3.5~14	2~8	1~4	13~52	4~16.5	4~16.5	4~16.5
P	4.5~18	0	1.5~6	0	3~13	1.5~7.5	1~4	12~50	4~16	4~16	4~16
Q	4.5~18	0.2~0.8	1.5~7	0.2~1	3.5~14	1.5~6	1~4	13~52	4~16	4~16	4~16
R	4.5~18	0	1.5~6.5	0	3~13	1.5~7	1~4	13~52	4~16	4~16	4~16
U	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$
V	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$
W	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$
X	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$

(-)\*

(-)\*: Tester (-) Lead Connection  
 I~L: D type and California model only

IC Igniter Internal Resistance										Unit:kΩ	
Terminal	Tester (+) Lead Connection										X
	L	N	O	P	Q	R	U	V	W		
A	18~72	18~72	12~48	12~48	12~48	12~48	18~72	18~72	18~72	18~72	
B	4~16	4~16	0.2~1	0.05~0.2	0.2~1	0.05~0.2	3.5~14	3.5~14	3.5~14	3.5~14	
C	5.5~23	5.5~23	1.5~7	1.5~6	1.5~7	1.5~6	5~22	5~22	5~22	5~22	
D	4~16	4~16	0.2~0.8	0	0.2~0.8	0	3.5~14.5	3.5~14.5	3.5~14.5	3.5~14.5	
E	8~32	8~32	3.5~14	3~14	3.5~14	3~13	7.5~30	7.5~30	7.5~30	7.5~30	
F	6.5~28	7~28	2~8	1.5~7	1.5~6	1.5~7.5	5.5~22	5.5~22	5.5~22	5.5~22	
G	5~20	5~20	1~4	0.5~4	1~4	0.5~4	4.5~18	4.5~18	4.5~18	4.5~18	
H	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	
I	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	
J	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	
K	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	
L	—	∞	∞	∞	∞	∞	∞	∞	∞	∞	
N	18~72	—	12~48	12~48	12~48	12~48	17.5~70	17.5~70	17.5~70	17.5~70	
O	4~16.5	4~18	—	0.2~0.8	0.4~2	0.2~1	4~16	4~16	4~16	4~16	
P	4~16	4~16	0.2~0.8	—	0.1~0.4	0	3.5~14.5	3.5~14.5	3.5~14.5	3.5~14.5	
Q	4~16	4~17	0.5~2	0.1~0.6	—	0.2~1	3.5~15	3.5~15	3.5~15	3.5~15	
R	4~16	4~17	0.2~0.8	0	0.2~0.8	—	3.5~14	3.5~14	3.5~14	3.5~14	
U	∞	∞	∞	∞	∞	∞	—	∞	∞	∞	
V	∞	∞	∞	∞	∞	∞	∞	—	∞	∞	
W	∞	∞	∞	∞	∞	∞	∞	∞	—	∞	
X	∞	∞	∞	∞	∞	∞	∞	∞	∞	—	

(-)\*


(-)\*: Tester (-) Lead Connection

I~L: D type and California model only

## IC Igniter Troubleshooting


1) IC igniter or pickup coil damaged

2) Even if the preceding checks show good, it may be defective in some manner not readily detectable with the hand tester.

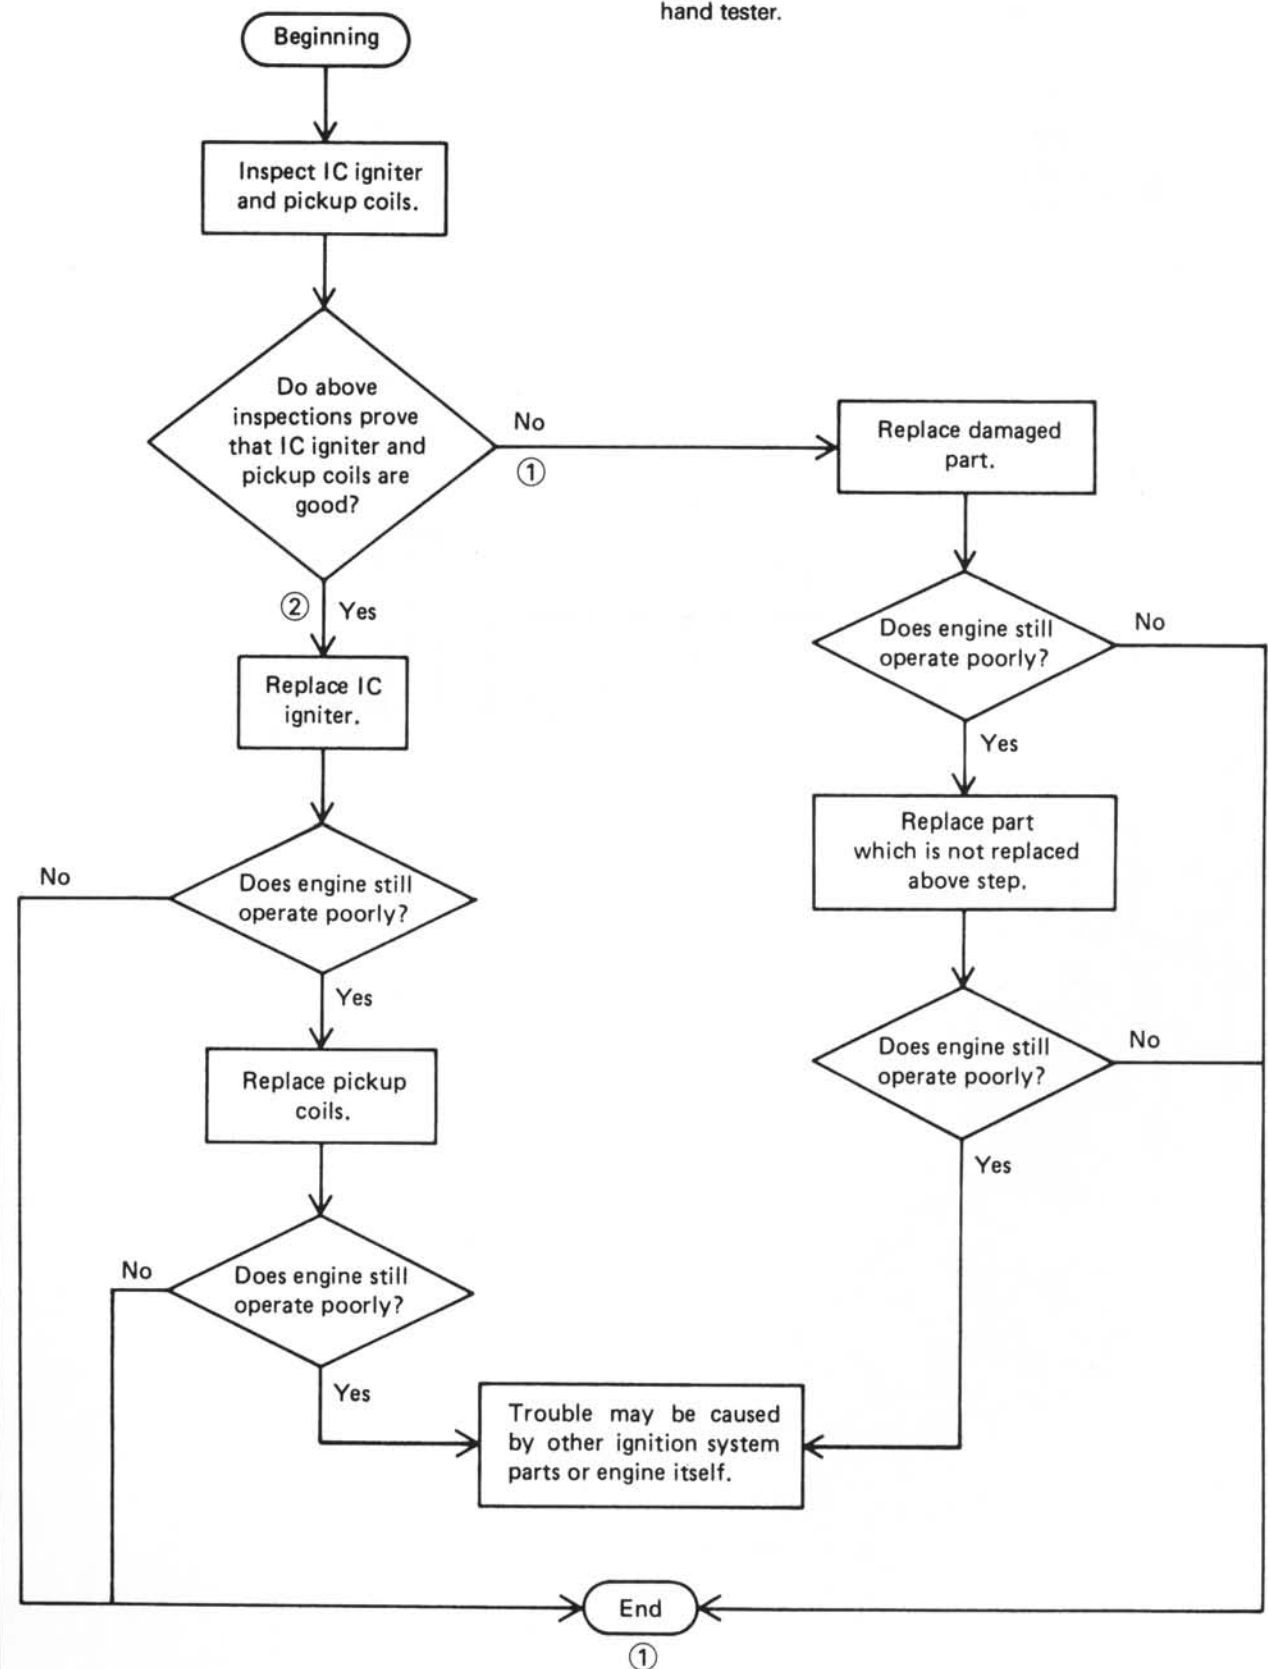

### Ignition System Circuit

EC1115

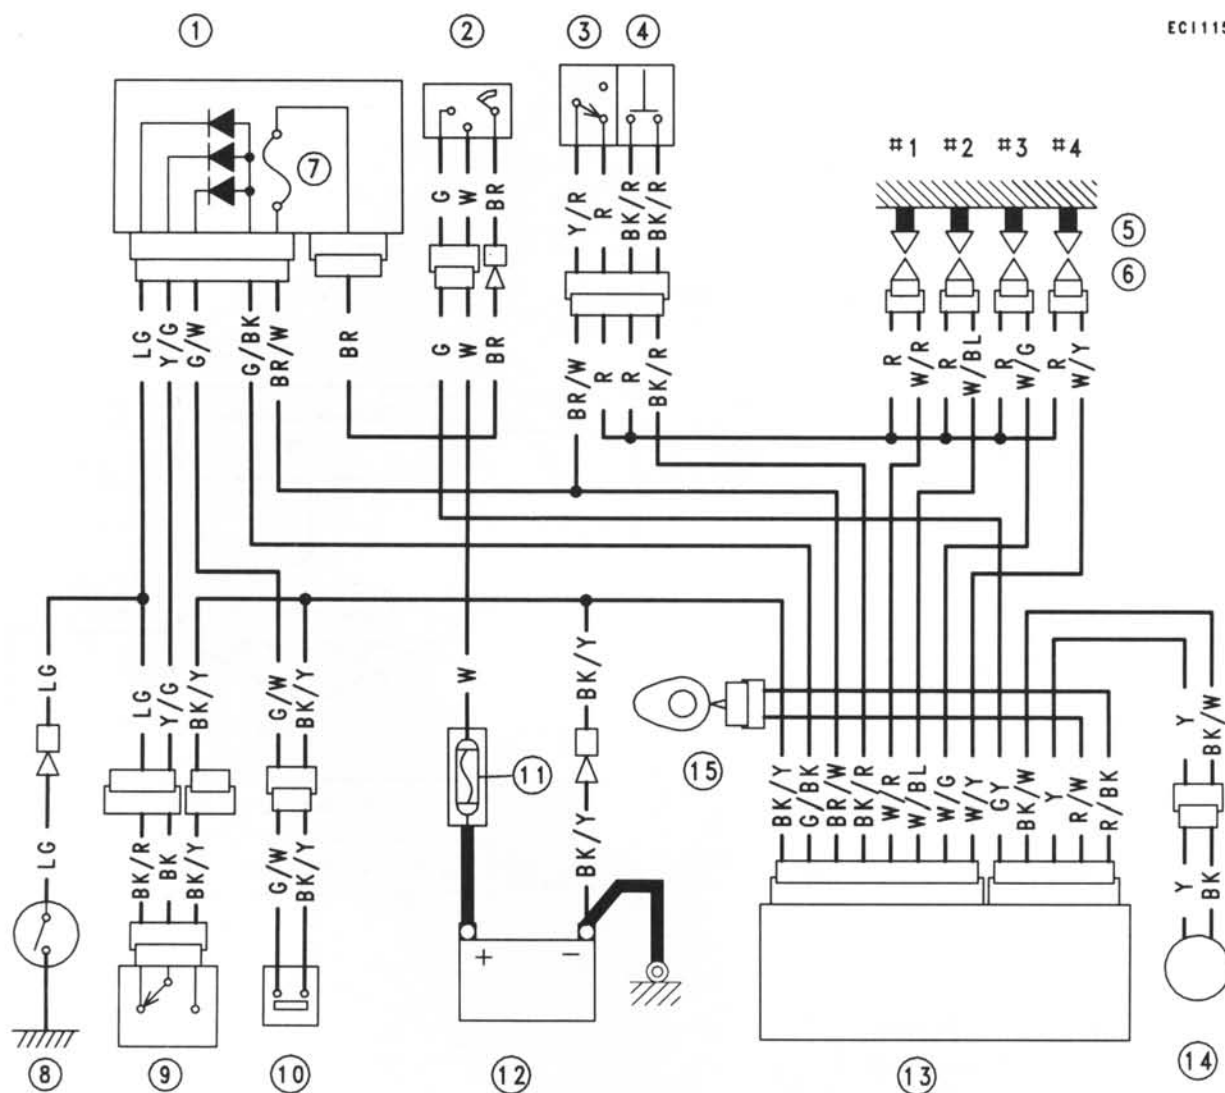


- |                       |                           |                   |
|-----------------------|---------------------------|-------------------|
| 1. Junction Box       | 6. Ignition Coils         | 11. Main fuse 30A |
| 2. Ignition Switch    | 7. Ignition Fuse 10A      | 12. Battery       |
| 3. Engine Stop Switch | 8. Neutral Switch         | 13. IC Igniter    |
| 4. Starter Button     | 9. Starter Lockout Switch | 14. Pickup Coil   |
| 5. Spark Plugs        | 10. Side Stand Switch     | 15. Cam Sensor    |

## Electric Starter System

### Starter Motor Removal

- Remove the fuel tank (see Fuel System chapter).
- Slide back the rubber cap.
- Remove the starter motor terminal nut [A] and the mounting bolts [B].
- Pull out the starter motor [C].

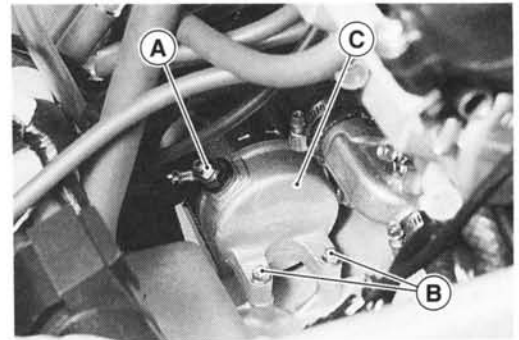


### Starter Motor Installation

#### CAUTION


Do not tap the starter motor shaft or body. Tapping the shaft or body could damage the motor.

- When installing the starter motor, clean the starter motor legs [A] and crankcase [B] where the starter motor is grounded.

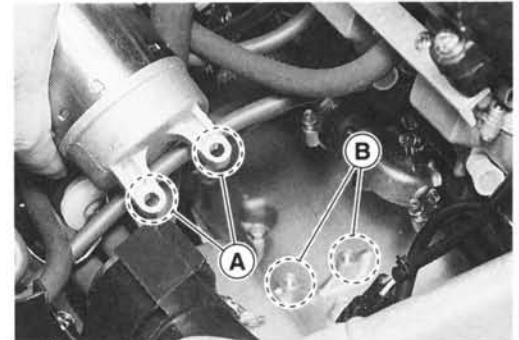


- Apply a small amount of engine oil to the O-ring [A].
- Install the starter motor and tighten the mounting bolts.

Torque — Starter Motor Mounting Bolts: 9.8 N-m (1.0 kg-m, 87 in-lb)

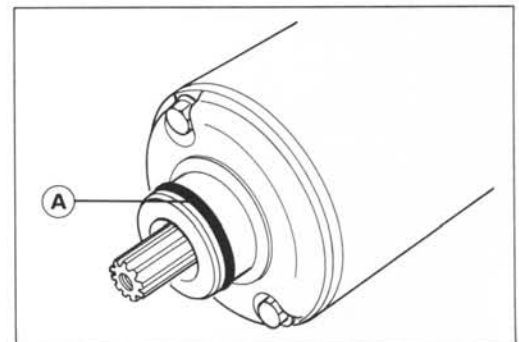

### Starter Motor Disassembly


- Take off the starter motor through bolts [A] and remove both end covers [B] and pull the armature out of the yoke [C].

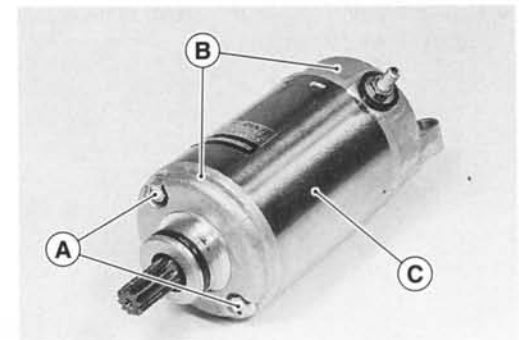

- The brush plate [A] and brushes come off with the right-hand end cover [B].




- Remove the terminal locknut [A] and terminal bolt [B], and then remove the brush with the brush plate [C] from the right-hand end cover.

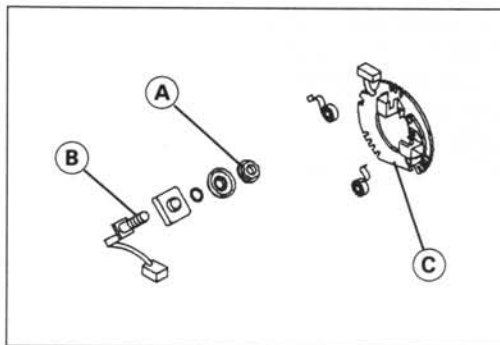


## Starter Motor Assembly


- Install the brush plate and brushes [A], and then put the armature [B] among the brushes.

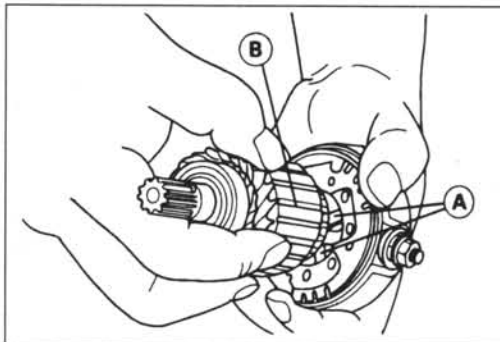


- Install the O-rings [A] as shown.

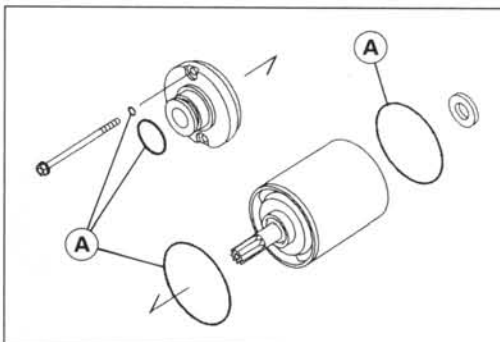

- Align the notch [A] in the brush plate with the end cover notch [B] and the mark [C] on the yoke.

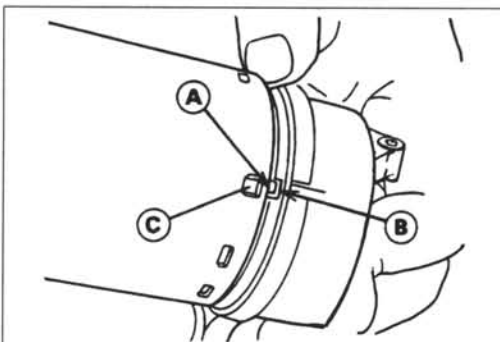

- Align the line [A] marked on the yoke with the through bolt hole [B].

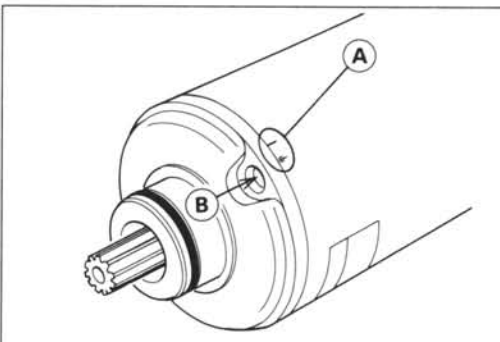


**Brush Inspection**


- Measure the length [A] of each brush.
- ★ If any is worn down to the service limit, replace the carbon brush holder assembly [B] and the terminal bolt assembly [C].

**Starter Motor Brush Length**

<b>Standard:</b>	<b>12 mm</b>
<b>Service Limit:</b>	<b>8.5 mm</b>

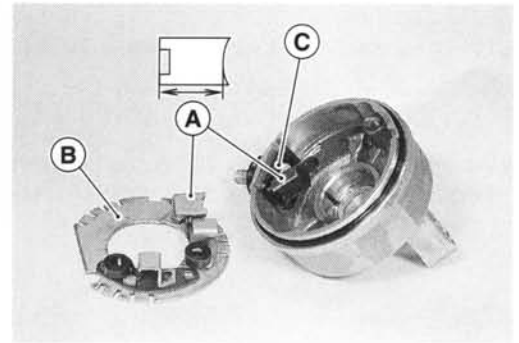**Commutator Cleaning and Inspection**


- Smooth the commutator surface [A] if necessary with fine emery cloth [B], and clean out the grooves.

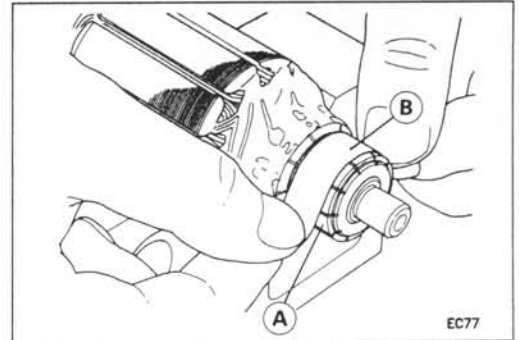


- Measure the diameter [A] of the commutator [B].
- ★ Replace the starter motor with a new one if the commutator diameter is less than the service limit.

**Commutator Diameter**

<b>Standard:</b>	<b>28 mm</b>
<b>Service Limit:</b>	<b>27 mm</b>

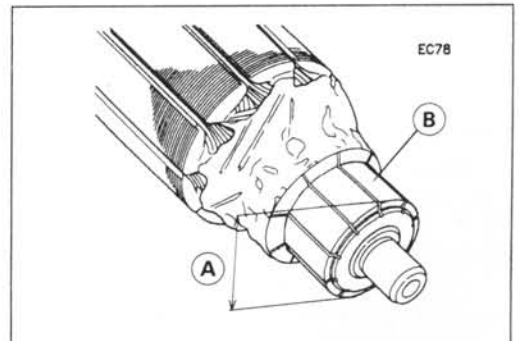**Armature Inspection**

- Using the x 1  $\Omega$  hand tester range, measure the resistance between any two commutator segments [A].
- ★ If there is a high resistance or no reading ( $\infty$ ) between any two segments, a winding is open and the starter motor must be replaced.
- Using the highest hand tester range, measure the resistance between the segments and the shaft [B].
- ★ If there is any reading at all, the armature has a short and the starter motor must be replaced.

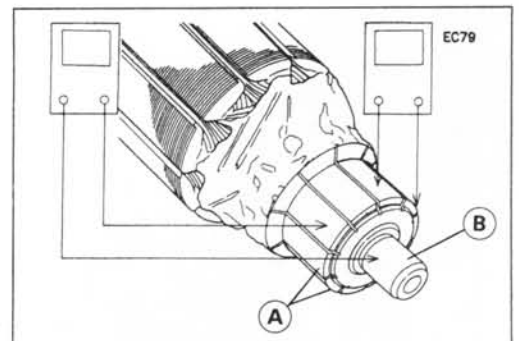**NOTE**


- Even if the foregoing checks show the armature to be good, it may be defective in some manner not readily detectable with the hand tester. If all other starter motor and starter motor circuit components check good, but the starter motor still does not turn over or only turns over weakly, replace the starter motor with a new one.

## Brush Lead Inspection

- Using the x 1  $\Omega$  hand tester range, measure the resistance as shown.

[A] Terminal Bolt and Positive Brush  
[B] Brush Plate and Negative Brush

- ★ If there is not close to zero ohms, the brush lead has an open. Replace the terminal bolt assembly and/or the brush holder assembly.

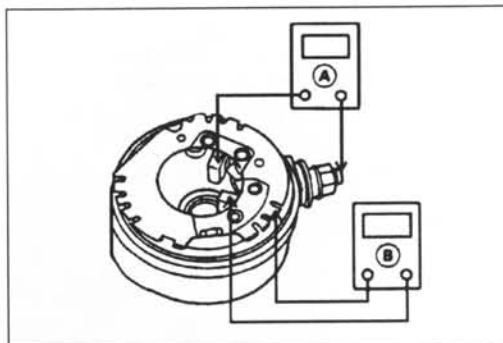


## Brush Plate and Terminal Bolt Inspection

- Using the highest hand tester range, measure the resistance as shown.

[A] Terminal Bolt and Brush Plate  
[B] Terminal Bolt and Right-hand End Cover

- ★ If there is any reading, the brush holder assembly and/or terminal bolt assembly have a short. Replace the brush holder assembly and the terminal bolt assembly.

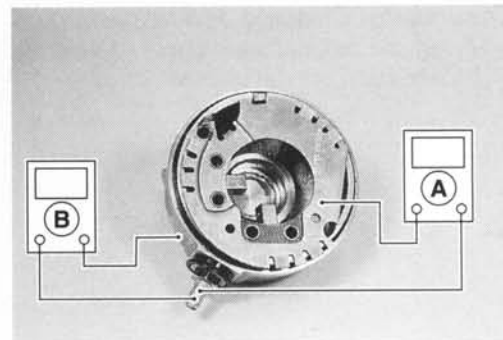

## Starter Relay Inspection

- Remove the seats.
- Remove the starter relay.
- Connect the hand tester [A] and 12 V battery [B] to the starter relay [C] as shown.


- ★ If the relay does not work as specified, the relay is defective. Replace the relay.

### Testing Relay

Tester Range: x 1  $\Omega$  range

Criteria: When battery is connected  $\rightarrow 0 \Omega$


When battery is disconnected  $\rightarrow \infty \Omega$

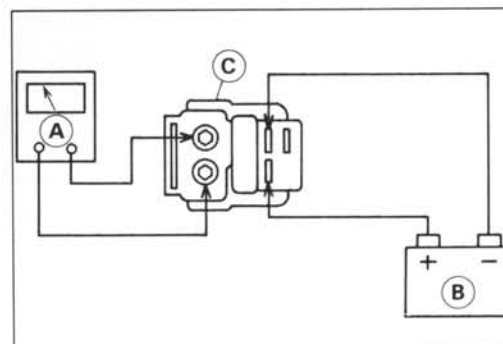



## Electric Starter Circuit

EC48

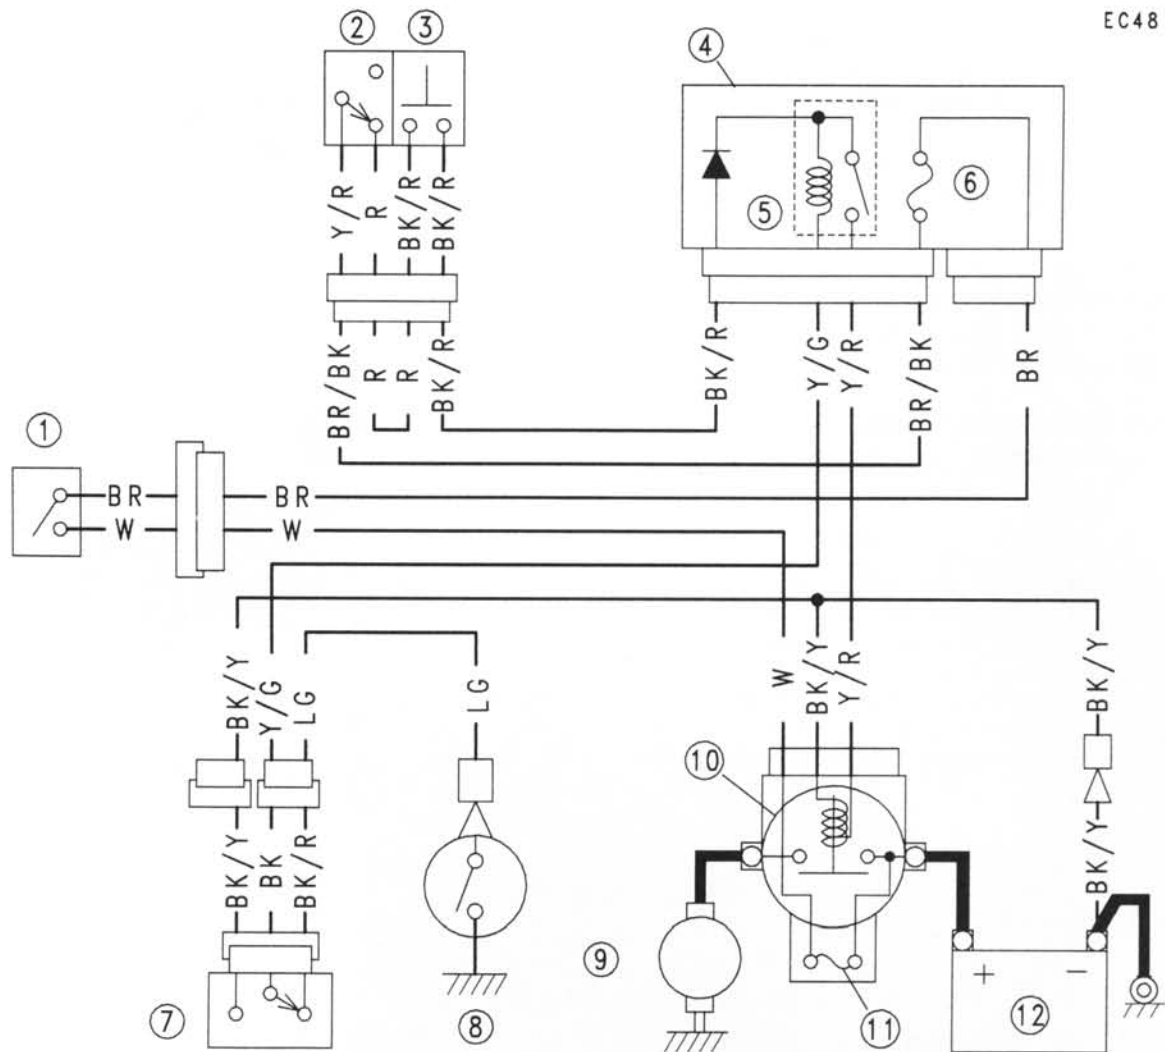

1. Ignition Switch
2. Engine Stop Switch
3. Starter Button
4. Junction Box

5. Starter Circuit Relay
6. Ignition Fuse 10A
7. Starter Lockout Switch
8. Neutral Switch

9. Starter Motor
10. Starter Relay
11. Main Fuse 30A
12. Battery

## 15-42 ELECTRICAL SYSTEM

### Lighting System

The US, Canada, and Australia models adopt the daylight system and have a headlight relay in the junction box. In these models, the headlight does not go on when the ignition switch and the engine stop switch are first turned on. The headlight comes on after the starter button is released and stays on until the ignition switch is turned off. The headlight will go out momentarily whenever the starter button is pressed and come back on when the button is released.

#### Headlight Beam Horizontal Adjustment

- Turn the horizontal adjuster [A] on the headlight in or out until the beam points straight ahead.

#### Headlight Beam Vertical Adjustment

- Turn the vertical adjusters [B] on the headlight in or out to adjust the headlight vertically.

#### NOTE



- On high beam, the brightest points should be slightly below horizontal with the motorcycle on its wheels and the rider seated. Adjust the headlight(s) to the proper angle according to local regulations.
- For US model, the proper angle is 0.4 degrees below horizontal. This is 50 mm (2 in) drop at 7.6 m (25 ft) measured from the center of the headlights with the motorcycle on its wheels and the rider seated.

50 mm (2 in) [A]

Center of Brightest Spot [B]

7.6 m (25 ft) [C]

Height of Headlight Center [D]

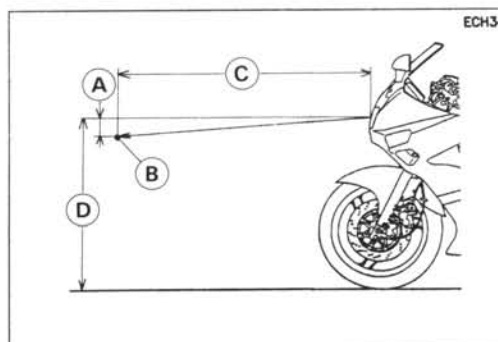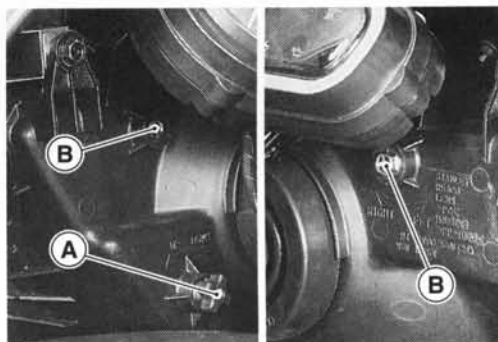


#### Headlight Bulb Replacement


- Remove:
  - Headlight Connector
  - Headlight Bulb Dust Cover
  - Hook [A]

#### CAUTION


When handling the quartz-halogen bulb, never touch the glass portion with bare hands. Always use a clean cloth. Oil contamination from hands or dirty rags can reduce bulb life or cause the bulb to explode.

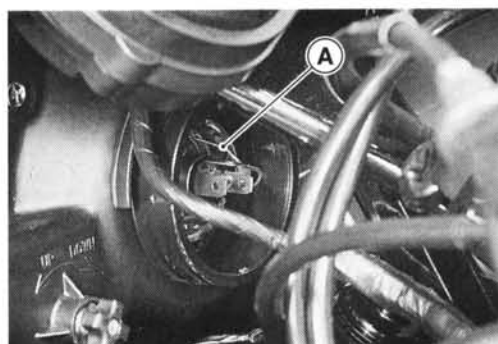

- Replace the headlight bulb.
- Fit the dust cover [A] with the Top mark [B] upward onto the bulb [C] firmly as shown.
- After installation, adjust the headlight aim (see this chapter).

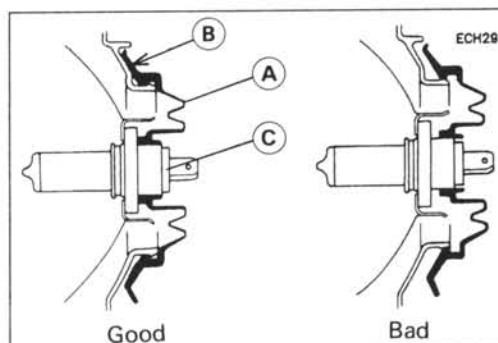


Headlight Circuit (U.S., Canada, and Australia)

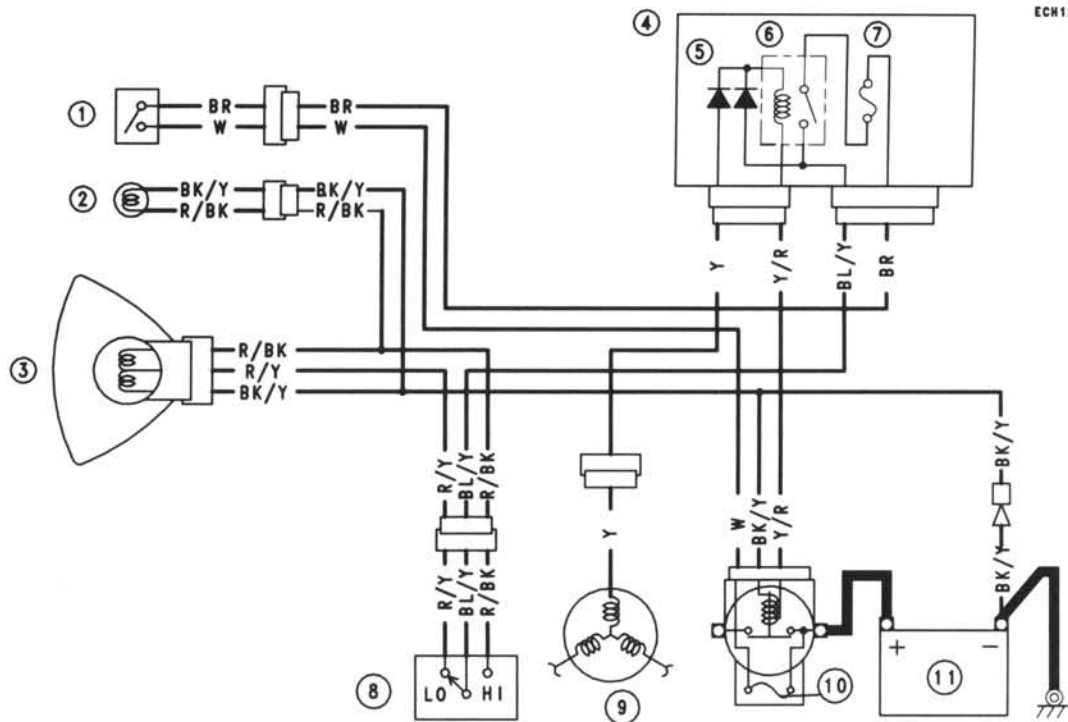

ECH126

Headlight Circuit (Other than U.S., Canada, and Australia)

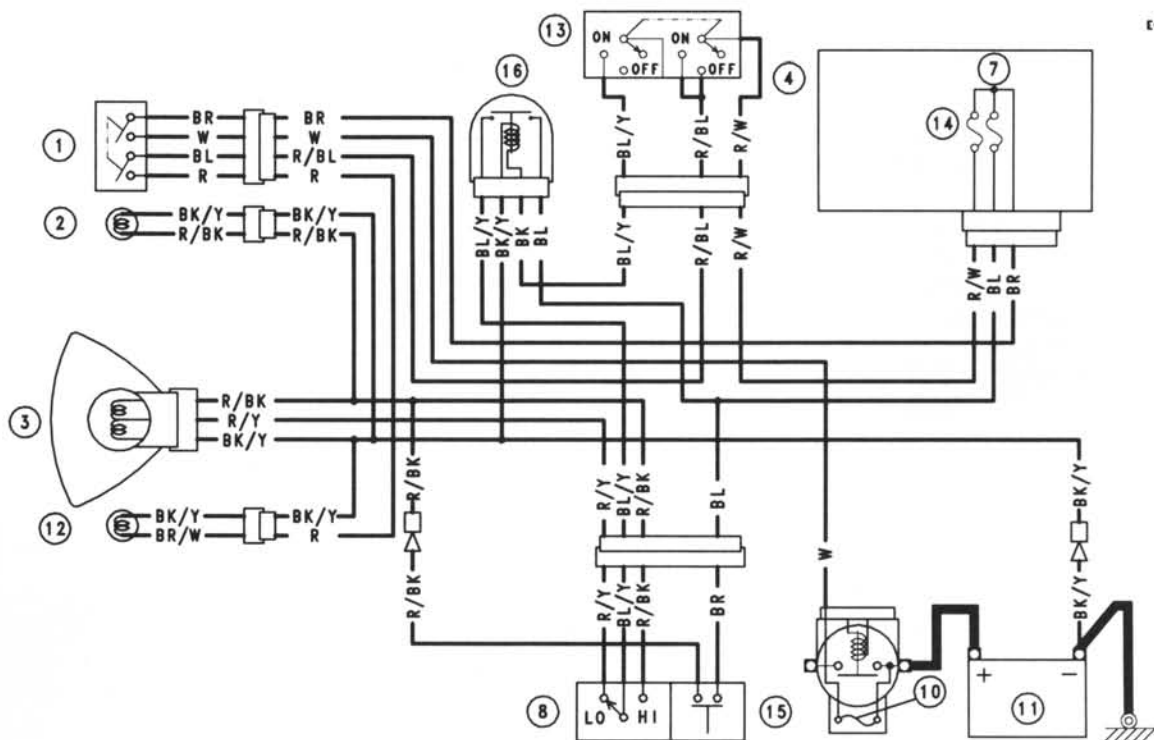


ECH127

- |                              |                            |                        |                     |
|------------------------------|----------------------------|------------------------|---------------------|
| 1. Ignition Switch           | 6. Headlight Circuit Relay | 11. Battery            | 16. Headlight Relay |
| 2. High Beam Indicator Light | 7. Headlight Fuse 10A      | 12. City Light         |                     |
| 3. Headlight                 | 8. Dimmer Switch           | 13. Headlight Switch   |                     |
| 4. Junction Box              | 9. Alternator              | 14. Taillight Fuse 10A |                     |
| 5. Diodes                    | 10. Main Fuse 30A          | 15. Passing Button     |                     |

## Turn Signal Light Circuit

ECH128

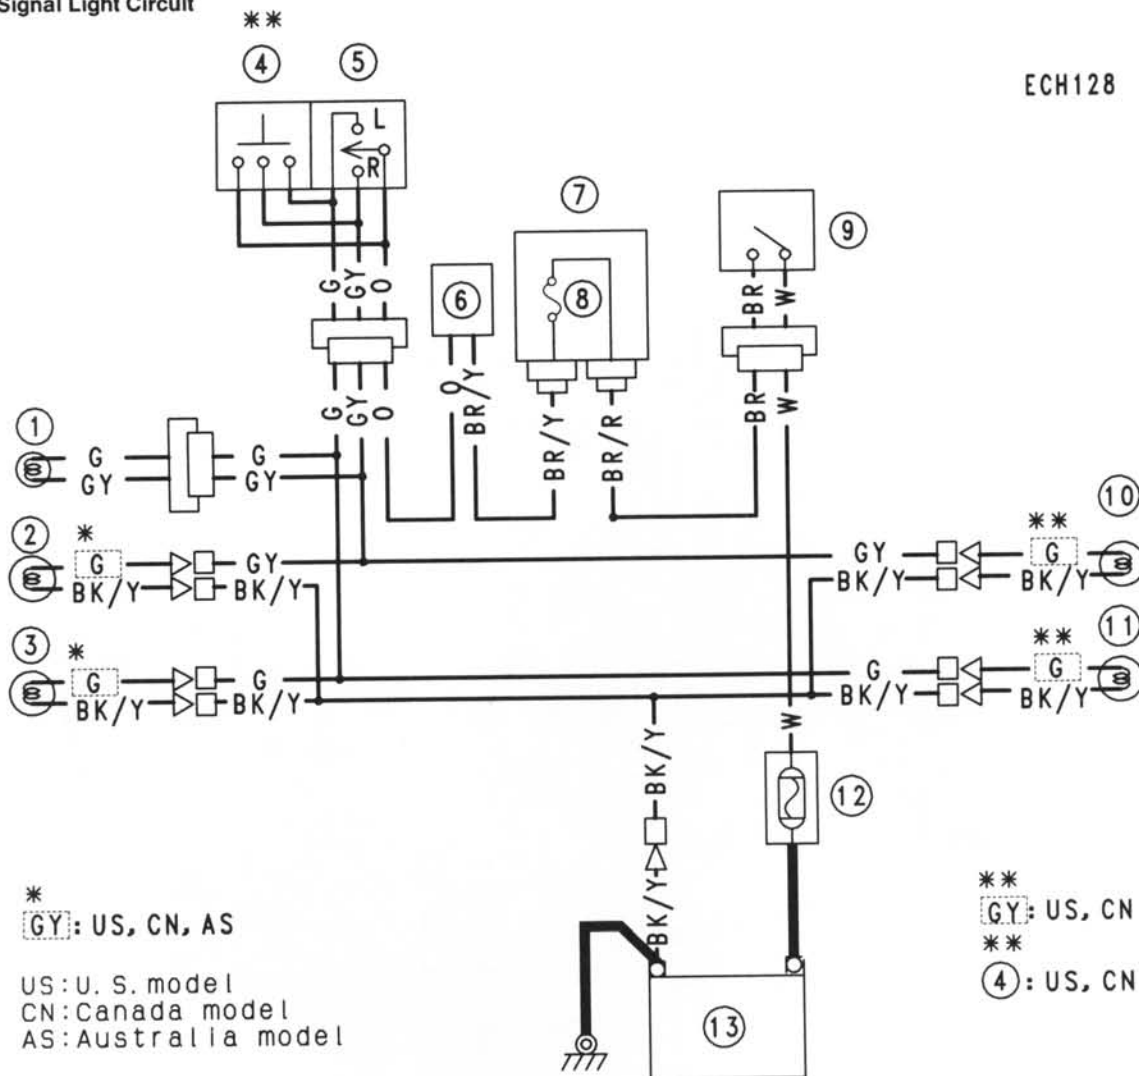

1. Turn Signal Indicator Light
2. Front Right Turn Signal Light
3. Front Left Turn Signal Light
4. Hazard Button
5. Turn Signal Switch


6. Turn Signal Relay
7. Junction Box
8. Turn Signal Relay Fuse 10A
9. Ignition Switch
10. Rear Right Turn Signal Light

11. Rear Left Turn Signal Light
12. Main Fuse 30A
13. Battery

*Turn Signal Relay Inspection*

## ● Remove:

- Seats (see Frame chapter)
- Turn Signal Relay [A]

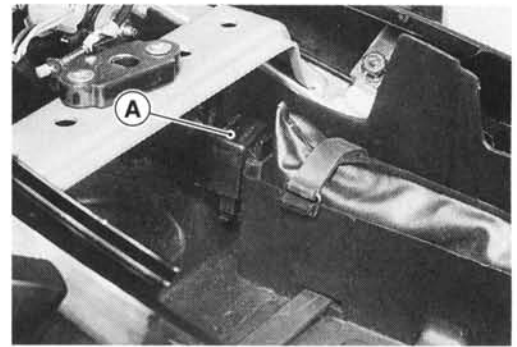

- Connect one 12 V battery and turn signal lights as indicated in the figure, and count how many times the lights flash for one minute.


- Turn Signal Relay [A]
- Turn Signal Lights [B]
- 12 V Battery [C]

★ If the lights do not flash as specified, replace the turn signal relay.

**Testing Turn Signal Relay**

Load		Flashing times (c/m*)
The Number of Turn Signal Lights	Wattage(W)	
1	21	Light stays on
2	42	75 - 95

(\*): Cycle(s) per minute

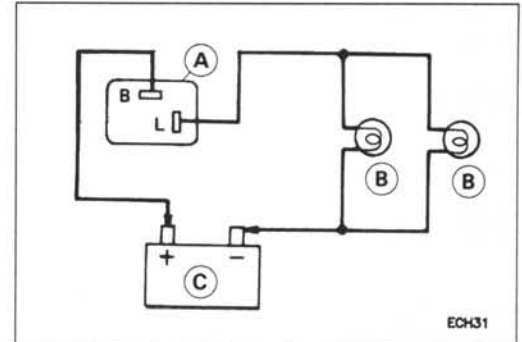


## 15-46 ELECTRICAL SYSTEM

### Fuel Pump

- The fuel pump [A] operates when the starter button is pushed on or the engine is running.
- When fuel level in the float chamber is low, the fuel pump operates to supply fuel into the float chamber. When the fuel reaches a certain level, the fuel pressure rises, and the fuel pump stops.

#### Removal/Installation

- Refer to Fuel System chapter.

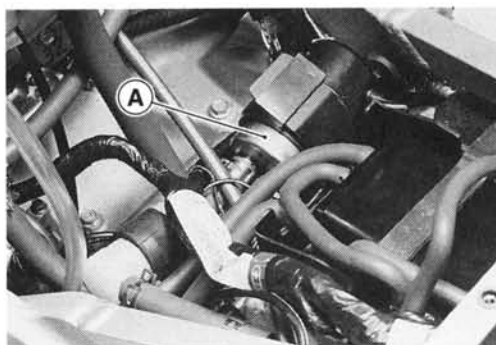


#### Fuel Pump Relay Inspection

- Remove the seats (see Frame chapter).
- Take off the fuel pump relay [A].
- Set the hand tester to the x 1 k $\Omega$  range and make the measurements shown in the table.

**Special Tool – Hand Tester: 57001-1394**

- ★ If the tester readings are not as specified, replace the fuel pump relay.
- ★ If the tester readings are normal, check the fuel pump operation.

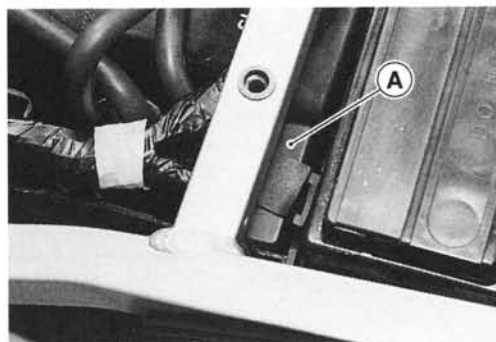


#### CAUTION

Use only Hand Tester 57001-1394 for this test. An ohmmeter other than the Kawasaki Hand Tester may show different readings. If a megger or a meter with a large-capacity battery is used, the pump relay will be damaged.

#### Fuel Pump Relay Internal Resistance

Range	Tester (+) Lead Connection			
	1	2	3	4
* 1	—	$\infty$	$\infty$	$\infty$
(-) 2	$\infty$	—	$\infty$	$\infty$
3	$\infty$	10 ~ 100	—	$\infty$
4	$\infty$	20 ~ 200	1 ~ 5	—


(-)\* : Tester (-) Lead Connection

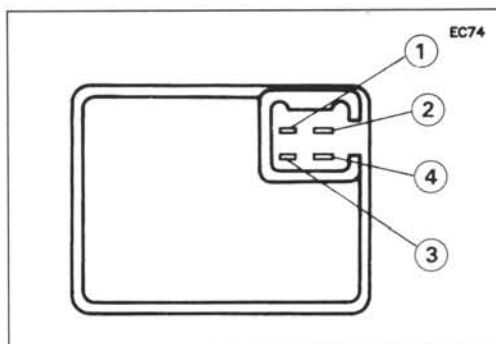

#### Fuel Pump Operational Inspection

- Remove the fuel pump with the fuel filter (see Fuel System chapter).
- Prepare a container filled with kerosene.
- Prepare the rubber hoses, and connect them to the pump fittings.
- Connect a suitable pressure gauge to the outlet hose as shown.

Fuel Pump [A]  
Pressure Gauge [B]  
Outlet Hose [C]  
Inlet Hose [D]  
Fuel Filter [E]  
Kerosene [F]  
2-Pin Connector [G]  
Battery [H]  
Auxiliary Leads [I]

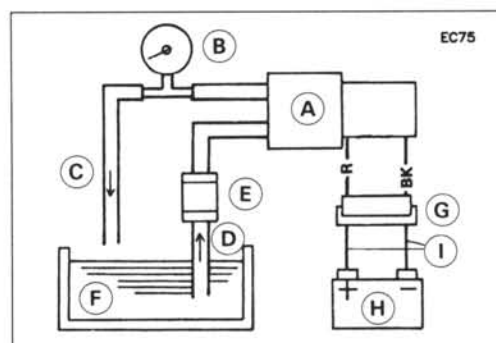


- Connect the pump leads to the battery using auxiliary wires as shown.
- ★ If the pump operates, check the pump relay.
- ★ If the pump does not operate, the pump is defective.
- ★ If the pump operates and the pump relay is normal, close the outlet hose while operating the fuel pump.
- When the pump stops, read the pressure gauge.
- ★ If the pressure gauge reading is out of the specified pressure, the pump is defective.

**Fuel Pump Pressure**

Standard : 11 ~ 16 kPa

(0.11 ~ 0.16 kg/cm<sup>2</sup>, 1.6 ~ 2.3 psi)**Fuel Pump Circuit**

EC132

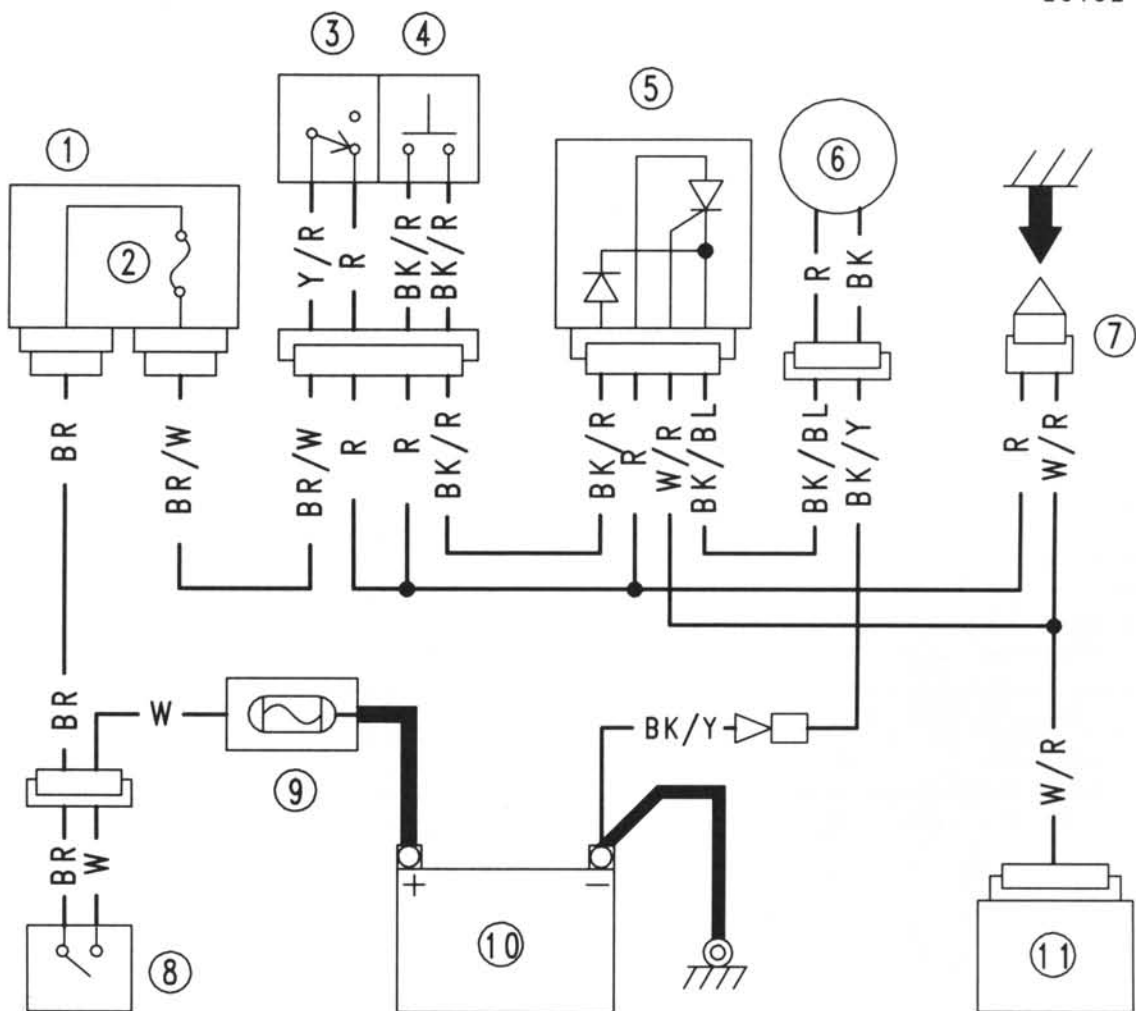

1. Junction Box
2. Ignition Fuse 10A
3. Engine Stop Switch
4. Starter Button

5. Fuel Pump Relay
6. Fuel Pump
7. Ignition Coil
8. Ignition Switch

9. Main Fuse 30A
10. Battery
11. IC Igniter

## 15-48 ELECTRICAL SYSTEM

### Fuel Cut Valve

The fuel cut valves are adopted for protection of the catalytic converter.

#### Fuel Cut Valve Removal

##### ⚠WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.


- Connect a suitable hose to the fitting at the bottom of each carburetor float bowl.
- Run the lower ends of the hoses into a suitable container.
- Turn the fuel tap to the ON position.
- Turn out each drain plug a few turns and drain the float bowls.

**Special Tool – Carburetor Drain Plug Wrench, Hex 3: 57001-1269**

- Disconnect the connector of the fuel cut valve.
- Loosen the fuel cut valve and remove it.

#### Fuel Cut Valve Installation

- Install the fuel cut valves with a gray connector [A] on the #1, #4 carburetors.
- Install the fuel cut valves with a brown connector [A] on the #2, #3 carburetors.
- Do not install the fuel cut valves on the wrong carburetors. The fuel cut valves will not work well.

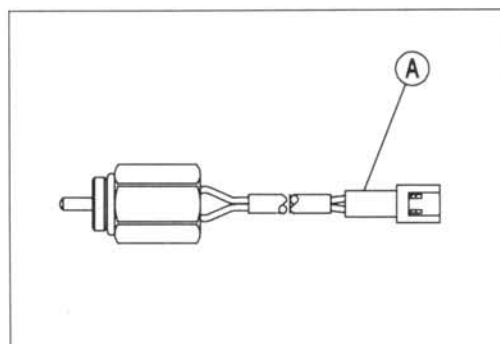

#### Fuel Cut Valve Inspection

- Remove the fuel cut valve [A].
- Connect and disconnect one 12 V battery [B] to the fuel cut valve connector as shown. The valve rod moves.
- ★ If the protrusion exceeds the standard (too long or too short), the valve is defective and must be replaced.


**Special Tool – Hand Tester: 57001-1394**

##### Testing Fuel Cut Valve

###### Standard Protrusion

When battery is disconnected → 16.6 mm

When battery is connected → 18.6 ~ 19.1 mm

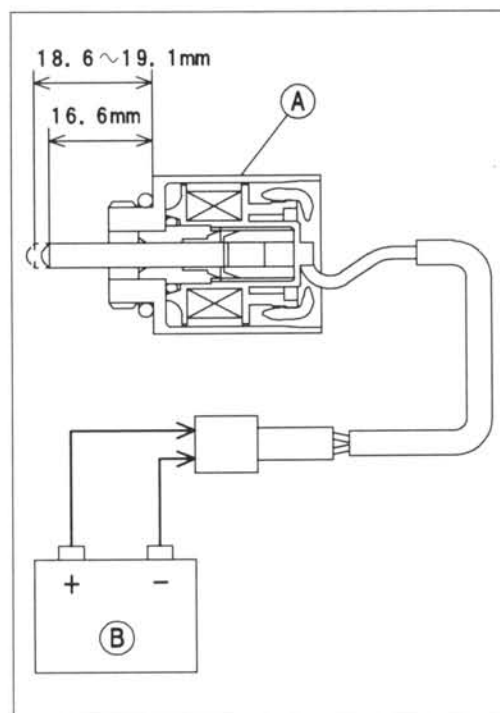






## 15-50 ELECTRICAL SYSTEM

### Radiator Fan System


#### Fan System Circuit Inspection

- Disconnect the leads from the radiator fan switch [A].
- Using an auxiliary wire [B], connect the radiator fan switch leads.
- ★ If the fan rotates, inspect the fan switch.
- ★ If the fan does not rotate, inspect the following.
  - Leads and Connectors
  - Main Fuse and Fan Fuse
  - Fan Motor

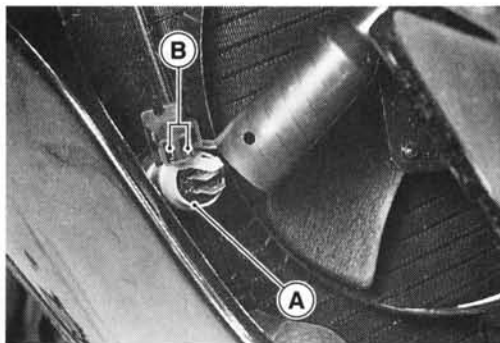


#### Fan Motor Inspection

- Remove the air cleaner housing (see Fuel System chapter).
- Disconnect the 2-pin connector [A] in the fan motor leads.
- Using two auxiliary wires, supply battery [B] power to the fan motor.
- ★ If the fan does not rotate, the fan motor is defective and must be replaced.

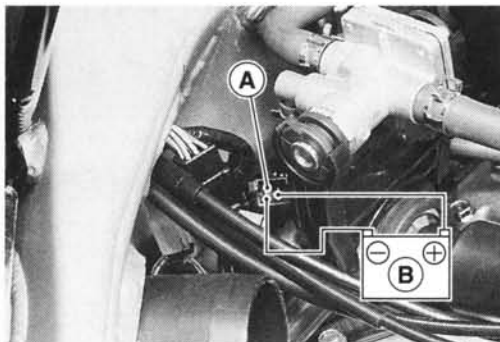

Radiator Fan Circuit

ECH20

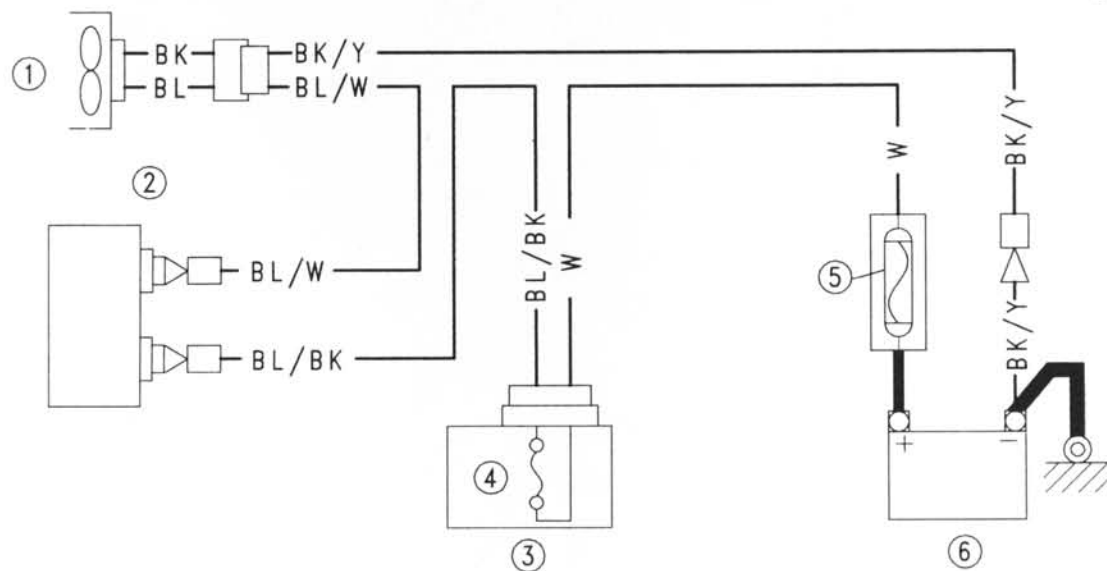

- 1. Radiator Fan
- 2. Radiator Fan Switch

- 3. Junction Box
- 4. Fan Fuse 10A

- 5. Main Fuse 30A
- 6. Battery


## Meter

### Meter Unit Removal

- Remove:
  - Wind Sealed (see Frame chapter)
- Remove the meter unit by taking off the mounting nuts [A] with washer.
- Slide the dust cover [B] and remove the wiring connector.


#### CAUTION

Place the meter or gauge so that the face is up. If a meter or gauge is left upside down or sideways for any length of time, it will malfunction.

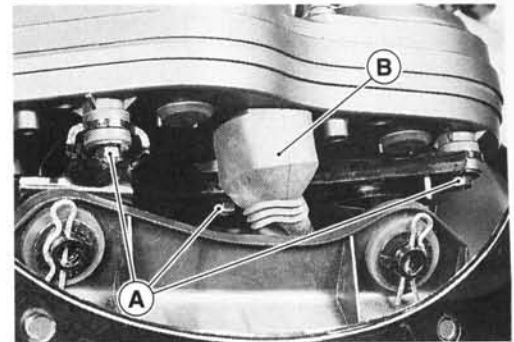


### Meter, Gauge Disassembly

- Remove:
  - Meter Unit (see Meters, Gauge Removal)
  - Screws [A]
  - Lower Meter Cover [B]

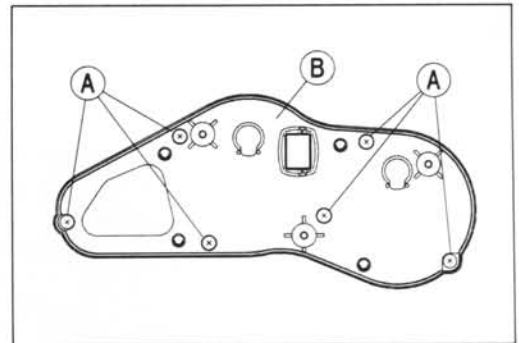

- Separate the meter assembly [A] and upper meter cover [B].

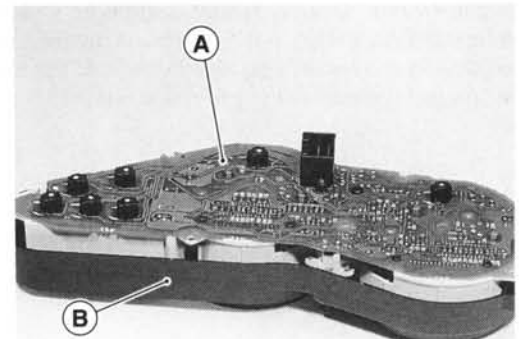


### Bulb Replacement

- Remove:
  - Meter Unit
- Turn out the socket [A] counterclockwise.
- Pull the bulb out of the socket.

#### CAUTION

Do not turn the bulb. Pull the bulb out to prevent damage to the bulb. Do not use bulb rated for greater wattage than the specified value.

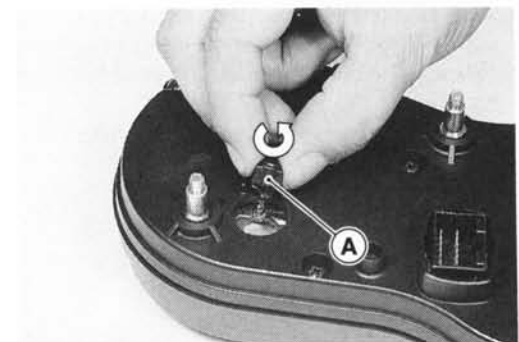

### Electronic Combination Meter Unit Inspection

- Remove the meter unit.

#### CAUTION

Do not drop the meter unit. Place the meter unit so that it faces upward. If the meter unit is left upside down or sideways for a long time or dropped, it will malfunction.


- Using the auxiliary wires, connect the 12 V battery [A] to the meter unit connector [B] as follows.

- Connect the battery positive terminal to the terminal [1].
- Connect the battery negative terminal to the terminal [2].

- |                                  |                        |
|----------------------------------|------------------------|
| [1] Battery (Positive)           | [5] Speed Sensor Pulse |
| [2] Ground (Negative)            | [6] Tachometer Pulse   |
| [3] Ignition                     | [7] Water Temperature  |
| [4] Speed Sensor Electric Source |                        |


#### CAUTION

Do not short the terminals [2], [4] and [4], [5].

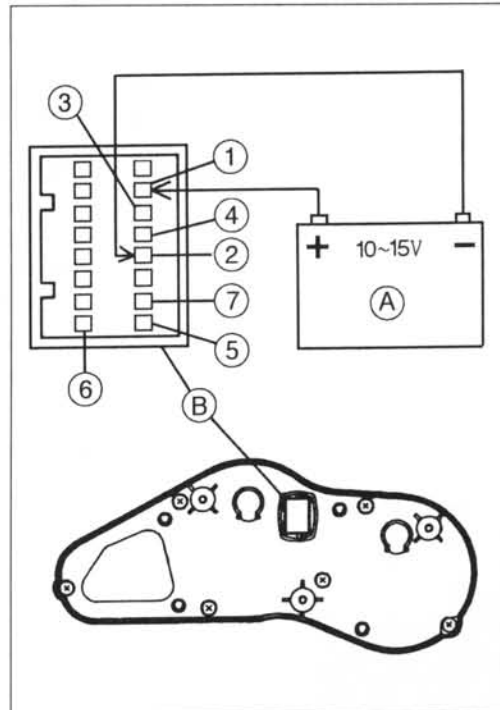


### Liquid Crystal Display (LCD) Segments Check:

- Connect the battery positive terminal to the terminal [1].
- Connect the battery negative terminal to the terminal [2].
- Connect the terminal [1] to the terminal [3].

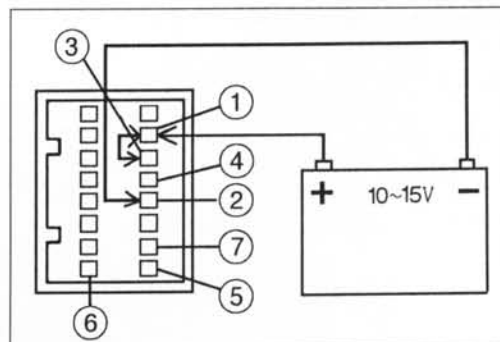

- When the terminals are connected, all the LCD segments [A] and LED warning light [B] are appear for three seconds.
- When the terminals are disconnected within three seconds, put out the segments.
- ★ If the LCD segments and LED warning light will not appear, replace the meter assembly.

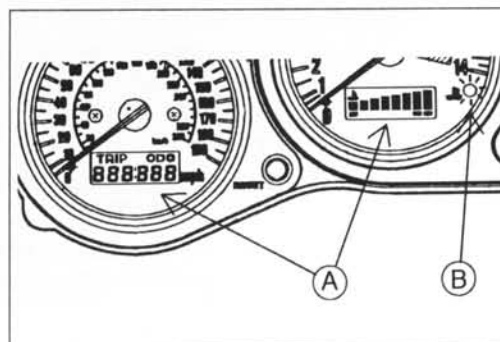


### Mode/Reset Switch Operate Confirmation:


- Connect the 12 V battery and terminals in the same manner as specified in the "Liquid Crystal (LCD) Segments Check".
- Check that when the MODE button [A] is pushed and held continuously, the display [B] rotates through the three modes.

ODO → TRIP → CLOCK → ODO


- ★ If the display function does not work, replace the meter assembly.

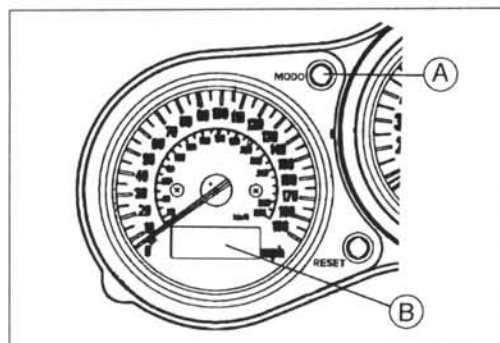

- Indicated the clock mode.
- Check that when the RESET button is pushed for more than two seconds, the meter display turns to the clock set mode.
- Check to adjustment hours and minutes.
- ★ If the display function does not work and adjusted, replace the meter assembly.

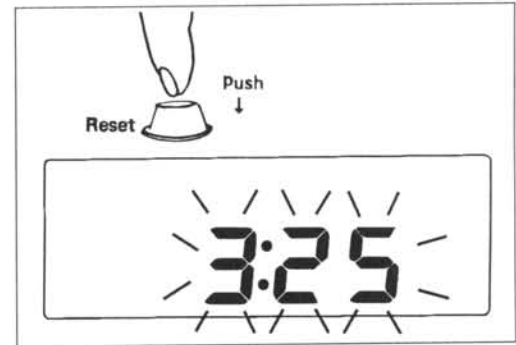


- Indicated the trip mode.
- Check that when the RESET button is pushed for more than two seconds, the figure display turns to 0.0.
- ★ If the figure display does not 0.0, replace the meter assembly.

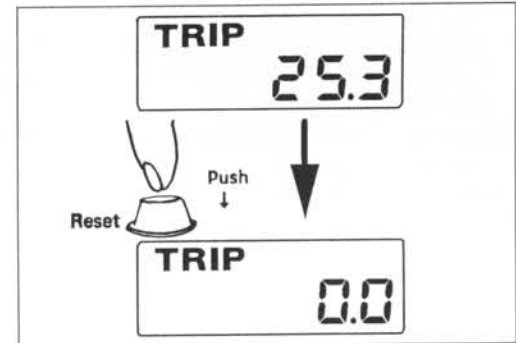

#### Speedometer Check:

- Connect the 12 V battery and terminals in the same manner as specified in the "Liquid Crystal Display (LCD) Segments Check".
- The speed equivalent to the input frequency is indicated in the oscillator [A] if the square wave as (illustrated) would be input into the terminal [5].
- Indicates approximately 60 mph in case the input frequency would be approximately 138 Hz.
- Indicates approximately 60 km/h in case the input frequency would be approximately 89.0 Hz.

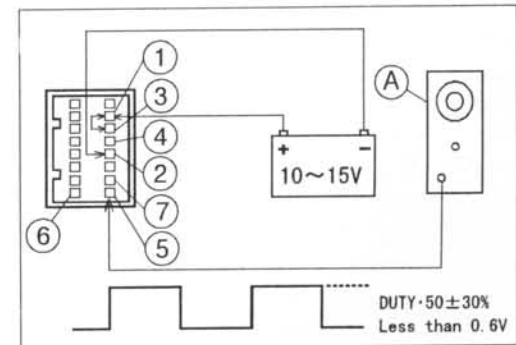


- If the oscillator is not available, the speedometer can be checked as follows.
  - Install the meter unit.
  - Raise the rear wheel off the ground, using the jack.
  - Turn on the ignition switch.
  - Rotate the rear wheel by hand.
  - Check that the speedometer shows the speed.
- ★ If the speedometer does not work, check the speed sensor electric source voltage and speed sensor.

#### Speed Sensor Electric Source Check:


- Connect the 12 V battery and terminals in the same manner as specified in the "Liquid Crystal Display (LCD) Segments Check".
- Set the hand tester to the DC25 V range and connect it to the terminals [2] and [4].
- ★ If the voltage is less than the 7 V, replace the meter assembly.

CAUTION
Do not shorted the terminals [2], [4] and [4], [5].

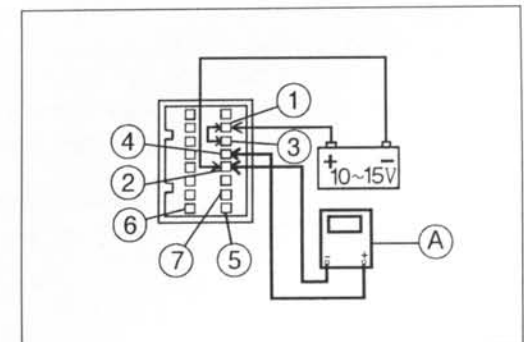


**Odometer Check:**



- Check the odometer with the speedometer in the same way.
- ★ If value indicated in the odometer is not added, replace the meter assembly.

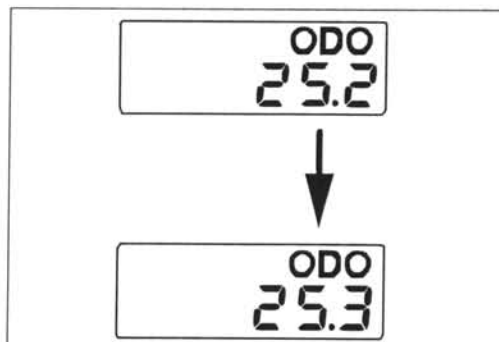**Trip Meter Check:**

- Check the trip meter with the speedometer in the same way.
- ★ If value indicated in the trip meter is not added, replace the meter assembly.
- Check that when the RESET button is pushed for more than two seconds, the figure display turns to 0.0.
- ★ If the figure display does not indicate 0.0, replace the meter assembly.

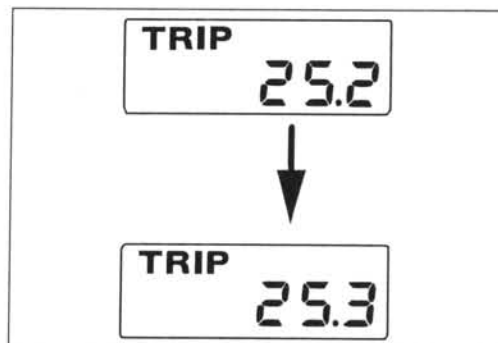**Water Temperature Meter Check:**

- Connect the 12 V battery and terminals in the same manner as specified in the "Liquid Crystal Display (LCD) Segment check".
- Connect the variable rheostat [A] to the terminal [7] as shown.
- Check that the number of segments and warning light displayed matches the resistance value of the variable rheostat.

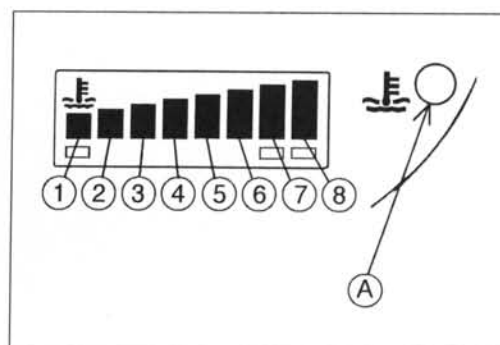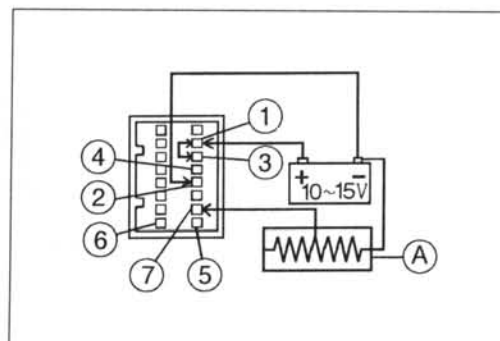


Resistance Value ( $\Omega$ )	Display Segment
24400	1
9560	2
6180	3
2780	4
1340	5
950	6
810	7
690	8
690 or less than	Warning light [A] and segment flash.


- If any display function does not work, replace the meter assembly.

**Tachometer Check:**

- Connect the 12 V battery and terminals in the same manner as specified in the "Liquid Crystal Display (LCD) Segment check".
- The tachometer equivalent to the input frequency is indicated in the oscillator [A] if the square wave (illustrated beside) would be input into the terminal [6].
- Indicates approximately 3000 rpm in case the input frequency would be approximately 100 Hz.

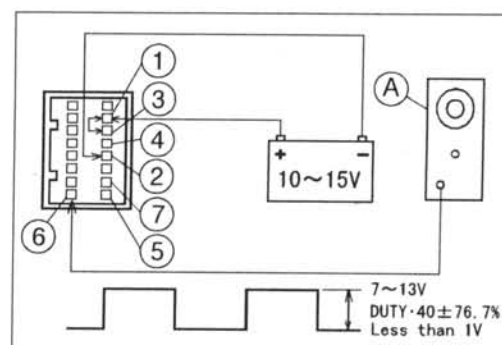


- If the oscillator is not available, the tachometer can be checked as follows.
- Connect the 12 V battery and terminals in the same manner as specified in the "Liquid Crystal Display (LCD) Segment check".
- Using a s auxiliary wire, open and connect the terminal [1] to the terminal [6] repeatedly.
- Then the tachometer hand [A] should flick [B].
- ★ If the hand does not flick, replace the meter assembly.

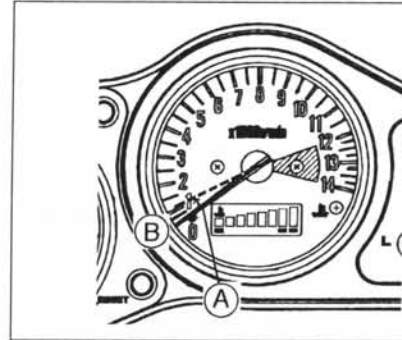


### Speed Sensor Inspection

- Remove:
  - Speed Sensor (see Final Drive chapter)
- Connect the speed sensor connector [A] with the battery [B], 10 kΩ resistor [C] and hand tester [D] as shown.
- Set the tester to the DC 25 V range.


**Special Tool – Hand Tester: 57001-1394**

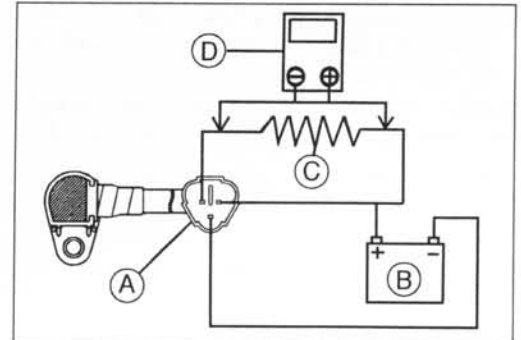

- Trace [A] each side of the speed sensor surface with the screw driver.
- Then the tester indicator should flick [B].
- ★ If the tester indicator does not flick, replace the speed sensor.

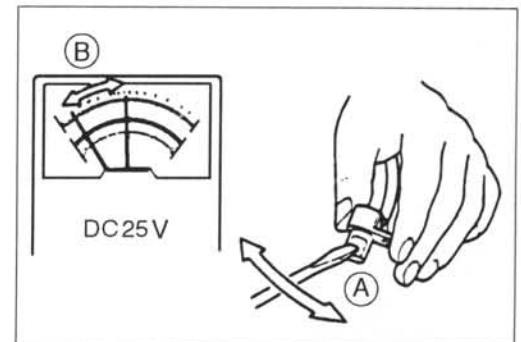

### Meter Circuit

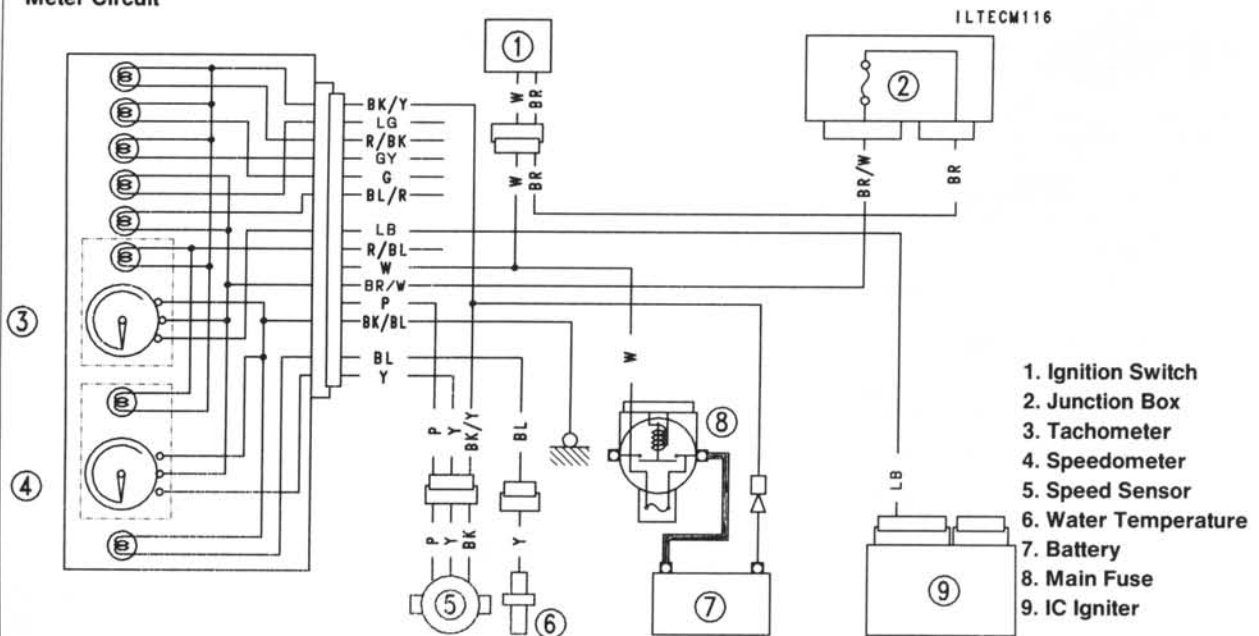



## 15-56 ELECTRICAL SYSTEM


### Switches and Sensors

#### Brake Light Timing Inspection

- Turn on the ignition switch.
- Check the operation of the rear brake light switch by depressing the brake pedal.
- ★ If it does not as specified, adjust the brake light timing.

#### Brake Light Timing


Standard: On after about 10 mm of pedal travel [A]

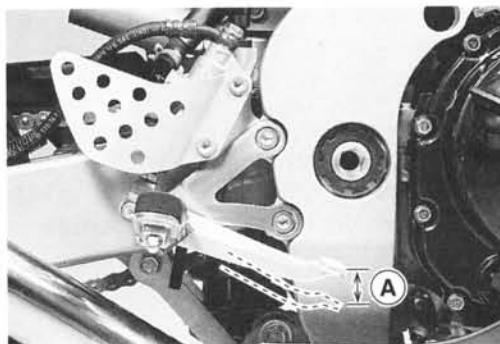

#### Brake Light Timing Adjustment

Brake light timing is adjusted by changing the position of the rear brake light switch.

- Adjust the position of the switch so that the brake light goes on after the specified pedal travel by turning the adjusting nut [A].

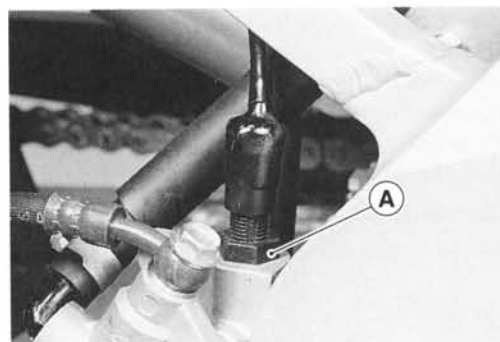

#### CAUTION

To avoid damaging the electrical connections inside the switch, be sure that the switch body does not turn during adjustment.

#### Switch Inspection

- Using a hand tester, check to see that only the connections shown in the table have continuity (about zero ohms).
- For the handlebar switches and the ignition switch, refer to the tables in the Wiring Diagram.
- ★ If the switch has an open or short, repair it or replace it with a new one.

Special Tool – Hand Tester: 57001-1394

#### Rear Brake Light Switch Connections

	BR	BL
When brake pedal is pushed down	○	○
When brake pedal is released		

#### Side Stand Switch Connections

	G/W	BK/Y
When side stand is up	○	○
When side stand is down		

#### Neutral Switch Connections

	SW. Terminal	⏏
When transmission is in neutral	○	○
When transmission is not in neutral		

#### Oil Pressure Switch Connections\*

	SW. Terminal	⏏
When engine is stopped	○	○
When engine is running		

\*: Engine lubrication system is in good condition



**Radiator Fan Switch Inspection**

- Remove the fan switch (see Cooling System chapter).
- Suspend the switch [A] in a container of coolant so that the temperature-sensing projection and threaded portion are submerged.
- Suspend an accurate thermometer [B] in the coolant.

**NOTE**

- The switch and thermometer must not touch the container sides or bottom.
- Place the container over a source of heat and gradually raise the temperature of the coolant while stirring the coolant gently.
- Using the hand tester, measure the internal resistance of the switch across the terminals at the temperatures shown in the table.
- ★ If the hand tester does not show the specified values, replace the switch.


**Fan Switch Resistance**

## ○ Rising temperature:

From OFF to ON at 96 ~ 100°C (205 ~ 212°F)

## ○ Falling temperature:


From ON to OFF at above 91°C (196°F)

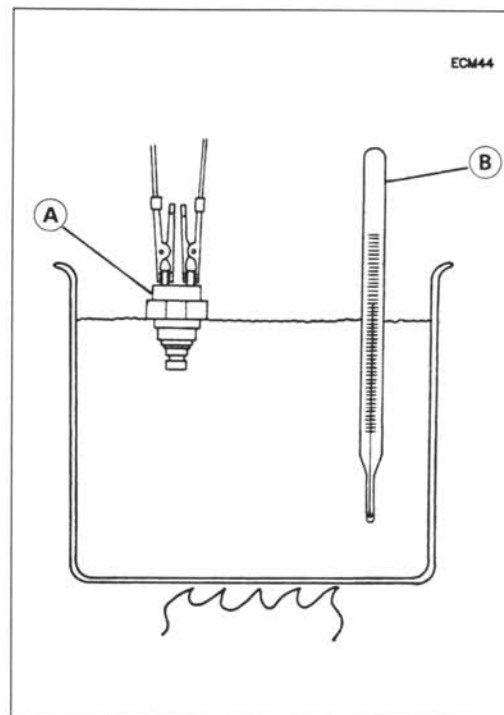ON: Less than 0.5  $\Omega$ OFF: More than 1 M $\Omega$ **Water Temperature Sensor Inspection**

- Remove the water temperature sensor (see Cooling System chapter).
- Suspend the sensor [A] in a container of coolant so that the temperature-sensing projection and threaded portion are submerged.
- Suspend an accurate thermometer [B] in the coolant.


**NOTE**

- The sensor and thermometer must not touch the container side or bottom.
- Place the container over a source of heat and gradually raise the temperature of the coolant while stirring the coolant gently.
- Using the hand tester, measure the internal resistance of the sensor across the terminal and the body at the temperatures shown in the table.
- ★ If the hand tester does not show the specified values, replace the sensor.

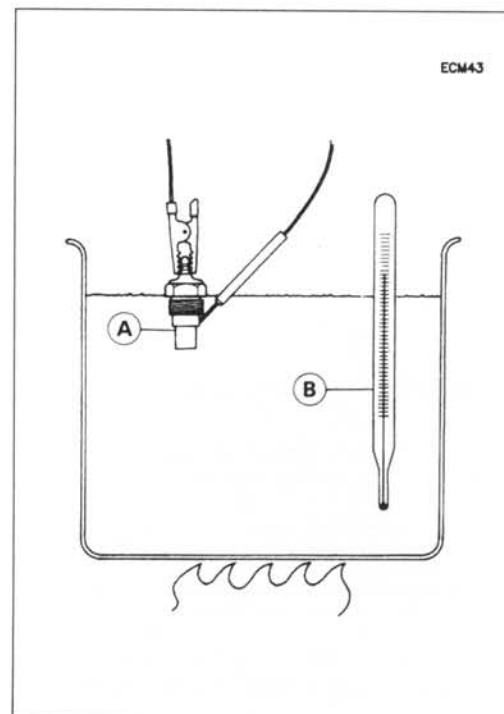**Water Temperature Sensor**50°C (122°F): 9.18 ~ 9.94 k $\Omega$ 80°C (176°F): 2.50 ~ 3.06 k $\Omega$ 120°C (248°F): 0.65 ~ 0.73 k $\Omega$ **Throttle Sensor Removal/Installation****CAUTION**


Do not remove the throttle sensor [A].

- When replacing the sensor, refer to Throttle Sensor Position Adjustment.

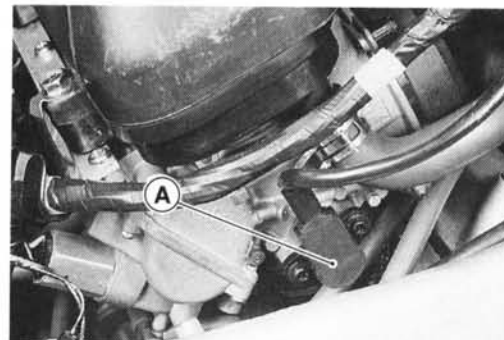

*Throttle Sensor Inspection*

- Remove the fuel tank (see Fuel System chapter).
- Prepare an auxiliary fuel tank and connect the fuel hose to the carburetors.
- Start the engine and warm it up thoroughly.
- Check:
  - Idle Speed (see Fuel System chapter)
  - Battery Charging Condition (see this chapter)
- Turn off the ignition switch.
- Remove the throttle sensor lead connector.
- Connect the adapter [A] between the connectors [B].

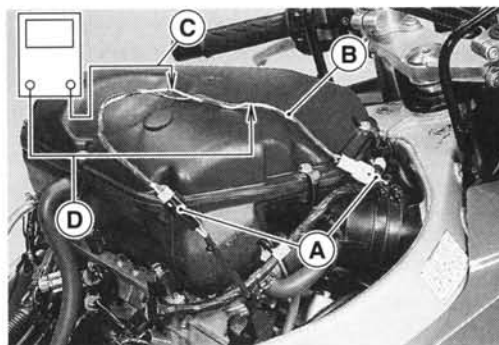**Special Tool – Throttle Sensor Setting Adapter: 57001-1400**

- Connect the hand tester to the adapter.
  - Hand Tester (+) → Y Lead [C]
  - Hand Tester (–) → Bk Lead [D]
- Start the engine.
- Check the sensor output voltage with the engine idling.

**Throttle Sensor Output Voltage**

**Standard:** 0.9 ~ 1.1 V (When engine is idling.)

- ★ If it is not within the specified voltage, adjust the throttle sensor position (see Throttle Sensor Position Adjustment).
- ★ If it is specified voltage, to next test.
- Stop the engine.
- Turn on the ignition switch.
- Check the sensor output voltage with the throttle fully open.

**Throttle Sensor Output Voltage**

**Standard:** 4.06 ~ 4.26 V (When engine is fully opened.)


- ★ If it is not within the specified voltage, replace the sensor.

*Throttle Sensor Position Adjustment*

- Start the engine.
- Check idle speed (see Fuel System chapter).
- Stop the engine and remove the carburetor.

**CAUTION**

**Do not turn the idle adjusting screw when removing the carburetor.**

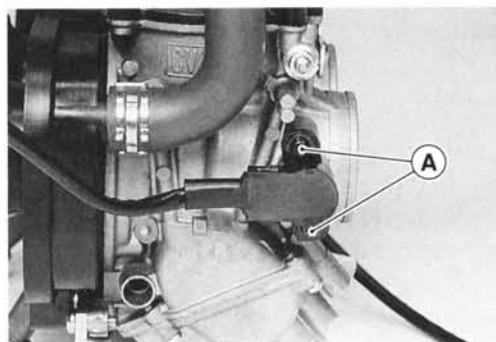

- Connect the throttle sensor setting adapter to the sensor lead connectors (see Throttle Sensor Inspection).

**Special Tool – Throttle Sensor Setting Adapter: 57001-1400**

- Loosen the throttle sensor mounting screws [A].
- Adjust the position of the sensor until the output voltage is within the specified voltage.


**Throttle Sensor Output Voltage**

**Standard:** 0.9 ~ 1.1 V

- If it is not within the specified voltage, replace the sensor.

## Junction Box

The junction box [A] has fuses [B], relays, and diodes. The relays and diodes can not be removed,

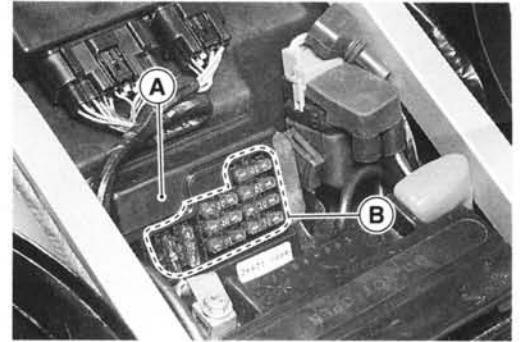

### Junction Box Fuse Circuit Inspection

- Remove the seats (see Frame chapter).
- Remove the junction box.
- Pull off the connectors from the junction box.
- Make sure all connector terminals are clean and tight, and none of them have been bent.
- ★ Clean the dirty terminals, and straighten slightly-bent terminals.
- Check conductivity of the numbered terminals with the hand tester.
- ★ If the tester does not read as specified, replace the junction box.

#### Fuse Circuit Inspection

Tester Connection	Tester Reading ( $\Omega$ )
1 - 1A	0
1 - 2	0
3A - 4	0
6 - 5	0
6 - 10	0
6 - 7	0
6 - 17	0

Tester Connection	Tester Reading ( $\Omega$ )
1A - 8	$\infty$
2 - 8	$\infty$
3A - 8	$\infty$
6 - 2	$\infty$
6 - 3A	$\infty$
17 - 3A	$\infty$

### Starter Circuit/Headlight Relay Inspection

- Remove the junction box.
- Check conductivity of the following numbered terminals by connecting the hand tester and one 12 V battery to the junction box as shown.
- ★ If the tester does not read as specified, replace the junction box.

#### Relay Circuit Inspection (with the battery disconnected)

	Tester Connection	Tester Reading ( $\Omega$ )		Tester Connection	Tester Reading ( $\Omega$ )
Headlight Relay	*7 - 8	$\infty$	Starter Circuit Relay	9 - 11	$\infty$
	*7 - 13	$\infty$		12 - 13	$\infty$
	(+) (-) *13 - 9	Not $\infty$ **		(+) (-) 13 - 11	$\infty$
				(+) (-) 12 - 11	Not $\infty$ **

(\*): US, Canada, and Australia Models only

(\*\*): The actual reading varies with the hand tester used.

(+): Apply tester positive lead.

(-): Apply tester negative lead.

**Relay Circuit Inspection (with the battery connected)**

	Battery Connection (+) (-)	Tester Connection	Tester Reading ( $\Omega$ )
Headlight Relay	*9 - 13	*7 - 8	0
Starter Circuit Relay	11 - 12	(+) (-) 13 - 11	Not $\infty$ **

(\*): US, Canada, and Australia Models only

(\*\*): The actual reading varies with the hand tester used.

(+): Apply tester positive lead.

(-): Apply tester negative lead.

**Diode Circuit Inspection**

- Remove the junction box.
- Check conductivity of the following pairs of terminals.

**Diode Circuit Inspection**

Tester Connection	*13-8, *13-9, 12-11, 12-14, 15-14, 16-14
-------------------	------------------------------------------

\*: US, Canada, and Australia Models only


- ★ The resistance should be low in one direction and more than ten times as much in the other direction. If any diode shows low or high in both directions, the diode is defective and the junction box must be replaced.

**NOTE**

- The actual meter reading varies with the meter used and the individual diodes, but, generally speaking, the lower reading should be from zero to one half the scale.


Junction Box Internal Circuit (US, Canada, and Australia)

EC49

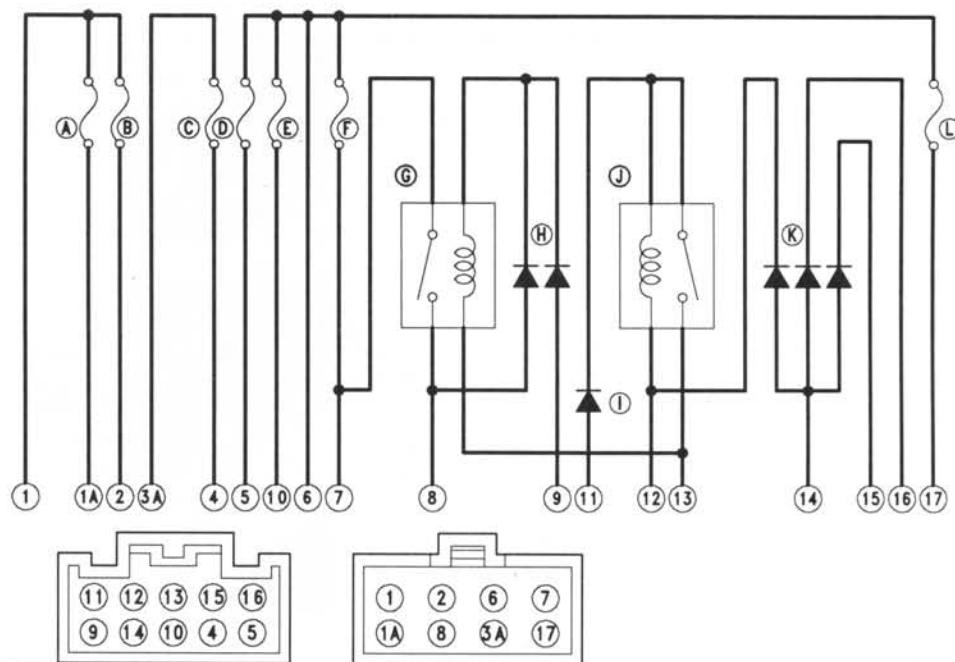

Junction Box Internal Circuit (Other than US, Canada, and Australia)

EC54

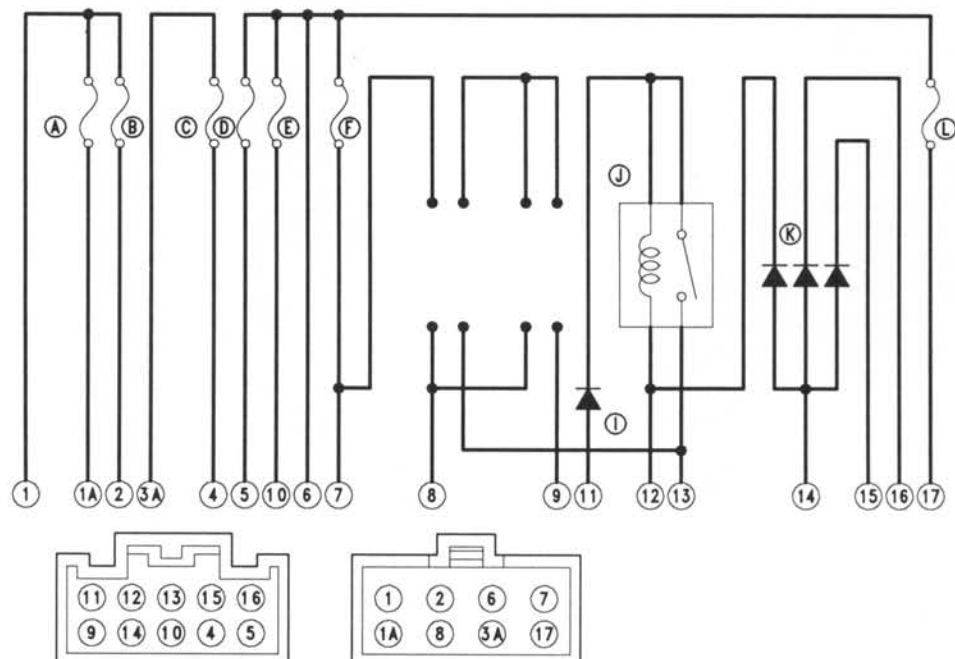

- A. Accessory Fuse 10A
- B. Fan Fuse 10A
- C. Turn Signal Relay Fuse 10A
- D. Horn Fuse 10A


- E. Ignition Fuse 10A
- F. Headlight Fuse 10A
- G. Headlight Relay
- H. Headlight Diodes

- I. Starter Diode
- J. Starter Circuit Relay
- K. Interlock Diodes
- L. Taillight Fuse 10A

## Fuse


### 30A Main Fuse Removal

- Remove:
  - Seats (see Frame chapter)
  - Starter Relay and 30A Main Fuse Connector [A]
- Pull out the main fuse [B] from the starter relay with needle nose pliers.

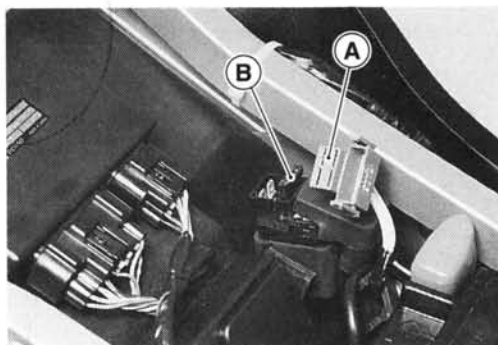

### Junction Box Fuse Removal

- Remove the seats (see Frame chapter).
- Unlock the hook to lift up the lid [A].
- Pull the fuses [B] straight out of the junction box with needle nose pliers.

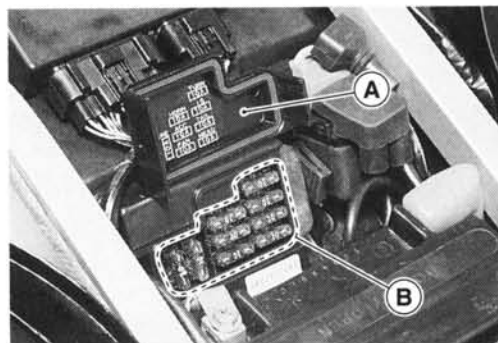

### Fuse Installation

- If a fuse fails during operation, inspect the electrical system to determine the cause, and then replace it with a new fuse of proper amperage.
- Install the junction box fuses on the original position as specified on the lid.

### Fuse Inspection


- Remove the fuse (see Fuse Removal).
- Inspect the fuse element.
- ★ If it is blown out, replace the fuse. Before replacing a blown fuse, always check the amperage in the affected circuit. If the amperage is equal to or greater than the fuse rating, check the wiring and related components for a short circuit.

Housing [A]

Terminals [C]

Fuse Element [B]

Blown Element [D]

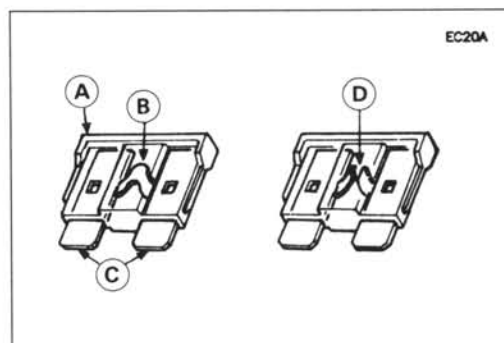

### CAUTION

When replacing a fuse, be sure the new fuse matches the specified fuse rating for that circuit. Installation of a fuse with a higher rating may cause damage to wiring and components.

# Appendix

## Table of Contents

Additional Considerations for Racing .....	16-2
Carburetor: .....	16-2
Spark Plug: .....	16-2
Spark Plug Inspection .....	16-3
Troubleshooting Guide .....	16-4
General Lubrication .....	16-8
Lubrication .....	16-8
Nut, Bolt, and Fastener Tightness .....	16-9
Tightness Inspection .....	16-9
Unit Conversion Table .....	16-10

## 16-2 APPENDIX

### Additional Considerations for Racing

This motorcycle has been manufactured for use in a reasonable and prudent manner and as a vehicle only. However, some may wish to subject this motorcycle to abnormal operation, such as would be experienced under racing conditions. KAWASAKI STRONGLY RECOMMENDS THAT ALL RIDERS RIDE SAFELY AND OBEY ALL LAWS AND REGULATIONS CONCERNING THEIR MOTORCYCLE AND ITS OPERATION.

Racing should be done under supervised conditions, and recognized sanctioning bodies should be contacted for further details. For those who desire to participate in competitive racing or related use, the following technical information may prove useful. However, please note the following important notes.

- You are entirely responsible for the use of your motorcycle under abnormal conditions such as racing, and Kawasaki shall not be liable for any damages which might arise from such use.
- Kawasaki's Limited Motorcycle Warranty and Limited Emission Control Systems Warranty specifically exclude motorcycles which are used in competition or related uses. Please read the warranty carefully.
- Motorcycle racing is a very sophisticated sport, subject to many variables. The following information is theoretical only, and Kawasaki shall not be liable for any damages which might arise from alterations utilizing this information.
- When the motorcycle is operated on public roads, it **must** be in its original state in order to ensure safety and compliance with applicable regulations.

#### Carburetor:

Sometimes an alteration may be desirable for improved performance under special conditions when proper mixture is not obtained after the carburetor has been properly adjusted, and all parts cleaned and found to be functioning properly.

If the engine still exhibits symptoms of overly rich or lean carburetion after all maintenance and adjustments are correctly performed, the main jet can be replaced with a smaller or larger one. A smaller numbered jet gives a leaner mixture and a larger numbered jet a richer mixture.


#### Spark Plug:

The spark plug ignites the fuel and air mixture in the combustion chamber. To do this effectively and at the proper time, the correct spark plug must be used, and the spark plug must be kept clean and the gap adjusted.

Tests have shown the plug listed in the "General Information" chapter to be the best plug for general use.

Since spark plug requirements change with the ignition and carburetion adjustments and with riding conditions, whether or not a spark plug of the correct heat range is used should be determined by removing and inspecting the plug.

- A. Terminal
- B. Insulator
- C. Cement
- D. Gasket
- E. Center Electrode
- F. Gap (0.7 ~ 0.8 mm)
- G. Reach
- H. Side Electrode

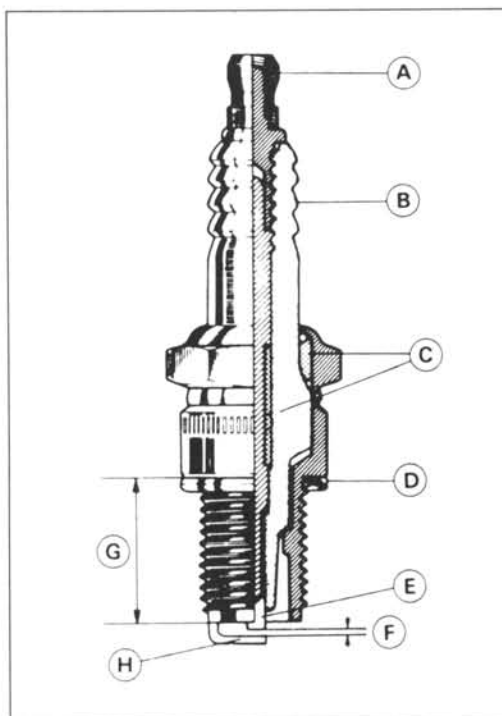



When a plug of the correct heat range is being used, the electrodes will stay hot enough to keep all the carbon burned off, but cool enough to keep from damaging the engine and the plug itself. This temperature is about 400 ~ 800°C (750 ~ 1,450°F) and can be judged by noting the condition and color of the ceramic insulator around the center electrode. If the ceramic is clean and of a light brown color, the plug is operating at the right temperature.

A spark plug for higher operating temperatures is used for racing. Such a plug is designed for better cooling efficiency so that it will not overheat and thus is often called a "colder" plug. If a spark plug with too cool a heat range is used – that is, a "cold" plug that cools itself too well – the plug will stay too cool to burn off the carbon, and the carbon will collect on the electrodes and the ceramic insulator.

The carbon on the electrodes conducts electricity, and can short the center electrode to ground by either coating the ceramic insulator or bridging across the gap. Such a short will prevent an effective spark. Carbon build-up on the plug can also cause other troubles. It can heat up red-hot and cause preignition and knocking, which may eventually burn a hole in the top of the piston.

### Spark Plug Inspection

- Remove the spark plug and inspect the ceramic insulator.
- ★ Whether or not the right temperature plug is being used can be ascertained by noting the condition of the ceramic insulator around the electrode. A light brown color indicates the correct plug is being used. If the ceramic is black, it indicates that the plug is firing at too low a temperature, so the next hotter type should be used instead. If the ceramic is white, the plug is operating at too high a temperature and it should be replaced with the next colder type.

#### CAUTION

If the spark plug is replaced with a type other than the standard plug, make certain the replacement plug has the same thread pitch and reach (length of threaded portion) and the same type electrode (regular type or projected type) as the standard plug.

If the plug reach is too short, carbon will build up on the plug hole threads in the cylinder head, causing overheating and making it very difficult to insert the correct spark plug later.

If the reach is too long, carbon will build up on the exposed spark plug threads causing overheating, preignition, and possibly burning a hole in the piston top. In addition, it may be impossible to remove the plug without damaging the cylinder head.

#### Standard Spark Plug Threads

Diameter:	10 mm
Pitch:	1.0 mm
Reach:	19 mm

#### NOTE

- The heat range of the spark plug functions like a thermostat for the engine. Using the wrong type of spark plug can make the engine run too hot (resulting in engine damage) or too cold (with poor performance, misfiring, and stalling).

### Spark Plug Condition



Carbon fouling




Oil fouling



Normal operation



Overheating

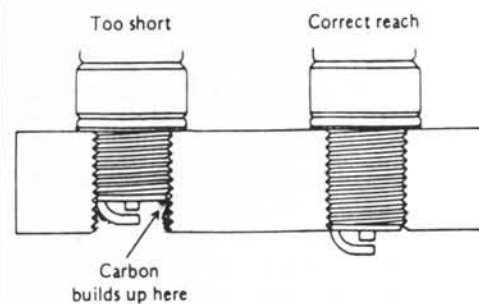

## Troubleshooting Guide

### NOTE

○ *This is not an exhaustive list, giving every possible cause for each problem listed. It is meant simply as a rough guide to assist the troubleshooting for some of the more common difficulties.*

### Engine Doesn't Start, Starting Difficulty:

#### Starter motor not rotating:

- Starter lockout or neutral switch trouble
- Starter motor trouble
- Battery voltage low
- Starter relays not contacting or operating
- Starter button not contacting
- Wiring open or shorted
- Ignition switch trouble
- Engine stop switch trouble
- Fuse blown

#### Starter motor rotating but engine doesn't turn over:

- Starter clutch trouble

#### Engine won't turn over:

- Valve seizure
- Valve lifter seizure
- Cylinder, piston seizure
- Crankshaft seizure
- Connecting rod small end seizure
- Connecting rod big end seizure
- Transmission gear or bearing seizure
- Camshaft seizure
- Starter idle gear seizure

#### No fuel flow:

- No fuel in tank
- Fuel pump trouble
- Fuel tank air vent obstructed
- Fuel filter clogged
- Fuel tap clogged
- Fuel line clogged
- Float valve clogged
- Fuel cut valve left close (check fuel cut valve)

#### Engine flooded:

- Fuel level in carburetor float bowl too high
- Float valve worn or stuck open
- Starting technique faulty  
(When flooded, crank the engine with the throttle fully opened to allow more air to reach the engine.)

#### No spark; spark weak:

- Battery voltage low
- Spark plug dirty, broken, or maladjusted
- Spark plug cap or high tension wiring trouble
- Spark plug cap shorted or not in good contact
- Spark plug incorrect
- IC igniter trouble
- Cam sensor trouble
- Neutral, starter lockout, or side stand switch trouble
- Pickup coil trouble
- Stick coil trouble
- Ignition or engine stop switch shorted
- Wiring shorted or open
- Fuse blown

#### Fuel/air mixture incorrect:

- Pilot screw and/or idle adjusting screw maladjusted
- Pilot jet, or air passage clogged

- Air cleaner clogged, poorly sealed, or missing
- Starter jet clogged

#### Compression Low:

- Spark plug loose
- Cylinder head not sufficiently tightened down
- No valve clearance
- Cylinder, piston worn
- Piston ring bad (worn, weak, broken, or sticking)
- Piston ring/groove clearance excessive
- Cylinder head gasket damaged
- Cylinder head warped
- Valve spring broken or weak
- Valve not seating properly (valve bent, worn, or carbon accumulation on the seating surface)

### Poor Running at Low Speed:

#### Spark weak:

- Battery voltage low
- Spark plug dirty, broken, or maladjusted
- Stick coil wiring trouble
- Stick coil not in good contact
- Spark plug incorrect
- IC igniter trouble
- Cam sensor trouble
- Pickup coil trouble
- Stick coil trouble

#### Fuel/air mixture incorrect:

- Pilot screw maladjusted
- Pilot jet, or air passage clogged
- Air bleed pipe bleed holes clogged
- Pilot passage clogged
- Air cleaner clogged, poorly sealed, or missing
- Starter plunger stuck open
- Fuel level in carburetor float bowl too high or too low
- Fuel tank air vent obstructed
- Fuel cut valve won't fully open (check fuel cut valve and IC igniter)
- Carburetor holder loose
- Air cleaner duct loose
- Air cleaner O-ring damaged

#### Compression low:

- Spark plug loose
- Cylinder head not sufficiently tightened down
- No valve clearance
- Cylinder, piston worn
- Piston ring bad (worn, weak, broken, or sticking)
- Piston ring/groove clearance excessive
- Cylinder head warped
- Cylinder head gasket damaged
- Valve spring broken or weak
- Valve not seating properly (valve bent, worn, or carbon accumulation on the seating surface)

#### Other:

- IC igniter trouble
- Carburetors not synchronizing
- Carburetor vacuum piston doesn't slide smoothly
- Carburetor vacuum piston diaphragm damage
- Engine oil viscosity too high
- Drive train trouble
- Brake dragging

Air suction valve trouble  
Vacuum switch valve trouble

### Poor Running or No Power at High Speed:

#### Firing incorrect:

Spark plug dirty, broken, or maladjusted  
Stick coil wiring trouble  
Stick coil not in good contact  
Spark plug incorrect  
Cam sensor trouble  
IC igniter trouble  
Pickup coil trouble  
Stick coil trouble

#### Fuel/air mixture incorrect:

Starter plunger stuck open  
Main jet clogged or wrong size  
Jet needle or needle jet worn  
Air jet clogged  
Fuel level in carburetor float bowl too high or too low  
Fuel cut valve won't fully open (check fuel cut valve)  
Bleed holes of needle jet holder or needle jet clogged  
Air cleaner clogged, poorly sealed, or missing  
Air cleaner duct loose  
Air cleaner O-ring damaged  
Water or foreign matter in fuel  
Carburetor holder loose  
Fuel tank air vent obstructed  
Fuel tap clogged  
Fuel line clogged  
Fuel pump trouble

#### Compression low:

Spark plug loose  
Cylinder head not sufficiently tightened down  
No valve clearance  
Cylinder, piston worn  
Piston ring bad (worn, weak, broken, or sticking)  
Piston ring/groove clearance excessive  
Cylinder head gasket damaged  
Cylinder head warped  
Valve spring broken or weak  
Valve not seating properly (valve bent, worn, or carbon accumulation on the seating surface.)

#### Knocking:

Carbon built up in combustion chamber  
Fuel poor quality or incorrect  
Spark plug incorrect  
IC igniter trouble  
Cam sensor trouble

#### Miscellaneous:

Throttle valve won't fully open  
Carburetor vacuum piston doesn't slide smoothly  
Carburetor vacuum piston diaphragm damaged  
Brake dragging  
Clutch slipping  
Overheating  
Engine oil level too high  
Engine oil viscosity too high  
Drive train trouble

Air suction valve trouble  
Vacuum switch valve trouble  
Catalytic converters melt down due to muffler overheating

### Overheating:

#### Firing incorrect:

Spark plug dirty, broken, or maladjusted  
Spark plug incorrect

#### Muffler overheating:

Do not run the engine even if with only one cylinder misfiring or poor running (Request the nearest service facility to correct it)  
Do not push-start with a dead battery (Connect another full-charged battery with jumper cables, and start the engine using the electric starter)  
Do not start the engine under misfire due to spark plug fouling or poor connection of the stick coil  
Do not coast the motorcycle with the ignition switch off (Turn the ignition switch ON and run the engine)

IC igniter or fuel cut valve trouble

IC igniter trouble

#### Fuel/air mixture incorrect:

Main jet clogged or wrong size  
Fuel level in carburetor float bowl too low  
Carburetor holder loose  
Air cleaner duct loose  
Air cleaner poorly sealed, or missing  
Air cleaner O-ring damaged  
Air cleaner clogged

#### Compression high:

Carbon built up in combustion chamber

#### Engine load faulty:

Clutch slipping  
Engine oil level too high  
Engine oil viscosity too high  
Drive train trouble  
Brake dragging

#### Lubrication inadequate:

Engine oil level too low  
Engine oil poor quality or incorrect

#### Gauge incorrect:

Water temperature gauge broken  
Water temperature sensor broken

#### Coolant incorrect:

Coolant level too low  
Coolant deteriorated

#### Cooling system component incorrect:

Radiator fin damaged  
Radiator clogged  
Thermostat trouble  
Radiator cap trouble  
Radiator fan switch trouble  
Fan motor broken  
Fan blade damaged  
Water pump not turning  
Water pump impeller damaged

**Over Cooling:****Gauge incorrect:**

- Water temperature gauge broken
- Water temperature sensor broken

**Cooling system component incorrect:**

- Radiator fan switch trouble
- Thermostat trouble

**Clutch Operation Faulty:****Clutch slipping:**

- Friction plate worn or warped
- Steel plate worn or warped
- Clutch spring broken or weak
- Clutch hub or housing unevenly worn
- No clutch lever play
- Clutch inner cable catching
- Clutch release mechanism trouble

**Clutch not disengaging properly:**

- Clutch plate warped or too rough
- Clutch spring compression uneven
- Engine oil deteriorated
- Engine oil viscosity too high
- Engine oil level too high
- Clutch housing frozen on drive shaft
- Clutch hub nut loose
- Clutch hub spline damaged
- Clutch friction plate installed wrong
- Clutch lever play excessive
- Clutch release mechanism trouble

**Gear Shifting Faulty:****Doesn't go into gear; shift pedal doesn't return:**

- Clutch not disengaging
- Shift fork bent or seized
- Gear stuck on the shaft
- Gear positioning lever binding
- Shift return spring weak or broken
- Shift return spring pin loose
- Shift mechanism arm spring broken
- Shift mechanism arm broken
- Shift pawl broken

**Jumps out of gear:**

- Shift fork worn, bent
- Gear groove worn
- Gear dogs and/or dog holes worn
- Shift drum groove worn
- Gear positioning lever spring weak or broken
- Shift fork pin worn
- Drive shaft, output shaft, and/or gear splines worn

**Overshifts:**

- Gear positioning lever spring weak or broken
- Shift mechanism arm spring broken

**Abnormal Engine Noise:****Knocking:**

- IC igniter trouble
- Carbon built up in combustion chamber
- Fuel poor quality or incorrect
- Spark plug incorrect

**Overheating****Piston slap:**

- Cylinder/piston clearance excessive
- Cylinder, piston worn
- Connecting rod bent
- Piston pin, piston pin hole worn

**Valve noise:**

- Valve clearance incorrect
- Valve spring broken or weak
- Camshaft bearing worn
- Valve lifter worn

**Other noise:**

- Connecting rod small end clearance excessive
- Connecting rod big end clearance excessive
- Piston ring worn, broken, or stuck
- Piston seizure, damage
- Cylinder head gasket leaking
- Exhaust pipe leaking at cylinder head connection
- Crankshaft runout excessive
- Engine mounts loose
- Crankshaft bearing worn
- Primary gear worn or chipped
- Camshaft chain tensioner trouble
- Camshaft chain, sprocket, guide worn
- Air suction valve damaged
- Vacuum switch valve damaged
- Alternator rotor loose
- Catalytic converters melt down due to muffler overheating

**Abnormal Drive Train Noise:****Clutch noise:**

- Clutch rubber damper weak or damaged
- Clutch housing/friction plate clearance excessive
- Clutch housing gear worn

**Transmission noise:**

- Bearings worn
- Transmission gears worn or chipped
- Metal chips jammed in gear teeth
- Engine oil insufficient

**Drive chain noise:**

- Drive chain adjusted improperly
- Drive chain worn
- Rear and/or engine sprocket worn
- Chain lubrication insufficient
- Rear wheel misaligned

**Abnormal Frame Noise:****Front fork noise:**

- Oil insufficient or too thin
- Spring weak or broken

**Rear shock absorber noise:**

- Shock absorber damaged

**Disc brake noise:**

- Pad installed incorrectly
- Pad surface glazed
- Disc warped
- Caliper trouble

**Other noise:**

- Bracket, nut, bolt, etc. not properly mounted or tightened

**Oil Pressure Warning Light Goes On:**

- Engine oil pump damaged
- Engine oil screen clogged
- Engine oil level too low
- Engine oil viscosity too low
- Camshaft bearings worn
- Crankshaft bearings worn
- Oil pressure switch damaged
- Wiring faulty
- Relief valve stuck open
- O-ring at the oil passage in the crankcase damaged

**Exhaust Smokes Excessively:****White smoke:**

- Piston oil ring worn
- Cylinder worn
- Valve oil seal damaged
- Valve guide worn
- Engine oil level too high

**Black smoke:**

- Air cleaner clogged
- Main jet too large or fallen off
- Starter plunger stuck open
- Fuel level in carburetor float bowl too high

**Brown smoke:**

- Main jet too small
- Fuel level in carburetor float bowl too low
- Air cleaner duct loose
- Air cleaner O-ring damaged
- Air cleaner poorly sealed or missing

**Handling and/or Stability Unsatisfactory:****Handlebar hard to turn:**

- Cable routing incorrect
- Hose routing incorrect
- Wiring routing incorrect
- Steering stem locknut too tight
- Steering stem bearing damaged
- Steering stem bearing lubrication inadequate
- Steering stem bent
- Tire air pressure too low

**Handlebar shakes or excessively vibrates:**

- Tire worn
- Swing arm pivot bearings worn
- Rim warped, or not balanced
- Wheel bearing worn
- Handlebar clamp loose
- Steering stem head nut loose

**Handlebar pulls to one side:**

- Frame bent
- Wheel misalignment
- Swing arm bent or twisted
- Steering maladjusted
- Front fork bent
- Right and left front fork oil level uneven

**Shock absorption unsatisfactory:**

- (Too hard)
- Front fork oil excessive
- Front fork oil viscosity too high
- Rear shock absorber adjustment too hard
- Tire air pressure too high

- Front fork bent
- (Too soft)
- Tire air pressure too low
- Front fork oil insufficient and/or leaking
- Front fork oil viscosity too low
- Rear shock adjustment too soft
- Front fork, rear shock absorber spring weak
- Rear shock absorber oil leaking

**Brake Doesn't Hold:**

- Air in the brake line
- Pad or disc worn
- Brake fluid leakage
- Disc warped
- Contaminated pad
- Brake fluid deteriorated
- Primary or secondary cup damaged in master cylinder
- Master cylinder scratched inside

**Battery Trouble:****Battery discharged:**

- Battery faulty (e.g., plates sulphated, shorted through sedimentation, electrolyte insufficient)
- Battery leads making poor contact
- Load excessive (e.g., bulb of excessive wattage)
- Ignition switch trouble
- Alternator trouble
- Wiring faulty
- Regulator/rectifier trouble

**Battery overcharged:**

- Regulator/rectifier trouble
- Battery faulty

## 16-8 APPENDIX

### General Lubrication

#### Lubrication

- Before lubricating each part, clean off any rusty spots with rust remover and wipe off any grease, oil, dirt, or grime.
- Lubricate the points listed below with indicated lubricant.

#### NOTE

- *Whenever the vehicle has been operated under wet or rainy conditions, or especially after using a high-pressure water spray, perform the general lubrication.*

#### Pivots: Lubricate with Motor Oil.

Clutch Lever  
Brake Lever  
Brake Pedal  
Side Stand  
Rear Brake Rod Joint


#### Points: Lubricate with Grease.

Clutch Inner Cable Upper and Lower Ends  
Throttle Inner Cable Lower Ends  
Choke Inner Cable Lower End

#### Cables: Lubricate with Rust Inhibiter.

Choke Cable  
Throttle Cables  
Clutch Cable

**Special Tool – Pressure Cable Luber: K56019-021 [A]**

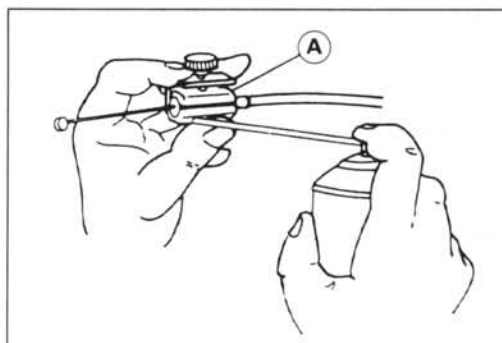



---

## Nut, Bolt, and Fastener Tightness

---

### *Tightness Inspection*

- Check the tightness of the bolts and nuts listed here. Also, check to see that each cotter pin is in place and in good condition.

### NOTE

○ *For the engine fasteners, check the tightness of them when the engine is cold (at room temperature).*

- ★ If there are loose fasteners, retorque them to the specified torque following the specified tightening sequence. Refer to the appropriate chapter for torque specifications. If torque specifications are not in the appropriate chapter, see the Standard Torque Table. For each fastener, first loosen it by 1/2 turn, then tighten it.
- ★ If cotter pins are damaged, replace them with new ones.

### Nut, Bolt and Fastener to be checked

#### Wheels:

- Front Axle Nut
- Front Axle Clamp Bolts
- Rear Axle Nut
- Rear Axle Nut Cotter Pin

#### Brakes:

- Front Master Cylinder Clamp Bolts
- Caliper Mounting Bolts
- Rear Master Cylinder Mounting Bolts
- Brake Lever Pivot Nut
- Brake Pedal Bolt
- Brake Rod Joint Cotter Pin

#### Suspension:

- Front Fork Clamp Bolts
- Front Fender Mounting Bolts
- Rear Shock Absorber Mounting Bolts
- Swingarm Pivot Shaft Nut
- Uni-Trak Link Nuts

#### Steering:

- Stem Head Nut
- Handlebar Mounting Bolts

#### Engine:

- Engine Mounting Bolts
- Cylinder Head Bolts
- Muffler Mounting Bolts
- Exhaust Pipe Holder Nuts
- Muffler Connecting Clamp Bolt
- Clutch Lever Pivot Nut

#### Others:

- Side Stand Bolt
- Footpeg Mounting Bolts
- Footpeg Bracket Mounting Bolts

# 16-10 APPENDIX

## Unit Conversion Table

### Prefixes for Units:

Prefix	Symbol	Power
mega	M	x 1 000 000
kilo	k	x 1 000
centi	c	x 0.01
milli	m	x 0.001
micro	μ	x 0.000001

### Units of Mass:

kg	x	2.205	=	lb
g	x	0.03527	=	oz

### Units of Volume:

L	x	0.2642	=	gal (US)
L	x	0.2200	=	gal (imp)
L	x	1.057	=	qt (US)
L	x	0.8799	=	qt (imp)
L	x	2.113	=	pint (US)
L	x	1.816	=	pint (imp)
mL	x	0.03381	=	oz (US)
mL	x	0.02816	=	oz (imp)
mL	x	0.06102	=	cu in

### Units of Force:

N	x	0.1020	=	kg
N	x	0.2248	=	lb
kg	x	9.807	=	N
kg	x	2.205	=	lb

### Units of Length:

km	x	0.6214	=	mile
m	x	3.281	=	ft
mm	x	0.03937	=	in

### Units of Torque:

N-m	x	0.1020	=	kg-m
N-m	x	0.7376	=	ft-lb
N-m	x	8.851	=	in-lb
kg-m	x	9.807	=	N-m
kg-m	x	7.233	=	ft-lb
kg-m	x	86.80	=	in-lb

### Units of Pressure:

kPa	x	0.01020	=	kg/cm <sup>2</sup>
kPa	x	0.1450	=	psi
kPa	x	0.7501	=	cm Hg
kg/cm <sup>2</sup>	x	98.07	=	kPa
kg/cm <sup>2</sup>	x	14.22	=	psi
cm Hg	x	1.333	=	kPa

### Units of Speed:

km/h	x	0.6214	=	mph
------	---	--------	---	-----

### Units of Power:

kW	x	1.360	=	PS
kW	x	1.341	=	HP
PS	x	0.7355	=	kW
PS	x	0.9863	=	HP

### Units of Temperature:

