 


03/03/07 12:59:42 31MEM600_001

 


 
This manual should be considered a permanent part of the motorcycle and should remain with the motorcycle when it is resold.

This publication includes the latest production information available before printing. Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.



No part of this publication may be reproduced without written permission.

© 2003 Honda Motor Co., Ltd.





 **2004
Honda VTX1300C
VTX
OWNER'S MANUAL**

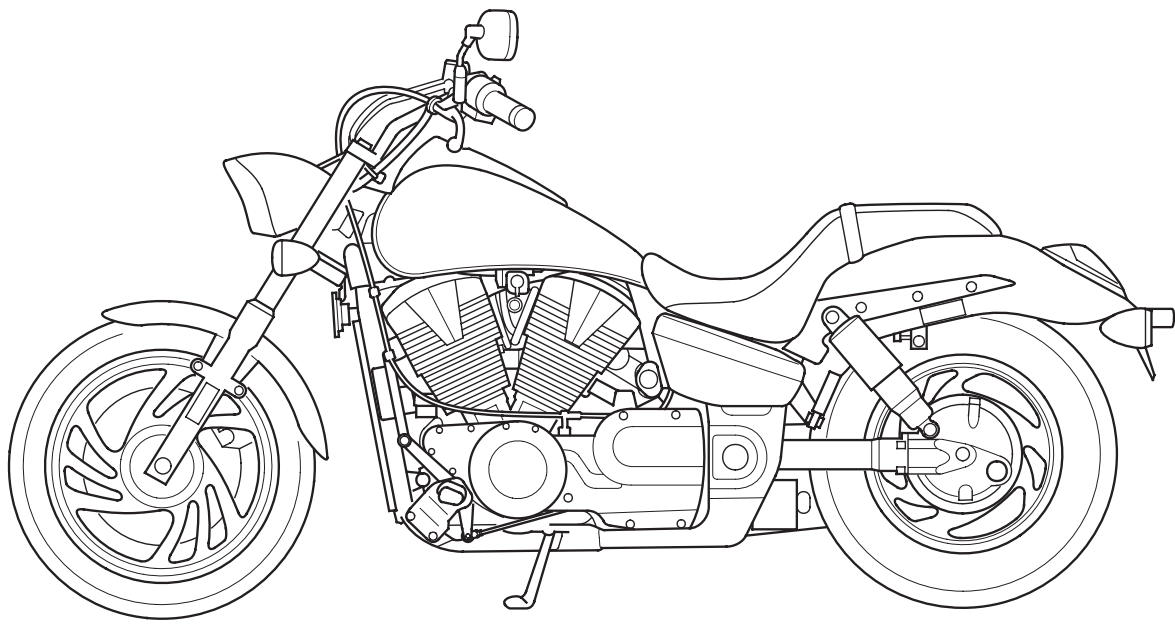



Introduction

Congratulations on choosing your Honda motorcycle.

 
When you own a Honda, you're part of a worldwide family of satisfied customers — people who appreciate Honda's reputation for building quality into every product.

Before riding, take time to get acquainted with your motorcycle and how it works. To protect your investment, we urge you to take responsibility for keeping your motorcycle well maintained. Scheduled service is a must, of course. But it's just as important to observe the break-in guidelines, and perform all pre-ride and other periodic checks detailed in this manual.

We also recommend that you read this owner's manual before you ride. It's full of facts, instructions, safety information, and helpful tips. To make it easy to use, the manual contains a detailed list of topics at the beginning of each section, and both an in-depth table of contents and an index at the back of the book.

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. This information is intended to help you avoid damage to your Honda, other property, or the environment.

Introduction





Introduction

Read the Warranties Booklet (page 197) thoroughly so you understand the coverages that protect your new Honda and are aware of your rights and responsibilities.

If you have any questions, or if you ever need special service or repairs, remember that your Honda dealer knows your motorcycle best and is dedicated to your complete satisfaction.

Please report any change of address or ownership to your Honda dealer so we will be able to contact you concerning important production information.

 
You may also want to visit our website at www.honda.com.

Happy riding!

California Proposition 65 Warning

WARNING: This product contains or emits chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Introduction





A Few Words About Safety

Your safety, and the safety of others, is very important. And operating this motorcycle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

 
Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a motorcycle. You must use your own good judgment.

You will find important safety information in a variety of forms, including:

- **Safety Labels** — on the motorcycle.
- **Safety Messages** — preceded by a safety alert symbol  and one of three signal words: **DANGER, WARNING, or CAUTION.**

These signal words mean:

Safety Messages





A Few Words About Safety

DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

 
CAUTION

 
You **CAN** be **HURT** if you don't follow instructions.

- **Safety Headings** — such as Important Safety Reminders or Important Safety Precautions.
- **Safety Section** — such as Motorcycle Safety.
- **Instructions** — how to use this motorcycle correctly and safely.

This entire manual is filled with important safety information — please read it carefully.

Safety Messages





Contents

These pages give an overview of the contents of your owner's manual. The first page of each section lists the topics covered in that section.

Motorcycle Safety..... 1

Important safety information you should know, plus a look at the safety-related labels on your motorcycle.

Instruments & Controls..... 9

The location and function of indicators and controls on your motorcycle and operating instructions for various controls and features.

 
Before Riding..... 25

 
The importance of wearing a helmet and other protective gear, how to make sure you and your motorcycle are ready to ride, and important information about loading.

Basic Operation & Riding..... 35

How to start and stop the engine, shift gears, and brake. Also, riding precautions and important information about riding with a passenger or cargo.

Contents





Contents

Servicing Your Honda 51

Why your motorcycle needs regular maintenance, what you need to know before servicing your Honda, an owner maintenance schedule, and instructions for specific maintenance and adjustment items.

Tips 135

How to store and transport your motorcycle and how to be an environmentally-responsible rider.

Taking Care of the Unexpected 143

What to do if you have a flat tire, your engine won't start, etc.

Technical Information 171

ID numbers, technical specifications, and other technical facts.

Consumer Information 193

Information on warranties, emission controls, how to get Honda service manuals, and...

“Reporting Safety Defects” 202

Table of Contents 204


Sequential listing of topics in this owner's manual.

Index 208



Quick Reference


Handy facts about fuel, engine oil, tire sizes, and air pressures.

 Contents



03/03/07 13:00:32 31MEM600_009

  


 

Motorcycle Safety

This section presents some of the most important information and recommendations to help you ride your motorcycle safely. Please take a few moments to read these pages. This section also includes information about the location of safety labels on your motorcycle.

Important Safety Information	2
Accessories & Modifications	5
Safety Labels	7

 



Important Safety Information

 
Your motorcycle can provide many years of service and pleasure — if you take responsibility for your own safety and understand the challenges you can meet while riding.

There is much that you can do to protect yourself when you ride. You'll find many helpful recommendations throughout this manual. The following are a few that we consider most important.

Always Wear a Helmet

It's a proven fact: helmets significantly reduce the number and severity of head injuries. So always wear an approved motorcycle helmet and make sure your passenger does the same. We also recommend that you wear eye protection, sturdy boots, gloves, and other protective gear (page 26).

2 Motorcycle Safety





Important Safety Information

Take Time to Learn & Practice

Even if you have ridden other motorcycles, take time to become familiar with how this motorcycle works and handles. Practice in a safe area until you build your skills and get accustomed to the motorcycle's size and weight.

Because many accidents involve inexperienced or untrained riders, we urge all riders to take a certified course approved by the Motorcycle Safety Foundation (MSF). See page 28 .

 
Ride Defensively

The most frequent motorcycle collision happens when a car turns left in front of a motorcycle. Another common situation is a car moving suddenly into your lane.

Always pay attention to other vehicles around you, and do not assume that other drivers see you. Be prepared to stop quickly or make an evasive maneuver. For other riding tips, see the booklet, *You and Your Motorcycle: Riding Tips and Practice Guide*, which came with your new motorcycle (USA only).

Make Yourself Easy to See

Some drivers do not see motorcycles because they are not looking for them. To make yourself more visible, wear bright reflective clothing, position yourself so other drivers can see you, signal before turning or changing lanes, and use your horn when it will help others notice you.





Important Safety Information

Ride within Your Limits

Pushing limits is another major cause of motorcycle accidents. Never ride beyond your personal abilities or faster than conditions warrant. Remember that alcohol, drugs, fatigue, and inattention can significantly reduce your ability to make good judgments and ride safely.

 
Don't Drink and Ride

Alcohol and riding don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and ride, and don't let your friends drink and ride either.

Keep Your Honda in Safe Condition

It's important to keep your motorcycle properly maintained and in safe riding condition. To help avoid problems, inspect your motorcycle before every ride and perform all recommended maintenance. Never exceed load limits (page 33), and do not modify your motorcycle (page 6) or install accessories that would make your motorcycle unsafe (page 5).

4 Motorcycle Safety





Accessories & Modifications

Modifying your motorcycle or using non-Honda accessories can make your motorcycle unsafe. Before you consider making any modifications or adding an accessory, be sure to read the following information.

⚠ WARNING

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

 
Follow all instructions in this owner's manual regarding accessories and modifications.

Accessories

We strongly recommend that you use only genuine Honda accessories that have been specifically designed and tested for your motorcycle. Because Honda cannot test all other accessories, you must be personally responsible for proper selection, installation, and use of non-Honda accessories.

Check with your Honda dealer for assistance and always follow these guidelines:

- Make sure the accessory does not obscure any lights, reduce ground clearance and lean angle, limit suspension travel or steering travel, alter your riding position, or interfere with operating any controls.





Accessories & Modifications

 
- Do not install any fairing or windshield unless it was designed and tested by Honda for your motorcycle. Some fairings or windshields, even smaller ones, can cause unstable handling of your motorcycle. This is especially true if the fairing or windshield is poorly designed or improperly mounted.
- Do not add any electrical equipment that will exceed the motorcycle's electrical system capacity (page 179). A blown fuse can cause a loss of lights or engine power (page 163).
- Do not pull a trailer or sidecar with your motorcycle. This motorcycle was not designed for these attachments, and their use can seriously impair your motorcycle's handling.

 
Modifications

We strongly advise you not to remove any original equipment or modify your motorcycle in any way that would change its design or operation. Such changes could seriously impair your motorcycle's handling, stability, and braking, making it unsafe to ride.

Removing or modifying your lights, exhaust system, emission control system, or other equipment can also make your motorcycle illegal.

6 Motorcycle Safety






Safety Labels

Safety labels on your motorcycle either warn you of potential hazards that could cause serious injury or they provide important safety information. Read these labels carefully and don't remove them.


If a label comes off or becomes hard to read, contact your Honda dealer for a replacement.


For your protection, always wear your helmet while riding.
Read the owner's manual carefully.

⚠ WARNING
Improper loading can cause a crash and you may be seriously hurt or killed.
See "Load Limits and Guidelines" in your Owner's Manual for complete instructions.

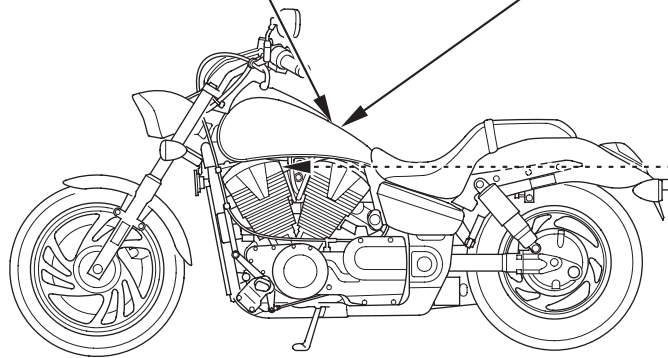

  1.1
⚠ DANGER
NEVER OPEN WHEN HOT.
Hot coolant will burn you.






Safety Labels

< For USA >


TIRE INFORMATION			
COLD TIRE PRESSURES :			
[UP TO MAXIMUM WEIGHT CAPACITY]	FRONT	225kPa	2.25kgf/cm ² 33psi.
	REAR	250kPa	2.50kgf/cm ² 36psi.
[UP TO 90kg (200lbs) LOAD]			
	FRONT	225kPa	2.25kgf/cm ² 33psi.
	REAR	225kPa	2.25kgf/cm ² 33psi.
MAXIMUM WEIGHT CAPACITY : 182 kg (402 lbs.)			
TIRE SIZE : FRONT 110/90-19M/C 62H REAR 170/80-15M/C 77H			
TIRE BRAND	FRONT	REAR	<i>Read Owner's Manual</i>
DUNLOP	F24G	K555J	
MIN. RECOMMEND TIRE CENTER TREAD DEPTH			
FRONT 1.5mm(0.06in.) REAR 2.0mm(0.08in.)			


< For Canada >

TIRE INFORMATION			
COLD TIRE PRESSURES :			
[UP TO MAXIMUM WEIGHT CAPACITY]	FRONT	225kPa	2.25kgf/cm ² 33psi.
	REAR	250kPa	2.50kgf/cm ² 36psi.
[UP TO 90kg (200lbs) LOAD]			
	FRONT	225kPa	2.25kgf/cm ² 33psi.
	REAR	225kPa	2.25kgf/cm ² 33psi.
MAXIMUM WEIGHT CAPACITY : 186 kg (410 lbs.)			
TIRE SIZE : FRONT 110/90-19M/C 62H REAR 170/80-15M/C 77H			
TIRE BRAND	FRONT	REAR	<i>Read Owner's Manual</i>
DUNLOP	F24G	K555J	
MIN. RECOMMEND TIRE CENTER TREAD DEPTH			
FRONT 1.5mm(0.06in.) REAR 2.0mm(0.08in.)			

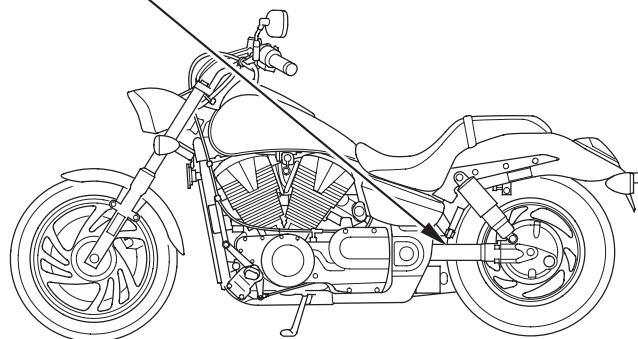

8 Motorcycle Safety

 

 



Instruments & Controls

This section shows the location of all gauges, indicators, and controls you would normally use before or while riding your motorcycle.


The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

  - Component Locations 10
- Indicators 13
- Controls & Features
 - Fuel Valve..... 17
 - Choke Knob..... 18
 - Ignition Switch 19
 - Start Button..... 20
 - Engine Stop Switch 20
 - Headlight Dimmer Switch 21
 - Turn Signal Switch..... 21
 - Horn Button 22
 - Odometer/Tripmeter Select and
Reset Button 22







Component Locations


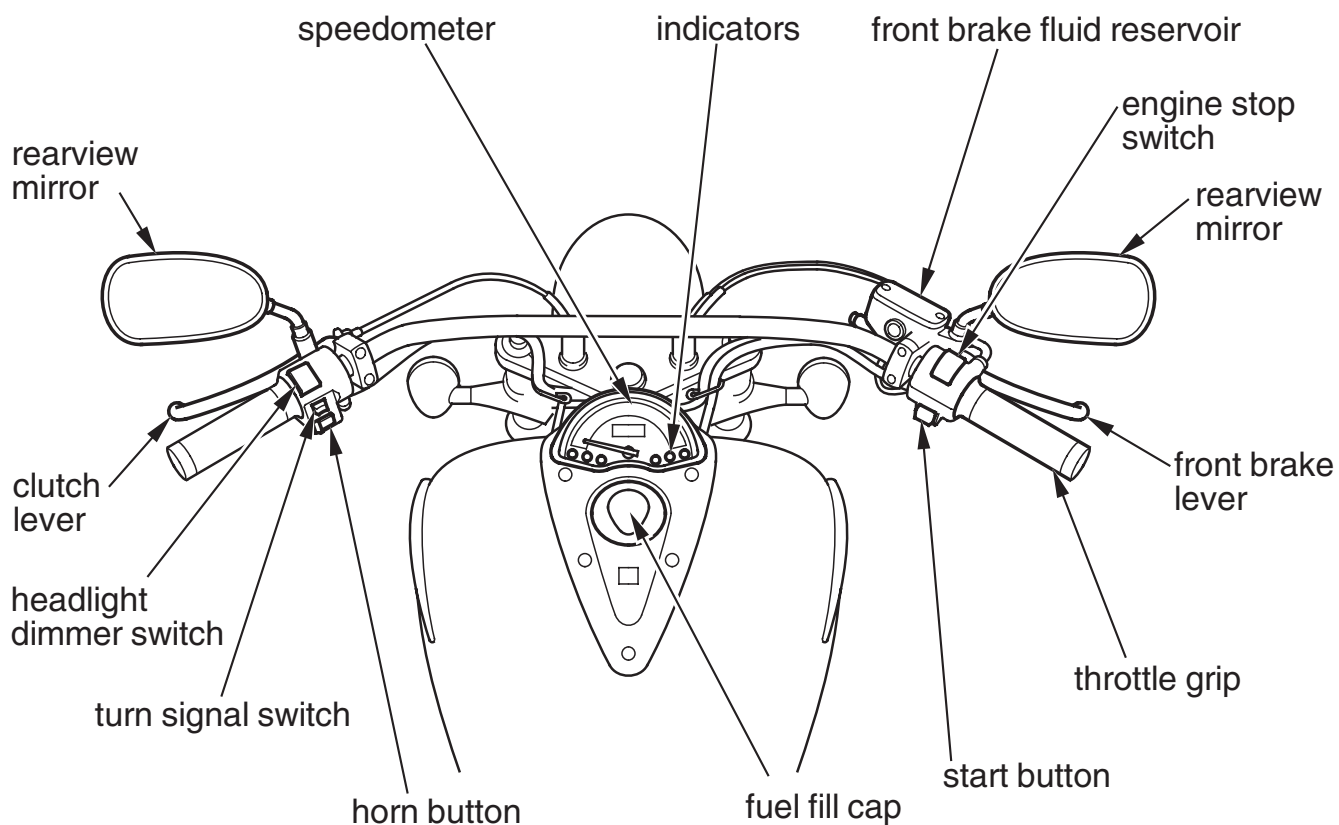



10 Instruments & Controls

 

 


Component Locations

 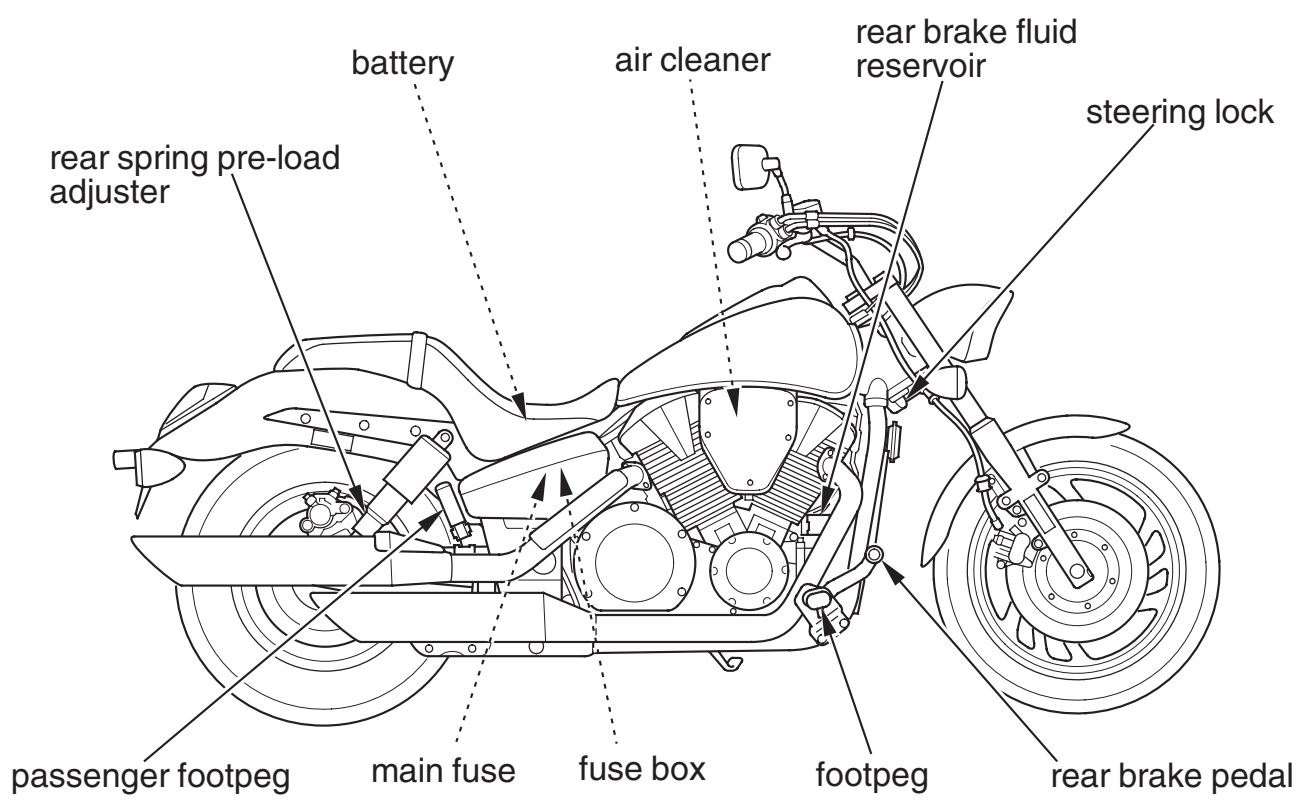


 

Component Locations

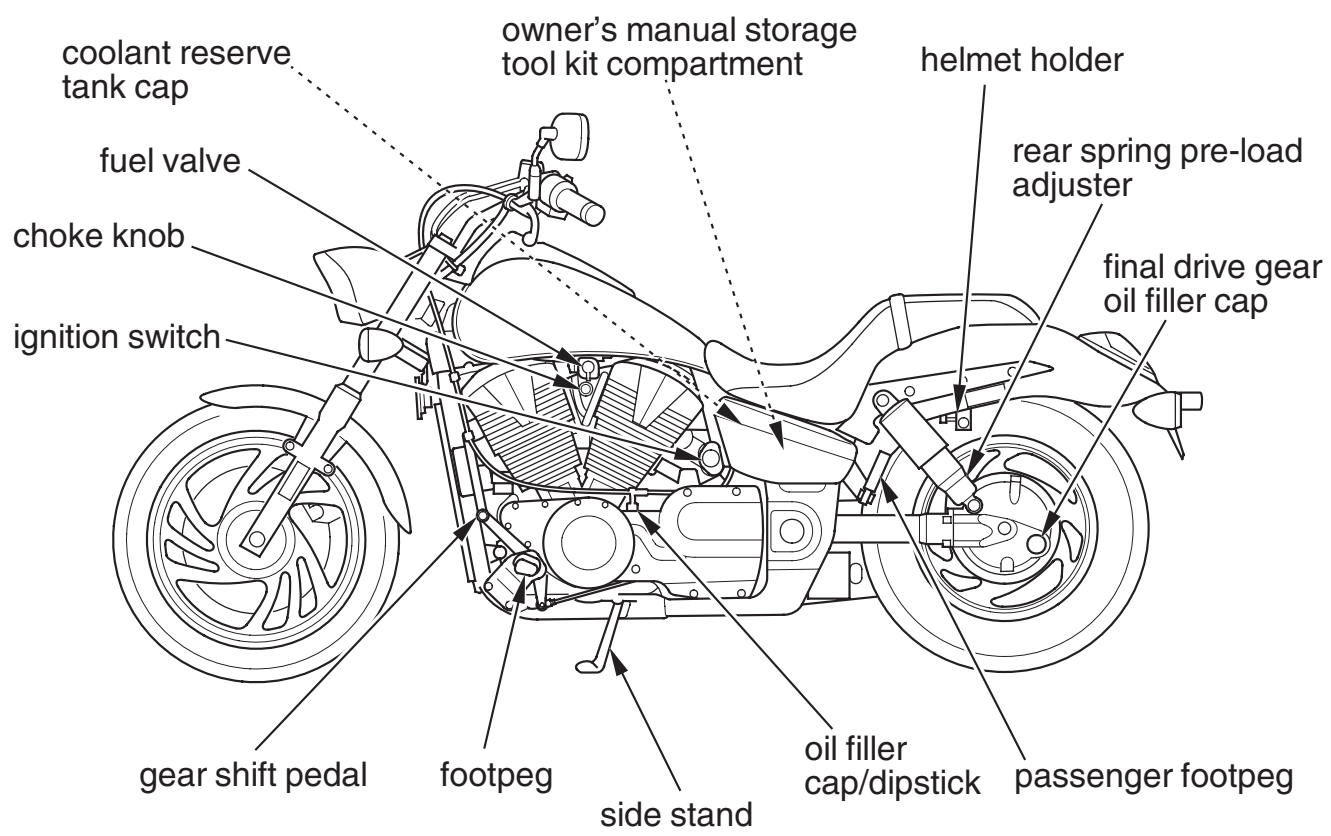


12 Instruments & Controls

 



Indicators


The indicators on your motorcycle keep you informed, alert you to possible problems, and make your riding safer and more enjoyable. Refer to the indicators frequently. Their functions are described on the following pages.

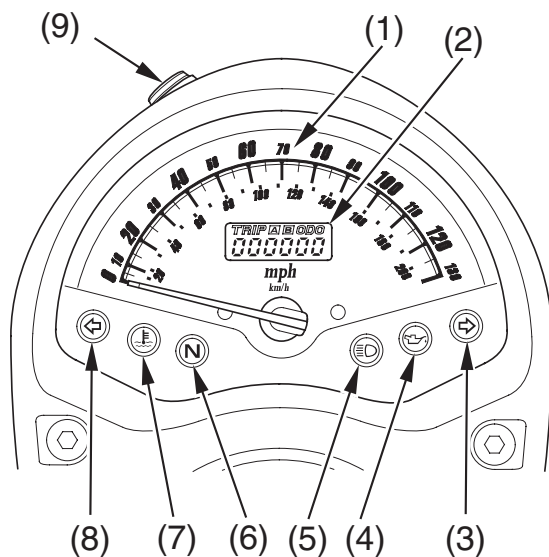

- (1) speedometer
- (2) odometer/tripmeter display
- (3) right turn signal indicator
- (4) low oil pressure indicator
- (5) high beam indicator
- (6) neutral indicator
- (7) coolant temperature indicator
- (8) left turn signal indicator
- (9) odometer/tripmeter select and reset button

USA: Odometer & tripmeter read in miles.

 Canada: Odometer & tripmeter read in kilometers.





Indicators

 
Lamp Check

 
The low oil pressure indicator comes on when you turn the ignition switch ON so you can check that it is working. The indicator remains on until after the engine is started. The low oil pressure indicator is identified in the table on the next page with the words: *Lamp Check*.

When applicable, the high beam and neutral indicators come on when you turn the ignition switch ON and remain on until you select the low beam or shift out of neutral.

If one of these indicators does not come on when it should, have your Honda dealer check for problems.


14 Instruments & Controls





Indicators

1	speedometer	Shows riding speed in miles (USA) or kilometers (Canada) per hour.	
2	odometer/tripmeter A & B display	odometer:	Shows the total miles (USA) or kilometers (Canada) ridden (page 22).
		tripmeter A & B:	Shows the number of miles (USA) or kilometers (Canada) ridden since you last reset the meter. The tripmeter has two sub modes, "A" and "B". To zero (0) the tripmeter, push and hold the select and reset button (page 22).
3	right turn signal indicator (amber)	Flashes when the right turn signal operates.	
4	low oil pressure indicator (red)	Lights when engine oil pressure is low enough to cause engine damage. If the indicator lights, pull safely to the side of the road. See page 162 for instructions and cautions. <i>Lamp Check</i> .	

 





Indicators

5	high beam indicator (blue)	Lights when the headlight is on high beam.
6	neutral indicator (green)	Lights when the transmission is in neutral.
7	coolant temperature indicator (red)	Lights when the coolant is over the specified temperature. If the indicator comes on, pull safely to the side of the road. See page 160 for instructions and cautions.
8	left turn signal indicator (amber)	Flashes when the left turn signal operates.
9	odometer/tripmeter select and reset button	Resets the tripmeter or selects the operation mode: tripmeter or odometer (page 22).

  16 Instruments & Controls





Controls & Features


Fuel Valve

LEFT SIDE

ON

OFF

RES

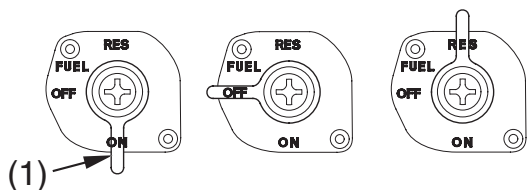

(1) fuel valve

The manual fuel valve is located on the left side under the fuel tank.

The three-way fuel valve is used to control the flow of fuel from the fuel tank to the carburetor.

 
ON — normal position for riding.

 
OFF — for parking, storing, or transportation.

RES — for extra fuel to get to a gas station for refueling.

With the fuel valve set to ON, fuel flows to the carburetors only when the engine is being started or is running. A diaphragm shuts off fuel flow when the engine is turned off.

For complete information about fueling your motorcycle, see page 77.






Controls & Features

Choke Knob



LEFT SIDE

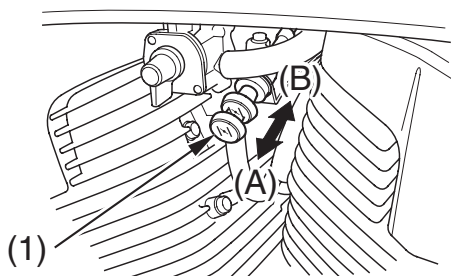

(1) choke knob (A) fully on
 (B) fully off

The choke knob may be used when starting the engine. See page 38 .

18 Instruments & Controls






Controls & Features

Ignition Switch

The ignition switch is used for starting and stopping the engine (page 37). The ignition key is also used to lock the steering for theft prevention (page 47). Insert the key and turn it to the right for the ON position.


Key Position	Function
ON	Electrical circuits on.
OFF	No electrical circuits function.

LEFT SIDE

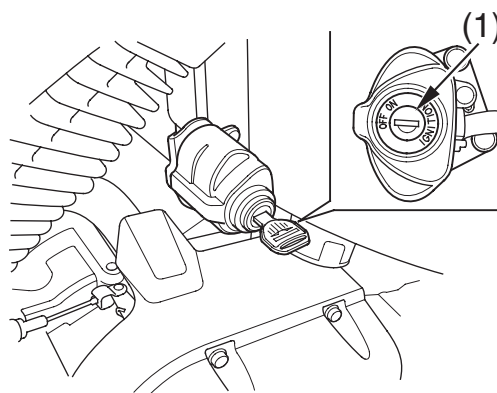

(1) ignition switch

 If a key ring is used, we recommend a fabric or leather type with just the key attached. The use of a metal key ring or the attachment of additional keys to any type of key ring may damage the finish of the side cover and engine cover while inserting the key or riding.





Controls & Features

Start Button



The start button (1) is used for starting the engine. Pushing the button in starts the engine. See *Starting Procedure*, page 38.


When the start button is pushed, the starter motor will crank the engine; the headlight will automatically go out, but the taillight will stay on.

The starter motor will not operate if the engine stop switch is in the OFF position when the start button is pushed.

Engine Stop Switch



RIGHT HANDLEBAR

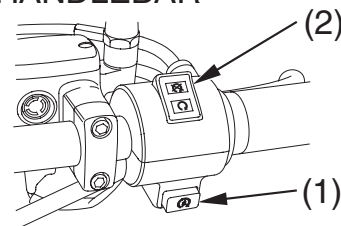


(1) start button

(2) engine stop switch



The engine stop switch (2) is used to stop the engine in an emergency. To operate, push the switch to the OFF position. The switch must be in the RUN position to start the engine, and it should normally remain in the RUN position even when the engine is OFF.

 20 Instruments & Controls





Controls & Features

If your motorcycle is stopped with the ignition switch ON and the engine stop switch OFF, the headlight and taillight will remain on, resulting in battery discharge.


Headlight Dimmer Switch



The headlight dimmer switch (1) is used to change between the high and low beams of the headlight. To operate, turn the switch to HI for high beam, LO for low beam.


Turn Signal Switch

The turn signal switch (2) is used to signal a turn or a lane change. To operate, move the switch all the way in the proper direction and release it. The appropriate turn signal lights will start blinking. To cancel the light, push the switch in.

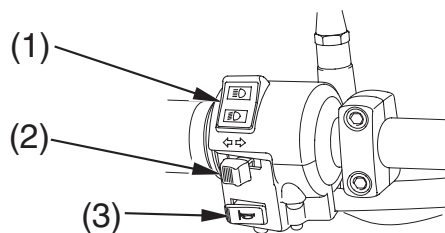LEFT HANDLEBAR



 - (1) headlight dimmer switch  HI
 (2) turn signal switch  LO
 (3) horn button





Controls & Features

Horn Button



The horn is used to alert other motorists. To operate, push the horn button (3).


Odometer/Tripmeter Select and Reset Button

The display (1) has two functions, odometer and tripmeter.

The tripmeter has two sub modes, A (4) and B (5).


To select a mode, push the button (2).


To reset the tripmeter, push and hold the button with the display in the tripmeter mode.

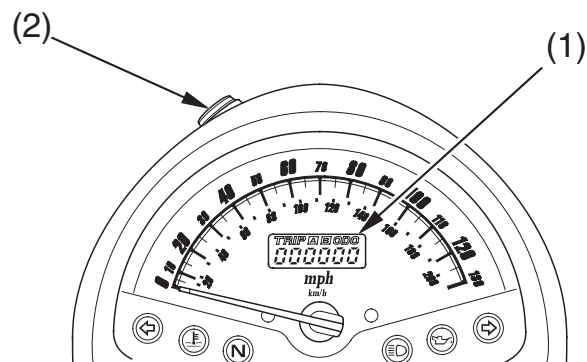


- (1) odometer/tripmeter display
- (2) odometer/tripmeter select and reset button

  22 Instruments & Controls







Controls & Features

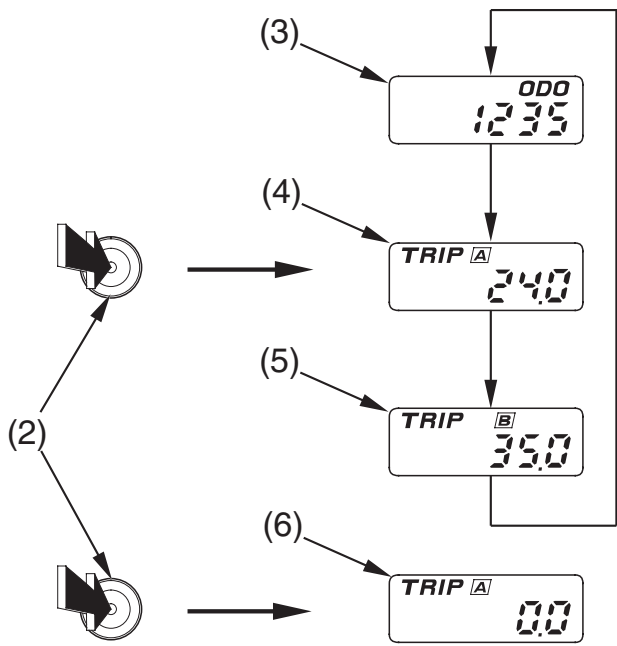

 
- (3) odometer
- (4) tripmeter A
- (5) tripmeter B
- (6) tripmeter reset




03/03/07 13:03:23 31MEM600_033

 

24 Instruments & Controls

 

 


Before Riding

Before each ride, you need to make sure you and your Honda are both ready to ride. To help get you prepared, this section discusses how to evaluate your riding readiness, what items you should check on your motorcycle, and adjustments to make for your comfort, convenience, or safety. This section also includes important information about loading.

For information about adjusting the suspension on your Honda, see page 109 .

 - Are You Ready to Ride ? 26
 - Protective Apparel..... 26
 - Rider Training 28
- Is Your Motorcycle Ready to Ride ? 29
 - Pre-ride Inspection 29
- Load Limits & Guidelines..... 32
 - Loading 32
 - Load Limits 33
 - Loading Guidelines 33





Are You Ready to Ride?

Before you ride your motorcycle for the first time, we urge you to:

- Read this owner's manual.
- Make sure you understand all the safety messages.
- Know how to operate all the controls.

Before each ride, be sure:

- You feel well and are in good physical and mental condition.
- You are wearing an approved motorcycle helmet (with chin strap tightened securely), eye protection, and other protective clothing.
- You don't have any alcohol or drugs in your system.

Make sure your passenger is ready to ride, too, and is wearing proper gear including a helmet.

If you must carry an extra helmet while riding, use a commercially-available elastic cord, strap, or net to secure the helmet to the seat.

 
Protective Apparel

For your safety, we strongly recommend that you always wear an approved motorcycle helmet, eye protection, boots, gloves, long pants, and a long-sleeved shirt or jacket whenever you ride.

Although complete protection is not possible, wearing proper gear can reduce the chance of injury when you ride.

Following are suggestions to help you choose the proper gear.

26 Before Riding





Are You Ready to Ride?

Helmets and Eye Protection

Your helmet is your most important piece of riding gear because it offers the best protection against head injuries. A helmet should fit your head comfortably and securely. A bright-colored helmet and reflective strips can make you more noticeable in traffic.

An open-face helmet offers some protection, but a full-face helmet offers more. Regardless of the style, look for a DOT (Department of Transportation) sticker in any helmet you buy (USA only). Always wear a face shield or goggles to protect your eyes and help your vision.

⚠ WARNING

Not wearing a helmet increases the chance of serious injury or death in a crash.

Be sure you and your passenger always wear a helmet, eye protection, and other protective apparel when you ride.

 
Additional Riding Gear

In addition to a helmet and eye protection, we also recommend:

- Sturdy boots with non-slip soles to help protect your feet and ankles.
- Leather gloves to help protect your hands.

(cont'd)

Before Riding 27





Are You Ready to Ride?

- A motorcycle riding suit or jacket for comfort as well as protection. Bright-colored and reflective clothing can help make you more noticeable in traffic. Avoid loose clothes that could get caught on any part of your motorcycle.

 
Rider Training

Developing your riding skills is an on-going process. Even if you have ridden other motorcycles, take time to become familiar with how this motorcycle works and handles. Practice riding the motorcycle in a safe area to build your skills. Do not ride in traffic until you get accustomed to the motorcycle's controls, and feel comfortable with its size and weight.

We urge all riders to take a certified course approved by the Motorcycle Safety Foundation (MSF). New riders should start with the basic course, and even experienced riders will find the advanced course beneficial. For information about the MSF training course nearest you, call the national toll-free number: (800) 446-9227.

Other riding tips can be found in the *Riding Tips* booklet that came with your motorcycle (USA only).

28 Before Riding





Is Your Motorcycle Ready to Ride?

Before each ride, it's important to inspect your motorcycle and make sure any problem you find is corrected. A pre-ride inspection is a must, not only for safety, but because having a breakdown, or even a flat tire, can be a major inconvenience.

⚠ WARNING

Improperly maintaining this motorcycle or failing to correct a problem before riding can cause a crash in which you can be seriously hurt or killed.

Always perform a pre-ride inspection before every ride and correct any problems.

 
Pre-ride Inspection

Check the following items before you get on the motorcycle:

Tires Look at the tires. If a tire appears low, use an air pressure gauge to check its pressure. Also look for signs of damage or excessive wear (page 118).

(cont'd)

Before Riding 29





Is Your Motorcycle Ready to Ride?

Leaks, Loose Parts Walk around your motorcycle and look for anything that appears unusual, such as a leak or loose cable.

 
Lights Make sure the headlight, brake light, taillight, and turn signals are working properly.

 
If you are carrying a passenger or cargo, also check the following:

Load Limits Make sure you do not exceed the load limits (page 33).

Cargo Check that all cargo is secure.

Adjustments Adjust the rear suspension (page 109) according to your load.






Is Your Motorcycle Ready to Ride?

Check these items after you get on the motorcycle:

- Throttle* Rotate the throttle to check it moves smoothly without binding.
- Brakes* Pull the brake lever and press on the brake pedal to check that they operate normally.
- Indicators* Turn the ignition on and check for normal operation of the indicators (page 13).

If you haven't ridden the motorcycle in over a week, you should also check other items, such as the oil level and other fluids. See *Periodic Maintenance* (page 58). Periodic maintenance should also be done at least once a month, no matter how often you ride.

 Remember, be sure to take care of any problem you find, or have your Honda dealer correct it before you ride.





Load Limits & Guidelines

Your motorcycle has been designed to carry you and one passenger. When you carry a passenger, you may feel some difference during acceleration and braking. But so long as you keep your motorcycle well-maintained, with good tires and brakes, you can safely carry loads within the given limits and guidelines.

However, exceeding the weight limit or carrying an unbalanced load can seriously impair your motorcycle's handling, braking, and stability. Non-Honda accessories, improper modifications, and poor maintenance can also reduce your safety margin.

 
Loading

 
How much weight you put on your motorcycle, and how you load it, are important to your safety. Anytime you ride with a passenger or cargo, you should be aware of the following information.

WARNING

Overloading or improper loading can cause a crash and you can be seriously hurt or killed.

Follow all load limits and other loading guidelines in this manual.





Load Limits & Guidelines

Load Limits

Following are the load limits for your motorcycle:

maximum weight capacity:

402 lbs (182 kg)

410 lbs (186 kg) (Canada only)

includes the weight of the rider, passenger, all cargo, and all accessories.

maximum cargo weight:

40 lbs (18 kg)

 
The weight of added accessories will reduce the maximum cargo weight you can carry.

Loading Guidelines

Your motorcycle is primarily intended for transporting you and a passenger. You may wish to secure a jacket or other small items to the seat when you are not riding with a passenger.

If you wish to carry more cargo, check with your Honda dealer for advice, and be sure to read the information regarding accessories on page 5 .

Improperly loading your motorcycle can affect its stability and handling. Even if your motorcycle is properly loaded, you should ride at reduced speeds and never exceed 80 mph (130 km/h) when carrying cargo.






Load Limits & Guidelines

Follow these guidelines whenever you carry a passenger or cargo:

- Check that both tires are properly inflated, and that pressure in the rear tire is increased to suit the load (page 116).
- If you change your normal load, you may need to adjust the rear suspension (page 109).
- To prevent loose items from creating a hazard, make sure that all cargo is tied down securely before you ride.
- Place cargo weight as low and close to the center of your motorcycle as possible.
- Balance cargo weight evenly on both sides.

- Do not attach large or heavy items (such as a sleeping bag or tent) to the handlebar, forks, or fender.

 34 Before Riding






Basic Operation & Riding


This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle, clutch, and brakes. It also provides important information on riding with a passenger or cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 182).

For information about carburetor adjustment for riding at high altitude, see page 183.

Safe Riding Precautions	36
Starting & Stopping the Engine	37
Preparation.....	37
Starting Procedure	38
Flooded Engine.....	40
How to Stop the Engine	41
Shifting Gears.....	42
Braking	44
Parking	46
Riding with a Passenger or Cargo.....	50

 

 


Safe Riding Precautions

Before riding your motorcycle for the first time, please review the *Motorcycle Safety* section beginning on page 1, and the *Before Riding* section beginning on page 25 .

Even if you have ridden other motorcycles, take time to become familiar with how this motorcycle works and handles. Practice in a safe area until you build your skills and get accustomed to the motorcycle's size and weight.

Make sure flammable materials such as dry grass or leaves do not come in contact with the exhaust system when riding, idling, or parking your motorcycle.

 36 Basic Operation & Riding





Starting & Stopping the Engine

Always follow the proper starting procedure described below.

For your safety, avoid starting or operating the engine in an enclosed area such as a garage. Your motorcycle's exhaust contains poisonous carbon monoxide gas which can collect rapidly in an enclosed area and cause illness or death.

Your motorcycle can be started with the transmission in gear by pulling in the clutch lever before operating the starter.

 
Your motorcycle is equipped with a side stand ignition cut-off system. If the side stand is down—the engine cannot be started unless the transmission is in neutral. If the side stand is up—the engine can be started in neutral, or in gear with the

clutch lever pulled in. After starting with the side stand down, the engine will stop if the transmission is put in gear before raising the side stand.

Preparation

Before starting, insert the key, turn the ignition switch ON, and confirm the following:

- The transmission is in NEUTRAL (neutral indicator light ON).
- The engine stop switch is set to RUN.
- The low oil pressure indicator is ON.
- The fuel valve is ON.





Starting & Stopping the Engine


The low oil pressure indicator should go off a few seconds after the engine starts. If the indicator stays on, stop the engine immediately and check the engine oil level.

Starting Procedure

To restart a warm engine, follow the procedure for *High Air Temperature*.

Normal Air Temperature
10° – 35°C (50° – 95°F)


LEFT SIDE

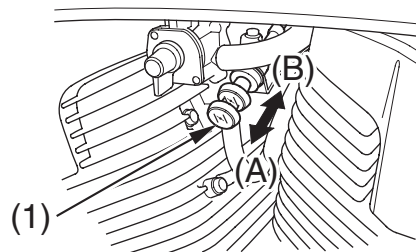


(1) choke knob

(A) fully ON

  (B) fully OFF





Starting & Stopping the Engine

1. If the engine is cold, pull the choke knob out all the way to fully ON (A).
2. Leaving the throttle closed, start the engine.
3. Immediately after the engine starts, operate the choke knob to keep fast idle.
4. About a half minute after the engine starts, push the choke knob (1) in all the way to fully OFF (B).
5. If idling is unstable, open the throttle slightly.

High Air Temperature

35°C (95°F) or above

 
1. Do not use the choke.
2. With the throttle 1/8 – 1/4 open, press the start button.
3. Start the engine.

Low Air Temperature

10°C (50°F) or below

1. Follow steps 1-2 under *Normal Air Temperature*.
2. When engine rpm begins to pick up, operate the choke knob to keep fast idle.

(cont'd)





Starting & Stopping the Engine

3. Continue warming up the engine until it runs smoothly and responds to the throttle when the choke knob is at fully OFF (B).

NOTICE

 
Extended use of the choke may impair piston and cylinder wall lubrication and damage the engine.

 
Snapping the throttle or fast idling for more than about 5 minutes at normal air temperature may cause exhaust pipe discoloration.

Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine:

1. Leave the engine stop switch set to RUN.
2. Push the choke knob in all the way to fully OFF.
3. Open the throttle fully.
4. Press the start button for 5 seconds.





Starting & Stopping the Engine

5. If the engine starts, quickly close the throttle, then open it slightly if idling is unstable.

If the engine does not start, wait 10 seconds, then follow the *High Air Temperature* procedure (page 39).

If the engine still won't start, refer to *If Your Engine Quits or Won't Start*, page 145.

How to Stop the Engine

Normal Engine Stop

 
To stop the engine, shift into neutral and turn the ignition switch OFF.

The engine stop switch should normally remain in the RUN position even when the engine is OFF.

If your motorcycle is stopped with the engine stop switch OFF and the ignition switch ON, the headlight and taillight will remain on, resulting in battery discharge.


Emergency Engine Stop

To stop the engine in an emergency, use the engine stop switch. To operate, press the switch to the OFF position.





Shifting Gears

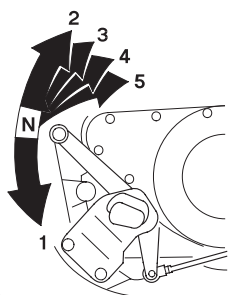


shifting pattern

Your motorcycle has five forward gears in a one-down, four-up shift pattern which is coordinated with a cable-operated clutch system.

Learning when to shift gears comes with experience. Keep the following tips in mind:

- As a general rule, shift while moving in a straight line.
- Close the throttle and pull the clutch lever in completely before shifting. Improper shifting may damage the engine, transmission, and drive train.
- Learn to recognize the engagement point as you release the clutch lever. It is at this point the transmission of power to the rear wheel resumes.
- Upshift to a higher gear or reduce throttle before engine rpm (speed) gets too high. Learn the relationship between engine sound and the normal shifting points.
- Downshift to a lower gear before you feel the engine laboring (lugging) at low rpm.

 42 Basic Operation & Riding





Shifting Gears

- Avoid downshifting to help slow your motorcycle when engine rpm is high. Downshifting when engine speed is near its allowable maximum may over-rev the engine and cause possible damage.
- To prevent transmission damage, do not coast or tow the motorcycle for long distances with the engine off.

Recommended Shift Points

Ride in the highest gear that lets the engine run and accelerate smoothly. This will give you good fuel economy and effective emissions control. When changing gears under normal conditions, use these recommended shift points:


Shifting Up:

From 1st to 2nd:	12 mph (20 km/h)
From 2nd to 3rd:	19 mph (30 km/h)
From 3rd to 4th:	25 mph (40 km/h)
From 4th to 5th:	31 mph (50 km/h)

Shifting Down:

From 5th to 4th:	22 mph (35 km/h)
From 4th to 3rd:	16 mph (25 km/h)

 Pull the clutch lever in when speed drops below 12 mph (20 km/h), when engine roughness is evident, or when engine stalling is imminent; and shift down to 1st gear for acceleration.





Braking

Your motorcycle is equipped with disc braking systems which are hydraulically activated. Depressing the brake pedal applies the rear disc brake. Operating the brake lever applies the front disc brake.

As a general rule, the front braking system provides about 70 percent of total stopping power.

For full braking effectiveness, use both the pedal and lever simultaneously. Using both braking systems will stop your motorcycle faster with greater stability.

 
To slow or stop, apply the brake lever and brake pedal smoothly, while downshifting to match your speed.

 
Gradually increase braking as you feel the brakes slowing your speed. The increase in engine compression from downshifting will help slow your motorcycle.

To prevent stalling the engine, pull the clutch lever in before coming to a complete stop. For support, put your left foot down first, then your right foot when you are through using the brake pedal.

Applying the brakes too hard may cause the wheels to lock and slide, reducing control of your motorcycle. If this happens, release the brake controls, steer straight ahead until you regain control, then reapply the brakes more gently.

44 Basic Operation & Riding





Braking

When possible, reduce your speed or complete braking before entering a turn. Avoid braking or closing the throttle quickly while turning. Either action may cause one or both wheels to slip and reduce your control of your motorcycle.

 
Your ability to brake in a turn and to brake hard in an emergency situation are important riding skills. We suggest attending a Motorcycle Safety Foundation experienced rider training course (page 28) to retain these skills.

When riding in wet or rainy conditions, or on loose surfaces, the ability to maneuver and stop will be reduced. All of your actions should be smooth under these conditions. Rapid acceleration, braking or turning may cause loss of control. For

your safety, exercise extreme caution when braking, accelerating or turning.

When descending a long, steep grade, use engine compression braking by downshifting, with intermittent use of both brakes. Continuous brake application can overheat the brakes and reduce their effectiveness.

Riding with your foot resting on the brake pedal or your hand on the brake lever may actuate the brakelight, giving a false indication to other drivers. It may also overheat the brakes, reducing effectiveness.







Parking

1. Look for a level parking area. If you can't park on a paved surface, make sure the ground surface is firm, especially under the side stand. If you must park on a hill, leave the transmission in gear and position the rear tire against the curb at a 45 degree angle.

Make sure flammable materials such as dry grass or leaves do not come in contact with the exhaust system when parking your motorcycle. Refer to *Catalytic Converter*, page 189.

  2. Use the side stand to support the motorcycle while parked.
 - To lower the side stand, use your foot to guide it down. Remember that lowering the side stand with the transmission in gear will stop the engine, even if the clutch lever is pulled in. That is a function of the side stand ignition cut-off system.
 - Check that the side stand is down all the way so that the side stand ignition cut-off system (page 37) is activated.
 - If you have to park on a soft surface, insert something solid under the side stand for support.






Parking

- Use the steering lock (1), which locks the handlebar in place. Turn the handlebar all the way to the left. Insert the ignition key (2) in the lock and turn it 180 degrees clockwise. Remove the key.


RIGHT FRONT

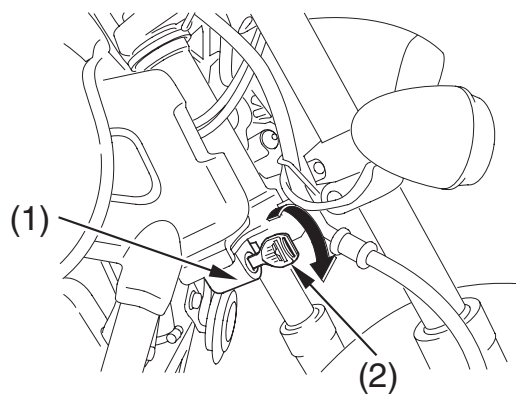

(1) steering lock

(2) ignition key

 (cont'd)






Parking

4. Use the helmet holder (3) to secure your helmet with your motorcycle:
 - Insert the ignition key (2) and turn it counterclockwise to unlock the holder.
 - Hang your helmet on the holder pin (4).
 - Push in on the holder pin. Remove the key.

LEFT REAR

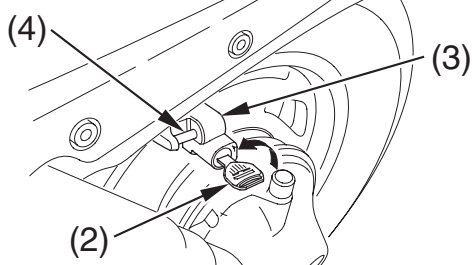

(2) ignition key (4) holder pin
(3) helmet holder

 
⚠ WARNING

 
Riding with a helmet attached to the holder can interfere with the rear wheel or suspension and could cause a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.

5. Turn the fuel valve OFF.

48 Basic Operation & Riding






Parking

Theft-Prevention Tips

 - Park your motorcycle in a locked garage whenever possible. If a garage isn't available, park in a concealed area or in a well-lit area with enough pedestrian traffic to discourage a thief.
 - Always take the ignition key with you.
 - Always use the steering lock (page 47), even if you're parking for just a minute or two. A thief can easily push an unlocked motorcycle to a waiting truck.
 - In addition to the steering lock, use a good quality anti-theft device made specifically to lock a motorcycle to a secure object.
- If you decide to use an anti-theft device, select one of good quality and be sure to follow the manufacturer's instructions.
 - Keep your owner's manual, current registration, and insurance information with your motorcycle. This will make it easier for the authorities to find you if your motorcycle is stolen and recovered.





Riding with a Passenger or Cargo

 
Your motorcycle is designed to carry you and one passenger. Whenever you add a passenger or cargo, you must be careful not to exceed the total load limits for this vehicle (*Load Limits*, page 33). Make sure your cargo is properly secured (*Loading Guidelines*, page 33).

 
Also consider adjusting the suspension (page 109) for the extra load.

Be aware that carrying a passenger or heavy cargo can affect acceleration, braking, and handling.

Before riding with a passenger, make sure your passenger is wearing the proper protective apparel (page 26).

Tell your passenger to hold the seat strap or your waist, lean with you in the turns, and keep their feet on the passenger footpegs at all times, even when the motorcycle is stopped at a traffic light.





Servicing Your Honda

To help keep your motorcycle in good shape, this section includes a Maintenance Schedule for required service, a list of periodic checks you should perform at least once a month, and step-by-step instructions for specific maintenance tasks. You'll also find important safety precautions, information on fuels and oils, and tips for keeping your Honda looking great.

For information about the exhaust emission and noise emission requirements of the U.S. Environmental Protection Agency (EPA) and the California Air Resources Board (CARB), see page 184 .


For information about replacing fuses, see page 163 .


USA only
Maintenance, replacement or repair of the emission control devices and systems may be performed by any motorcycle repair establishment or individual using parts that are "certified" to EPA standards.

Before You Service Your Honda

The Importance of Maintenance	54
Maintenance Safety	55
Important Safety Precautions	56
Periodic Maintenance	58
Maintenance Schedule	60
Maintenance Record	65

  (cont'd)





Servicing Your Honda

Service Preparations

Component Locations	67
Storage Compartment.....	70
Tool Kit.....	71
Owner's Manual Storage.....	72
Seat Removal.....	73
Side Cover Removal.....	74

Service Procedures

Fluids & Filters

Fuel	76
Engine Oil & Filter.....	79
Coolant.....	88
Air Cleaner	92
Crankcase Breather.....	94
Final Drive Oil.....	95

Engine

Throttle	97
Clutch System.....	99
Engine Idle Speed.....	103
Spark Plugs	105


Chassis

Suspension	109
Brakes	112
Tires	116
Side Stand	123

Electrical

Battery.....	124
--------------	-----

Appearance Care	129
-----------------------	-----

 




Servicing Your Honda

The following table summarizes the three types of inspections and servicing recommendations for your motorcycle. Both the pre-ride inspection and the scheduled maintenance at the recommended intervals are necessary to assure safe and dependable performance. The periodic checks provide additional confidence in your motorcycle's performance.

Type of Inspection/Service	Refer to page:	When Performed	Who Performs
Pre-ride Inspection	29	before every ride	you
Periodic Maintenance	58	monthly*	you
Maintenance Schedule	60	interval on schedule	your Honda dealer**

* more often if you ride frequently or long distances; or anytime you clean your motorcycle

 ** unless you have the proper tools and service data and are mechanically qualified





The Importance of Maintenance

Keeping your motorcycle well-maintained is absolutely essential to your safety. It's also a good way to protect your investment, get maximum performance, avoid breakdowns, and have more fun. A properly maintained motorcycle will also help to reduce air pollution.

 
Remember, proper maintenance is the owner's responsibility. Be sure to inspect your motorcycle before each ride, perform the periodic checks, and follow the Maintenance Schedule in this section.

 
WARNING

Improperly maintaining this motorcycle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

If your motorcycle overturns or is involved in a crash, be sure your Honda dealer inspects all major parts, even if you are able to make some repairs.





Maintenance Safety

This section includes instructions on how to perform some important maintenance tasks. If you have basic mechanical skills, you can perform many of these tasks with the tools provided with your motorcycle.

 
Other tasks that are more difficult and require special tools are best performed by professionals. Wheel removal should normally be handled only by a Honda technician or other qualified mechanic. Instructions are included in this manual only to assist in emergency service.

Some of the most important safety precautions follow. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

WARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this owner's manual.





Maintenance Safety

Important Safety Precautions

 
- Make sure the engine is off before you begin any maintenance or repairs. This will help eliminate several potential hazards:

 
Carbon monoxide poisoning from engine exhaust. Be sure there is adequate ventilation whenever you operate the engine.

Burns from hot motorcycle parts. Let the engine and exhaust system cool before touching.

Injury from moving parts. Do not run the engine unless instructed to do so.


- Read the instructions before you begin, and make sure you have the tools and skills required.
- To help prevent the motorcycle from falling over, park it on a firm, level surface, using the side stand or a maintenance stand to provide support.
- To reduce the possibility of a fire or explosion, be careful when working around gasoline. Use only non-flammable solvent, not gasoline, to clean parts. Keep cigarettes, sparks, and flames away from all fuel-related parts.





Maintenance Safety

 Remember that your Honda dealer knows your motorcycle best and is fully equipped to maintain and repair it. To ensure the best quality and reliability, use only new genuine Honda parts or their equivalents for repair and replacement. If you have the tools and skills required for additional maintenance jobs, you can purchase an official Honda Service Manual (page 194).






Periodic Maintenance

In addition to the regularly scheduled maintenance (page 60) and daily pre-ride inspection (page 29), consider performing the periodic checks on the following page at least once a month, even if you haven't ridden your motorcycle, or as often as once a week if you ride frequently or for long distances. It's a good idea to perform this maintenance any time you clean your motorcycle.

Check the odometer reading and perform any scheduled maintenance checks that are needed (page 60). Remember, more frequent checks may be needed for riding in severe conditions.

 
58 Servicing Your Honda





Periodic Maintenance

Tires	<p>Check the air pressure with a gauge and add air if needed (page 116). Examine the tread for wear (page 118). Look closely for nails, embedded objects, cuts, and other types of damage (page 118). Roll your motorcycle so you can inspect the entire surface.</p> <p>Check the condition of the rims.</p>
Fluids	<p>Check the levels of the engine oil (page 83), coolant (page 90), brake fluid (page 113), and final drive oil (page 95). Add the correct fluid as necessary, and investigate the cause of any low fluid level.</p>
Lights	<p>Make sure the headlight, brake light, taillight, and turn signals are working properly.</p>
Freeplay	<p>Check the freeplay of the clutch lever (page 99) and throttle grip (page 97).</p>
Fuses	<p>Make sure you have a full supply of spare fuses.</p>
Nuts & Bolts	<p>Check the major fasteners and tighten as needed.</p>

 




Maintenance Schedule

The required Maintenance Schedule that follows specifies how often you should have your motorcycle serviced, and what things need attention. It is essential to have your motorcycle serviced as scheduled to maintain safe, dependable performance and proper emission control.

The service intervals in this Maintenance Schedule are based on average riding conditions. Some items will need more frequent service if you ride in unusually wet or dusty areas or at full throttle. Consult your Honda dealer for recommendations applicable to your individual needs and use.

Some items in the Maintenance Schedule can be performed with basic mechanical skills and hand tools. Procedures for these items are provided in this manual. Other items involve more extensive procedures and may require special training, tools, and equipment. We recommend that you have your Honda dealer perform these tasks unless you have advanced mechanical skills and the required tools and equipment. Procedures for such items in this schedule are provided in an official Honda Service Manual available for purchase (page 194).

 60 Servicing Your Honda






Maintenance Schedule

If you do not feel capable of performing a given task or need assistance, remember that your Honda dealer knows your motorcycle best and is fully equipped to maintain and repair it. If you decide to do your own maintenance, use only genuine Honda parts or their equivalents for repair or replacement to ensure the best quality and reliability.

Perform the pre-ride inspection (page 29) and owner maintenance (page 60) at each scheduled maintenance period.

Each item on the maintenance schedule requires some mechanical knowledge. Certain items (particularly those marked * and **) may require more technical information and tools. Consult your Honda dealer.

 - * Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 194).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.





Maintenance Schedule

Summary of Maintenance Schedule Notes & Procedures:

NOTES:

1. At higher odometer readings, repeat at the frequency interval established here.
2. Service more frequently if the motorcycle is ridden in unusually wet or dusty areas.
3. Service more frequently if the motorcycle is ridden often at full throttle or in the rain.
4. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill. Refer to the official Honda service manual.
5. California type only.

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

 
C: clean

 
A: adjust

L: lubricate

R: replace

62 Servicing Your Honda






Maintenance Schedule

FREQUENCY			ODOMETER READING (Note 1)								Refer to page
			× 1,000 mi	0.6	4	8	12	16	20	24	
ITEM	NOTE	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
EMISSION RELATED ITEMS	* FUEL LINE				I		I		I	—	
	* THROTTLE OPERATION				I		I		I	—	
	* CARBURETOR CHOKE				I		I		I	—	
	AIR CLEANER	2				R			R	92	
	CRANKCASE BREATHER	3			C	C	C	C	C	94	
	SPARK PLUGS				I	R	I	R	I	105	
	* VALVE CLEARANCE			I		I		I		I	—
	ENGINE OIL			R		R		R		R	79
	ENGINE OIL FILTER			R		R		R		R	84
	* ENGINE IDLE SPEED			I	I	I	I	I	I	I	103
	RADIATOR COOLANT	4				I		I		R	88
	* COOLING SYSTEM					I		I		I	—
	* SECONDARY AIR SUPPLY SYSTEM					I		I		I	—
	* EVAPORATIVE EMISSION CONTROL SYSTEM	5					I			I	—

 * Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 194).






Maintenance Schedule


			FREQUENCY		ODOMETER READING (Note 1)							Refer to page
					× 1,000 mi	0.6	4	8	12	16	20	
ITEM		NOTE	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
NON-EMISSION RELATED ITEMS		FINAL DRIVE OIL								R	95	
		BRAKE FLUID	4					R			R	112
		BRAKE PAD WEAR										115
		BRAKE SYSTEM										112
	*	BRAKE LIGHT SWITCH										—
	*	HEADLIGHT AIM										—
		CLUTCH SYSTEM										99
		SIDE STAND										123
	*	SUSPENSION										—
	*	NUTS, BOLTS, FASTENERS										—
	**	WHEELS/TIRES										—
	**	STEERING HEAD BEARINGS										—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 194).

**In the interest of safety, we recommend these items be serviced only by your Honda dealer.

  64 Servicing Your Honda







Maintenance Record

Keeping an accurate maintenance record will help ensure that your motorcycle is properly maintained. Retain detailed receipts to verify the maintenance was performed. If the motorcycle is sold, these receipts should be transferred with the motorcycle to the new owner. Make sure whoever performs the maintenance completes this record. All scheduled maintenance, including the 600 mile (1,000 km) initial maintenance, is considered a normal owner operating cost and will be charged for by your dealer. Use the space under Notes to record anything you want to remind yourself about or mention to your dealer.

Miles (km)	Odometer	Date	Performed By:	Notes
600 (1,000)				
4,000 (6,400)				
8,000 (12,000)				
12,000 (19,200)				
16,000 (25,600)				
20,000 (32,000)				

 


 


Maintenance Record



Miles (km)	Odometer	Date	Performed By:	Notes
24,000 (38,400)				
28,000 (44,800)				
32,000 (51,200)				
36,000 (57,600)				
40,000 (64,000)				
44,000 (70,400)				
48,000 (76,800)				
52,000 (83,200)				
56,000 (89,600)				
60,000 (96,000)				
64,000 (102,400)				
68,000 (108,800)				

  
66 Servicing Your Honda






Component Locations

 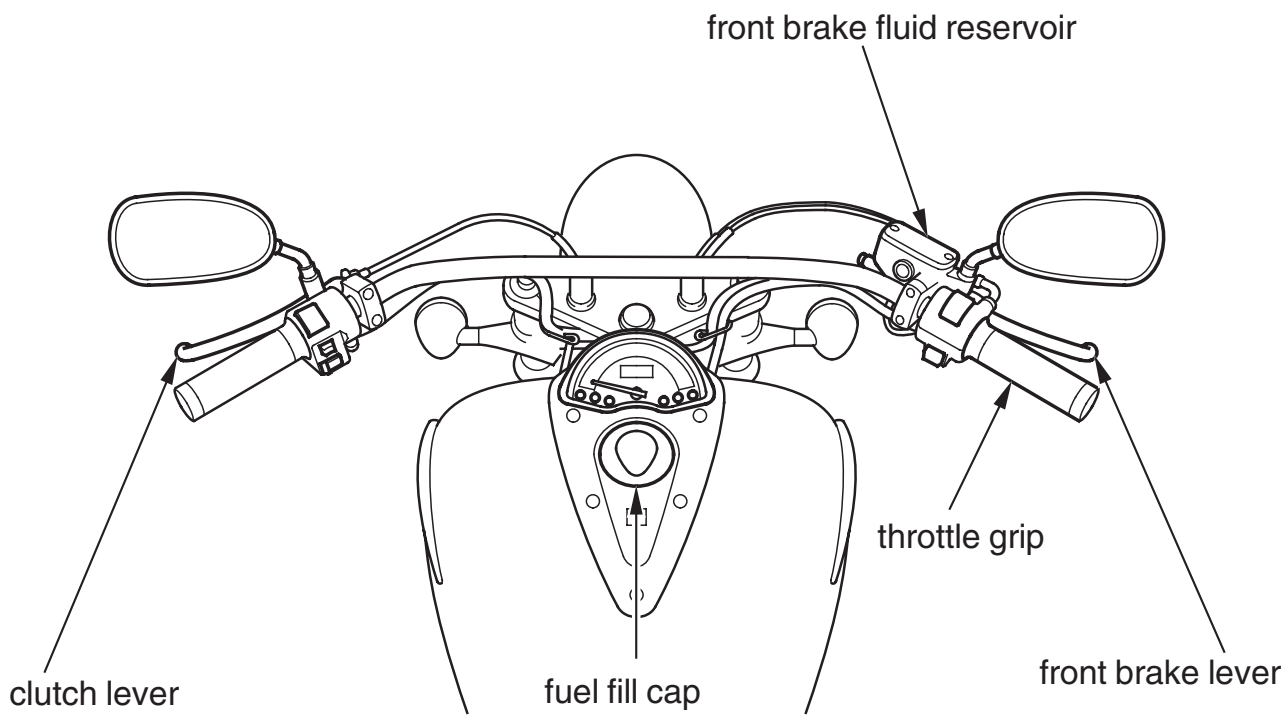


 


Component Locations


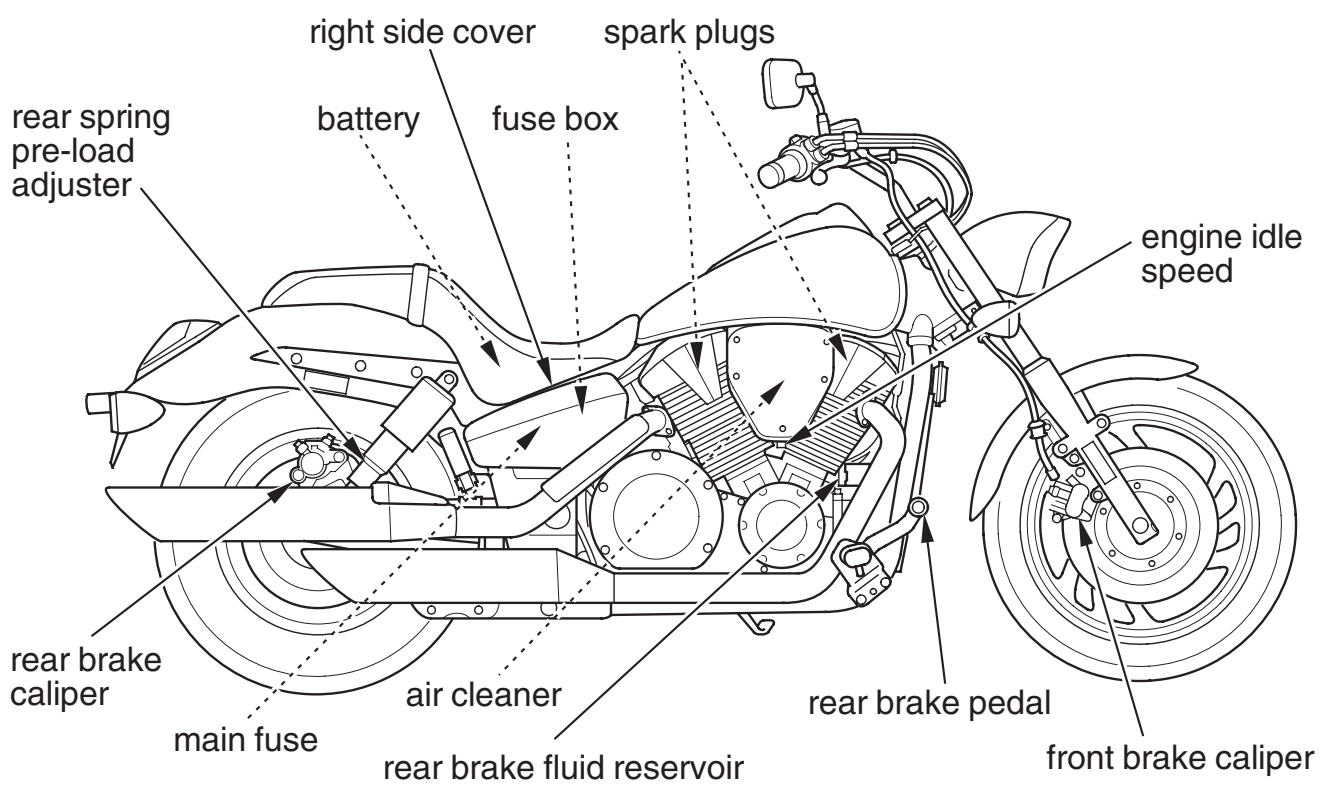


68 Servicing Your Honda

 

 


Component Locations

 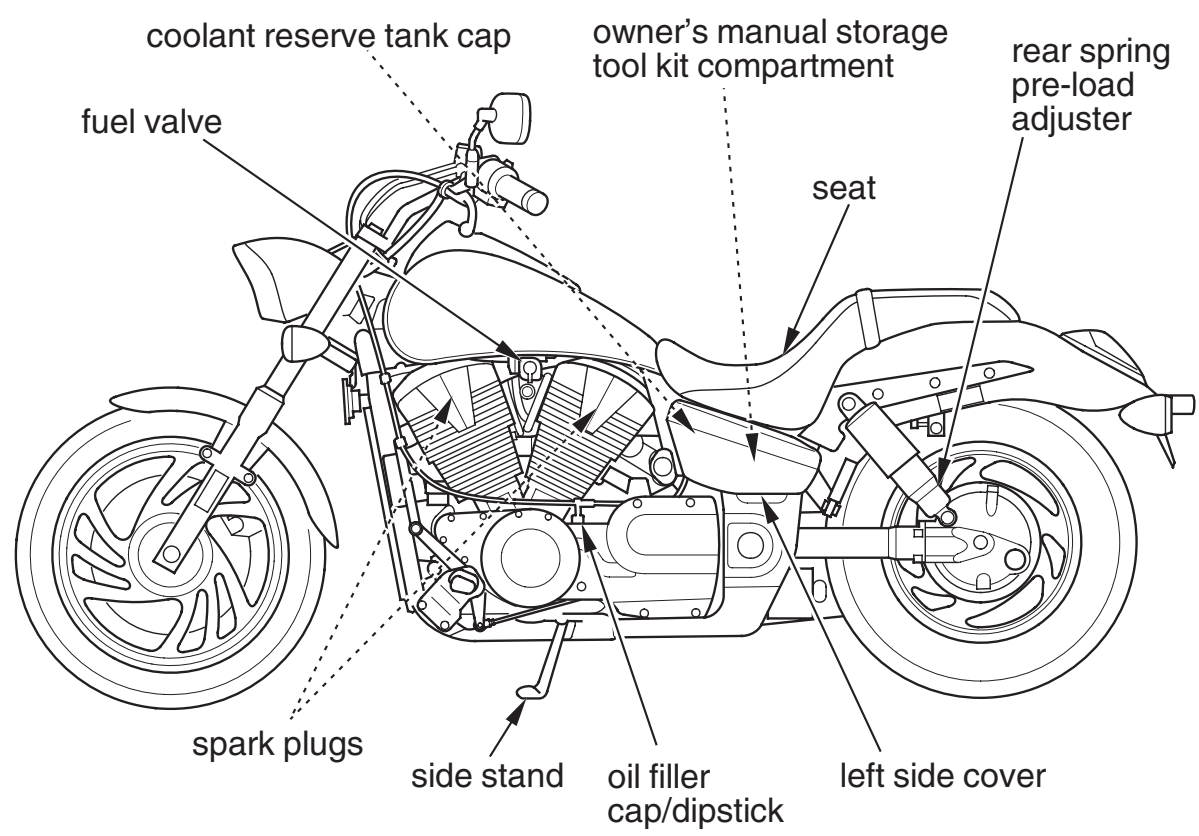



Storage Compartment

LEFT SIDE

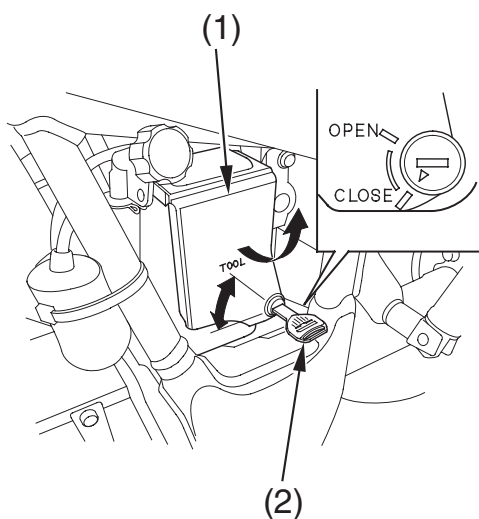


- (1) storage compartment
- (2) ignition key


The storage compartment (1) is located behind the left side cover (page 74).

The tool kit and owner's manual (and other documents) should be stored in the storage compartment.

To open the storage compartment (1), remove the left side cover (page 74). Insert the ignition key (2) and turn it clockwise. Open the storage compartment lid.

  
To close the storage compartment, close the compartment lid. Turn the ignition key counterclockwise and remove it. Install the left side cover (page 74).






Tool Kit

The tool kit (1) is stored in the storage compartment (2) (page 70) behind the left side cover (page 74). Some roadside repairs, minor adjustments, and parts replacement can be performed with the tools contained in the kit.

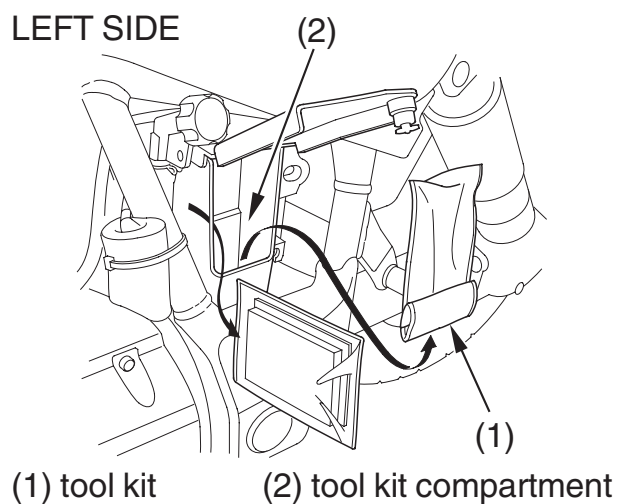

 - 10 × 12 mm open end wrench
- 14 × 17 mm open end wrench
- 8 mm open end wrench
- 5 mm hex wrench
- 6 mm hex wrench
- spark plug wrench
- no. 2 Phillips screwdriver
- no. 2 screwdriver
- screwdriver handle
- pin spanner
- pliers
- tool bag






Owner's Manual Storage


Your motorcycle provides storage for the owner's manual so you'll have it with you for easy reference. Store your owner's manual (and other documents) in the plastic storage bag (1) in the storage compartment (2) (page 70) behind the left side cover (page 74).


Be careful not to flood this area when washing your motorcycle.

LEFT SIDE

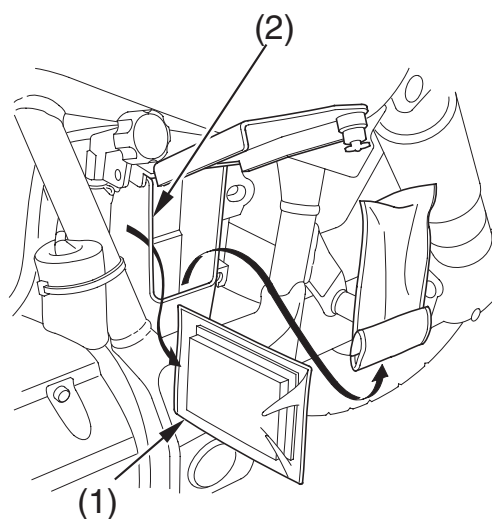

  - (1) owner's manual storage bag
- (2) storage compartment






Seat Removal

Refer to *Safety Precautions* on page 56 .

The seat must be removed for battery maintenance.

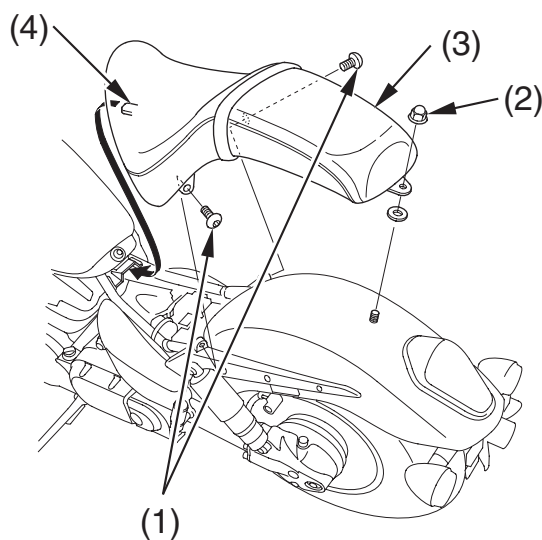


- | | |
|--------------------|----------|
| (1) mounting bolts | (3) seat |
| (2) nut | (4) tab |

Removal

1. Remove the seat mounting bolts (1) and nut (2).
2. Pull the seat (3) back and up.

Installation

 1. Insert the tab (4) into the recess under the frame.
2. Tighten the seat mounting bolts and nut securely.






Side Cover Removal

Refer to *Safety Precautions* on page 56 .

The left side cover must be removed to access the storage compartment, or to service the coolant.

The right side cover must be removed to service the fuses.

LEFT SIDE

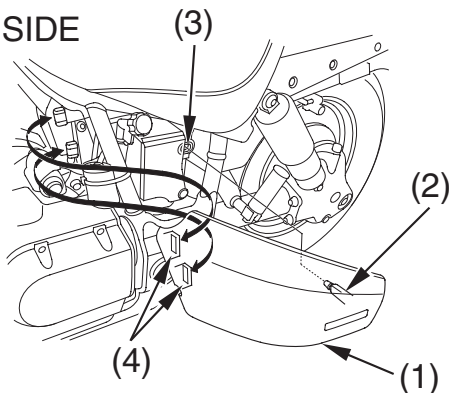


- | | |
|---------------------|--------------|
| (1) left side cover | (3) grommet |
| (2) prong | (4) recesses |

Left Side Cover Removal

1. Carefully pull the left side cover (1) out until the prong (2) is clear of the frame grommet (3).
2. Remove the left side cover.

Left Side Cover Installation

 
1. Align the recesses (4) with the tabs.
2. Position the cover so the prong is aligned with the frame grommet (3).
3. Push the prong in.





Side Cover Removal

RIGHT SIDE

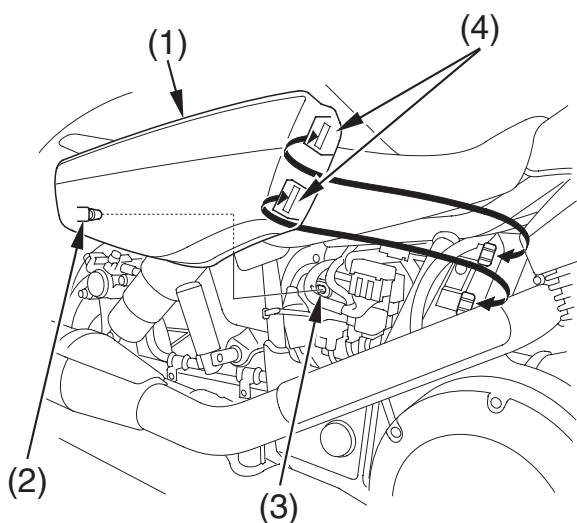


- (1) right side cover
- (2) prong
- (3) grommet
- (4) recesses

Right Side Cover Removal

1. Carefully pull the right side cover (1) out until the prong (2) is clear of the frame grommet (3).
2. Remove the right side cover.

Right Side Cover Installation

 1. Align the recesses (4) with tabs.
2. Position the cover so the prong is aligned with the frame grommet (3).
3. Push the prong in.





Fuel

Refer to *Safety Precautions* on page 56 .

Fuel Recommendation

type	unleaded
pump octane number	86 (or higher)

We recommend that you use unleaded fuel because it produces fewer engine deposits and extends the life of exhaust system components.

 
The use of leaded gas will damage the catalytic converter.

Your engine is designed to use any gasoline that has a pump octane number of 86 or higher. Gasoline pumps at service stations normally display the pump octane number. For information on the use of oxygenated fuels, see page 190 .

Use of lower octane gasoline can cause persistent “pinging” or “spark knock” (a loud rapping noise) which, if severe, can lead to engine damage. Light pinging experienced while operating under a heavy load, such as climbing a hill, is no cause for concern.

If pinging or spark knock occurs at a steady engine speed under normal load, change brands of gasoline. If pinging or spark knock persists, consult your Honda dealer.

76 Servicing Your Honda





Fuel

Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt, dust, or water in the fuel tank.

Fuel Capacity


Fuel tank capacity, including reserve:
4.76 US gal (18.0 ℓ)

Reserve capacity:
1.16 US gal (4.4 ℓ)

The tank should be refilled as soon as possible after switching to reserve, and the fuel valve should be returned to the ON position after refueling to avoid running out of fuel with no reserve.

Refueling Procedure


Refer to *Safety Precautions* on page 56.

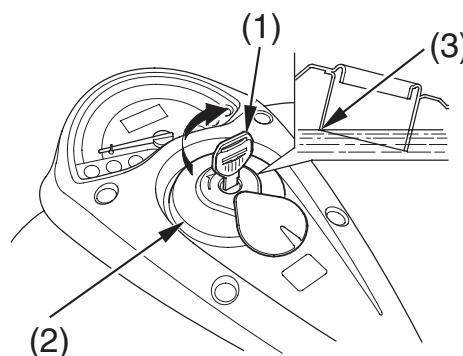

- (1) ignition key (3) filler neck
(2) fuel fill cap

1. Insert the ignition key (1) in the fuel fill cap (2) and turn it clockwise.

 (cont'd)





Fuel

 
2. Open the cap.
3. Add fuel until the level reaches the bottom of the filler neck (3). Avoid overfilling the tank. There should be no fuel in the filler neck.

 
WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

4. After refueling, align the latch in the cap with the slot in the filler neck. Push the cap into the filler neck until it snaps and locks.
5. Remove the ignition key from the cap.
6. Turn the fuel valve ON (if it was set on RES).






Engine Oil & Filter

Engine oil quality is a major factor that affects both the performance and the service life of the engine.

Using the proper oil (page 80) and filter, and regularly checking, adding, and changing oil will help extend your engine's life. Even the best oil wears out. Changing oil helps get rid of dirt and deposits in the engine. Operating the engine with old or dirty oil can damage your engine. Running the engine with insufficient oil can cause serious damage to the engine and transmission.

Change the engine oil as specified in the maintenance schedule on page 63 .

 When running in very dusty conditions, oil changes should be performed more frequently than specified in the maintenance schedule.





Engine Oil & Filter


Oil Recommendation


API classification	SG or higher except oils labeled as energy conserving on the circular API service label
viscosity (weight)	SAE 10W-40
JASO T 903 standard	MA

suggested oil *

Pro Honda GN4 or HP4 (without molybdenum additives) 4-stroke oil (USA & Canada), or Honda 4-stroke oil (Canada only), or an equivalent motorcycle oil.

  * Suggested oils are equal in performance to SJ oils that are not labeled as energy conserving on the circular API service label.






Engine Oil & Filter

- Your motorcycle does not need oil additives. Use the recommended oil.
- Do not use oils with graphite or molybdenum additives. They may adversely affect clutch operation.
- Do not use API SH or higher oils displaying a circular API “energy conserving” service label on the container. They may affect lubrication and clutch performance.





NOT RECOMMENDED

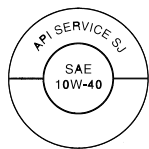


OK

- Do not use non-detergent, vegetable, or castor based racing oils.

  Other viscosities shown in the following chart may be used when the average temperature in your riding area is within the indicated range.

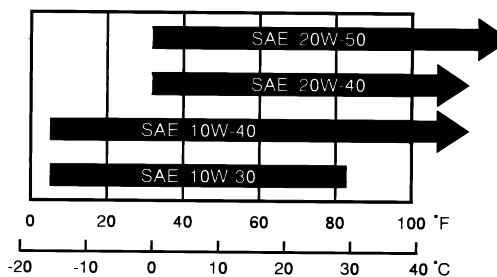




Engine Oil & Filter

JASO T 903 standard

The JASO T 903 standard is an index to choose engine oils for 4-stroke motorcycle engines.

There are two classes: MA and MB.


Oil conforming to the standard has the following classification on the oil container.

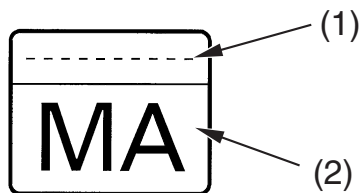

PRODUCT MEETING JASO T 903
COMPANY GUARANTEEING THIS MA PERFORMANCE:

- (1) code number of the sales company of the oil
- (2) oil classification

 82 Servicing Your Honda






Engine Oil & Filter

Checking & Adding Oil

Refer to *Safety Precautions* on page 56 .


LEFT SIDE

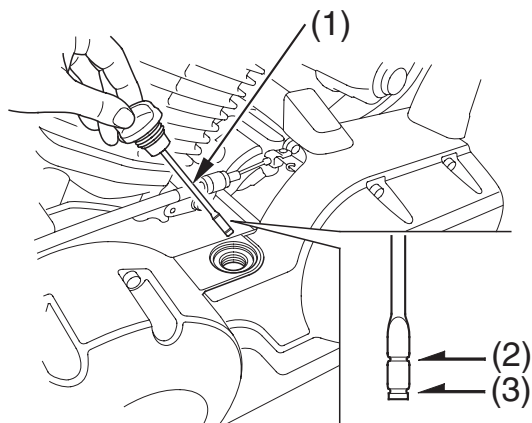

- (1) oil filler cap/dipstick
- (2) upper level mark
- (3) lower level mark

1. Park your motorcycle on its side stand on a firm, level surface.
2. Start the engine and let it idle for 3–5 minutes. Make sure the low oil pressure indicator goes off. If the indicator remains on, stop the engine immediately.
3. Stop the engine and wait 2–3 minutes.
4. Remove the oil filler cap/dipstick (1) and wipe it clean.
5. Hold the motorcycle in an upright position.
6. Insert the dipstick until it seats, but don't screw it in.

 (cont'd)





Engine Oil & Filter

7. Remove the dipstick and check the oil level.
 - If the oil is at or near the upper level mark (2) — you do not have to add oil.
 - If the oil is below or near the lower level mark (3) — add the recommended oil until it reaches the upper level mark. (Do not overfill.)
8. Reinstall the oil filler cap/dipstick.
9. Check for oil leaks.

 
Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 56 .

Your motorcycle's oil filter has very specific performance requirements. Use a new genuine Honda oil filter or a filter of equal quality specified for your model.

NOTICE

Using the wrong oil filter may result in leaks or premature engine damage.





Engine Oil & Filter


This procedure requires mechanical skill and professional tools such as a torque wrench and oil filter wrench, as well as a means for disposing of the drained fluid (page 141). If you do not have the skills or the tools, see your Honda dealer.

Drain the Engine Oil:

1. Park the motorcycle on its side stand on a firm, level surface.
2. If the engine is cold, start it and let it idle for 3–5 minutes. Turn the engine off. Wait 2–3 minutes for the oil to settle.


3. Place a drain pan under the crankcase.
4. To drain the oil, remove the drain bolts (1), (2) and sealing washers (3).

RIGHT FRONT, UNDER ENGINE

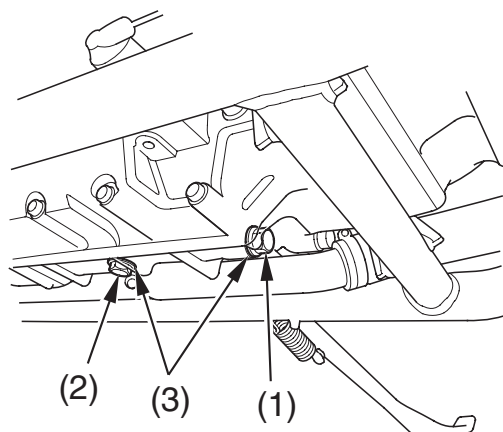

- (1) drain bolt (front)
(2) drain bolt (rear)
(3) sealing washers

 (cont'd)





Engine Oil & Filter


Install a New Oil Filter:

5. Remove the oil filter (3) with a filter wrench and let the remaining oil drain out. Discard the oil filter in an approved manner (page 141).
6. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 141).

NOTICE


Improper disposal of drained fluids is harmful to the environment.

RIGHT REAR, UNDER ENGINE

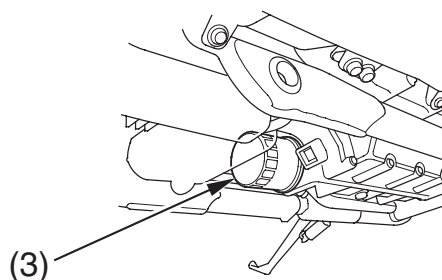



(3) oil filter

7. Apply a thin coat of engine oil to the rubber seal (4) of a new oil filter.

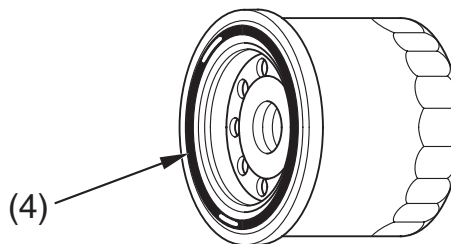

  
(4) oil filter rubber seal





Engine Oil & Filter

 8. Install the new oil filter and tighten it by hand.
 9. Using an oil filter wrench attachment and a torque wrench, tighten the new oil filter to the specified torque:
20 lbf·ft (26 N·m , 2.7 kgf·m)
 10. Check the condition of the sealing washers on the drain bolts. Replace the washers every other time the oil is changed.
Install the drain bolts and tighten them to the specified torque:
22 lbf·ft (29 N·m , 3.0 kgf·m)
- Add Engine Oil:*
11. Fill the crankcase with the recommended oil (page 80), approximately:
3.9 US qt (3.7 ℓ)
 12. Install the oil filler cap/dipstick securely.
 13. Start the engine and let it idle for 3—5 minutes.
 14. Stop the engine and wait 2—3 minutes.
 15. Hold the motorcycle upright and check that the oil level is at the upper level mark on the dipstick (page 83).
 16. Check that there are no oil leaks.
- If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.





Coolant

Your motorcycle's liquid cooling system dissipates engine heat through the coolant jacket that surrounds the cylinder and cylinder head.

Maintaining the coolant will allow the cooling system to work properly and prevent freezing, overheating, and corrosion.

Coolant Recommendation

 
Use Pro Honda HP coolant or an equivalent high quality ethylene glycol antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines. Check the antifreeze container label.

 
Use only distilled water as a part of the coolant solution. Water that is high in mineral content or salt may be harmful to the aluminum engine.

NOTICE

Using coolant with silicate inhibitors may cause premature wear of water pump seals or blockage of radiator passages. Using tap water may cause engine damage.

The factory provides a 50/50 solution of antifreeze and water in this motorcycle. This coolant solution is recommended for most operating temperatures and provides good corrosion protection.






Coolant

Decreasing the concentration of antifreeze to less than 40% will not provide proper corrosion protection.

 Increasing the concentration of antifreeze is not recommended because it decreases cooling system performance. Higher concentrations of antifreeze (up to 60%) should only be used to provide additional protection against freezing. Check the cooling system frequently during freezing weather.






Coolant

Checking & Adding Coolant

Refer to *Safety Precautions* on page 56 .

LEFT CENTER

LEFT SIDE

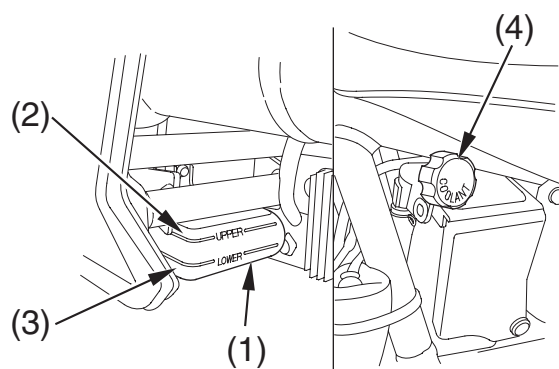


- (1) reserve tank
- (2) UPPER level mark
- (3) LOWER level mark
- (4) reserve tank cap

1. With the engine at normal operating temperature, check the coolant level in the reserve tank (1). It should be between the UPPER (2) and LOWER (3) level marks.

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your Honda dealer for repair.

2. Remove the left side cover (page 74).
3. Remove the reserve tank cap (4).
Always add coolant to the reserve tank.
Do not attempt to add coolant by removing the radiator cap.
4. Add coolant to the reserve tank as required to bring the coolant level to the UPPER level mark.

 90 Servicing Your Honda





Coolant

Coolant Replacement

Refer to *Safety Precautions* on page 56 .

Coolant should be replaced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 194).

⚠ WARNING

 
Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

 
Always let the engine and radiator cool down before removing the radiator cap.

To properly dispose of drained coolant, refer to *You & the Environment*, page 141 .

NOTICE

Improper disposal of drained fluids is harmful to the environment.





Air Cleaner

Refer to *Safety Precautions* on page 56 .

Service the air cleaner more frequently if you ride in unusually wet or dusty areas. Your Honda dealer can help you determine the correct service interval for your riding conditions.

Your motorcycle's air cleaner has very specific performance requirements. Use a new genuine Honda air cleaner specified for your model or an air cleaner of equivalent quality.

 
NOTICE

Using the wrong air cleaner may result in premature engine damage.

Proper air cleaner maintenance can prevent premature engine wear or damage, expensive repairs, low engine power, poor gas mileage, and spark plug fouling.

NOTICE

Improper or lack of proper air cleaner maintenance can cause poor performance and premature engine wear.






Air Cleaner


Replacement

1. Remove the five bolts (1), and remove the air cleaner housing cover (2).
2. Remove the air cleaner (3).
3. Discard the air cleaner.
Thoroughly clean the inside of the air cleaner case (4).
4. Install a new air cleaner.
5. Install the removed parts in reverse order of removal.

RIGHT SIDE

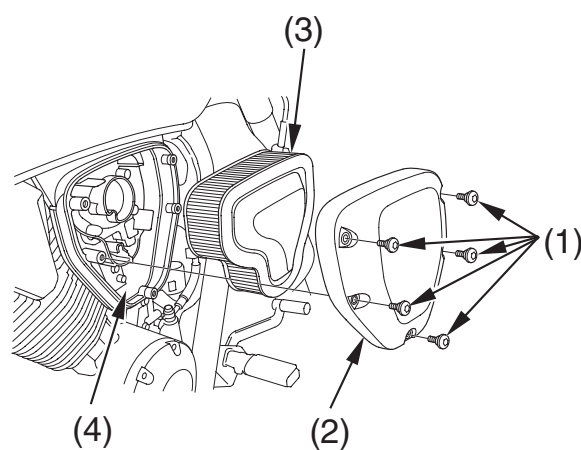

- | | |
|-------------------------------|----------------------|
| (1) bolts | (3) air cleaner |
| (2) air cleaner housing cover | (4) air cleaner case |

 




Crankcase Breather

Refer to *Safety Precautions* on page 56 .

Service the crankcase breather more frequently if your motorcycle is ridden in the rain or often at full throttle. Service the breather if you can see deposits in the transparent section of the drain tube.


Draining


RIGHT FRONT

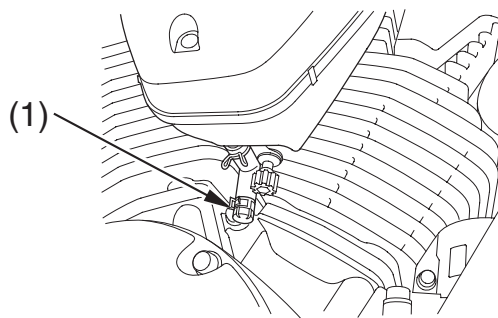

(1) crankcase breather tube plug

  1. Place a drain pan under the crankcase breather tube plug (1).
2. Remove the plug to drain the deposits in the tube.
3. Reinstall the crankcase breather tube plug.





Final Drive Oil


Oil Recommendation

Type	hypoid gear oil
viscosity (weight)	SAE 80

Checking & Adding Oil


Refer to *Safety Precautions* on page 56 .

LEFT REAR

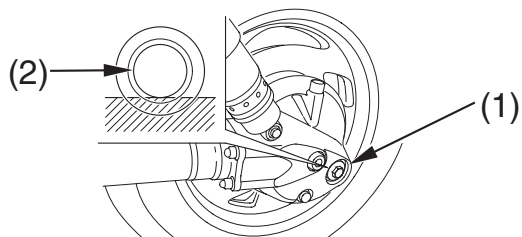

(1) oil filler cap
(2) oil filler hole

 1. Place the motorcycle on its side stand on a firm, level surface.
2. Remove the oil filler cap (1).
3. Check the oil level. It should be flush with the lower edge of the oil filler hole (2).
4. If the level is low, check for leaks. Add the recommended oil through the oil filler hole until it reaches the lower edge of the opening.
5. Install the oil filler cap.






Final Drive Oil

Changing Oil

Refer to *Safety Precautions* on page 56 .

LEFT REAR

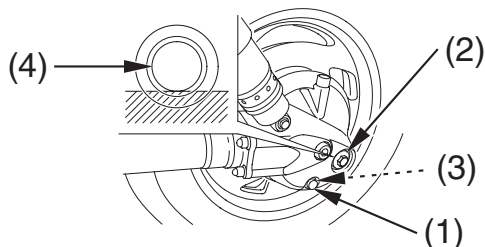



- (1) oil drain bolt
- (2) oil filler cap
- (3) sealing washer
- (4) oil filler inspection hole

Change the oil with the final drive at normal operating temperature to assure complete and rapid draining.

1. Place the motorcycle on its side stand on a firm, level surface.
2. Place a drain pan under the drain bolt (1).
3. Remove the oil filler cap (2) and the drain bolt.
4. After the oil has completely drained, check that the sealing washer (3) is in good condition. Reinstall the drain bolt with its sealing washer (or a new washer, if necessary) and tighten it to the specified torque:
14 lbf·ft (20 N·m , 2.0 kgf·m)
5. Fill the final drive with the recommended oil:
4.1 US oz (120 cm³)
Make sure the final drive oil level is at the lower edge of the oil filler inspection hole (3).
6. Install the oil filler cap.

  96 Servicing Your Honda






Throttle

Throttle Freeplay

Refer to *Safety Precautions* on page 56 .

RIGHT HANDLEBAR

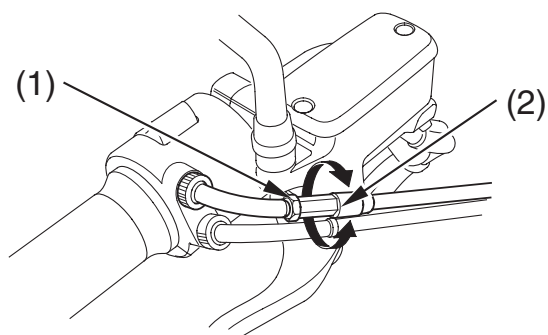

(1) lock nut

(2) adjuster

Inspection

Check freeplay at the throttle grip flange.

 
Freeplay:

1/16 – 1/4 in (2 – 6 mm)

If necessary, adjust to the specified range.

Adjustment

1. Loosen the lock nut (1).
2. Turn the adjuster (2).
3. After adjustment, check for smooth rotation of the throttle grip from fully closed to fully open in all steering positions.






Throttle

Throttle Inspection

Refer to *Safety Precautions* on page 56 .

 1. Check that the throttle assembly is positioned properly and the securing bolts are tight.
2. Check for smooth rotation of the throttle from fully open to fully closed in all steering positions. If there is a problem, see your Honda dealer.





Clutch System


Your motorcycle's manually-activated, wet, multiplate clutch is part of the primary drive system. Proper freeplay adjustment allows a smooth, gradual engagement when shifting gears.

Improper freeplay adjustment can cause premature clutch wear.


Clutch Freeplay

Refer to *Safety Precautions* on page 56 .

LEFT HANDLEBAR

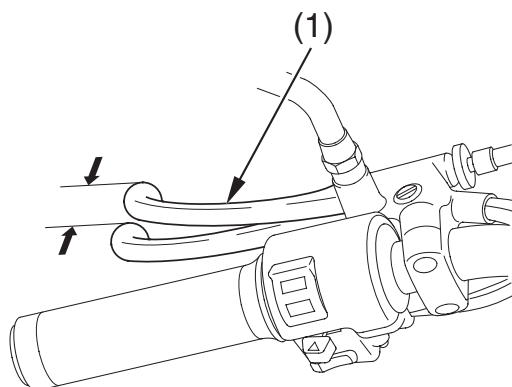

 (1) clutch lever





Clutch System


Inspection

1. Check freeplay:
3/8 – 13/16 in (10 – 20 mm)
If necessary, adjust to the specified range.

Upper Adjustment


Attempt adjustment with the upper clutch cable adjuster first.

LEFT HANDLEBAR

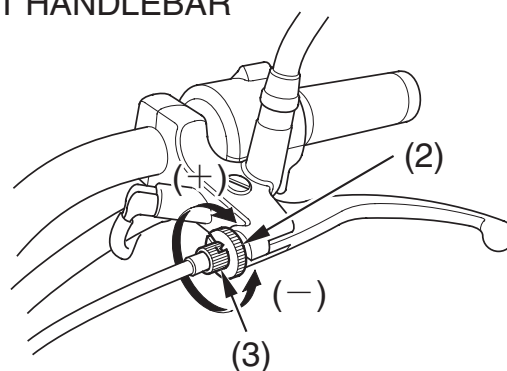

- (2) upper lock nut
- (3) upper clutch cable adjuster
- (+) increase freeplay
- (-) decrease freeplay

 1. Loosen the upper lock nut (2).
2. Turn the upper clutch cable adjuster (3) to obtain the specified freeplay.
3. Tighten the upper lock nut and check the freeplay again.






Clutch System

Lower Adjustment

If the upper clutch cable adjuster is threaded out near its limit — or the correct freeplay cannot be obtained — attempt adjustment with the lower clutch cable adjuster.

LEFT SIDE

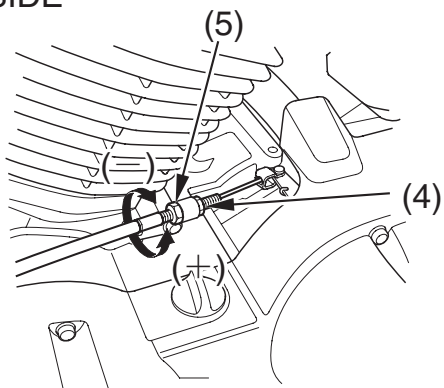


(4) lock nut (+) increase free play
 (5) adjusting nut (-) decrease free play

1. Loosen the upper lock nut (2) and turn the upper clutch cable adjuster (3) all the way in (to provide maximum freeplay). Tighten the upper lock nut.
2. Loosen the lower lock nut (4).
3. Turn the lower adjusting nut (5) to obtain the specified freeplay.
4. Tighten the lower lock nut and check the adjustment.

(cont'd)

 Servicing Your Honda **101**






Clutch System

5. Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. Your motorcycle should move smoothly and accelerate gradually.

If you cannot get proper adjustment, or the clutch does not work properly, the cable or clutch friction discs may be worn. See your Honda dealer or refer to the official Honda Service Manual (page 194).

Other Inspections & Lubrication

 - Check that the clutch lever assembly is positioned properly and the securing bolts are tight.
- Check the clutch cable for kinks or signs of wear. If necessary, have it replaced.
- Lubricate the clutch cable with a commercially-available cable lubricant to prevent premature wear and corrosion.







Engine Idle Speed

2. Place your motorcycle on its side stand on a firm, level surface.
3. Connect a tachometer to the engine.
4. Shift into neutral. Start the engine.
5. Adjust idle speed with the throttle stop screw (1).

Idle speed (in neutral):

  900 ± 100 rpm





Spark Plugs

Spark Plug Recommendation

standard spark plug	DCPR6E (NGK) or XU20EPR-U (DENSO)
for extended high speed riding	DCPR7E (NGK) or XU22EPR-U (DENSO)

Use only the recommended type of spark plugs in the recommended heat range.

NOTICE

Using spark plugs with an improper heat range can cause engine damage.






Spark Plugs

Spark Plug Replacement & Inspection


Refer to *Safety Precautions* on page 56 .

RIGHT SIDE

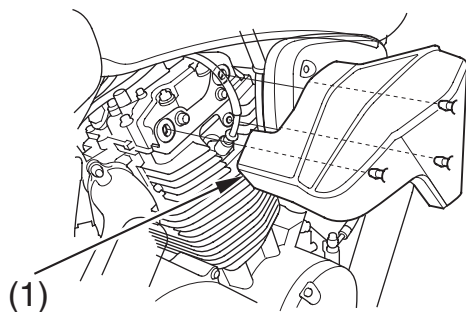


(1) over head cover

1. Grasp the over head covers (1) on both side and pull out.
2. Clean any dirt from around the spark plug bases.
3. Disconnect the spark plug caps (2). Take care to avoid damaging the spark plug wire when disconnecting the caps.
4. Using the spark plug wrench (3) provided in the tool kit, remove the spark plugs.

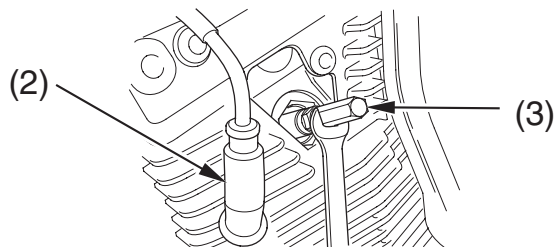

 
(2) spark plug caps
(3) spark plug wrench





Spark Plugs


5. Inspect the electrodes and center porcelain for deposits, corrosion, or carbon fouling. If the corrosion or deposits are heavy, replace the plug. Clean a carbon or wet-fouled plug with a plug cleaner, if available, or a wire brush.
6. Check the spark plug gap (1) of each new plug, using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode (2) carefully.
The gap should be:
0.031 – 0.035 in (0.80 – 0.90 mm)

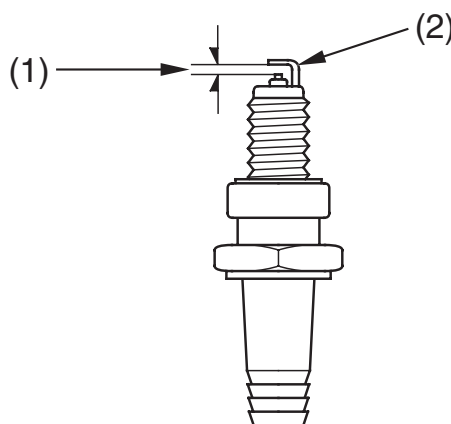

(1) spark plug gap (2) side electrode

7. With the plug washers attached, thread the spark plugs in by hand to prevent cross-threading.

 (cont'd)





Spark Plugs

 
8. Tighten each spark plug:
 - 1/8-1/4 turn after it seats (if the old plug is good)
 - 1/2 turn after it seats (if installing a new plug)

NOTICE

Improperly tightened spark plugs can damage the engine. If a plug is too loose, a piston may be damaged. If a plug is too tight, the threads may be damaged.

9. Reinstall the spark plug caps. Take care to avoid pinching any cables or wires.
10. Reinstall the over head covers (page 106).

108 Servicing Your Honda





Suspension

Your front and rear suspension systems use springs and hydraulic damping devices that suspend your weight and most of the weight of your motorcycle.

 
The spring pre-load for your rear suspension system adjusts the amount of force required to begin compression of the spring.

The oil damper systems hydraulically control the natural compression and rebound of the suspension springs so that traction and comfort are maintained as the wheels ride over road surfaces.

Consider adjusting your rear suspension pre-load whenever you change your normal load, by adding or subtracting a passenger, cargo, or accessories, or when the road or riding conditions change.

The way you ride your motorcycle and the type of ride you want to experience can also influence your suspension needs.

Lower spring pre-load provides a softer ride and is usually preferred for light loads and smooth roads. Higher spring pre-load provides a firmer ride and is recommended for heavy loads, rough road conditions, and faster, more challenging riding.





Suspension

Rear Suspension Adjustment


The rear suspension can be adjusted for rider (and passenger) weight and riding conditions by changing the spring pre-load.

Do not attempt to disassemble, service, or dispose of the damper; see your Honda dealer. The instructions found in this owner's manual are limited to adjustments of the shock assembly only.

Rear Suspension Spring Pre-load


Refer to *Safety Precautions* on page 56 .


LEFT SIDE

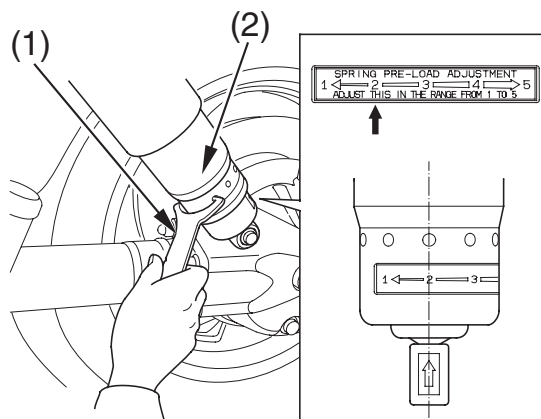

- (1) pin spanner
- (2) shock absorber

  110 Servicing Your Honda





Suspension

The spring pre-load adjuster has 5 positions for different load or riding conditions.

Use the pin spanner (1) to adjust the rear shock spring pre-load.

Position 1: for a light load and smooth road conditions.

Position 2: standard position.

 
Positions 3 to 5: for when the motorcycle is more heavily loaded.

 
(Also increase spring pre-load for stiffer rear suspension.)

Make sure that both shock absorbers are adjusted to the same position.

Always adjust the shock absorber position in sequence (1-2-3-4-5 or 5-4-3-2-1).

Attempting to adjust directly from 1 to 5 or 5 to 1 may damage the shock absorber.





Brakes

The hydraulic braking systems on your motorcycle dissipate the heat generated by the friction of the brake pads on the brake discs as the wheels are slowed.

As the brake pads wear, the brake fluid level will drop. A leak in the system will also cause the level to drop.

Frequently inspect the system to ensure there are no fluid leaks. Periodically inspect the brake fluid level and the brake pads for wear.

If the brake lever or brake pedal freeplay does not feel within the normal range while riding, check the brake pads for wear (page 115). Worn pads should be replaced. If the pads are not worn beyond the recommended limit, there is probably


air in the brake system. See your Honda dealer to have the air bled from the system.


Brake Fluid Recommendation

brake fluid	Honda DOT 4 Brake Fluid
-------------	-------------------------

The recommended brake fluid is Honda DOT 4 Brake Fluid, or any brake fluid of equal quality and performance. Use fresh brake fluid from a sealed container. Be sure to read the label before opening the sealed container. An opened container may be contaminated or may have absorbed moisture from the air.

  112 Servicing Your Honda





Brakes

Fluid Level Inspection

Refer to *Safety Precautions* on page 56 .

If your inspection indicates a low fluid level, have your Honda dealer add the recommended brake fluid.

Do not add or replace brake fluid, except in an emergency. If you do add fluid, have your Honda dealer check the system as soon as possible.


NOTICE

Brake fluid can damage plastic and painted surfaces. Handle with care.


Wipe up spills immediately. Avoid contact with skin or eyes. In case of contact, wash

thoroughly and call a doctor immediately if it contacts your eyes.

RIGHT HANDLEBAR (Front Brake)

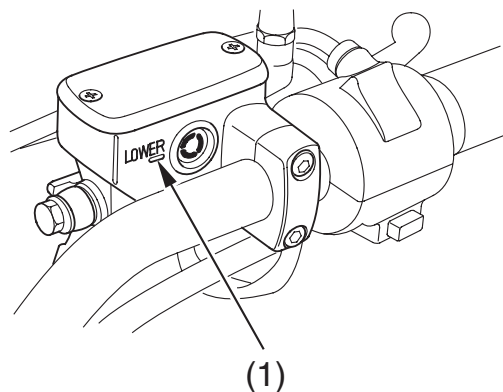

 
(1) lower level mark





Brakes

RIGHT SIDE (Rear Brake)

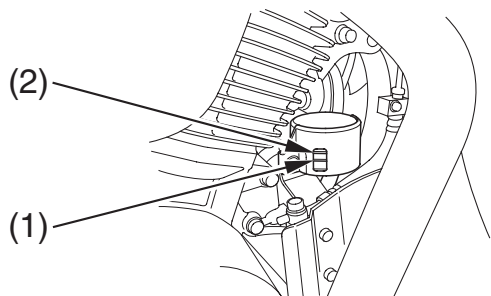

- (1) lower level mark
(2) upper level mark

1. Place your motorcycle in an upright position on a firm, level surface.
2. Check the fluid level.
Front : It should be above the lower level mark (1).
Rear : It should be between the upper (2) and lower level marks.

 
If the level is at or below the lower level mark, check the brake pads for wear (page 115).

Worn pads should be replaced. If the pads are not worn beyond the recommended limit, have your brake system inspected for leaks.

Other Inspections

- Make sure there are no fluid leaks.
- Check for deterioration or cracks in the hoses and fittings.

114 Servicing Your Honda





Brakes


Brake Pad Wear

Refer to *Safety Precautions* on page 56 .

Brake pad wear depends upon the severity of usage, the type of riding, and road conditions. Generally, the pads will wear faster on wet and dirty roads. Inspect the pads at each regular maintenance interval (page 64).


Check the cutouts (1) in each pad. If either pad is worn to the cutout, replace both pads as a set. See your Honda dealer for this service.

RIGHT FRONT

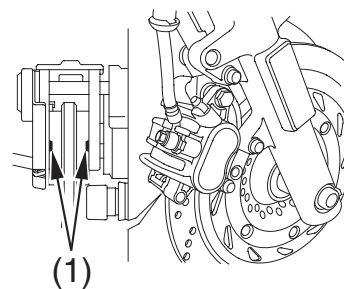


(1) cutouts

RIGHT REAR

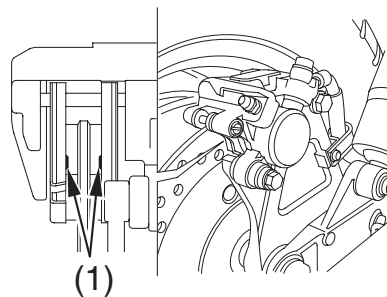

 (1) cutouts





Tires

To safely operate your motorcycle, your tires must be the proper type and size, in good condition with adequate tread, and correctly inflated for the load you are carrying.

⚠ WARNING

Using tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tire inflation and maintenance.

The following pages give detailed information on how and when to check

 
116 Servicing Your Honda

your air pressure, how to inspect your tires for wear and damage, and our recommendations for tire repair and replacement.

Air Pressure

Refer to *Safety Precautions* on page 56 .

Properly inflated tires provide the best combination of handling, tread life, and riding comfort. Generally, underinflated tires wear unevenly, adversely affect handling, and are more likely to fail from being overheated. Overinflated tires make your motorcycle ride more harshly, are more prone to damage from road hazards, and wear unevenly.






Tires

We recommend that you visually check your tires before every ride and use an air pressure gauge to measure the air pressure at least once a month or any time you think the tires might be low. Even tires that are in good condition may lose one to two psi per month if not checked and adjusted regularly.

Tubeless tires have some degree of self-sealing ability if they are punctured. However, because leakage is often very slow, you should look closely for punctures whenever a tire is not fully inflated.

 Always check air pressure when your tires are “cold” — after the motorcycle has been parked for at least three hours. If you check air pressure when your tires are “warm” — even if your motorcycle has only been ridden for a few miles — the readings will be higher. If you let air out of warm tires to match the recommended cold pressures, the tires will be underinflated.





Tires

The recommended “cold” tire pressures are:

front	33 psi (225 kPa , 2.25 kgf/cm ²)
rear	33 psi (225 kPa , 2.25 kgf/cm ²) with less than 200 lbs (90 kg) of added weight*
	36 psi (250 kPa , 2.50 kgf/cm ²) with more than 200 lbs (90 kg) of added weight*

*includes the weight of the rider,
passenger, all cargo & all accessories

 
Inspection

 
Refer to *Safety Precautions* on page 56 .

Whenever you check the tire pressures, you should also look for:

- Bumps or bulges in the side of the tire or the tread. Replace any tire that has a bump or bulge.
- Cuts, slits, or cracks in the tires. Replace the tire if you can see fabric or cord.
- Nails or other foreign objects embedded in the side of the tire or tread.
- Excessive tread wear.

118 Servicing Your Honda






Tires

Also, if you hit a pothole or hard object while riding, pull to the side of the road as soon as you safely can and carefully inspect the tires for damage.

Tread Wear

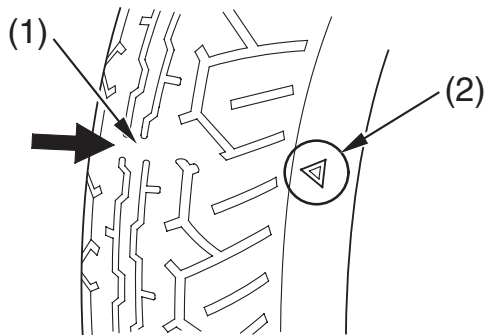

- (1) wear indicator
(2) wear indicator location mark

For the best performance, you should replace a tire before the tread depth at the center reaches the following limits:


front	0.06 in (1.5 mm)
rear	0.08 in (2.0 mm)

If the wear indicators are visible, replace the tire immediately as it is no longer safe.

Tire Repair

Refer to *Safety Precautions* on page 56 .

 We strongly recommend that you replace, not repair, any tire that is punctured or damaged. As discussed below, a tire that is repaired, either temporarily or permanently, will have lower speed and performance limits than a new or undamaged tire.






Tires


A temporary repair can sometimes be made in an emergency situation. However, since a temporary repair may not hold, you must ride very slowly, preferably without any cargo or passenger, and have the tire replaced or permanently repaired as soon as possible. (For more information on temporary repairs, see *If You Have a Flat Tire*, page 150 .)

A permanent repair, such as an internal plug patch, can be made if a tire has only a small puncture in the tread area. With such a repair, you should not exceed 50 mph (80 km/h) for the first 24 hours, or 80 mph (130 km/h) at any time thereafter. In addition, you may not be able to safely carry as much weight. If you choose to have a tire repaired, be sure the repair work is performed by a professional and that the wheel is balanced before you ride.

If you have a tire professionally repaired at a non-Honda facility, we recommend that you have the work checked by your Honda dealer.

  120 Servicing Your Honda





Tires

Tire Replacement

Refer to *Safety Precautions* on page 56 .

 
The tires that came on your motorcycle were designed to match the performance capabilities of your motorcycle and provide the best combination of handling, braking, durability, and comfort.

You should replace the tires with tires of the same size, load range, and speed rating as the originals.

WARNING

Installing improper tires on your motorcycle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tires recommended in this owner's manual.





Tires

The recommended tires for your motorcycle are:

front	110/90 – 19M/C 62H DUNLOP F24G
rear	170/80 – 15M/C 77H DUNLOP K555J

Whenever you replace a tire, remember:

 
- Have the wheel balanced after the tire is installed.
- Have the tire replaced by your Honda dealer if possible.

If you have a tire professionally replaced at a non-Honda facility, we recommend that you have the work checked by your Honda dealer.

Important Safety Reminders

- Do not install a tube inside a tubeless tire on this motorcycle. Excessive heat build-up can cause the tube to burst.
- Use only tubeless tires on this motorcycle. The rims are designed for tubeless tires, and during hard acceleration or braking, a tube-type tire could slip on the rim and cause the tire to rapidly deflate.
- Do not install a radial tire on this motorcycle. Mixing bias-ply and radial tires can adversely affect handling and stability.

122 Servicing Your Honda






Side Stand

Refer to *Safety Precautions* on page 56 .


LEFT SIDE

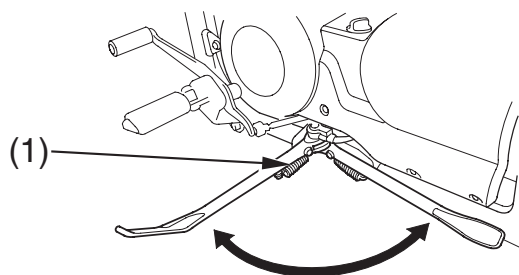

(1) side stand spring

- Check that the side stand assembly is working properly. If the side stand is stiff or squeaky, clean the pivot area and lubricate the pivot bolt with clean grease.

 - Check the spring for damage or loss of tension.
- Check the side stand ignition cut-off system:
 1. Sit astride the motorcycle and put the transmission in neutral.
 2. Raise the side stand.
 3. Start the engine.
 4. Pull the clutch lever in.
 5. Shift the transmission into gear.
 6. Lower the side stand all the way.The engine should stop as you lower the side stand. If the engine doesn't stop, see your Honda dealer for service.





Battery

Your motorcycle has a maintenance-free type battery. You do not have to check the battery electrolyte level or add distilled water as you would with a conventional-type battery.

NOTICE

Your battery is a maintenance-free type and can be permanently damaged if the cap strip is removed.

Electrical accessories use current from the battery — even when the ignition is OFF. Limited operation also allows the battery to discharge. If you have electrical accessories on your motorcycle — or do not ride frequently, we recommend that you charge the battery frequently (see *Battery Charging*, page 127).

 
If you do not expect to ride your motorcycle for at least two weeks, we recommend you remove the battery — or at least disconnect the battery cables (negative cable first).

If you plan to store your motorcycle, see *Battery Storage*, page 125 .

If your battery seems weak and/or is leaking electrolyte (causing slow starting or other electrical problems), see your Honda dealer.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds. **Wash hands after handling.**

124 Servicing Your Honda





Battery

Battery Storage

Refer to *Safety Precautions* on page 56 .

If you plan to store your motorcycle, we recommend you remove the battery and store it where it can be charged at least every 30 days to maintain its service life.

If you do not remove the battery, we recommend disconnecting the battery cables (negative cable first).

You will get the best storage results from removing the battery and slow (trickle) charging it every 30 days (see *Battery Charging*, page 127).

 
Before you remove the battery, be sure to read all the information that follows, as well as the information on the battery label.

⚠ WARNING

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

Wear protective clothing and a face shield, or have a skilled mechanic do the battery maintenance.






Battery

The battery is located in the battery box below the seat.


1. Remove the seat (page 73).
2. Remove the wire band (1).
3. Remove the ECM (2).
4. Remove the battery cover (4) by removing the three screws (3).

UNDER SEAT

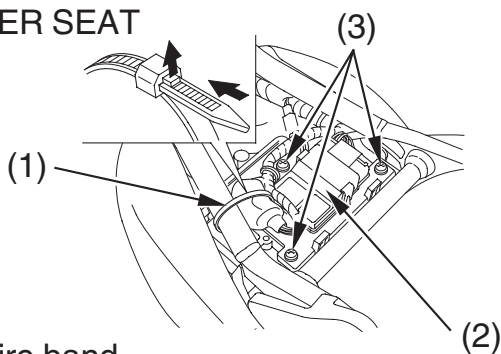


- (1) wire band
- (2) ECM
- (3) screws


5. Disconnect the negative (-) terminal lead (5) from the battery first.
6. Disconnect the positive (+) terminal lead (6).
7. Pull the battery (7) out of the battery box.

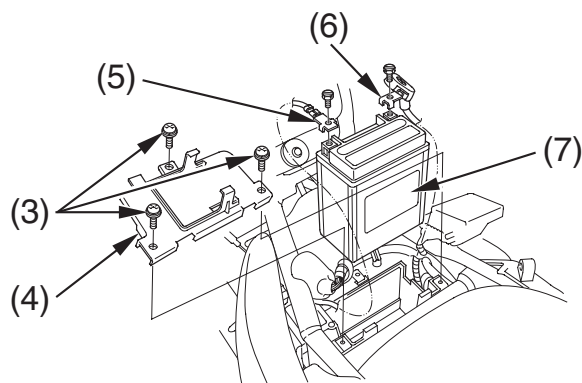

- (4) battery cover
- (5) negative (-) terminal lead
- (6) positive (+) terminal lead
- (7) battery

  126 Servicing Your Honda






Battery

8. Charge the battery (see following section), unless you have been riding regularly.
9. Store your battery in an easy-to-reach location off the floor, in an area protected from freezing temperatures and direct sunlight.
10. Clean the battery box after removing the battery for storage. Dry the battery box and, if paint is missing, re-paint the area.
11. Slow charge the battery (see following section) once every 30 days.


Battery Charging

Refer to *Safety Precautions* on page 56 .

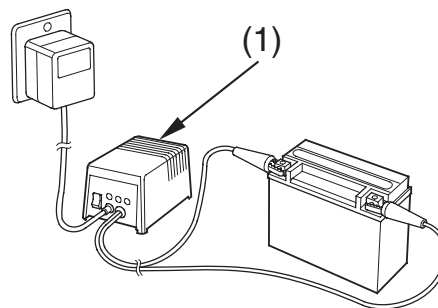

(1) “trickle” charger

 Be sure to read the information that came with your battery charger and follow the instructions on the battery. Improper charging may damage the battery.







Battery

We recommend using a “trickle” charger (1) for home charging. These units can be left connected for long periods without risking damage to the battery. However, do not intentionally leave the charger connected longer than the time period recommended in the charger’s instructions.

Avoid using an automotive-type battery charger. An automotive charger can overheat a motorcycle battery and cause permanent damage.

  128 Servicing Your Honda





Appearance Care

Frequent cleaning and polishing will keep your Honda looking newer longer. Frequent cleaning also identifies you as an owner who values your motorcycle. A clean motorcycle is also easier to inspect and service.

 
General Recommendations

Refer to *Safety Precautions* on page 56 .

- To clean your motorcycle, you may use:
 - water
 - a mild, neutral detergent and water
 - a mild spray and wipe cleaner/polisher
 - a mild spray and rinse cleaner/degreaser and water

- Avoid products that contain harsh detergents or chemical solvents that could damage the metal, paint, and plastic on your motorcycle.
- If your motorcycle is still warm from recent operation, give the engine and exhaust system time to cool off.
- Park in a shady area. Washing your motorcycle in bright sunlight may cause the finish to fade because water droplets intensify the sun's brightness. Spotting is also more likely because surface water can dry before you have time to wipe it off.
- Clean your motorcycle regularly to protect surface finishes.

(cont'd)





Appearance Care

- We recommend the use of a garden hose to wash your motorcycle. High pressure washers (like those at coin-operated car washes) can damage certain parts of your motorcycle.

NOTICE

 
High pressure water (or air) can damage certain parts of your motorcycle.

- After cleaning, inspect for damage, wear, and leaks (fuel, oil, coolant, and brake fluid).

Washing Your Motorcycle with a Mild Detergent

Refer to *Safety Precautions* on page 56 .

1. Rinse your motorcycle thoroughly with cool water to remove loose dirt.
2. Fill a bucket with cool water. Mix in a mild, neutral detergent, such as dish washing liquid or a product made especially for washing motorcycles or automobiles.
3. Wash your motorcycle with a sponge or a soft towel. As you wash, check for heavy grime. If necessary, use a mild cleaner/degreaser to remove the grime.
4. After washing, rinse your motorcycle thoroughly with plenty of clean water to remove any residue. Detergent residue can corrode alloy parts.





Appearance Care

 
5. Dry your motorcycle with a chamois or a soft towel. Leaving water on the surface to air dry can cause dulling and water spots. As you dry, inspect for chips and scratches.
6. Start the engine and let it idle for several minutes. The engine heat will help dry moist areas.
7. As a precaution, ride your motorcycle at a slow speed and apply the brakes several times. This will help dry the brakes and restore normal braking performance.
If the inside of the headlight lens appears clouded immediately after washing, it should clear after a few minutes of riding.

Spray Cleaning Your Motorcycle

Refer to *Safety Precautions* on page 56 .

Avoid using spray cleaner products on the tires or suspension components.

Suggestions for using spray cleaner(s) follow:






Appearance Care

Motorcycle Condition	Recommended Cleaning
Dust and fingerprint smudges.	Apply a spray cleaner/polish and wipe the paint, chrome, glass, and clear plastic.
Light road grime.	Spray any difficult-to-reach or very dirty areas with a spray cleaner/degreaser. Rinse and dry. Apply a spray cleaner/polish and wipe with a non-abrasive cloth.
Heavy grime. Oil leaks. Brake dust.	Use a spray cleaner/degreaser. If necessary, rub with a sponge. Rinse and dry. Apply a spray cleaner/polish and wipe with a non-abrasive cloth.
Dull, corroded chrome or aluminum.	Apply a high quality chrome/aluminum polish and wipe with a non-abrasive cloth.

 132 Servicing Your Honda





Appearance Care

 
Painted Aluminum Wheel Maintenance

Refer to *Safety Precautions* on page 56 .

Aluminum may corrode from contact with dirt, mud, or road salt. Clean the wheels after riding through any of these substances. Use a wet sponge and mild detergent. Avoid stiff brushes, steel wool, or cleaners containing abrasives or chemical compounds.

After washing, rinse with plenty of water and dry with a clean cloth.

If the paint is chipped, apply touch-up paint.





Appearance Care

Finishing Touches

 
Refer to *Safety Precautions* on page 56 .

 
After washing your motorcycle, consider using a commercially-available spray cleaner/polish or quality liquid or paste wax to finish the job. Use only a non-abrasive polish or wax made specifically for motorcycles or automobiles. Apply the polish or wax according to the instructions on the container.

If a surface on your motorcycle is chipped or scratched, your Honda dealer has touch-up paint to match your motorcycle's color. Be sure to use your motorcycle's color code (page 174) when you buy touch-up paint.

If the frame has a chip that exposes the metal, first apply primer (to prevent corrosion) and then apply the touch-up paint. Several thin layers of touch-up paint are better than one thick coat.

134 Servicing Your Honda






Tips

Here's a few helpful tips on how to store and transport your Honda, and how to be an environmentally responsible motorcycle owner.

Storing Your Honda	136
Transporting Your Motorcycle	140
You & the Environment	141

 



Storing Your Honda

If you won't be riding for an extended period, such as during the winter, thoroughly inspect your motorcycle and correct any problem before storing it. That way, needed repairs won't be forgotten and it will be easier to get your motorcycle running again.

For more information about storage, refer to the *Honda Motorcycle Winter Storage Guide*, available from your Honda dealer (USA only).

We suggest you perform the following procedures to keep your motorcycle in top condition. These storage procedures will reduce the deterioration that can occur during storage.

 
Preparation for Storage

 
Refer to *Safety Precautions* on page 56 .

This procedure requires a means for draining and disposing of drained fuel (page 141).

1. Change the engine oil and filter (page 84).
2. Make sure the cooling system is filled with a 50/50% antifreeze solution (page 88).
3. Fill the fuel tank. Make sure the fuel fill cap is properly installed.
4. Check that the fuel valve is OFF.

136 Tips





Storing Your Honda

5. Drain the carburetor into an approved gasoline container and dispose of it in an approved manner (page 141). If storage will last longer than one month, carburetor draining is important, to assure proper performance after storage.

⚠ WARNING


Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

6. To prevent rusting in the cylinders, perform the following:
- Remove the spark plug caps from the spark plugs. Using tape or string, secure the caps to any convenient plastic body part so that they are positioned away from the spark plugs.
 - Remove the spark plugs from the engine and store them in a safe place. Do not connect the spark plugs to the spark plug caps.
 - Pour a tablespoon (15 – 20 cc) of clean engine oil into each cylinder and cover the spark plug holes with a piece of cloth.

(cont'd)

 Tips 137






Storing Your Honda

- With the engine stop switch in the RUN position, press the start button several times to crank the engine and distribute the oil.
 - Reinstall the spark plugs and spark plug caps.
7. Remove the battery and charge it fully. Store it in an area protected from freezing temperatures and direct sunlight. Slow charge the battery (page 126) once a month.
 8. Wash and dry your motorcycle. Wax all painted surfaces. Apply rust-inhibiting oil to the chrome pieces.
 9. Inflate the tires to their recommended pressures (page 116).
 10. Store your motorcycle in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
 11. Cover your motorcycle with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.

 138 Tips






Storing Your Honda

Removal from Storage

Refer to *Safety Precautions* on page 56 .

1. Uncover and clean your motorcycle.
2. If your motorcycle has been stored for more than four months — change the engine oil (page 84).
3. If your motorcycle has been stored for more than two months — ask your Honda dealer to drain and replace the fuel.
4. Charge the battery (page 127) as required. Install the battery.
5. Perform a pre-ride inspection (page 29), then test-ride your motorcycle at low speeds.

 Tips 139






Transporting Your Motorcycle

If your motorcycle needs to be transported, it should be carried on a motorcycle trailer, or a truck or trailer with a flatbed area. For information about 24-hour emergency assistance, see page 201 (USA only). Do not tow your motorcycle, as towing can seriously damage the transmission.

When contacting a towing or transporting service, be sure to ask if they have a flatbed area, a loading ramp or power ramp to safely lift the motorcycle, and motorcycle tie-down straps.

 140 Tips






You & the Environment

Owning and riding a motorcycle can be enjoyable, but you must do your part to protect nature.


Following are tips on how you can be an environmentally-responsible motorcycle owner.

- **Choose Sensible Cleaners.** Use a biodegradable detergent when you wash your motorcycle. Avoid aerosol spray cleaners that contain chlorofluorocarbons (CFCs) which damage the atmosphere's protective ozone layer. Don't throw cleaning solvents away; see the following guidelines for proper disposal.

 
- **Recycle Wastes.** It's illegal and thoughtless to put used engine oil in the trash, down a drain, or on the ground. Used oil, gasoline, coolant, and cleaning solvents contain poisons that can hurt refuse workers and contaminate our drinking water, lakes, rivers, and oceans. Before changing your oil, make sure you have the proper containers. Put oil and other toxic wastes in separate sealed containers and take them to a recycling center. Call your local or state office of public works or environmental services to find a recycling center in your area, and to get instructions on how to dispose of non-recyclable wastes.




03/03/07 13:19:28 31MEM600_151

 

142 Tips

 

 


Taking Care of the Unexpected

This section discusses the more common problems that can occur with your motorcycle while you're riding. It tells you how to evaluate each problem and what actions you can take to try to resume riding. If the problem cannot be safely solved, this section also gives instructions on the proper way to have your motorcycle transported.

For information about transporting your motorcycle, see page 140 .

General Guidelines	144
If Your Engine Quits or Won't Start	145
If You Have a Flat Tire	150
If Your Engine Overheats	160
If the Low Oil Pressure Indicator Lights	162
If a Fuse Blows.....	163
If You Crash	167
If You Lose Your Key	168
If Your Battery is Low (or Dead)	169

 



Taking Care of the Unexpected

General Guidelines

Keeping your motorcycle well-maintained is the best way to reduce the possibility of having a problem on the road. However, since problems can arise even with well-maintained machines, you may consider subscribing to an emergency roadside service plan. (USA only: For information about the Honda Rider's Club of America, see page 201 .)

 
Remember to take along your owner's manual, the tool kit that came with your motorcycle, and any other items (such as tire repair supplies and additional tools) that might help you solve a problem on your own.

 
Should you ever have a problem while riding, please follow these guidelines:

- Always put personal safety first.
- Take time to assess the situation and your options before deciding what to do.
- If the problem is relatively minor and you have the tools, supplies, and skills to make a temporary repair, be sure to have permanent repairs made as soon as possible.
- Do not continue riding if you are hurt or your motorcycle is not in safe riding condition.

Additional recommendations for specific problems follow.

144 Taking Care of the Unexpected






If Your Engine Quits or Won't Start

Proper operation and maintenance can prevent starting and engine performance problems. In many cases, the cause of the problem may be a simple operational oversight.

If you have a problem starting the engine — or experience poor engine performance — the following information may help you. If you can't correct the problem, see your Honda dealer.

 If your motorcycle won't start, listen as you press the start button. If you don't hear the starter motor turning, refer to the *Starter motor doesn't operate* symptom. If you can hear the starter motor working normally, refer to the *Starter motor works, but the engine won't start* symptom.






If Your Engine Quits or Won't Start

SYMPTOM: Starter motor doesn't operate.	
POSSIBLE CAUSE	WHAT TO DO
ignition switch OFF	Turn the ignition switch ON.
engine stop switch OFF	Turn the engine stop switch to RUN.
transmission not in neutral	Shift into neutral.
side stand down (when transmission not in neutral)	Raise the side stand. Put the transmission in neutral, pull the clutch lever in, or raise the side stand.
blown fuse	Replace with a new fuse of the same rating (page 163).
battery lead loose	Tighten the battery lead.
dead battery	Charge the battery (page 127). If charging doesn't help, see your Honda dealer.
faulty starter motor	If all possible causes are negative, the starter motor may be faulty. See your Honda dealer.

 
146 Taking Care of the Unexpected





If Your Engine Quits or Won't Start

SYMPTOM: Starter motor works, but the engine won't start.	
POSSIBLE CAUSE	WHAT TO DO
out of fuel	Fill the fuel tank.
flooded engine	See <i>Flooded Engine</i> (page 40).
loose or unconnected spark plug caps	Install the spark plug caps securely. If the engine still won't start, see your Honda dealer.
loose battery cables	Tighten the battery terminal bolts.
weak battery	Charge the battery (page 127). If charging doesn't help, see your Honda dealer.

 




If Your Engine Quits or Won't Start

SYMPTOM: Engine starts, but stalls as you shift into gear.	
POSSIBLE CAUSE	WHAT TO DO
side stand down	Raise the side stand. Start again.

SYMPTOM: Engine starts, but runs poorly.	
POSSIBLE CAUSE	WHAT TO DO
idles roughly, too fast, stalls	Check engine idle adjustment (page 103). If the problem persists, see your Honda dealer.
overheating	Check the coolant temperature indicator. Refer to <i>If Your Engine Overheats</i> , page 160.
low oil pressure	Check the low oil pressure indicator. Refer to <i>If the Low Oil Pressure Indicator Lights</i> , page 162 .
runs erratically, misfires	See your Honda dealer.
blubbers (rich fuel mixture)	See your Honda dealer.

 
148 Taking Care of the Unexpected





If Your Engine Quits or Won't Start

SYMPTOM: Engine starts, but runs poorly. (cont'd)	
POSSIBLE CAUSE	WHAT TO DO
sooty exhaust (rich fuel mixture)	See your Honda dealer.
detonates or pings under load	If applicable, switch to the recommended octane gasoline (page 76) or change your brand of gasoline. If the problem persists, see your Honda dealer.
afterfires (backfires)	See your Honda dealer.
pre-ignition (runs on after ignition switched OFF)	See your Honda dealer.

 



If You Have a Flat Tire

A flat tire is always unwelcome, especially if you are far from help. If you think you are losing air, or you hit a pothole or hard object, pull safely to the side of the road so you can inspect the tires and assess the situation. (Be sure to park on a firm, level surface and use the side stand for support.) You should examine the tire treads and sidewalls for foreign objects or damage. If you find a tire that has been punctured or damaged, you have two options.

Option 1:

Have Your Motorcycle Transported

If a tire has a major puncture or a cut in the tread or sidewall, or the bead has come loose from the rim, there is probably not much you can do except have your motorcycle transported to a Honda dealer


or other qualified service facility. (USA only: For information about 24-hour emergency roadside assistance, see page 201 .) Even with a simple puncture, this may be the safest and least troublesome solution. For transporting instructions, see page 140.


Option 2:

Make a Temporary Roadside Repair

If a tire has only a minor nail puncture and is not completely flat, you may be able to make an emergency repair that could allow you to continue riding to where you can get the tire replaced or permanently repaired.

  150 Taking Care of the Unexpected





If You Have a Flat Tire

⚠ WARNING

Riding your motorcycle with a temporary tire repair can be risky. If the temporary repair fails, you can crash and be seriously injured or killed.

 
If you must ride with a temporary tire repair, ride slowly and carefully and do not exceed 30 mph (50 km/h) until the tire is permanently repaired or replaced.

Due to the uncertainty of any temporary repair, you should ride slowly (not over 30 mph, 50 km/h) and carefully (preferably without a passenger or cargo) until the tire is replaced or permanently repaired. Stop

frequently and check the air pressure. If the tire is losing pressure, it may be unsafe to continue riding. As the tire gets low, it will affect the handling of your motorcycle (especially with a passenger and cargo) and it may overheat and blow out.

Types of Temporary Repairs

The following types of temporary repairs generally require a source of air to inflate the tire. Possible sources include CO₂ cartridges or cans of compressed air designed to inflate a tire.






If You Have a Flat Tire


- **Inflate the tire:** Tubeless tires have some self-sealing ability if they are punctured and the result is usually just a slow leak. If this is the case, you can try inflating the tire to see if it will hold air pressure. If you can see a nail or other object embedded in the tire tread, do not remove it at this time.
- **Plug the hole:** The idea here is to do something to temporarily stop the leak. If you have a tubeless tire repair kit, you can pull out the nail and try inserting an external plug in the puncture. Follow the instructions that came with the repair kit and be sure to inflate the tire to the correct pressure.

Should You Repair or Replace a Tire?

We strongly recommend that you replace, not permanently repair, any tire that is punctured or damaged, even if the tire has only a minor puncture. For a full discussion of repairs and replacement, see page 119.

  152 Taking Care of the Unexpected





If You Have a Flat Tire

Emergency Front Wheel Removal/Installation


Refer to *Safety Precautions* on page 56 .

We recommend wheel removal be done only by your Honda dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.

Removal

1. Park your motorcycle on a firm, level surface.
2. Carefully raise the center of the motorcycle with a chain hoist.


RIGHT SIDE

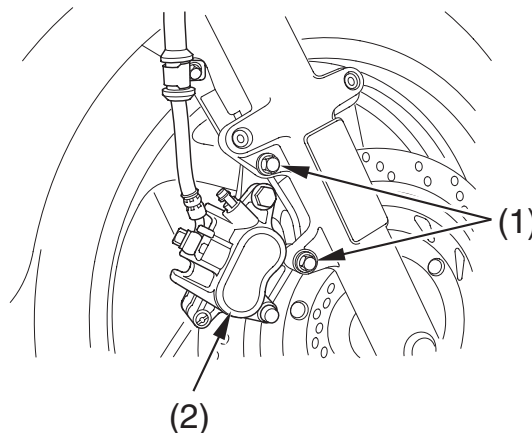

- (1) fixing bolts
(2) brake caliper assembly

(cont'd)

 Taking Care of the Unexpected 153






If You Have a Flat Tire

3. Remove the fixing bolts (1) and remove the right caliper assembly (2).
 - To avoid damage to the brake hose during removal, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.
 - Avoid getting grease, oil, or dirt on the disc or pad surfaces. Any contamination can cause poor brake performance or rapid pad wear after reassembly.

4. Remove the axle bolt (3), and then loosen the right and left axle pinch bolts (4).


RIGHT FRONT

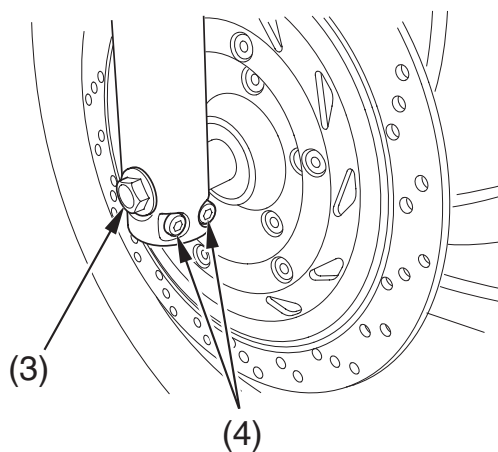

(3) axle bolt

(4) axle pinch bolts

 154 Taking Care of the Unexpected






If You Have a Flat Tire


5. Remove the front axle (5), wheel and side collars.
- Avoid depressing the brake lever and brake pedal when the wheel is off the motorcycle. This will force the caliper pistons out of the cylinders. The result will be loss of brake fluid. If this occurs, the brake system will require service. See your Honda dealer for this service.

LEFT FRONT

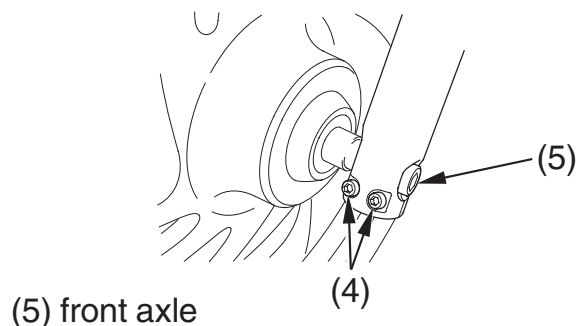


Installation

1. Position the wheel between the fork legs. Install the side collars and insert the front axle shaft from the left side, through the left fork leg and wheel hub.
 - To avoid damaging the brake pads while installing the wheel, carefully fit the brake disc between the pads.
2. Align the index line (6) of the axle shaft with the recessed surface (7) of the fork leg.

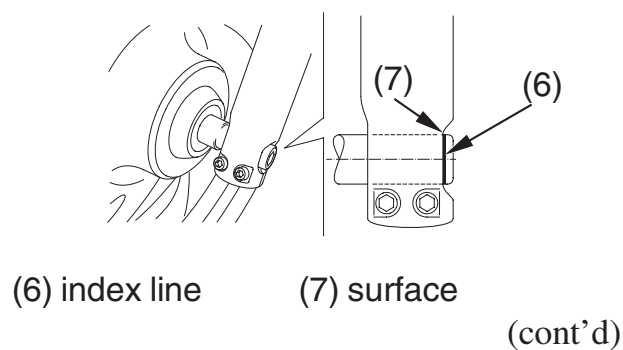

Taking Care of the Unexpected 155

 




If You Have a Flat Tire

3. Tighten the axle pinch bolts on the left fork leg to the specified torque:
16 lbf·ft (22 N·m , 2.2 kgf·m)
4. Tighten the axle bolt to the specified torque:
43 lbf·ft (59 N·m , 6.0 kgf·m)
5. Install the brake caliper assembly onto the fork leg.
To avoid damaging the brake pads while installing the brake caliper assembly, carefully fit the brake disc between the pads.
6. Install the caliper fixing bolts and tighten to the specified torque:
22 lbf·ft (30 N·m , 3.1 kgf·m)
7. Operate the front brake and pump the fork several times. Check for free wheel rotation after the brake is released. Recheck the wheel if the brake drags or the wheel does not rotate freely.

8. Tighten the axle pinch bolts on the right fork leg to the specified torque:
16 lbf·ft (22 N·m , 2.2 kgf·m)

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.

 156 Taking Care of the Unexpected





Emergency Rear Wheel Removal/Installation

Refer to *Safety Precautions* on page 56 .

We recommend wheel removal be done only by your Honda dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.


Removal

1. Park your motorcycle on a firm, level surface.
2. Carefully raise the center of the motorcycle with a chain hoist.

If You Have a Flat Tire


3. While holding the other end of the axle shaft (1) with a wrench, remove the axle nut (3).

LEFT REAR

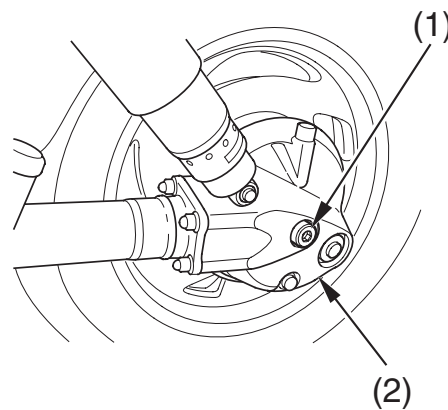

- (1) axle shaft
(2) final drive gear case

 
(cont'd)





If You Have a Flat Tire

RIGHT REAR

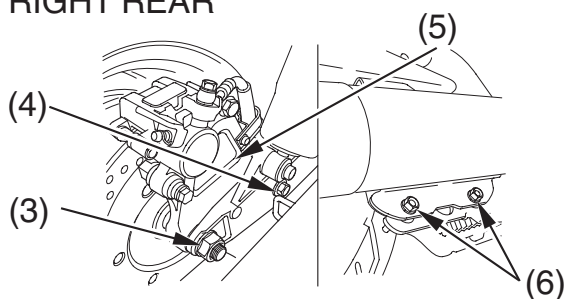


- | | |
|------------------------|---------------------------|
| (3) axle nut | (5) brake bracket bolt |
| (4) brake bracket bolt | (6) muffler bracket bolts |


4. Remove the muffler bracket bolts (6).
5. Remove the rear brake bracket bolt (4).
6. Pull the axle shaft out.
7. Remove the rear brake bracket (5).
8. Move the wheel to the right to separate it from the final drive gear case (2), avoiding the muffler to right side.

9. Remove the wheel and side collar, keeping the muffler on right side.

- To avoid damage to the brake hose during removal, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.
- Avoid getting grease, oil, or dirt on the disc or pad surfaces. Any contamination can cause poor brake performance or rapid pad wear after reassembly.
- Avoid depressing the brake pedal when the wheel is off the motorcycle. This will force the caliper pistons out of the cylinders. The result will be a loss of brake fluid. If this occurs, the brake system will require service. See your Honda dealer for this service.

  158 Taking Care of the Unexpected





If You Have a Flat Tire

Installation

 
Before installing the wheel, check that the wheel hub and final drive gear splines are coated with molybdenum disulfide paste (USA only: Pro Honda Moly 60 Paste, or equivalent).

1. Position the wheel between the swingarm and the final drive gear case, be sure the splines on the wheel hub fit into the final drive gear case.
2. Install the side collar, rear brake bracket and rear brake bracket bolt.
 - To avoid damaging the brake pads while setting the brake caliper assembly over the brake disc, carefully fit the brake disc between the pads.
3. Insert the rear axle shaft from the left side, through the final drive gear case, wheel hub and rear brake bracket.

4. Tighten the rear brake bracket bolt to the specified torque:
51 lbf·ft (69 N·m , 7.0 kgf·m)
5. Tighten the axle nut to the specified torque:
81 lbf·ft (110 N·m , 11.2 kgf·m)
6. Install the muffler bracket bolts and tighten to the specified torque:
25 lbf·ft (34 N·m , 3.5 kgf·m)
7. After installing the wheel, apply the brake several times. Check for free wheel rotation after the brake is released. Recheck the wheel if the brake drags or the wheel does not rotate freely.

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.

Taking Care of the Unexpected 159





If Your Engine Overheats

Normally, the temperature of the coolant in the cooling system will rise to a level about midway between cold and boiling. Hot weather may cause the temperature to rise higher than normal. So will temporary stress such as climbing a hill. If you're stuck in stop-and-go traffic, the temperature may climb some, but the radiator fan is designed to prevent overheating. Be aware of these variations.

 
If the coolant temperature indicator (page 13) comes on for no apparent reason, pull safely to the side of the road. If possible, park in a shady area.

 
NOTICE

Continuing to ride with an overheated engine can cause serious engine damage.

- A steaming engine indicates a coolant leak. Shut the engine off and wait until the steaming stops. Look for a leak, but don't touch the engine or radiator system. Let everything cool off first.
- If there's no obvious problem, leave the engine on so the fan and coolant circulating system can continue working. Monitor the temperature indicator. The indicator may turn off after a brief stop with no load on the engine.

160 Taking Care of the Unexpected





If Your Engine Overheats

 
- Check the radiator fan.
If the fan is not working, turn the engine off. Open the fuse box (page 163) and check the radiator fan fuse. If the fuse is blown, replace it with the proper (same rating) spare fuse. Start the engine. If the temperature indicator comes on and stays on, turn the engine off.
If the radiator fan is working, visually check the coolant level in the reserve tank, located just behind the crankcase. It isn't necessary to touch the radiator system.
- If the reserve tank is low or empty, don't ride without adding coolant (page 90). After adding coolant, turn the engine on and check the temperature indicator. If the indicator doesn't turn off, do not ride. The engine needs repair. Transport

your motorcycle to a Honda dealer (page 140).

If the temperature drops to normal, check the coolant level. If it has gone down, add more coolant.

If you are able to resume riding, continue to monitor the temperature indicator frequently.

If there's a mild leak, you can ride for awhile, carefully watching the indicator. Be prepared to stop and add more coolant or water. If the leak is bad, transport your motorcycle to a Honda dealer (page 140).





If the Low Oil Pressure Indicator Lights

If you check your engine oil level regularly, you should never see the low oil pressure indicator while riding. Normally, it will only light momentarily when you turn the ignition switch ON. Occasionally, it may flicker at or near idling speed.

Low oil pressure may be caused by an oil leak, a low oil level, or some problem in the engine's lubrication system.

If the indicator comes on while you're riding, don't ignore it. Pull safely to the side of the road. If possible, pull the clutch lever in and coast to a stop. Stop the engine as soon as it's safe to do so.

 
NOTICE

Continuing to ride with low oil pressure can cause serious engine damage.

- Check for an oil leak.
- Then check the oil level. If necessary, add the recommended oil (page 80) to the upper level mark. If you must leave your motorcycle to get oil, secure it as much as possible.
- After adding oil, start the engine, and check that the low oil pressure indicator goes off. Check for a possible leak.

If the indicator goes off and there is no leak — resume riding. If there is a leak — do not ride the motorcycle until the leak is repaired by a Honda dealer.

162 Taking Care of the Unexpected





If a Fuse Blows

All of the electrical circuits on your motorcycle have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your motorcycle stops working, the first thing you should check for is a blown fuse.

Determine from the chart on the circuit fuse box cover which fuse or fuses control that component. Check those fuses first, but check all the fuses before looking elsewhere for another possible cause of the problem. Replace any blown fuses and check component operation.

- The main fuse and spare are located on the starter magnetic switch behind the right side cover.
- The circuit fuse box (including spare fuses) is located behind the right side cover.


Recommended Fuses


main fuse	30A
other fuses	10A, 5A

1. To prevent an accidental short circuit, turn the ignition switch OFF before checking or replacing the fuses.

(cont'd)

  
Taking Care of the Unexpected 163





If a Fuse Blows


RIGHT SIDE

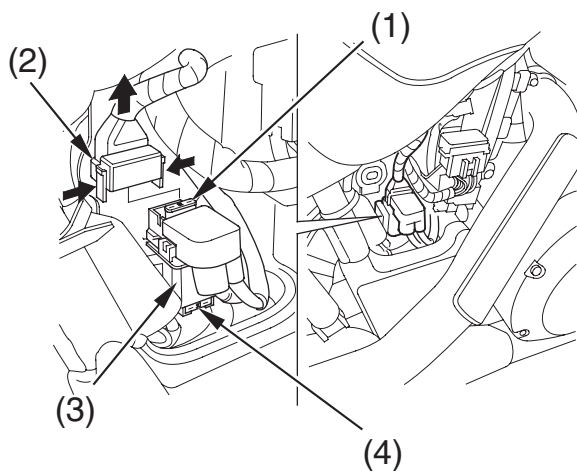

- (1) main fuse
- (2) wire connector
- (3) starter magnetic switch
- (4) spare main fuse


Main Fuse Access:

2. To access the main fuse (1), remove the right side cover (page 75).
3. Disconnect the wire connector (2) of the starter magnetic switch (3).
4. Pull the main fuse out. If it is blown (5), install the spare main fuse (4).
5. Reconnect the wire connector.

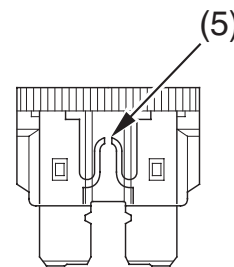

(5) blown fuse

 164 Taking Care of the Unexpected






If a Fuse Blows

Circuit Fuse Access:

6. Open the fuse box cover (6).

RIGHT SIDE

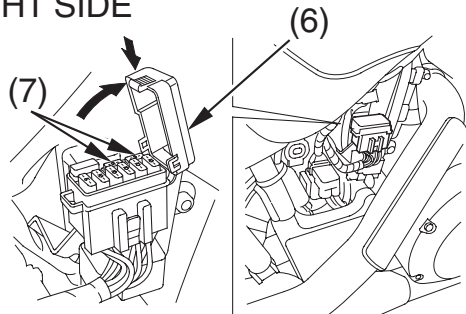


(6) cover

(7) spare fuses

7. To check or replace a circuit fuse, pull the old fuse out of its retaining clips. Look for a burned wire inside the fuse. If the fuse is blown (8), replace it with a spare fuse (7) of the same rating or lower.

 CIRCUIT FUSE



(8) blown fuse

 
8. Close the fuse box cover.

9. Install the right side cover.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.






If a Fuse Blows


If you do not have a spare fuse and you cannot ride the motorcycle without fixing the problem, take a fuse of the same rating or a lower rating from one of the other circuits that you can do without temporarily.

If you replace a blown fuse with a spare fuse that has a lower rating, replace the fuse with the correct rating as soon as you can. Also remember to replace any spare fuses that were installed.

If the replacement fuse of the same rating burns out in a short time, there is probably a serious electrical problem on your motorcycle. Leave the blown fuse in that circuit and have your motorcycle checked by your Honda dealer.

  166 Taking Care of the Unexpected






If You Crash

Personal safety is your first priority after any accident. If you or anyone else has been injured, take time to assess the severity of the injuries and whether it is safe to continue riding. Call for emergency assistance if needed. Also follow applicable laws and regulations if another person or vehicle is involved in the accident.

If you decide you are capable of riding safely, carefully inspect your motorcycle for damage and determine if it is safe to ride. Check the tightness of critical nuts and bolts securing such parts as the handlebar, control levers, brakes, and wheels.

If there is minor damage, or you are unsure about possible damage, ride slowly and cautiously. Sometimes, crash damage is hidden or not immediately apparent, so you should have your motorcycle thoroughly checked at a qualified service facility as soon as possible. Also, be sure to have your Honda dealer check the frame and suspension after any serious crash.

 If your motorcycle cannot be ridden, see *Transporting Your Motorcycle*, page 140.






If You Lose Your Key


Be sure to record your key number in the Quick Reference section at the rear of the manual. You'll need this number to have a duplicate key made.

A lost key won't be a problem if you take preventative action. Store one duplicate key in a safe place at home and carry a second duplicate in your wallet.

If you lose your key and aren't carrying a duplicate, either get your spare or have one made. If you don't know your key number, call the dealer you purchased your Honda from. They may have it listed in their records. If they don't, transport your motorcycle to them or the nearest Honda dealer. The dealer will probably have to remove the ignition switch assembly to find the key number so they can make a key for you.

  168 Taking Care of the Unexpected






If Your Battery Is Low (or Dead)


Jump starting is not recommended, especially if you use an automobile battery. The greater amperage of an automobile battery when the car engine is running can damage your motorcycle's electrical system.

Bump starting is also not recommended.

 
If you can't charge the battery or it appears unable to hold a charge, contact your Honda dealer.




03/03/07 13:23:28 31MEM600_179

 

170 Taking Care of the Unexpected

 

 

Technical Information

This section contains dimensions, capacities, and other technical data, plus information on government requirements and how to break-in your motorcycle.

Vehicle Identification.....	172
Specifications	175
Break-in Guidelines.....	182
High Altitude Carburetor Adjustment.....	183
Emission Control Systems	184
Catalytic Converter	189
Oxygenated Fuels	190






Vehicle Identification

Serial Numbers


The frame, VIN, and engine serial numbers are required when you register your motorcycle. They may also be required when ordering replacement parts. You may record these numbers in the Quick Reference section at the rear of this manual.

The VIN (vehicle identification number) appears on the Safety Certification Label attached to the left side of the down tube.

LEFT SIDE

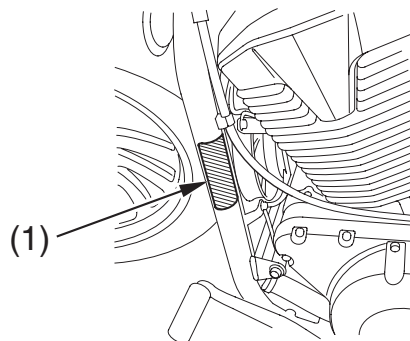

 (1) VIN






Vehicle Identification

The frame number (2) is stamped on the right side of the steering head.


RIGHT SIDE

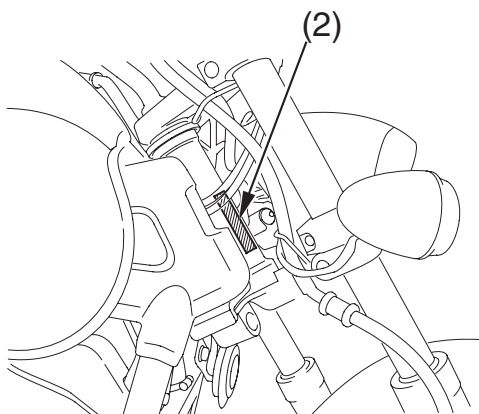


(2) frame number

The engine number (3) is stamped on the top of the crankcase.

LEFT SIDE

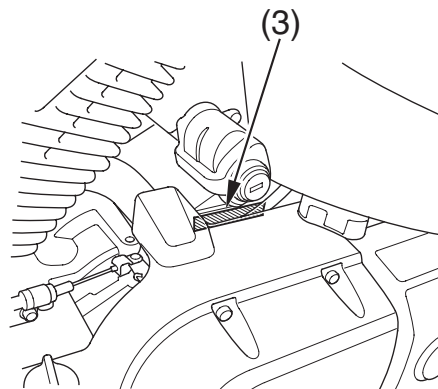

 (3) engine number






Vehicle Identification

Color Label & Code

The color label (1) is attached to the frame behind the left side cover. Remove the left side cover (page 74) to check the label.


The color code is helpful when ordering replacement parts. You may record the color and code in the Quick Reference section at the rear of this manual.


LEFT SIDE

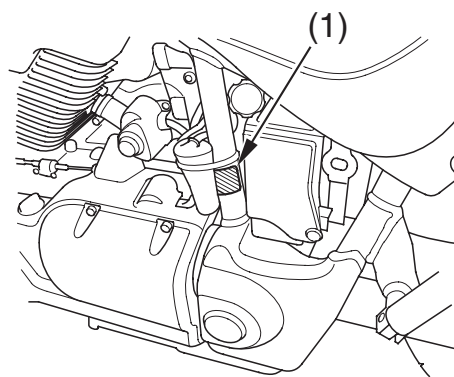

(1) color label

  174 Technical Information






Specifications

Dimensions	
overall length	94.5 in (2,400 mm)
overall width	36.2 in (920 mm)
overall height	43.7 in (1,110 mm)
wheelbase	65.6 in (1,665 mm)
ground clearance	4.9 in (125 mm)

Weight	
dry weight	653 lbs (296 kg) 657 lbs (298 kg) California only

 





Specifications

Fuel & Lubricants	
fuel recommendation	unleaded gasoline, pump octane number of 86 or higher
fuel tank capacity	4.76 US gal (18.0 ℓ) including reserve
engine oil capacity	after disassembly: 4.5 US qt (4.3 ℓ) after draining: 3.7 US qt (3.5 ℓ) after draining & oil filter change: 3.9 US qt (3.7 ℓ)
engine oil recommendation	API Service Classification SG or higher except oils labeled as energy conserving on the circular API service label, SAE 10W-40, JASO T 903 standard MA, Pro Honda GN4 or HP4 (without molybdenum additives) 4-stroke oil (USA & Canada) or Honda 4-stroke oil (Canada only), or an equivalent motorcycle oil
final drive oil capacity	after draining: 4.1 US oz (120 cm ³)
cooling system, recommendation	Pro Honda HP Coolant or an equivalent high quality ethylene glycol antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines
cooling system, capacity	2.9 US qt (2.7 ℓ)

  176 Technical Information







Specifications

Capacities	
passenger capacity	Operator and one passenger
maximum weight capacity	USA: 402 lbs (182 kg) Canada: 410 lbs (186 kg) rider, passenger, all cargo and accessories

Engine Specifications	
displacement	80.0 cu-in (1,312 cm ³)
bore & stroke	3.52 × 4.11 in (89.5 × 104.3 mm)
compression ratio	9.2 : 1
spark plug (standard)	DCPR6E (NGK) or XU20EPR-U (DENSO)
spark plug (high speed riding)	DCPR7E (NGK) or XU22EPR-U (DENSO)
spark plug gap	0.031 – 0.035 in (0.80 – 0.90 mm)
valve clearance (cold)	intake 0.006 in (0.15 mm) exhaust 0.012 in (0.30 mm)
idle speed	900 ± 100 rpm

 


 

Specifications

Power Transmission	
primary reduction	1.935
gear ratio, 1st	1.900
2nd	1.148
3rd	0.912
4th	0.778
5th	0.697
secondary reduction	0.944
final reduction	2.818
final drive	shaft

 178 Technical Information






Specifications

Chassis & Suspension	
caster	32°00'
trail	5.9 in (149 mm)
tire size, front	110/90 – 19M/C 62H
tire size, rear	170/80 – 15M/C 77H
tire pressure, front (cold)	33 psi (225 kPa , 2.25 kgf/cm ²)
tire pressure, rear (cold)	33 psi (225 kPa , 2.25 kgf/cm ²) – less than 200 lbs (90 kg) of added weight 36 psi (250 kPa , 2.50 kgf/cm ²) – more than 200 lbs (90 kg) of added weight

Electrical	
battery	12V – 12AH
generator	0.364 kW/5,000 rpm

 




Specifications

Lights	
headlight	12V – 60/55W
brake/tail light	12V – 21/5W
license light	12V – 5W
turn signal lights	12V – 21/5W (front) 12V – 21W (rear)

 180 Technical Information







Specifications

Fuses	
main fuse	30A
other fuses	10A, 5A

Torque Specifications	
oil drain bolt	22 lbf·ft (29 N·m , 3.0 kgf·m)
oil filter	20 lbf·ft (26 N·m , 2.7 kgf·m)
front wheel axle bolt	43 lbf·ft (59 N·m , 6.0 kgf·m)
front wheel caliper fixing bolts	22 lbf·ft (30 N·m , 3.1 kgf·m)
front wheel axle pinch bolts	16 lbf·ft (22 N·m , 2.2 kgf·m)
rear wheel axle nut	81 lbf·ft (110 N·m , 11.2 kgf·m)
rear brake bracket bolt	51 lbf·ft (69 N·m , 7.0 kgf·m)
muffler bracket bolts	25 lbf·ft (34 N·m , 3.5 kgf·m)
final drive drain bolt	14 lbf·ft (20 N·m , 2.0 kgf·m)

 

 


Break-in Guidelines

Help assure your motorcycle's future reliability and performance by paying extra attention to how you ride during the first 300 miles (500 km).

During this period, avoid full-throttle starts and rapid acceleration.

 182 Technical Information






High Altitude Carburetor Adjustment

Your engine's air-fuel mixture becomes overly rich when operated at high altitudes. Above 6,500 feet (2,000 m), a rich mixture can cause driveability problems, reduce engine performance, and increase fuel consumption. To compensate, you can have the carburetor adjusted for high altitude riding. See your Honda dealer.

However, the carburetor must be returned to standard factory specifications before riding again at lower altitudes (below 5,000 feet, 1,500 m). See your Honda dealer.

 Sustained riding at lower altitudes with the lean high-altitude setting may cause rough idling, stalling, or engine damage from overheating.





Emission Control Systems

Exhaust Emission Requirements

The U. S. Environmental Protection Agency (EPA), the California Air Resources Board (CARB), and Transport Canada require that your motorcycle comply with applicable exhaust emissions standards during its useful life, when operated and maintained according to the instructions provided.


Noise Emission Requirements

The EPA also requires that motorcycles built after January 1, 1983 comply with applicable noise emission standards for one year or 3,730 miles (6,000 km) after the time of sale to the ultimate purchaser, when operated and maintained according to the instructions provided. (USA only)

Warranty Compliance


Compliance with the terms of the Distributor's Warranties for Honda Motorcycle Emission Control Systems is necessary in order to keep the emissions system warranty in effect. (USA only)


UNDER SEAT

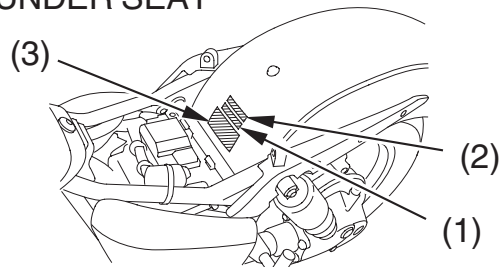

- (1) vehicle emission control information label
- (2) vehicle emission control information label (Canada only)
- (3) vacuum hose routing diagram label (California only)

  184 Technical Information





Emission Control Systems

 
The Vehicle Emission Control Information label (1) (2) is attached on the rear fender under the seat.

The Vacuum Hose Routing Diagram label (3) is attached on the rear fender under the seat (California only).

Source of Exhaust Emissions

The combustion process produces carbon monoxide (CO), oxides of nitrogen (NO_x), and hydrocarbons (HC). Control of hydrocarbons and oxides of nitrogen is very important because, under certain conditions, they react to form photochemical smog when subjected to sunlight. Carbon monoxide does not react in the same way, but it is toxic.

Honda Motor Co., Ltd. utilizes lean carburetor settings and other systems to reduce carbon monoxide and hydrocarbons.





Emission Control Systems

Exhaust Emission Control System

The exhaust emission control system includes a secondary air supply system, and an oxidation catalytic converter.

No adjustment to these systems should be made although periodic inspection of the components is recommended.

Secondary Air Injection System

 
The secondary air injection system introduces filtered air into the exhaust gases in the exhaust port. The secondary air injection system helps improve emission performance.

Oxidation Catalytic Converter

The oxidation catalytic converter is in the exhaust system. Through chemical reactions, they convert HC and CO in the engine's exhaust to carbon dioxide (CO₂) and water vapor.

Crankcase Emission Control System

The engine is equipped with a closed crankcase system to prevent discharging crankcase emissions into the atmosphere. Blow-by gas is returned to the combustion chamber through the air cleaner and the carburetor.





Emission Control Systems

Evaporative Emission Control System (California only)

 
This motorcycle complies with the requirements of the California Air Resources Board (CARB) evaporative emission regulations. Fuel vapor from the fuel tank and carburetor is directed into the charcoal canister and air cleaner where it is absorbed and stored while the engine is stopped. When the engine is running and the purge control diaphragm valve is open, fuel vapor in the charcoal canister and air cleaner is drawn into the engine through the carburetor.

 
Problems That May Affect Motorcycle Exhaust Emissions

If you are aware of any of the following symptoms, have the vehicle inspected and repaired by your authorized Honda motorcycle dealer.

Symptoms:

1. Hard starting or stalling after starting
2. Rough idle
3. Misfiring or backfiring during acceleration
4. After-burning (backfiring)
5. Poor performance (driveability) and poor fuel economy






Emission Control Systems

Noise Emission Control System
TAMPERING WITH THE NOISE CONTROL SYSTEM IS PROHIBITED:
U. S. federal law prohibits, or Canadian provincial laws may prohibit the following acts or the causing thereof: (1) The removal or rendering inoperative by any person, other than for purposes of maintenance, repair or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use; or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE FOLLOWING ACTS:

 1. Removal of, or puncturing the muffler, baffles, header pipes or any other component which conducts exhaust gases.
2. Removal of, or puncturing of any part of the intake system.
3. Lack of proper maintenance.
4. Replacing any moving parts of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.





Catalytic Converter

 
This motorcycle is equipped with an oxidation catalytic converter. The catalytic converter contains precious metals that serve as catalysts, promoting chemical reactions to convert the exhaust gasses without affecting the metals.

The catalytic converter acts on HC and CO. A replacement unit must be an original Honda part or its equivalent.

The catalytic converter must operate at a high temperature for the chemical reactions to take place. It can set fire to any combustible materials that come near it. Park your motorcycle away from high grasses, dry leaves, or other flammables.

A defective catalytic converter contributes to air pollution, and can impair your engine's performance. Follow these guidelines to protect your motorcycle's catalytic converter.

- Always use unleaded gasoline. Even a small amount of leaded gasoline can contaminate the catalyst metals, making the catalytic converter ineffective.
- Keep the engine tuned-up.
- Have your motorcycle diagnosed and repaired if it is misfiring, backfiring, stalling or otherwise not running properly.





Oxygenated Fuels

Some conventional gasolines are being blended with alcohol or an ether compound. These gasolines are collectively referred to as oxygenated fuels. To meet clean air standards, some areas of the United States and Canada use oxygenated fuels to help reduce emissions. If you use an oxygenated fuel, be sure it is unleaded and meets the minimum octane rating requirement.

Before using an oxygenated fuel, try to confirm the fuel's contents. Some states/provinces require this information to be posted on the pump.

 
The following are the EPA-approved percentages of oxygenates:

 
ETHANOL (ethyl or grain alcohol) 10%
by Volume

You may use gasoline containing up to 10% ethanol by volume. Gasoline containing ethanol may be marketed under the name "Gasohol".

MTBE (Methyl Tertiary Butyl Ether) 15%
by Volume

You may use gasoline containing up to 15% MTBE by volume.





Oxygenated Fuels

METHANOL (methyl or wood alcohol) 5% by Volume

You may use gasoline containing methanol containing up to 5% methanol by volume as long as it also contains cosolvents and corrosion inhibitors to protect the fuel system. Gasoline containing more than 5% methanol by volume may cause starting and/or performance problems. It may also damage metal, rubber, and plastic parts of your fuel system.

 
If you notice any undesirable operating symptoms, try another service station or switch to another brand of gasoline.

Fuel system damage or performance problems resulting from the use of an oxygenated fuel containing more than the percentages of oxygenates mentioned above are not covered under warranty.


Oxygenated fuels can damage paint and plastic. Be careful not to spill fuel when filling the fuel tank. Wipe up any spills immediately.

NOTICE


Oxygenated fuels can damage paint and plastic. Damage caused by spilled fuel is not covered by warranty.




03/03/07 13:26:28 31MEM600_201

 

192 Technical Information

 


 

Consumer Information

This section contains information on your warranty and how to get an official Honda service manual.

Authorized Manuals	194
Warranty Coverage	197
Warranty Service	198
Contacting Honda.....	199
Your Honda Dealer	200
The Honda Rider's Club (USA only)	201
Reporting Safety Defects (USA only)	202

 



Authorized Manuals

The Service Manual (Publication Item No. 61MEA01) used by your authorized Honda dealer is available from Helm, Inc. (USA only, Canada: See your Honda dealer to order authorized manuals.)


Also available, but not necessary, to service your model is the Honda Common Service Manual (Publication No. 61CM001), which explains theory of operation and basic service information for various systems common to all Honda motorcycles, motor scooters and ATVs.

These Honda manuals are written for the professional technician, but most mechanically-capable owners should find them easy to use if they have the proper tools and observe proper safety standards. Special Honda tools are necessary for some procedures.

Publication Item No.	Description	Price Each*
61MEA01	2004 VTX1300S/VTX1300C Service Manual	\$60.00
61CM001	Common Service Manual	\$48.00
31MEM600	2004 VTX1300C Owner's Manual	\$16.00

* Prices are subject to change without notice and without incurring obligation.

 194 Consumer Information





Order On-Line: www.helminc.com

Order Toll Free: 1-888-CYCLE93 (1-888-292-5393)

(NOTE: For Credit Card Orders Only)

Monday — Friday 8:00 AM — 6:00 PM EST


OR


By completing this form you can order the materials desired. You can pay by check or money order, or charge to your credit card. Mail to Helm, Inc. at the address shown on the back of this order form (USA only).

Canada: See your Honda dealer to order authorized manuals.

Publication Item No.	Item Description	Qty.	Price Each*	Total Price
*Prices are subject to change without notice and without incurring obligation. Orders are mailed within 10 days. Please allow adequate time for delivery.		Sub Total		
		Mich. Purchasers Add 6 % Sales Tax		
		Handling Charge		\$4.00
		Grand Total		

  Consumer Information 195





Warranty Coverage

Your new Honda is covered by these warranties:

 
- Motorcycle Limited Warranty
- Exhaust Emission Warranty
- Noise Control Warranty

There are responsibilities, restrictions, and exclusions which apply to these warranties. Please read the Warranties Booklet given to you by your Honda dealer at the time of purchase. Be sure to keep your Honda owner's card with your Warranties Booklet (USA only).

It is important to realize that your warranty applies to defects in material or workmanship of your Honda. Your warranty coverage does not apply to normal wear or deterioration associated with using the motorcycle.

Your warranty coverage will not be voided if you choose to perform your own maintenance. However, you should have the proper tools and service information and be mechanically qualified. Failures that occur due directly to improper maintenance are not covered.

Almost all of your warranty coverage can be extended through the Honda Protection Plan (USA only). For more information, see your Honda dealer.






Warranty Service


Please remember that recommended maintenance interval servicing is not included in your warranty coverage. Additionally, your warranty does not apply to the normal wear of items (such as brakes, tires, etc.).

If you believe you have a problem with your motorcycle, call the service department of your Honda dealer. Make an appointment for an inspection and diagnosis. Remember, as the owner of the motorcycle, you will be asked to authorize that inspection. Your dealer will give you the results of the inspection. If the problem is covered under warranty, your dealer will perform the warranty repairs for you.

If you have questions about warranty coverage or the nature of the repair, it is best to talk to the service manager of your Honda dealer.

  Sometimes, in spite of the best intentions of all concerned, a misunderstanding may occur. If you aren't satisfied with your dealer's handling of the situation, we suggest you discuss your problem with the appropriate member of the dealership's management team. If the problem has already been reviewed with the Service Manager, Parts Manager, Sales Manager, etc., contact the Owner of the dealership or their designated representative.





Contacting Honda

Your owner's manual was written to cover most of the questions you might ask about your Honda. Any questions not answered in the owner's manual can be answered by your Honda dealer. If your dealer doesn't have the answer right away, they will get it for you.

If you have a difference of opinion with your dealer, please remember that each dealership is independently owned and operated. That's why it's important to work to resolve any differences at the dealership level.

If you wish to comment on your experiences with your Honda or with your dealer, please send your comments to the following address (USA only):

 
Motorcycle Division, American Honda Motor Co., Inc., P.O. Box 2220, Torrance, CA 90509-2220, mailstop: 100-4W-5B, telephone: (310) 532-9811.

Canada: Refer to the Warranties Booklet that was supplied with your vehicle.

Please include the following information in your letter:

- name, address, and telephone number
- product model, year, and frame/VIN serial number
- date of purchase
- dealer name and address

We will likely ask your Honda dealer to respond, or possibly acknowledge your comments directly.





Your Honda Dealer

Once you purchase your new Honda, get familiar with the organization of your Honda dealer so you can utilize the full range of services available.

The service department is there to perform regular maintenance and unexpected repairs. It has the latest available service information from Honda. The service department will also handle warranty inspections and repairs.

 
The parts department offers Genuine Honda parts, Pro Honda products, Hondaline accessories (USA only), and Honda accessories and products (Canada only). The same quality that went into your Honda can be found in Genuine Honda replacement parts. You'll also find comparable quality in the accessories and

 
products available from the parts department.

The sales department offers the Honda Care Protection Plan to extend almost all of your warranty coverage (USA only). Your Honda dealer can inform you about competition and other riding events in your area. You'll also find that your dealer is a source of information about American Honda's Rider Education Centers and the Honda Rider's Club of America (USA only).

We're sure you'll be as pleased with the service your Honda dealer continues to provide after the sale as you are with the quality and dependability of your Honda.

200 Consumer Information





The Honda Rider's Club (USA only)

 
One of the best ways to get the most enjoyment from owning your Honda is to join the Honda Rider's Club of America (HRCA). Your purchase of a new motorcycle, scooter or ATV from a participating Honda dealer entitles you to a complimentary one-year membership. The HRCA has hundreds of dealer-sponsored chapters throughout the USA. Some of the HRCA membership benefits include:

- 24-hr. emergency roadside assistance for your Honda or transport vehicle.
- Transportation for your Honda or transport vehicle to the nearest Honda dealer or service facility if roadside assistance can't get you going again.
- Reimbursement (to \$75) for motorcycle and scooter rider training from the Motorcycle Safety Foundation. Free

ATV rider training is available from the Specialty Vehicle Institute of America with the purchase of a new Honda ATV.

- A subscription to *Honda Red Rider*, a bi-monthly insider's magazine for all members.
- Special members-only HRCA website.
- Discounts from HRCA partners for both on and off-road riding schools and adventure packages.
- Hospitality at national events.
- Optional insurance, club pin, patch, etc.

Contact your Honda dealer for more information or call: 1-800-847-HRCA. For a complete list of all HRCA benefits and services, refer to your HRCA membership benefits manual or visit our website at www.honda.com.





Reporting Safety Defects (USA only)

 
If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying American Honda Motor Co., Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or American Honda Motor Co., Inc.


To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 (or 366-0123 in Washington, D.C. area) or write to: NHTSA, U.S. Department of Transportation, Washington, D.C. 20590.

You can also obtain other information about motor vehicle safety from the Hotline.

202 Consumer Information



03/03/07 13:27:55 31MEM600_212

 

Consumer Information 203

 




Table of Contents

The following presents the contents of each section of your owner's manual.

MOTORCYCLE SAFETY 1	Odometer/Tripmeter
Important Safety Information 2	Select and Reset button 22
Accessories & Modifications 5	BEFORE RIDING..... 25
Safety Labels 7	Are You Ready to Ride ? 26
INSTRUMENTS & CONTROLS 9	Protective Apparel 26
Component Locations 10	Rider Training 28
Indicators 13	Is Your Motorcycle Ready to Ride ? 29
Controls & Features	Pre-ride Inspection 29
Fuel Valve..... 17	Load Limits & Guidelines..... 32
Choke Knob 18	Loading 32
Ignition Switch 19	Load Limits 33
Start Button..... 20	Loading Guidelines 33
Engine Stop Switch 20	
Headlight Dimmer Switch 21	
Turn Signal Switch 21	
Horn Button 22	

204 Table of Contents

 




Table of Contents

BASIC OPERATION & RIDING..... 35

Safe Riding Precautions	36
Starting & Stopping the Engine	37
Preparation.....	37
Starting Procedure	38
Flooded Engine.....	40
How to Stop the Engine	41
Shifting Gears.....	42
Braking	44
Parking	46
Riding with a Passenger or Cargo.....	50

SERVICING YOUR HONDA 51

Before You Service Your Honda

The Importance of Maintenance.....	54
Maintenance Safety	55
Important Safety Precautions.....	56
Periodic Maintenance	58
Maintenance Schedule	60

Maintenance Record.....	65
-------------------------	----

Service Preparations

Component Locations	67
Tool Kit.....	70
Owner's Manual Storage.....	71
Storage Compartment.....	72
Seat Removal.....	73
Side Cover Removal.....	74

(cont'd)

 




Table of Contents

SERVICING YOUR HONDA (cont'd)

Service Procedures

Fluids & Filters

Fuel	76
Engine Oil & Filter.....	79
Coolant.....	88
Air Cleaner	92
Crankcase Breather.....	94
Final Drive Oil.....	95

Engine

Throttle	97
Clutch System.....	99
Engine Idle Speed.....	103
Spark Plugs	105

Chassis

Suspension	109
Brakes	112
Tires	116
Side Stand	123


Electrical

Battery.....	124
--------------	-----

Appearance Care	129
-----------------------	-----

TIPS..... 135

Storing Your Honda	136
Transporting Your Motorcycle	140
You & the Environment	141

 

 


Table of Contents

TAKING CARE OF THE UNEXPECTED 143

General Guidelines	144
If Your Engine Quits or Won't Start ...	145
If You Have a Flat Tire	150
If Your Engine Overheats	160
If the Low Oil Pressure Indicator	
Lights	162
If a Fuse Blows.....	163
If You Crash	167
If You Lose Your Key	168
If Your Battery is Low (or Dead)	169

TECHNICAL INFORMATION 171

Vehicle Identification.....	172
Specifications	175
Break-in Guidelines.....	182
High Altitude Carburetor	
Adjustment.....	183
Emission Control Systems	184

Catalytic Converter	189
Oxygenated Fuels	190


CONSUMER INFORMATION 193

Authorized Manuals	194
Warranty Coverage	197
Warranty Service	198
Contacting Honda.....	199
Your Honda Dealer	200
The Honda Rider's Club	
(USA only)	201
Reporting Safety Defects	
(USA only)	202

TABLE OF CONTENTS 204

INDEX 208

 QUICK REFERENCE





Index

A

- accessories 5
- air cleaner..... 92
- air pressure, tires..... 116
- American Honda, contacting..... 199
- apparel, protective 26
- appearance care 129
- authorized manual 194

 
B

 
- battery 124
- brakes,
 - fluid..... 112
 - pad wear..... 115
- braking 44
- break-in guidelines 182

- button,
 - odometer/tripmeter
select and reset..... 22

C

- capacity, fuel 77
- carburetor, altitude adjustment..... 183
- care, appearance 129
- choke knob..... 18
- cleaner, air..... 92
- cleaning, appearance care 129
- clutch system 99
- color label 174
- compartment,
 - owner's manual 72
 - storage..... 70
 - tool kit..... 71





Index

component locations,
 indicators and controls 10
 maintenance 67
 consumer information 193
 coolant..... 88
 coolant temperature indicator..... 16
 crankcase breather 94
 customer service 199

D

defects, safety 202
 display, odometer/tripmeter
 A & B..... 13, 22
 drive, final..... 95

E

 
emission control systems..... 184

engine,
 flooded..... 40
 idle speed 103
 low oil pressure..... 162
 number 173
 oil 79
 overheats 160
 pinging 76
 starting 37
 stop switch 20
 stopping..... 41
 won't start 145
 environment 141

F

final drive..... 95
 flat tire..... 150
 flooded engine 40

(cont'd)





Index

frame number 173
fuel,
 oxygenated..... 190
 recommendation 76
 tank capacity 77
 valve..... 17
fuses 163

G

gap, spark plug..... 107
gasohol..... 190
gasoline 76

 
H

headlight dimmer switch 21
helmet holder 48
high beam indicator 16
high altitude carburetor adjustment 183

Honda,
 contacting 199
 Rider’s Club..... 201
 dealer..... 200
Honda service manual 194
horn button..... 22

I

identification, vehicle..... 172
idle speed, engine 103
ignition cutoff system, side stand 37
ignition switch 19
indicators..... 13
inspection, pre-ride 29





Index

K

- key, lost..... 168
- kit, tool..... 70

L

 
- labels, safety 7
- limit, weight..... 33
- load limits 33
- loading guidelines..... 33
- location, components,
 - indicators & controls 10
 - maintenance..... 67
- lock, steering..... 47

M

- maintenance,
 - importance 54
 - periodic 58
 - record 65
 - safety..... 55
 - schedule 60
- manual, service 194
- manual, authorized 194
- maximum weight limit 33
- modifications 6

N

- numbers, serial..... 172





Index

O

odometer 13, 22

oil,

- engine..... 79
- final drive 95
- low pressure..... 162

operating controls 17

overheat, engine..... 160

owner’s manual storage..... 72

oxygenated fuels..... 190

P

parking 46

pinging, engine 76

plugs, spark..... 105

pre-load, rear suspension..... 110

pre-ride inspection..... 29

problems, unexpected..... 143

protective apparel 26

R

removal,

- seat 73
- side cover 74

 
reporting safety defects 202

rider training 3, 28

Rider’s Club, Honda..... 201

riding,

- basic operation..... 35
- clothing 26
- safety..... 3
- safety precautions..... 36
- with a passenger or cargo 50






Index

S

safety,		
important precautions	56	
labels	7	
reporting defects	202	
riding precautions	36	
schedule, maintenance	60	
seat removal	73	
serial numbers	172	
service,		
customer	199	
manuals	194	
warranty	198	
shifting gears	42	
side cover removal	74	
side stand	123	
side stand ignition cutoff system	37	
spark knock	76	
spark plugs	105	
specifications	175	
speedometer	13, 15	
stand, side	123	
start button	20	
starting,		
engine	37	
troubleshooting	145	
steering lock	47	
stop switch, engine	20	
stopping engine	41	
storage,		
compartment	70	
motorcycle	136	
owner's manual	72	
suspension, rear pre-load	110	
switch,		
headlight dimmer	21	
ignition	19	
turn signal	21	

 



Index

T

 
theft prevention tips..... 49
 throttle 97
 tires,
 air pressure..... 116
 flat..... 150
 replacing 121
 tool kit 71
 training, rider 3, 28
 transporting your motorcycle 140
 tripmeter..... 13, 22
 trouble, unexpected 143
 troubleshooting, starting..... 145
 turn signal indicators 13

V


valve, fuel 17
 vehicle identification no. (VIN)..... 172

W


warranty,
 coverage..... 197
 extended..... 197
 service 198
 washing your motorcycle 130
 weight limit..... 33
 wheels,
 front removal 153
 rear removal..... 157




03/03/07 13:29:04 31MEM600_224

 


Memo 215

 


03/03/07 13:29:06 31MEM600_225

 

216 Memo

 

 

Quick Reference

The following is a brief, but important collection of information you need to know about your Honda. You'll also find space to record important notes.

How To Avoid Costly Repairs

 
The engine of your Honda can be the most expensive component to repair. Proper maintenance, especially the use of the recommended fluids and filters, prevents premature wear and damage.

 
Frequent causes of costly repairs are:

- Engine oil: insufficient quantity, improper oil.
- Air cleaner: dirty, leaking because of improper installation (poor seal).

Record important information on the following page:

Quick Reference






Quick Reference

VIN/Frame No.	
Engine No.	
Frame No.	
Ignition Key No.	
Color Label	
Owner's Name	
Address	
City/State	
Phone	
Dealer's Name	
Address	
City/State	
Phone	
Service Mgr.	

 Quick Reference






Quick Reference

Scheduled Maintenance	Initial: 600 miles (1,000 km) Regular: every 4,000 miles (6,400 km)
Pre-ride Inspection	Check the following items each time before you ride (page 29): tires, leaks, loose parts, throttle, brakes, indicators, lights.
Periodic Checks	Check the following items monthly (page 58): tires, fluids, lights, freeplay, fuses, nuts & bolts.
Fuel/Capacity	unleaded gasoline, pump octane number 86 or higher 4.76 US gal (18.0 l)
Engine Oil	API Service Classification SG or higher except oils labeled as energy conserving on the circular API service label, SAE 10W-40, JASO T 903 standard MA, Pro Honda GN4 or HP4 (without molybdenum additives) 4-stroke oil or equivalent
Coolant	ethylene glycol antifreeze (silicate-free) for aluminum engines in 50/50 solution with Pro Honda HP Coolant or an equivalent distilled water
Maximum Weight Capacity	402 lbs (182 kg) 410 lbs (186 kg) Canada rider, passenger, all cargo and accessories

 Quick Reference





Quick Reference

Tires	Front: 110/90 – 19M/C 62H DUNLOP F24G Rear: 170/80 – 15M/C 77H DUNLOP K555J
Tire Pressure (cold)	Front: 33 psi (225 kPa , 2.25 kgf/cm ²) Rear: 33 psi (225 kPa , 2.25 kgf/cm ²) with less than 200 lbs (90 kg) of added weight 36 psi (250 kPa , 2.50 kgf/cm ²) with more than 200 lbs (90 kg) of added weight
Spark Plugs	standard: DCPR6E (NGK) or XU20EPR-U (DENSO) high speed riding: DCPR7E (NGK) or XU22EPR-U (DENSO)
Fuses	main: 30A other: 10A, 5A
Final Drive Oil	Hypoid Gear Oil SAE 80

Quick Reference

