


WIRING DIAGRAM FOR Bajaj Super

(12V-70W C.B.I. - CONTACT BREAKER IGNITION with A.C. Blinker)

12 V C.B. POINT IGNITION, AC INDICATOR, T' NOSE TYPE FOR SUPER

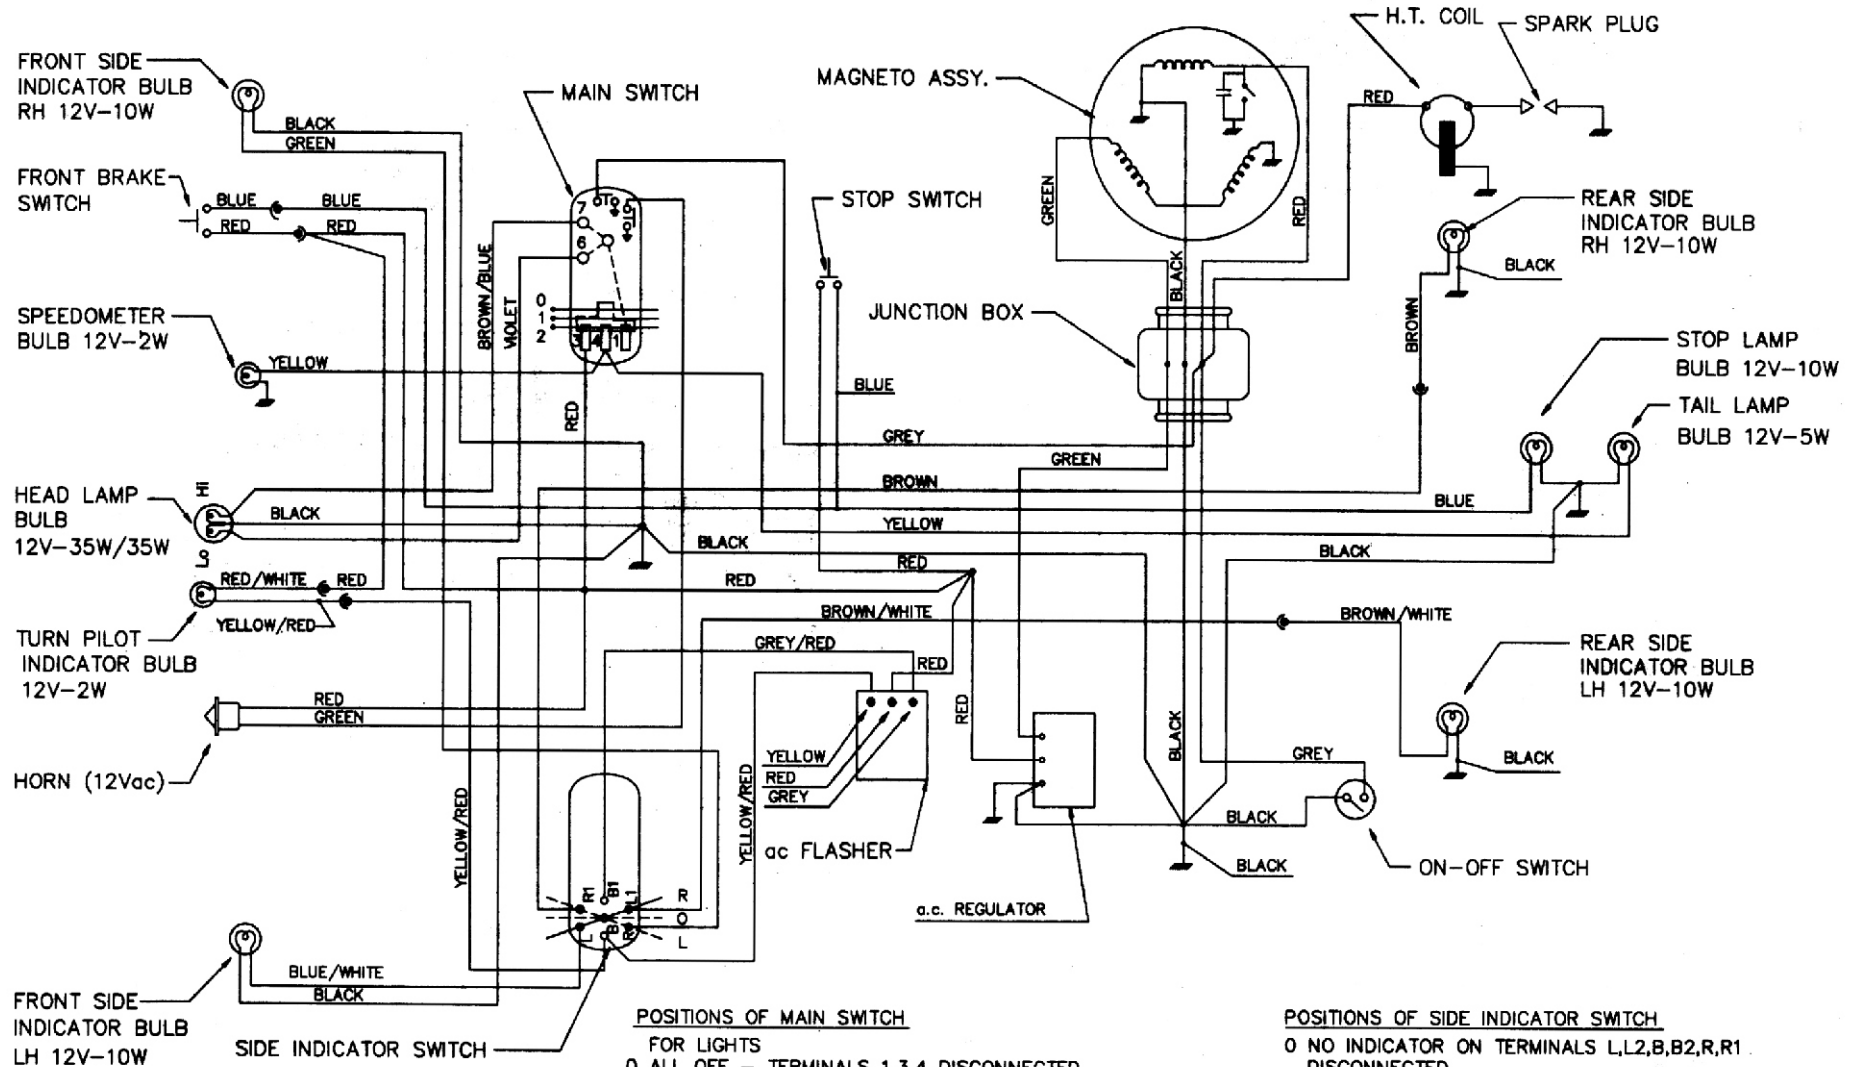

POSITIONS OF MAIN SWITCH

- FOR LIGHTS
- 0 ALL OFF - TERMINALS 1,3,4-DISCONNECTED
- 1 TAIL LAMP, SPEEDOMETER LAMP ON, TERMINALS 4 AND 3 CONNECTED
- 2 HEAD LAMP, TAIL LAMP, SPEEDOMETER LAMP ON, TERMINALS 4,3,1 CONNECTED
- HI-LOW BEAM POSITION
- H PRESS THE BUTTON HEAD LAMP (IN HI BEAM POSITION) ON, TERMINALS 7 AND 1 CONNECTED
- L PRESS THE BUTTON HEAD LAMP (IN LOW BEAM POSITION) ON, TERMINALS 6 AND 1 CONNECTED
- FOR HORN
- PRESS THE BUTTON TERMINAL 8 CONNECTED TO GROUND

POSITIONS OF SIDE INDICATOR SWITCH

- 0 NO INDICATOR ON TERMINALS L,L2,B,B2,R,R1 DISCONNECTED
- L LEFT INDICATOR ON TERMINALS B,L AND B1,L1 CONNECTED TERMINALS R,R1 DISCONNECTED
- R RIGHT INDICATOR ON TERMINALS B,R AND B1,R1 CONNECTED TERMINALS L,L1 DISCONNECTED