


■ TILT STEERING

The tilt mechanism mainly consists of a tilt lever, steering column tube attachment, breakaway bracket, tilt lever lock bolt and tilt steering stoppers.


When the tilt mechanism is in its locked state, the tilt lever at B position causes the cam of the tilt steering stoppers to tighten the steering column tube attachment.

When the tilt mechanism is in its free state, the tilt lever at A position causes the cam of the tilt steering stopper to loosen the steering column tube attachment.

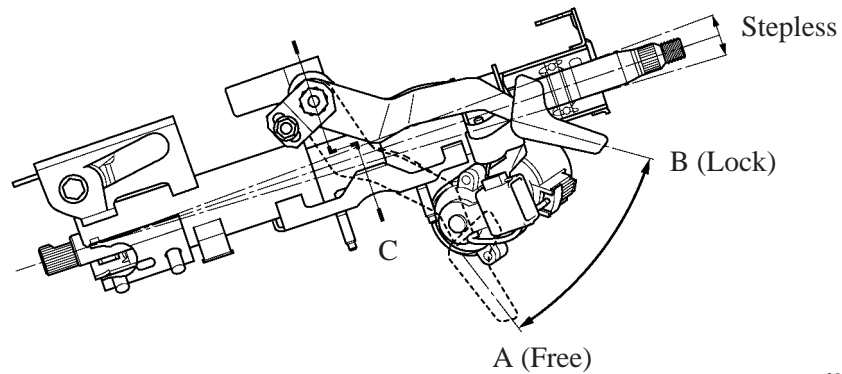


206CH34

► C – C Cross Section ◀

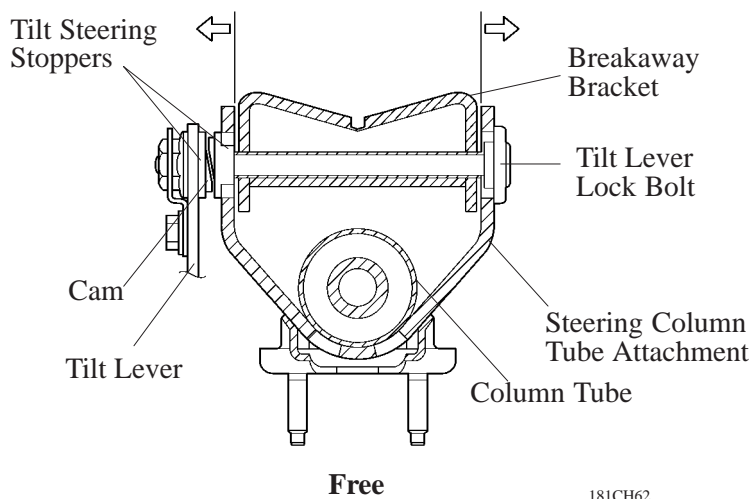

181CH62

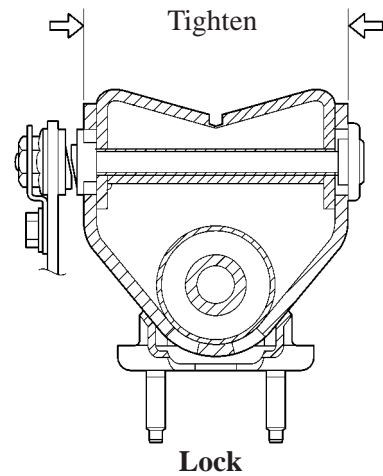

181CH63