

CD CANNOT BE INSERTED OR IS EJECTED RIGHT AFTER INSERTION

INSPECTION PROCEDURE

1 CHECK IF A NORMAL CD IS INSERTED

(a) Check if a normal CD is inserted.

- (1) Make sure that the CD is a normal audio CD, and that there is no deformation, flaw, stain, burr or other defects on the CD.

OK: Normal audio CD.

Reference:

- Translucent or oddly-shaped CD cannot be played.
- Computer CD-ROMs (even those with music) and CD-R discs cannot be played.
- Playing an 8 cm (3.2 in.) CD does not require an adapter.

NG

CD IS FAULTY

OK

2 CHECK IF A CD IS INSERTED PROPERLY

(a) Check if a CD is inserted properly.

- (1) Check whether or not the CD is inserted upside down.


OK: Not upside down.

NG

SET DISC CORRECTLY

OK

3 DISC CLEANING

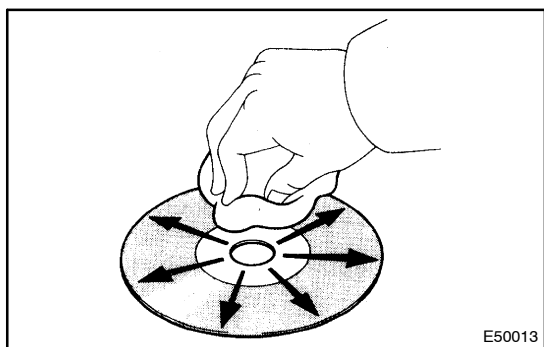

(a) Disc cleaning

- (1) If the disc gets dirty, clean the disc by wiping the surface from the center to outside in the radial directions with a soft cloth.

NOTICE:

Do not use a conventional record cleaner or anti-static preservative.

OK: Malfunction disappears.

OK

DISC IS DIRTY

NG

4 REPLACE CD WITH ANOTHER AND RECHECK

- (a) Replace the CD with another and recheck.
(1) Replace the CD with another normal one to see if the same trouble occurs again.

OK: Malfunction disappears.

NG

**REPLACE RADIO RECEIVER ASSY
(SEE PUB. NO. RM864E, PAGE 67-2)**

OK

CD IS FAULTY