

CD CANNOT BE INSERTED/PLAYED OR CD IS EJECTED RIGHT AFTER INSERTION

INSPECTION PROCEDURE

1 CHECK THE CD

- (a) Check if another normal audio CD can be inserted.
- (1) Check if a normal audio CD that has no cracks, scratches, deformations, dirt, or other defects can be inserted.

OK: The CD is inserted correctly.

HINT:


- Translucent or deformed CDs cannot be played.
- CD-ROMs (even those with music) and CD-R discs cannot be played.
- A copy protected CD should not be used.
- An adaptor is not necessary to play 3.2 inch (8 cm) CDs.

NG

REPLACE THE CD

OK

2 CHECK CD INSERTION

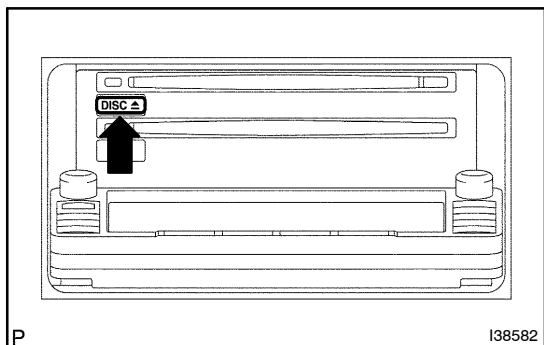

P

I38582

- (a) Check that a CD is correctly inserted.
- (1) Check that the "DISC" indicator near the disc slot comes on.
- (2) Check that the CD has not been inserted up side down.

OK: CD is inserted correctly.


NG

INSERT THE CD CORRECTLY

OK

3 CHECK THE CD

- (a) Check for dirt on the CD surface.

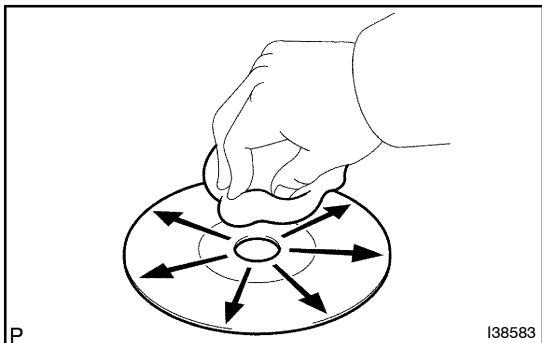OK: The CD is clean.**HINT:**

If dirt is on the CD surface, wipe it with a soft cloth from inside to outside in a radial direction.

NOTICE:

Do not use conventional record cleaner or anti-static preservative.

NG**CLEAN THE CD****OK****4 CHECK USING ANOTHER CD**

- (a) Check using another CD.

- (1) Check if the problem recurs using another CD.

OK: The problem does not recur.**OK****REPLACE THE CD****NG**

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1094)