

CD CANNOT BE EJECTED

INSPECTION PROCEDURE

1 CHECK RADIO AND NAVIGATION ASSY


- (a) Turn the ignition switch to the ACC position.
 (b) Keep pressing the "DISC" eject switch for 5 seconds and check if the disc is ejected by forced ejection.
OK: The disc is ejected.

NG

**PROCEED TO NEXT CIRCUIT INSPECTION
SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1094)**

OK

2 CHECK THE CD

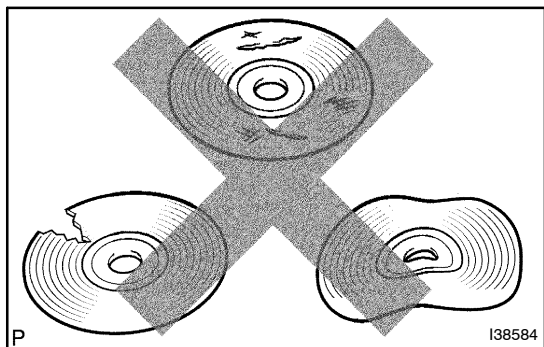

- (a) Check that the CD is not deformed or cracked.
OK: No deformations or cracks appear on the CD.

NG

REPLACE THE CD

OK

3 CHECK RADIO AND NAVIGATION ASSY

- (a) Insert another CD and check if it is ejected.
OK: The disc is ejected.

NG

**REPLACE RADIO AND NAVIGATION ASSY
(SEE PAGE 67-1)**

OK

NORMAL OPERATION