


## CD SOUND SKIPS

### INSPECTION PROCEDURE

#### 1 CHECK THE CD

- (a) Check for dirt on the CD surface.

**OK: The CD is clean.**

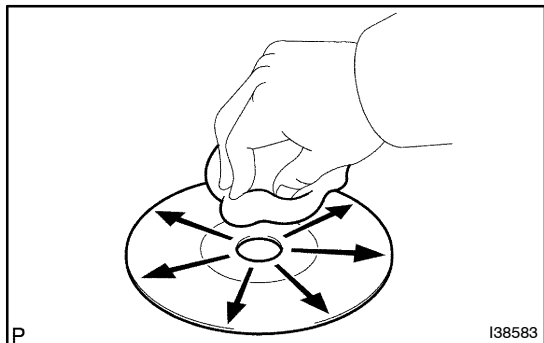

**HINT:**

If dirt is on the CD surface, wipe it with a soft cloth from inside to outside in a radial direction.

**NOTICE:**


**Do not use conventional record cleaner or anti-static preservative.**

**NG**

**CLEAN THE CD**

**OK**

#### 2 CHECK THE CD

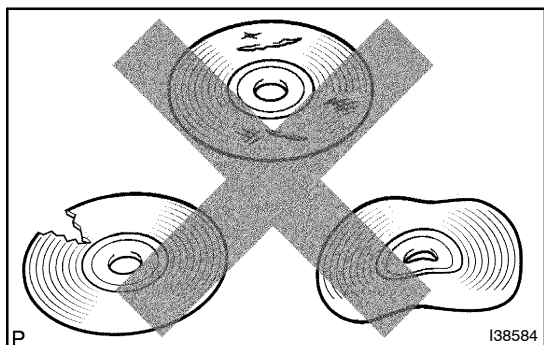

- (a) Check that the CD is not deformed or cracked.

**OK: No deformations or cracks appear on the CD.**

**NG**

**REPLACE THE CD**

**OK**

#### 3 CHECK USING ANOTHER CD

- (a) Check using another CD.

- (1) Check if the problem recurs using another CD.

**OK: The problem does not recur.**

**OK**

**REPLACE THE CD**

**NG**

**4 CHECK RADIO AND NAVIGATION ASSY**

- (a) Check the radio and navigation assy installation condition.  
(1) Check that the radio and navigation assy is properly installed.

**OK: Radio and navigation assy is properly installed.**

**NG**

**REINSTALL THE RADIO AND NAVIGATION ASSY PROPERLY**

**OK**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE  
(SEE PAGE 05-1094)**