



VOICE GUIDANCE DOES NOT FUNCTION

INSPECTION PROCEDURE

1 CHECK NAVIGATION SYSTEM SETTING

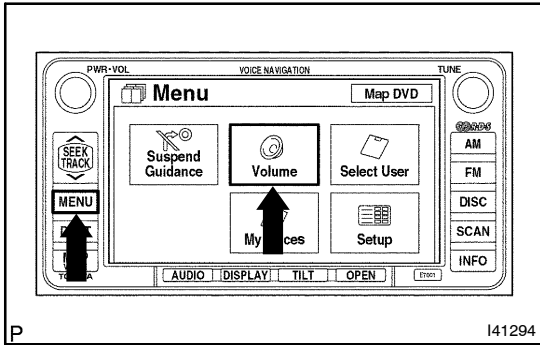

- (a) Enter the "MENU" screen by pressing the "MENU" switch.
- (b) Enter the volume adjustment screen by pressing the "Volume" switch.

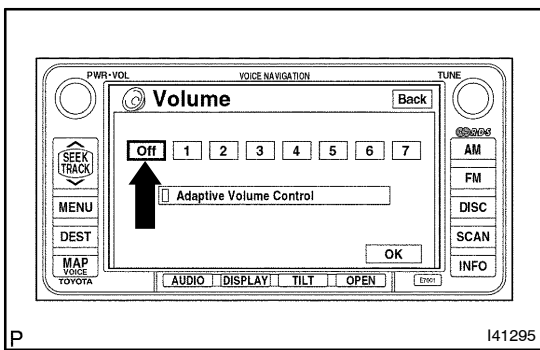


- (c) Check that "OFF" is not selected.
OK: OFF is not selected.

NG


TURN VOICE GUIDANCE VOLUME UP TO 4 USING VOICE ADJUSTMENT SWITCHES

OK

2 CHECK NAVIGATION SETTING

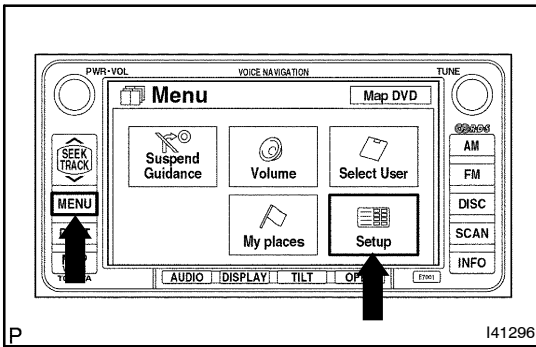

- (a) Enter the "MENU" screen by pressing the "MENU" switch.
- (b) Enter the "Setup" screen by pressing the "Setup" switch.

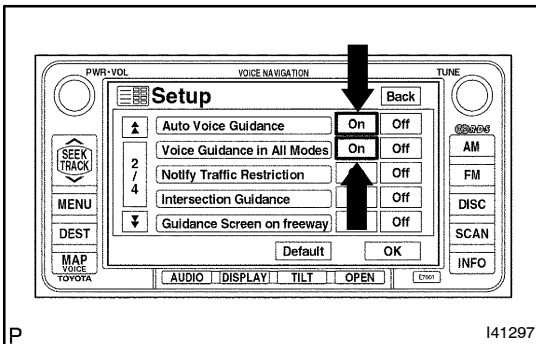


- (c) Check that "Auto Voice Guidance" is not OFF.
OK: Auto voice guidance is not OFF.
- (d) Check that "Voice Guidance in All Modes" is not OFF.
OK: Voice guidance in all modes is not OFF.

NG

TURN AUTO VOICE GUIDANCE TO "ON"

OK

3 CHECK THE MAP DISC

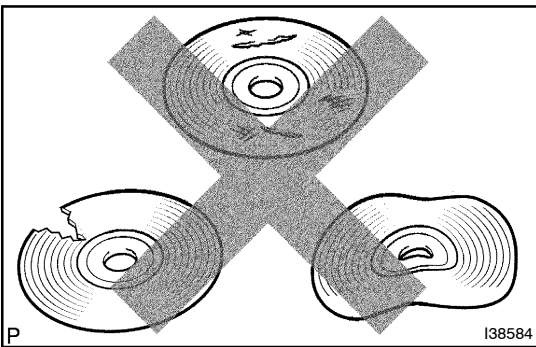

- (a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG

REPLACE THE MAP DISC

OK

4

CHECK RADIO AND NAVIGATION ASSY

(a) Check if audio sound can be heard from the driver's side speaker.

OK: Audio sound can be heard.

NG

PROCEED TO NEXT CIRCUIT INSPECTION
SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1094)

OK

REPLACE RADIO AND NAVIGATION ASSY (SEE PAGE 67-1)