


INSPECTION

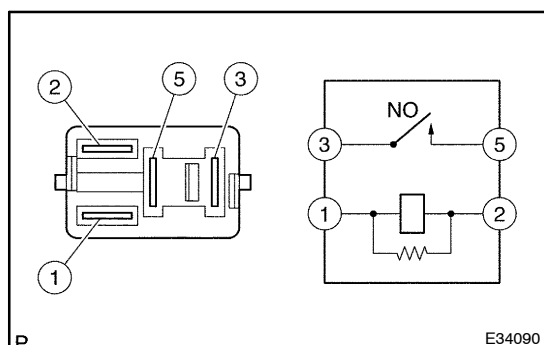

1. COOLING FAN RELAY

(a) Inspect the cooling fan relay continuity.

- (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (2) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

- (3) Apply battery voltage across terminals 1 and 2.
- (4) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.