


REPLACEMENT

HINT:

COMPONENTS: [See page 60-1](#)

1. **PRECAUTION** ([See page 60-1](#))
2. **SEPARATE BATTERY NEGATIVE TERMINAL** ([See page 60-1](#))

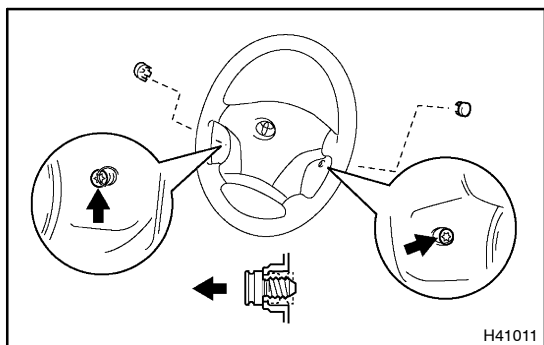


3. **REMOVE STEERING WHEEL COVER LOWER NO.2**

4. **REMOVE STEERING WHEEL COVER LOWER NO.2**

5. **REMOVE HORN BUTTON ASSY**

- (a) Place the front wheels facing straight ahead.
- (b) Using a Torx socket wrench (T30), loosen the 2 Torx screws until the groove along the screw circumference catches on the screw case.
- (c) Pull out the wheel pad from the horn button assy.
- (d) Disconnect the airbag connector and horn connector and remove the horn button assy.

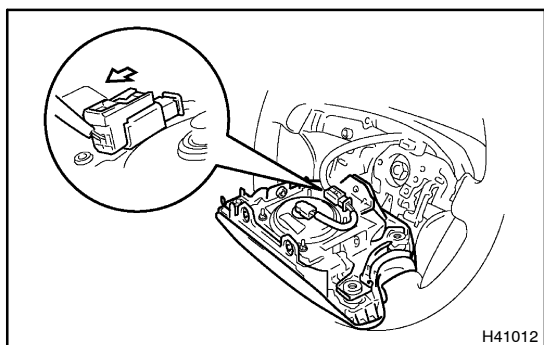

6. **INSTALL HORN BUTTON ASSY**

- (a) Connect the airbag connector and horn connector.
- (b) Install the horn button after confirming that the circumference groove of the Torx screws is caught on the screw case.
- (c) Using a Torx socket wrench (T30), install the 2 screws.

Torque: 3.8 N·m (90 kgf·cm, 78 in. lbf)

7. **INSPECT HORN BUTTON ASSY**

([See page 60-9](#))

8. **INSPECT SRS WARNING LIGHT** ([See page 05-403](#))