


REPLACEMENT

HINT:

COMPONENTS: [See page 60-1](#)

1. **PRECAUTION** ([See page 60-1](#))
2. **SEPARATE BATTERY NEGATIVE TERMINAL** ([See page 60-1](#))
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE STEERING WHEEL COVER LOWER NO.2**
5. **REMOVE STEERING WHEEL COVER LOWER NO.2**
6. **REMOVE HORN BUTTON ASSY**
([See page 60-15](#))
7. **REMOVE STEERING WHEEL ASSY**
([See page 50-6](#))
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
8. **REMOVE STEERING COLUMN COVER LWR**
9. **REMOVE STEERING COLUMN COVER UPR**
([See page 50-6](#))

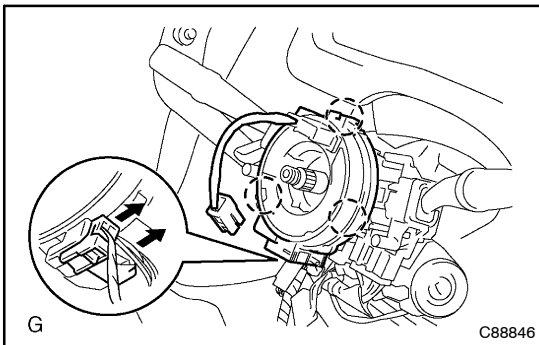

10. REMOVE SPIRAL CABLE SUB-ASSY

- (a) Disconnect the airbag connector and connector from the spiral cable sub-assy.
- (b) Release the 3 claws and remove the spiral cable sub-assy.

11. INSPECT SPIRAL CABLE SUB-ASSY

- (a) If the following condition is identified, replace the spiral cable sub-assy with new one.

Condition:

Scratches or cracks on the connector

Cracks, dents or chipping of the spiral cable sub-assy

12. PLACE FRONT WHEELS FACING STRAIGHT AHEAD

- (a) Check that the front wheels are facing straight ahead.

13. INSTALL SPIRAL CABLE SUB-ASSY

- (a) Set the turn signal switch in neutral position.

NOTICE:

Make sure of the neutral position since the pin of the turn signal switch may be snapped.

- (b) Engage the 3 claws and install the spiral cable sub-assy.

NOTICE:

When replacing the spiral cable sub-assy with new one, remove the lock pin before installing the handle.


- (c) Connect the airbag connector and connector.
- (d) Install the steering column cover LWR and steering column cover UPR with the 3 screws.

14. CENTER SPIRAL CABLE

- (a) Check that the ignition switch is OFF.
- (b) Check that the battery negative terminal is disconnected.

NOTICE:


Do not start the operation for 90 seconds after removing the terminal.

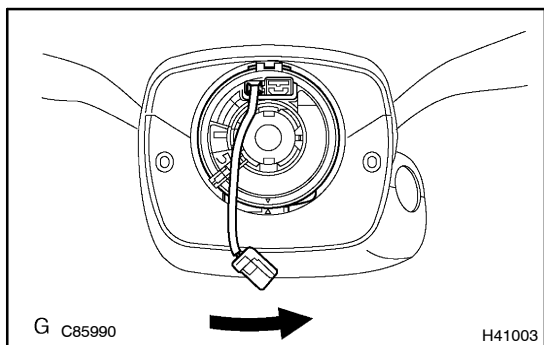

- (c) Turn the cable counterclockwise by hand until it becomes harder to turn.

HINT:

The cable will rotate about 2.5 turns to either left or right of the center.

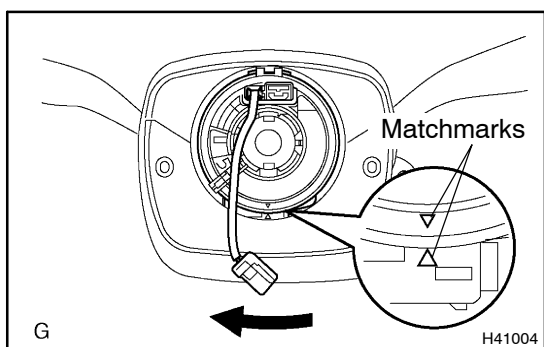

- (d) Then rotate the cable clockwise about 2.5 turns to align the marks.

15. INSTALL STEERING WHEEL ASSY

(See page 50-6)

Torque: 50 N·m (510 kgf·cm, 37 ft·lbf)

16. INSTALL HORN BUTTON ASSY

(See page 60-15)

Torque: 8.8 N·m (90 kgf·cm, 78 in·lbf)

17. INSPECT HORN BUTTON ASSY

(See page 60-9)

18. INSPECT SRS WARNING LIGHT (See page 05-403)