


ADJUSTMENT

HINT:

- Installation is in the reverse order of the removal. But the installation is indicated only when it has a point.
- In the RH side, work in the same procedure as in the LH side.

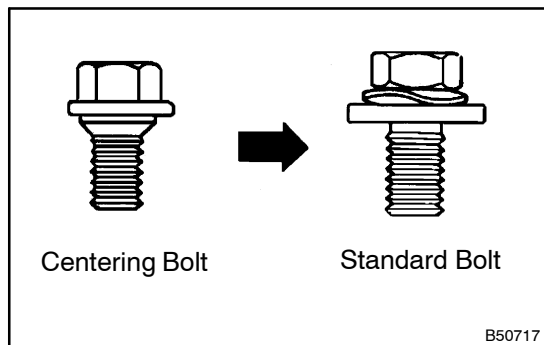



HINT:

Since the centering bolt is used as a door hinge set bolt, the door can not be adjusted with it on. Substitute a bolt with washer for the centering bolt.

1. INSPECT REAR DOOR PANEL SUB-ASSY LH


- (a) Check that the clearance is within the standard value.

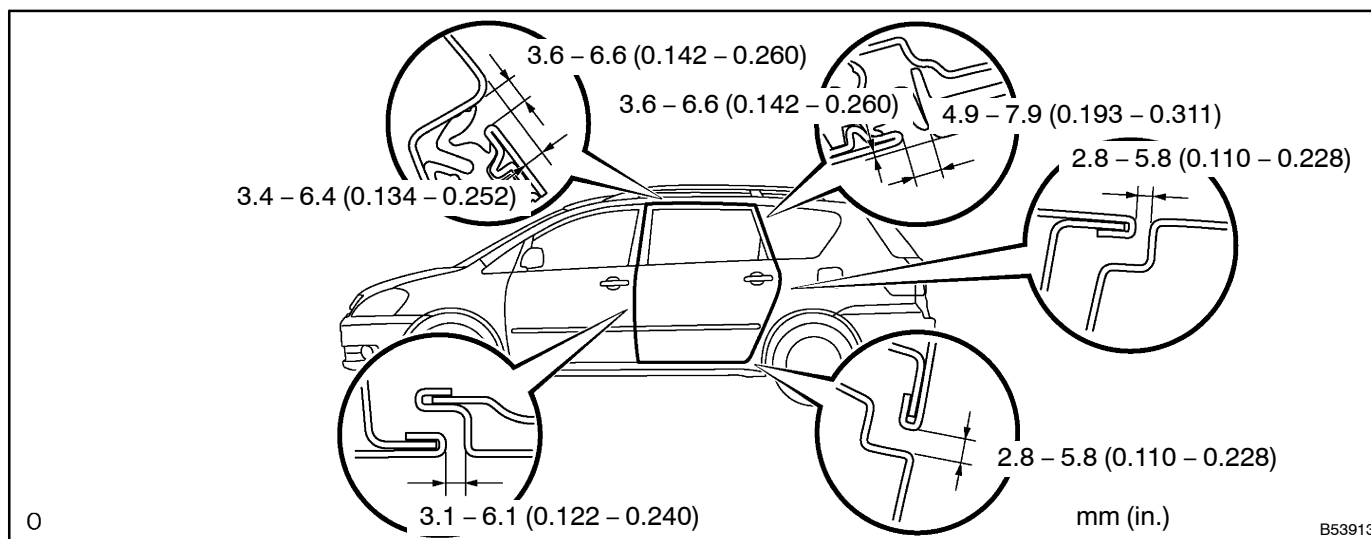

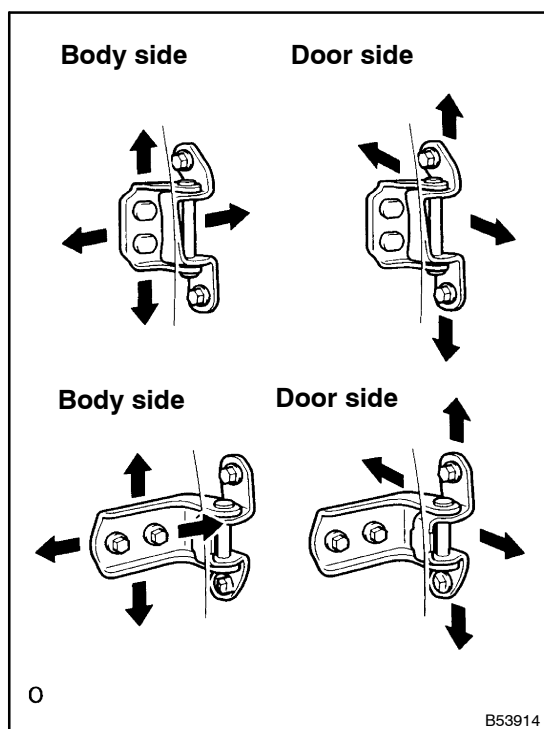

2. ADJUST REAR DOOR PANEL SUB-ASSY LH

- (a) Adjust the door by loosening the body side hinge nuts.
Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)
- (b) Adjust the door by loosening the door side hinge bolts.
Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)

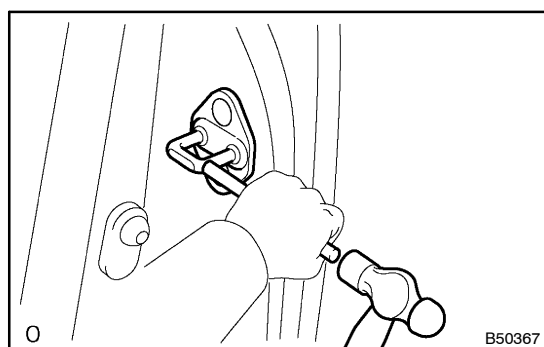

- (c) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a brass bar and hammer.
- (d) Tighten the striker mounting screws again.
Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)