


INSPECTION

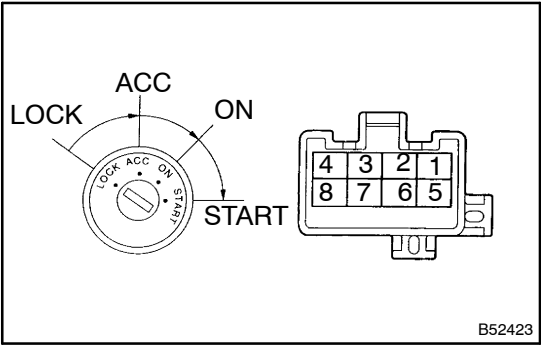

1. INSPECT IGNITION OR STARTER SWITCH ASSY

- (a) Check the continuity of each terminal on the vehicle side connector.

Switch position	Tester connection	Specified condition
LOCK	–	No continuity
ACC	2 ⇔ 3	Continuity
ON	2 ⇔ 3 ⇔ 4 6 ⇔ 7	Continuity
START	1 ⇔ 2 ⇔ 4 6 ⇔ 7 ⇔ 8	Continuity

If the continuity is not as specified, replace the switch.