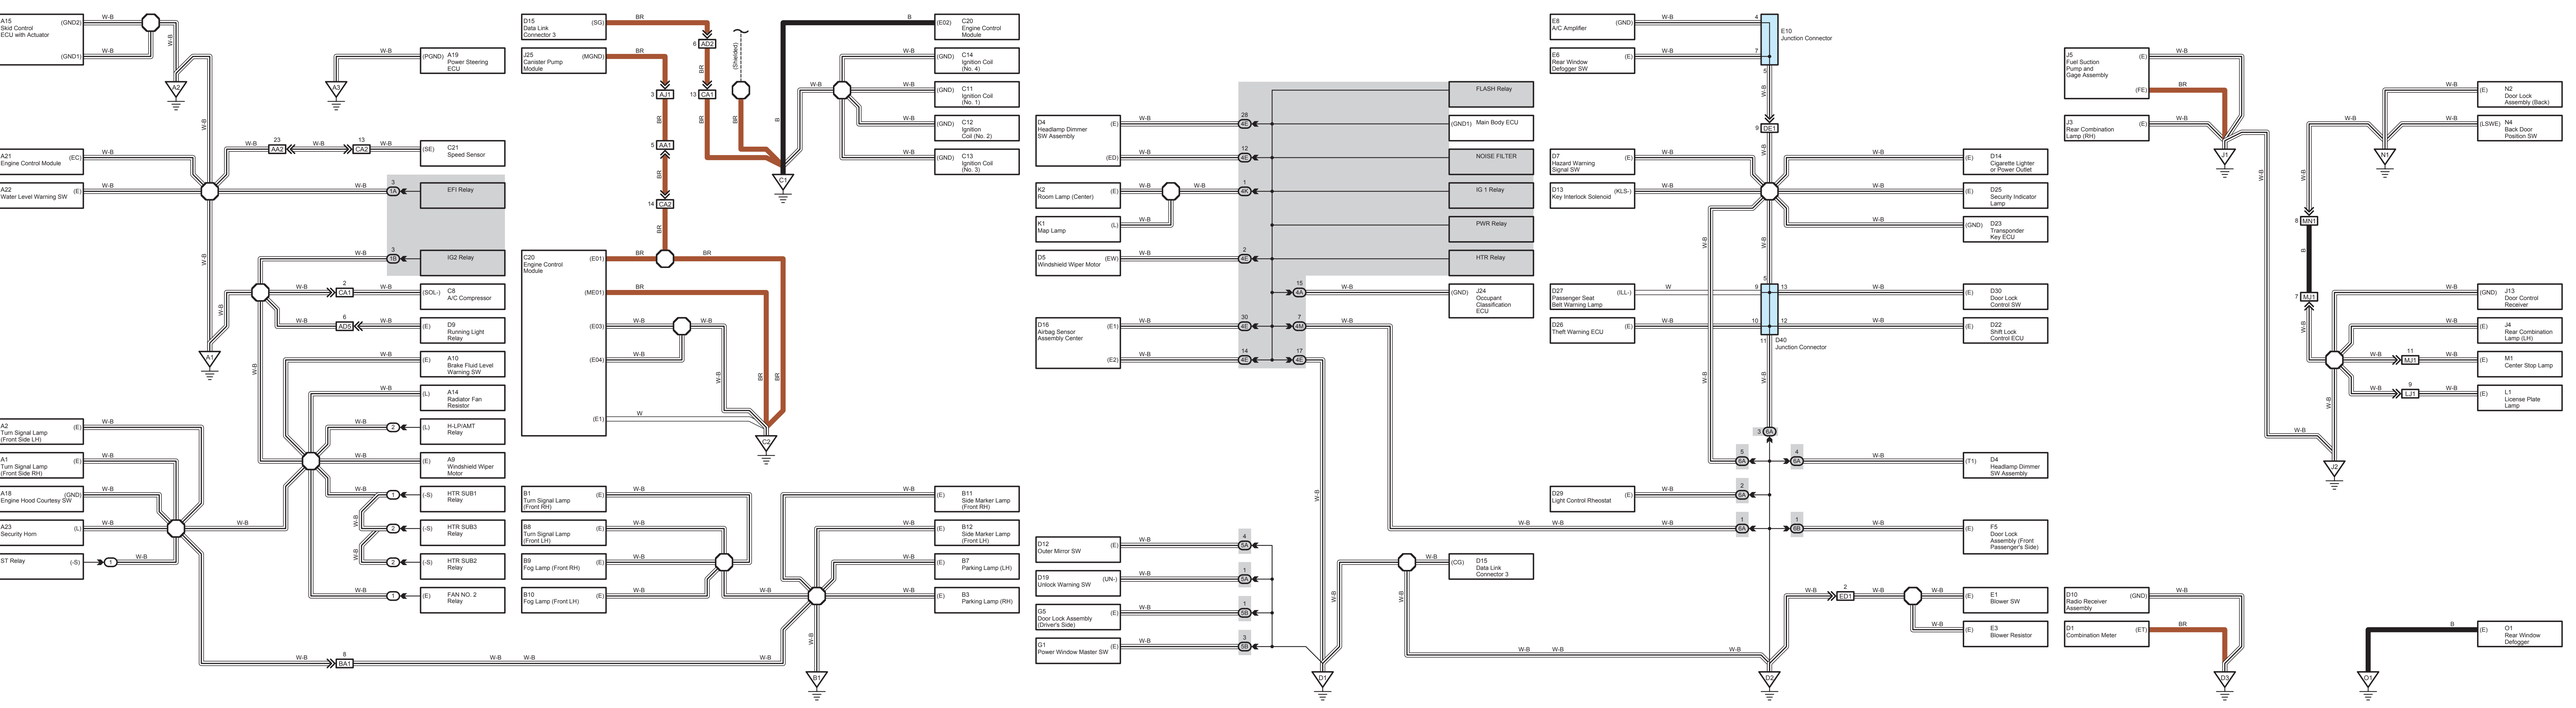
A15 Skid Control ECU with Actuator (GND2) (GND1) W-B
A21 Engine Control Module (EC)
A22 Water Level Warning SW (E)
A2 Turn Signal Lamp (Front Side LH) (E)
A1 Turn Signal Lamp (Front Side RH) (E)
A18 Engine Hood Courtesy SW (GND)
A23 Security Horn (L)
ST Relay (-S)
A3 (PGND) A19 Power Steering ECU
23 AA1 13 CA2 (SE) C21 Speed Sensor
3 FR EFI Relay
3 IG2 IG2 Relay
2 CA1 (SOL-) C8 A/C Compressor
6 AD5 (E) D9 Running Light Relay
(E) A10 Brake Fluid Level Warning SW
(L) A14 Radiator Fan Resistor
(L) H-LP/AMT Relay
(E) A9 Windshield Wiper Motor
(-S) HTR SUB1 Relay
(-S) HTR SUB3 Relay
(-S) HTR SUB2 Relay
(E) FAN NO. 2 Relay
8 BA1
D15 Data Link Connector 3 (SG)
J25 Canister Pump Module (MGND)
6 AD2 3 AJ1 5 AA1 14 CA2 13 CA1
(Checked)
C20 Engine Control Module (E01) (ME01) (E03) (E04) (E1)
B1 Turn Signal Lamp (Front RH) (E)
B8 Turn Signal Lamp (Front LH) (E)
B9 Fog Lamp (Front RH) (E)
B10 Fog Lamp (Front LH) (E)
B (E02) C20 Engine Control Module
(GND) C14 Ignition Coil (No. 4)
(GND) C11 Ignition Coil (No. 1)
(GND) C12 Ignition Coil (No. 2)
(GND) C13 Ignition Coil (No. 3)
B11 Side Marker Lamp (Front RH)
B12 Side Marker Lamp (Front LH)
B7 Parking Lamp (LH)
B3 Parking Lamp (RH)
B1
B2
D4 Headlamp Dimmer SW Assembly (E) (ED)
K2 Room Lamp (Center) (E)
K1 Map Lamp (L)
D5 Windshield Wiper Motor (EW)
D16 Airbag Sensor Assembly Center (E1) (E2)
D12 Outer Mirror SW (E)
D19 Unlock Warning SW (UN-)
G5 Door Lock Assembly (Driver's Side) (E)
G1 Power Window Master SW (E)
D1
28 EA 12 EC 1 EK 2 EB 15 EA 30 EA 14 EA 7 EK 17 EB
FLASH Relay
(GND1) Main Body ECU
NOISE FILTER
IG 1 Relay
PWR Relay
HTR Relay
(GND) J24 Occupant Classification ECU
(CG) D15 Data Link Connector 3
E8 A/C Amplifier (GND)
E6 Rear Window Defogger SW (E)
E10 Junction Connector
9 IC1
D7 Hazard Warning Signal SW (E)
D13 Key Interlock Solenoid (KLS-)
D27 Passenger Seat Belt Warning Lamp (ILL-)
D26 Theft Warning ECU (E)
D40 Junction Connector
D29 Light Control Rheostat (E)
3 GA 4 GA 2 GA 1 GA 1 GB
D14 Cigarette Lighter or Power Outlet
D25 Security Indicator Lamp
D23 Transponder Key ECU
D30 Door Lock Control SW
D22 Shift Lock Control ECU
D4 Headlamp Dimmer SW Assembly (11)
F5 Door Lock Assembly (Front Passenger's Side)
2 ID1 E1 Blower SW E3 Blower Resistor
J5 Fuel Suction Pump and Gage Assembly (E) (FE)
J3 Rear Combination Lamp (RH) (E)
N2 Door Lock Assembly (Black)
N4 Back Door Position SW (LSWE)
8 MH1 7 MJ1
J13 Door Control Receiver
J4 Rear Combination Lamp (LH)
11 MJ1 M1 Center Stop Lamp
9 LJ1 L1 License Plate Lamp
D10 Radio Receiver Assembly (GND)
D1 Combination Meter (ET)
O1 Rear Window Defogger
O1
W-B
BR
B