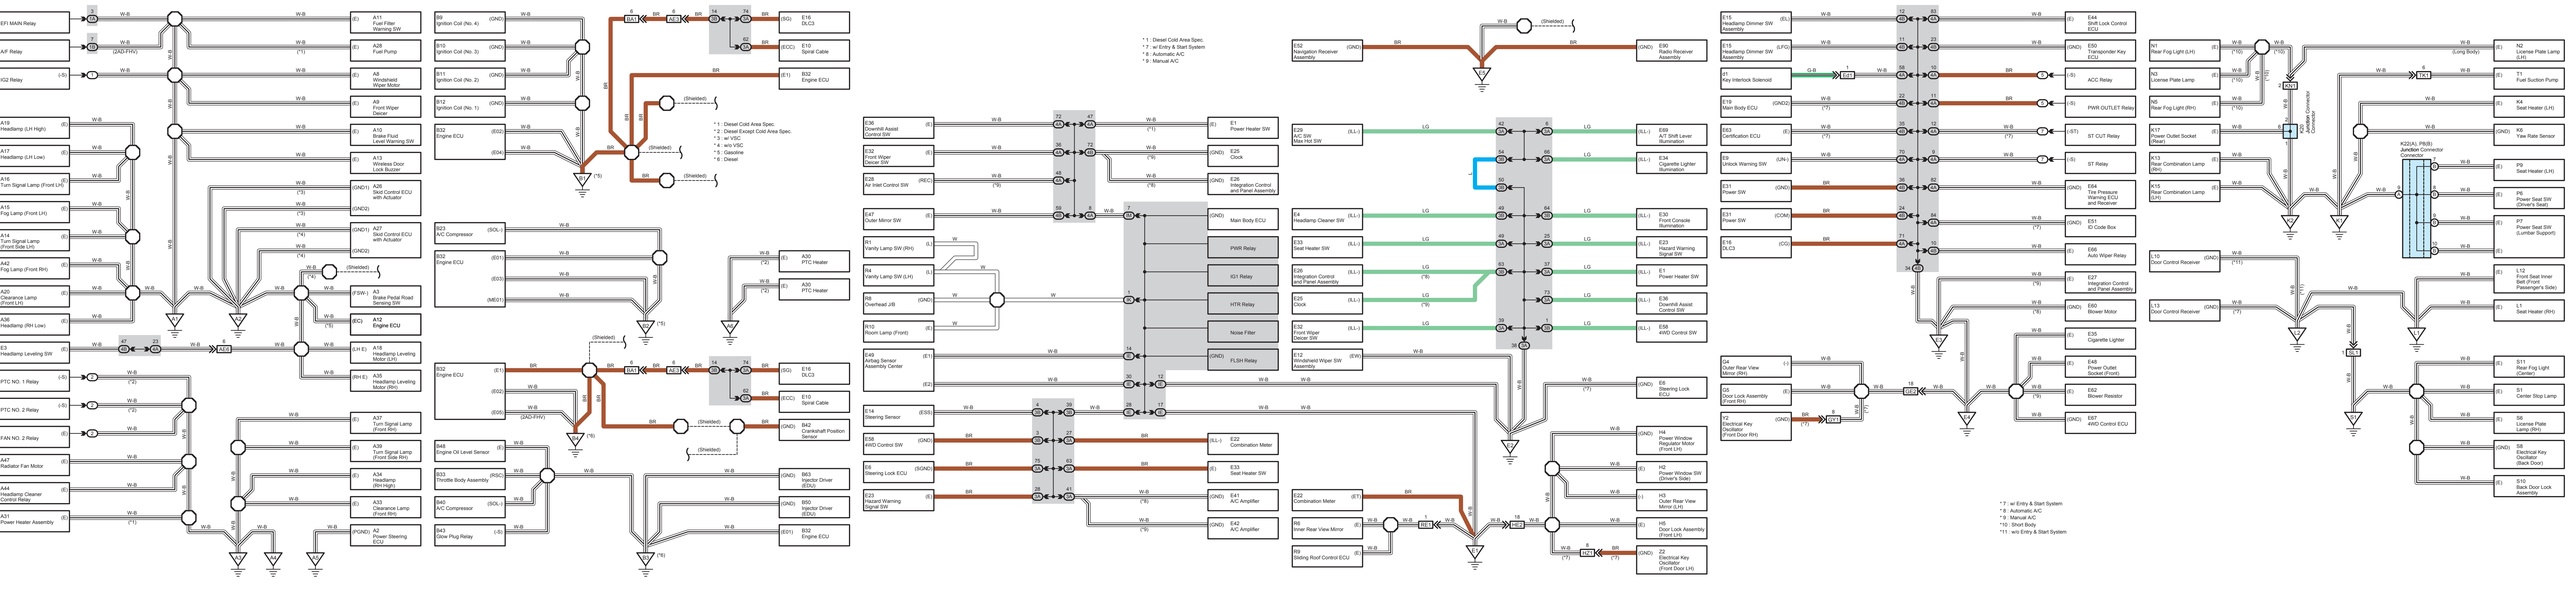
EFI MAIN Relay
A/F Relay
IG2 Relay
A19 Headlamp (LH High)
A17 Headlamp (LH Low)
A16 Turn Signal Lamp (Front LH)
A15 Fog Lamp (Front LH)
A14 Turn Signal Lamp (Front Side LH)
A42 Fog Lamp (Front RH)
A20 Clearance Lamp (Front LH)
A36 Headlamp (RH Low)
E3 Headlamp Leveling SW
PTC NO. 1 Relay
PTC NO. 2 Relay
FAN NO. 2 Relay
A47 Radiator Fan Motor
A44 Headlamp Cleaner Control Relay
A31 Power Heater Assembly
W-B
(2AD-FHV)
A11 Fuel Filter Warming SW
A28 Fuel Pump
A8 Windshield Wiper Motor
A9 Front Wiper Deicer
A10 Brake Fluid Level Warning SW
A13 Wireless Door Lock Buzzer
A26 Skid Control ECU with Actuator
A27 Skid Control ECU with Actuator
(Shielded)
F3(K) A3 Brake Pedal Road Sensing SW
(EC) A12 Engine ECU
LH E) A18 Headlamp Leveling Motor (LH)
RH E) A35 Headlamp Leveling Motor (RH)
A37 Turn Signal Lamp (Front Side RH)
A39 Turn Signal Lamp (Front RH)
A34 Headlamp (RH High)
A33 Clearance Lamp (Front RH)
(PGND) A2 Power Steering ECU
B9 Ignition Coil (No. 4)
B10 Ignition Coil (No. 3)
B11 Ignition Coil (No. 2)
B12 Ignition Coil (No. 1)
B32 Engine ECU
(GND)
(E02)
(E04)
(E01)
(E)
(IG)
(SG) E16 DLC3
(ECC) E10 Spiral Cable
(E1) B32 Engine ECU
BR
(Shielded)
* 1 : Diesel Cold Area Spec.
* 2 : Diesel Except Cold Area Spec.
* 3 : w/ VSC
* 4 : w/o VSC
* 5 : Gasoline
* 6 : Diesel
B23 A/C Compressor
B32 Engine ECU
(SOL-)
(E01)
(E03)
(MEI01)
A30 PTC Heater
A30 PTC Heater
B32 Engine ECU
B48 Engine Oil Level Sensor
B33 Throttle Body Assembly
B40 A/C Compressor
B43 Glow Plug Relay
(RSC)
(SOL-)
(-B)
(2AD-FHV)
(GND) B63 Injector Driver (EDU)
B50 Injector Driver (EDU)
(E01) B32 Engine ECU
(GND) B42 Crankshaft Position Sensor
* 1 : Diesel Cold Area Spec.
* 2 : w/ Entry & Start System
* 3 : Automatic A/C
* 4 : Manual A/C
* 5 : w/o Entry & Start System
E36 Downhill Assist Control SW
E32 Front Wiper Decer SW
E28 Air Inlet Control SW
E47 Outer Mirror SW
R1 Vanity Lamp SW (RH)
R4 Vanity Lamp SW (LH)
R8 Overhead J/B
R10 Room Lamp (Front)
E49 Airbag Sensor Assembly Center
E14 Steering Sensor
E58 4WD Control SW
E6 Steering Lock ECU
E23 Hazard Warning Signal SW
(d)
(IL)
(GND)
(E)
(E1)
(E2)
(ES5)
(SGND)
(ET)
E1 Power Heater SW
E25 Clock
E26 Integration Control and Panel Assembly
Main Body ECU
PWR Relay
IG1 Relay
HTR Relay
Noise Filter
FLSH Relay
E22 Combination Meter
E33 Seat Heater SW
E41 A/C Amplifier
E42 A/C Amplifier
(REC)
(GND)
(ILL-)
(E)
E52 Navigation Receiver Assembly
E90 Radio Receiver Assembly
E29 A/C SW Max Hot SW
E4 Headlamp Cleaner SW
E33 Seat Heater SW
E26 Integration Control and Panel Assembly
E25 Clock
E32 Front Wiper Decer SW
E12 Windshield Wiper SW Assembly
E89 A/T Shift Lever Illumination
E34 Cigarette Lighter Illumination
E30 Front Console Illumination
E23 Hazard Warning Signal SW
E1 Power Heater SW
E36 Downhill Assist Control SW
E58 4WD Control SW
E6 Steering Lock ECU
H4 Power Window Regulator Motor (Front LH)
H2 Power Window SW (Driver's Side)
H3 Outer Rear View Mirror (LH)
H5 Door Lock Assembly (Front LH)
Z2 Electrical Key Oscillator (Front Door LH)
(ILL-)
(GND)
(E)
(-)
(ILL+)
E15 Headlamp Dimmer SW Assembly
E41 Key Interlock Solenoid
E19 Main Body ECU
E63 Certification ECU
E9 Unlock Warning SW
E31 Power SW
E31 Power SW
E16 DLC3
E44 Shift Lock Control ECU
E50 Transponder Key ECU
ACC Relay
PWR OUTLET Relay
ST CUT Relay
ST Relay
E64 Tire Pressure Warning ECU and Receiver
E51 ID Code Box
E66 Auto Wiper Relay
E27 Integration Control and Panel Assembly
E60 Blower Motor
E35 Cigarette Lighter
E48 Power Outlet Socket (Front)
E62 Blower Resistor
E67 4WD Control ECU
G4 Outer Rear View Mirror (RH)
G5 Door Lock Assembly (Front RH)
Y2 Electrical Key Oscillator (Front Door RH)
(ILL+)
(E)
(GND)
(-S)
(ST)
(GND2)
(COM)
(CG)
(*1)
(*2)
(*3)
(*4)
(*5)
(*6)
(*7)
(*8)
(*9)
(*10)
(*11)
N1 Rear Fog Light (LH)
N3 License Plate Lamp
N5 Rear Fog Light (RH)
K17 Power Outlet Socket (Rear)
K13 Rear Combination Lamp (RH)
K15 Rear Combination Lamp (LH)
L10 Door Control Receiver
L13 Door Control Receiver
(GND)
(E)
(Long Body)
N2 License Plate Lamp (LH)
T1 Fuel Suction Pump
K4 Seat Heater (LH)
K6 Yaw Rate Sensor
P9 Seat Heater (LH)
P6 Power Seat SW (Driver's Seat)
P7 Power Seat SW (Lumbar Support)
L12 Front Seat Inner Belt (Front Passenger's Side)
L1 Seat Heater (RH)
S11 Rear Fog Light (Center)
S1 Center Stop Lamp
S6 License Plate Lamp (RH)
S8 Electrical Key Oscillator (Back Door)
S10 Back Door Lock Assembly
K22(A), P8(B) Junction Connector
Junction Connector
* 7 : w/ Entry & Start System
* 8 : Automatic A/C
* 9 : Manual A/C
*10 : Short Body
*11 : w/o Entry & Start System