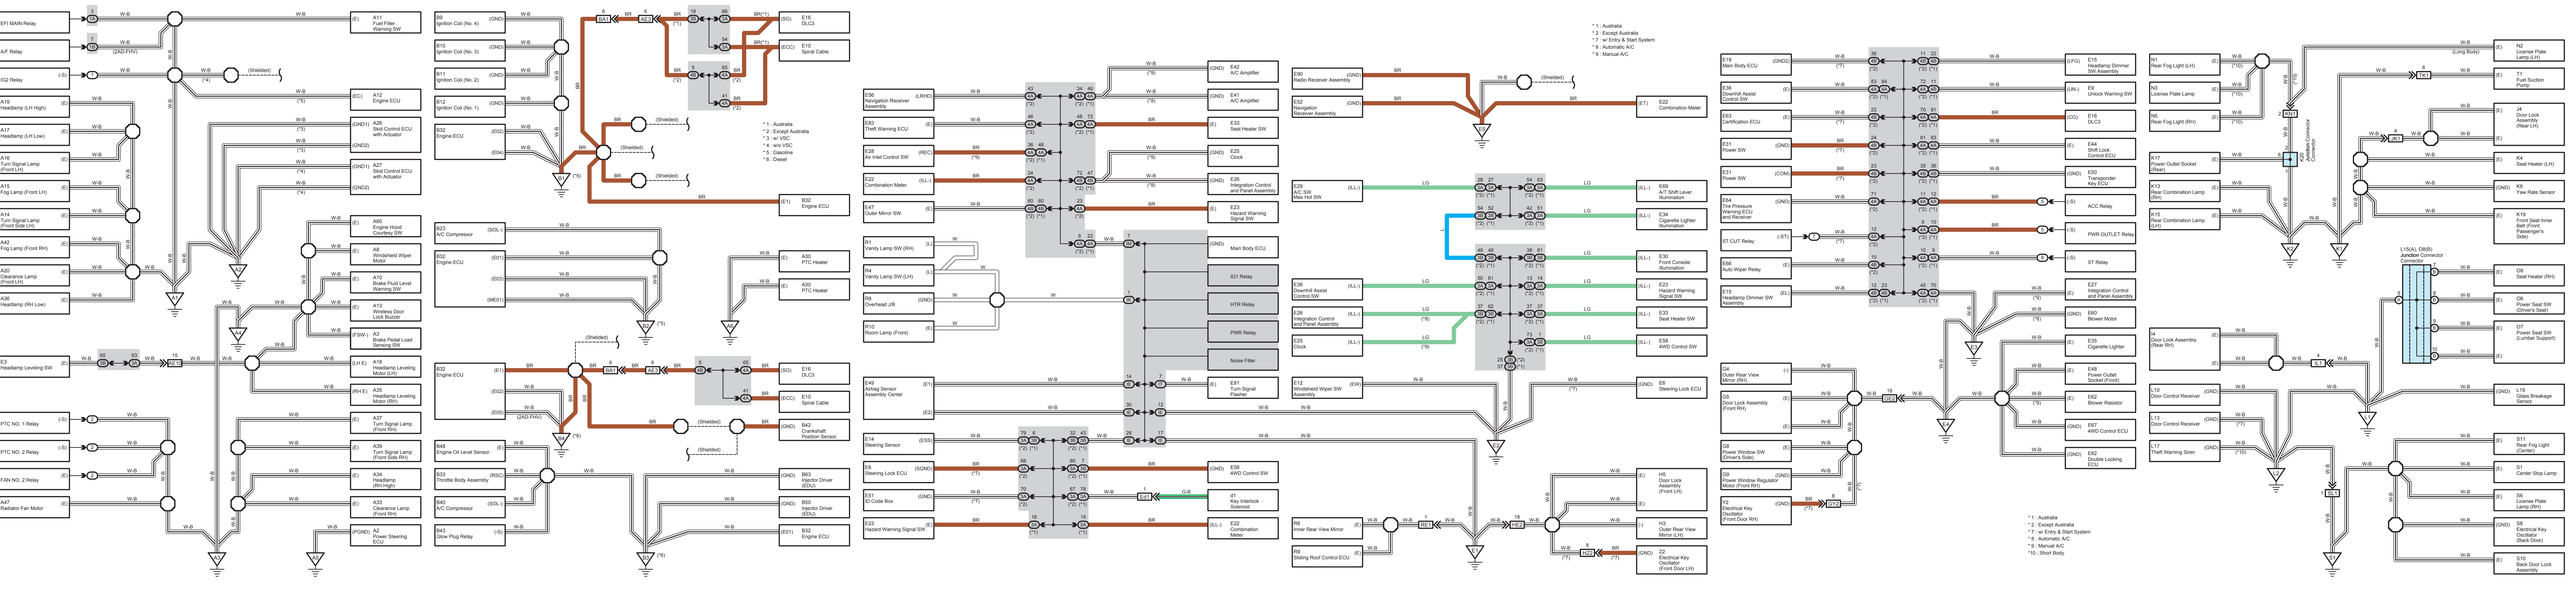
EFI MAIN Relay
AF Relay
IG2 Relay
A19 Headlamp (LH High)
A17 Headlamp (LH Low)
A16 Turn Signal Lamp (Front LH)
A15 Fog Lamp (Front LH)
A14 Turn Signal Lamp (Front Side LH)
A42 Fog Lamp (Front RH)
A20 Clearance Lamp (Front LH)
A36 Headlamp (RH Low)
E3 Headlamp Leveling SW
PTC NO. 1 Relay
PTC NO. 2 Relay
FAN NO. 2 Relay
A47 Radiator Fan Motor
A11 Fuel Filler Warning SW
A12 Engine ECU
A26 Skid Control ECU with Actuator
A27 Skid Control ECU with Actuator
A60 Engine Hood Courtesy SW
A8 Windshield Wiper Motor
A10 Brake Fluid Level Warning SW
A13 Wireless Door Lock Buzzer
A3 Brake Pedal Load Sensing SW
A18 Headlamp Leveling Motor (LH)
A35 Headlamp Leveling Motor (RH)
A37 Turn Signal Lamp (Front RH)
A39 Turn Signal Lamp (Front Side RH)
A34 Headlamp (RH High)
A33 Clearance Lamp (Front RH)
A2 Power Steering ECU
Ignition Coil (No. 4)
Ignition Coil (No. 3)
Ignition Coil (No. 2)
Ignition Coil (No. 1)
Engine ECU
A/C Compressor
Engine ECU
Engine Oil Level Sensor
Throttle Body Assembly
A/C Compressor
Glow Plug Relay
E16 DLC3
E10 Spiral Cable
B42 Crankshaft Position Sensor
B63 Injector Driver (ENx)
B50 Injector Driver (ENx)
B32 Engine ECU
A30 PTC Heater
A30 PTC Heater
E56 Navigation Receiver Assembly
B3 Theft Warning ECU
B28 Air Inlet Control SW
E22 Combination Meter
E47 Outer Mirror SW
R1 Vanity Lamp SW (RH)
R4 Vanity Lamp SW (LH)
R8 Overhead J/B
R10 Room Lamp (Front)
E49 Airbag Sensor Assembly Center
E14 Steering Sensor
E6 Steering Lock ECU
E51 ID Code Box
E23 Hazard Warning Signal SW
E42 A/C Amplifier
E41 A/C Amplifier
E33 Seat Heater SW
E25 Clock
E26 Integration Control and Panel Assembly
E23 Hazard Warning Signal SW
Main Body ECU
IG1 Relay
HTR Relay
P/WR Relay
Noise Filter
E81 Turn Signal Flasher
E58 4WD Control SW
J1 Key Interlock Solenoid
E22 Combination Meter
E90 Radio Receiver Assembly
E52 Navigation Receiver Assembly
E22 Combination Meter
E29 A/C SW
Max Hot SW
E89 A/T Shift Lever Illumination
E34 Cigarette Lighter Illumination
E36 Downhill Assist Control SW
E26 Integration Control and Panel Assembly
E25 Clock
E30 Front Console Illumination
E23 Hazard Warning Signal SW
E33 Seat Heater SW
E58 4WD Control SW
E12 Windshield Wiper SW Assembly
E6 Steering Lock ECU
R6 Inner Rear View Mirror
R9 Sliding Roof Control ECU
H5 Door Lock Assembly (Front LH)
H3 Outer Rear View Mirror (LH)
Z2 Electrical Key Oscillator (Front Door LH)
E19 Main Body ECU
E36 Downhill Assist Control SW
E63 Certification ECU
E31 Power SW
E31 Power SW
E64 Tire Pressure Warning ECU and Receiver
ST CUT Relay
E66 Auto Wiper Relay
E15 Headlamp Dimmer SW Assembly
G4 Outer Rear View Mirror (RH)
G5 Door Lock Assembly (Front RH)
G8 Power Window SW (Driver's Side)
G9 Power Window Regulator Motor (Front RH)
Y2 Electrical Key Oscillator (Front Door RH)
E15 Headlamp Dimmer SW Assembly
E36 Downhill Assist Control SW
E63 Certification ECU
E31 Power SW
E31 Power SW
E64 Tire Pressure Warning ECU and Receiver
ST CUT Relay
E66 Auto Wiper Relay
E15 Headlamp Dimmer SW Assembly
E16 DLC3
E44 Shift Lock Control ECU
E50 Transponder Key ECU
ACC Relay
PWR OUTLET Relay
ST Relay
E27 Integration Control and Panel Assembly
E60 Blower Motor
E35 Cigarette Lighter
E48 Power Outlet Socket (Front)
E62 Blower Resistor
E67 4WD Control ECU
E82 Double Locking ECU
E15 Headlamp Dimmer SW Assembly
E9 Unlock Warning SW
E16 DLC3
E44 Shift Lock Control ECU
E50 Transponder Key ECU
ACC Relay
PWR OUTLET Relay
ST Relay
E27 Integration Control and Panel Assembly
E60 Blower Motor
E35 Cigarette Lighter
E48 Power Outlet Socket (Front)
E62 Blower Resistor
E67 4WD Control ECU
E82 Double Locking ECU
N1 Rear Fog Light (LH)
N3 License Plate Lamp
N6 Rear Fog Light (RH)
K17 Power Outlet Socket (Rear)
K13 Rear Combination Lamp (RH)
K15 Rear Combination Lamp (LH)
N2 License Plate Lamp (LH)
T1 Fuel Suction Pump
J4 Door Lock Assembly (Rear LH)
K4 Seat Heater (LH)
K6 Yaw Rate Sensor
K19 Front Seat Inner Belt (Front Passenger's Side)
Q9 Seat Heater (RH)
Q6 Power Seat SW (Driver's Seat)
Q7 Power Seat SW (Lumbar Support)
L19 Glass Breakage Sensor
S11 Rear Fog Light (Center)
S1 Center Stop Lamp
S6 License Plate Lamp (RH)
S8 Electrical Key Oscillator (Back Door)
S10 Back Door Lock Assembly
L15(AL ObS) Junction Connector
Junction Connector
Cowl Wire Connector
* 1 : Australia
* 2 : Except Australia
* 3 : w/ VSC
* 4 : w/o VSC
* 5 : Gasoline
* 6 : Diesel
* 7 : w/ Entry & Start System
* 8 : Automatic A/C
* 9 : Manual A/C
* 10 : Short Body