| | | |
|---|---|---|
| **Last Modified:** 03-12-2013 | 6.4 F | **Doc ID:** NM1000000005IIV |
| **Model Year:** 2013 | **Model:** RAV4 | **Prod Date Range:** [12/2012 - ] |
| **Title:** CRUISE CONTROL: CRUISE CONTROL SYSTEM: CRUISE CONTROL MAIN SWITCH; 2013 MY RAV4 [12/2012 - ] | | |

# CRUISE CONTROL MAIN SWITCH

## 1. CONSTRUCTION

(a) The cruise control main switch assembly consists of the ON/OFF button, +RES, -SET and CANCEL switches. The +RES, -SET and CANCEL switches are operated using a lever that operates in 3 directions.

(b) The cruise control main switch assembly is an automatic reset (normally open) type that turns on only when the switch is being operated and turns off as soon as the driver releases the switch. Furthermore, the functions of the control switch are active only when the cruise control system has been turned on.

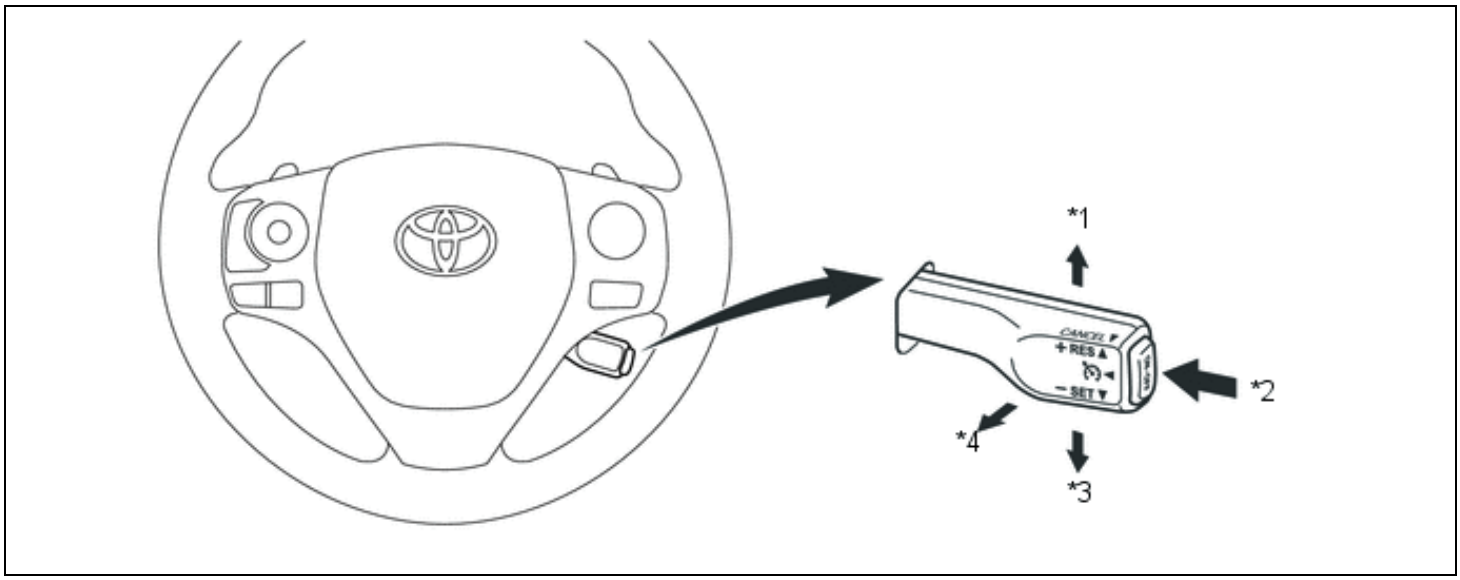


| | | | |
|---|---|---|---|
| *1 | +RES Switch | *2 | ON/OFF Button |
| *3 | -SET Switch | *4 | CANCEL Switch |