| | | |
|---|---|---|
| **Last Modified:** 03-12-2013 | 6.4 F | **Doc ID:** NM1000000005PUM |
| **Model Year:** 2013 | **Model:** RAV4 | **Prod Date Range:** [12/2012 - ] |
| **Title:** BRAKE CONTROL / DYNAMIC CONTROL SYSTEMS: BRAKE CONTROL SYSTEM: YAWRATE SENSOR; 2013 MY RAV4 [12/2012 - ] | | |

# YAWRATE SENSOR

## 1. CONSTRUCTION

(a) The center airbag sensor assembly incorporates the yawrate and deceleration sensor. The yawrate and deceleration sensor detects the yaw rate, longitudinal and lateral acceleration of the vehicle and transmits signals to the skid control ECU via the CAN communication.

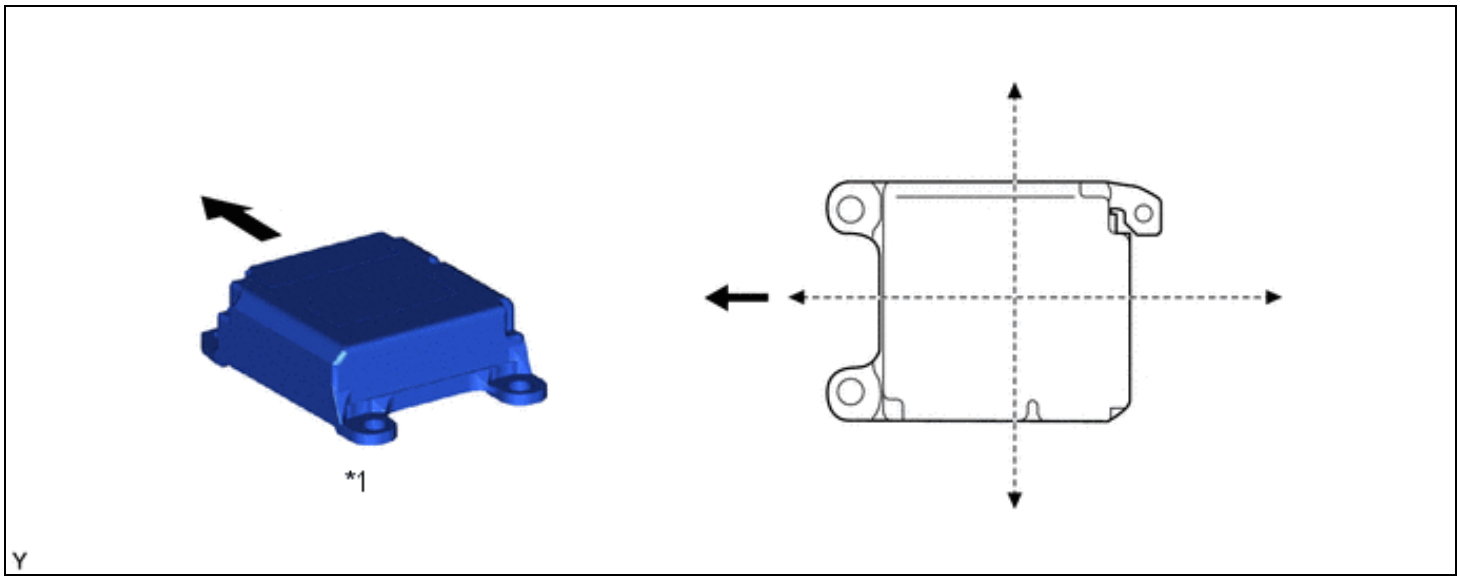


| | | | |
|---|---|---|---|
| *1 | Center Airbag Sensor Assembly<br>• Yawrate and Deceleration Sensor | - | - |
| ➡ | Front | - | - |

**NOTICE:**

After replacing the yaw rate sensor or the skid control ECU, initialization of the yaw rate sensor is required. For the actual procedure, refer to the Repair Manual.