| | | |
|---|---|---|
| **Last Modified:** 03-12-2013 | 6.4 F | **Doc ID:** NM1000000005Q70 |
| **Model Year:** 2013 | **Model:** RAV4 | **Prod Date Range:** [12/2012 - ] |
| **Title:** U760F AUTOMATIC TRANSMISSION / TRANSAXLE: AUTOMATIC TRANSAXLE SYSTEM: ATF FILLING PROCEDURE; 2013 MY RAV4 [12/2012 - ] | | |

# ATF FILLING PROCEDURE

## 1. CONSTRUCTION

(a) A special ATF filling procedure is used in order to improve the accuracy of the ATF level when the transaxle is being repaired or replaced. As a result, the oil filler tube and the oil level gauge used in the conventional automatic transmission have been discontinued, eliminating the need to inspect the fluid level as a part of routine maintenance.

(b) This filling procedure uses a refill plug, an overflow plug, an ATF temperature sensor and a D indicator. For details about the ATF filling procedure, refer to the Repair Manual.

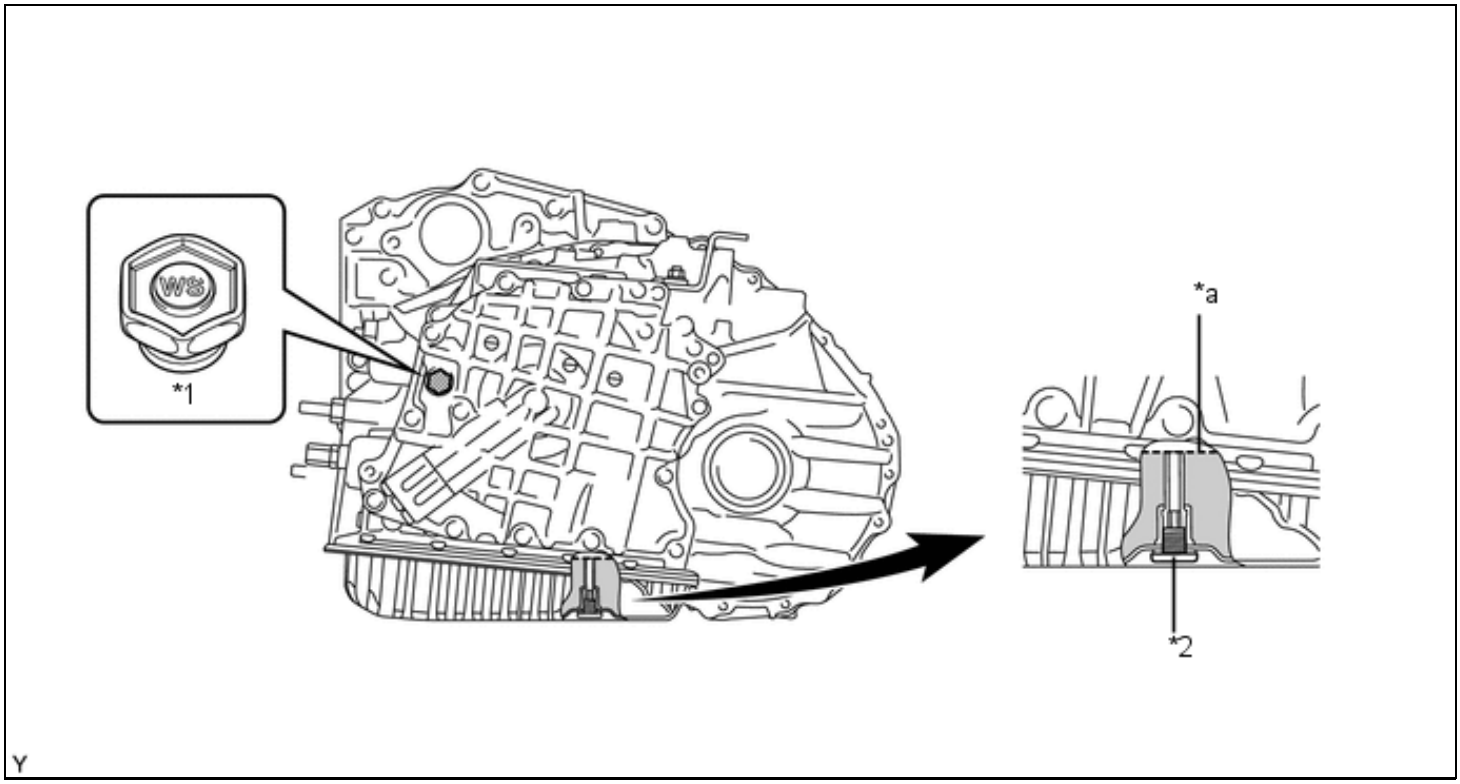


| | | | |
|---|---|---|---|
| *1 | Refill Plug | *2 | Overflow Plug |
| *a | Proper Level | - | - |
| | ATF | - | - |