| | | |
|---|---|---|
| **Last Modified:** 03-12-2013 | 6.4 F | **Doc ID:** NM1000000005Q76 |
| **Model Year:** 2013 | **Model:** RAV4 | **Prod Date Range:** [12/2012 - ] |
| **Title:** U760F AUTOMATIC TRANSMISSION / TRANSAXLE: AUTOMATIC TRANSAXLE SYSTEM: SYSTEM DIAGRAM; 2013 MY RAV4 [12/2012 - ] | | |

# SYSTEM DIAGRAM

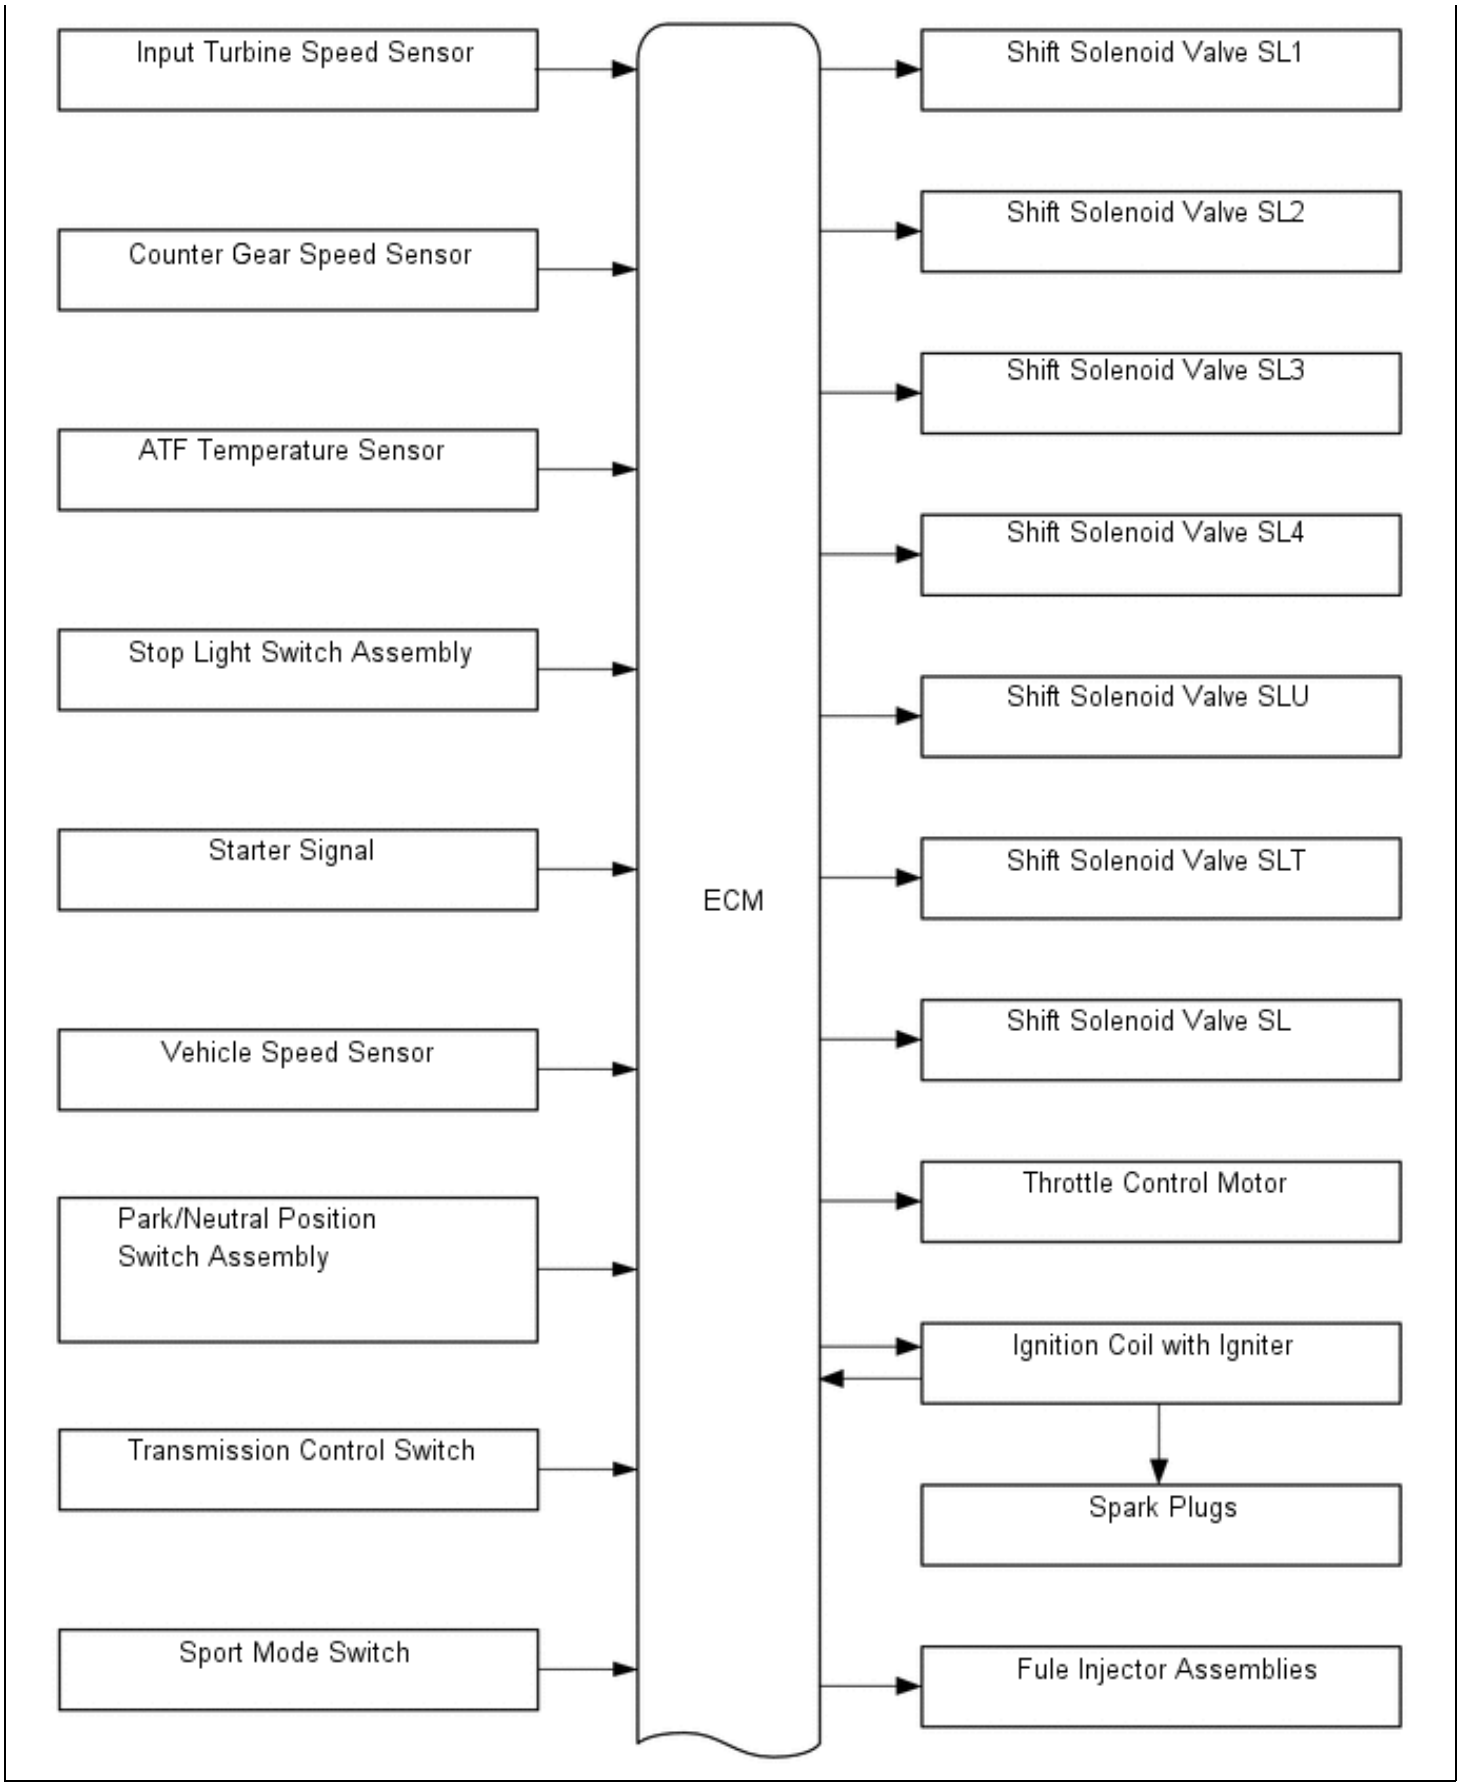
Input Turbine Speed Sensor
Counter Gear Speed Sensor
ATF Temperature Sensor
Stop Light Switch Assembly
Starter Signal
Vehicle Speed Sensor
Park/Neutral Position Switch Assembly
Transmission Control Switch
Sport Mode Switch
ECM
Shift Solenoid Valve SL1
Shift Solenoid Valve SL2
Shift Solenoid Valve SL3
Shift Solenoid Valve SL4
Shift Solenoid Valve SLU
Shift Solenoid Valve SLT
Shift Solenoid Valve SL
Throttle Control Motor
Ignition Coil with Igniter
Spark Plugs
Fule Injector Assemblies

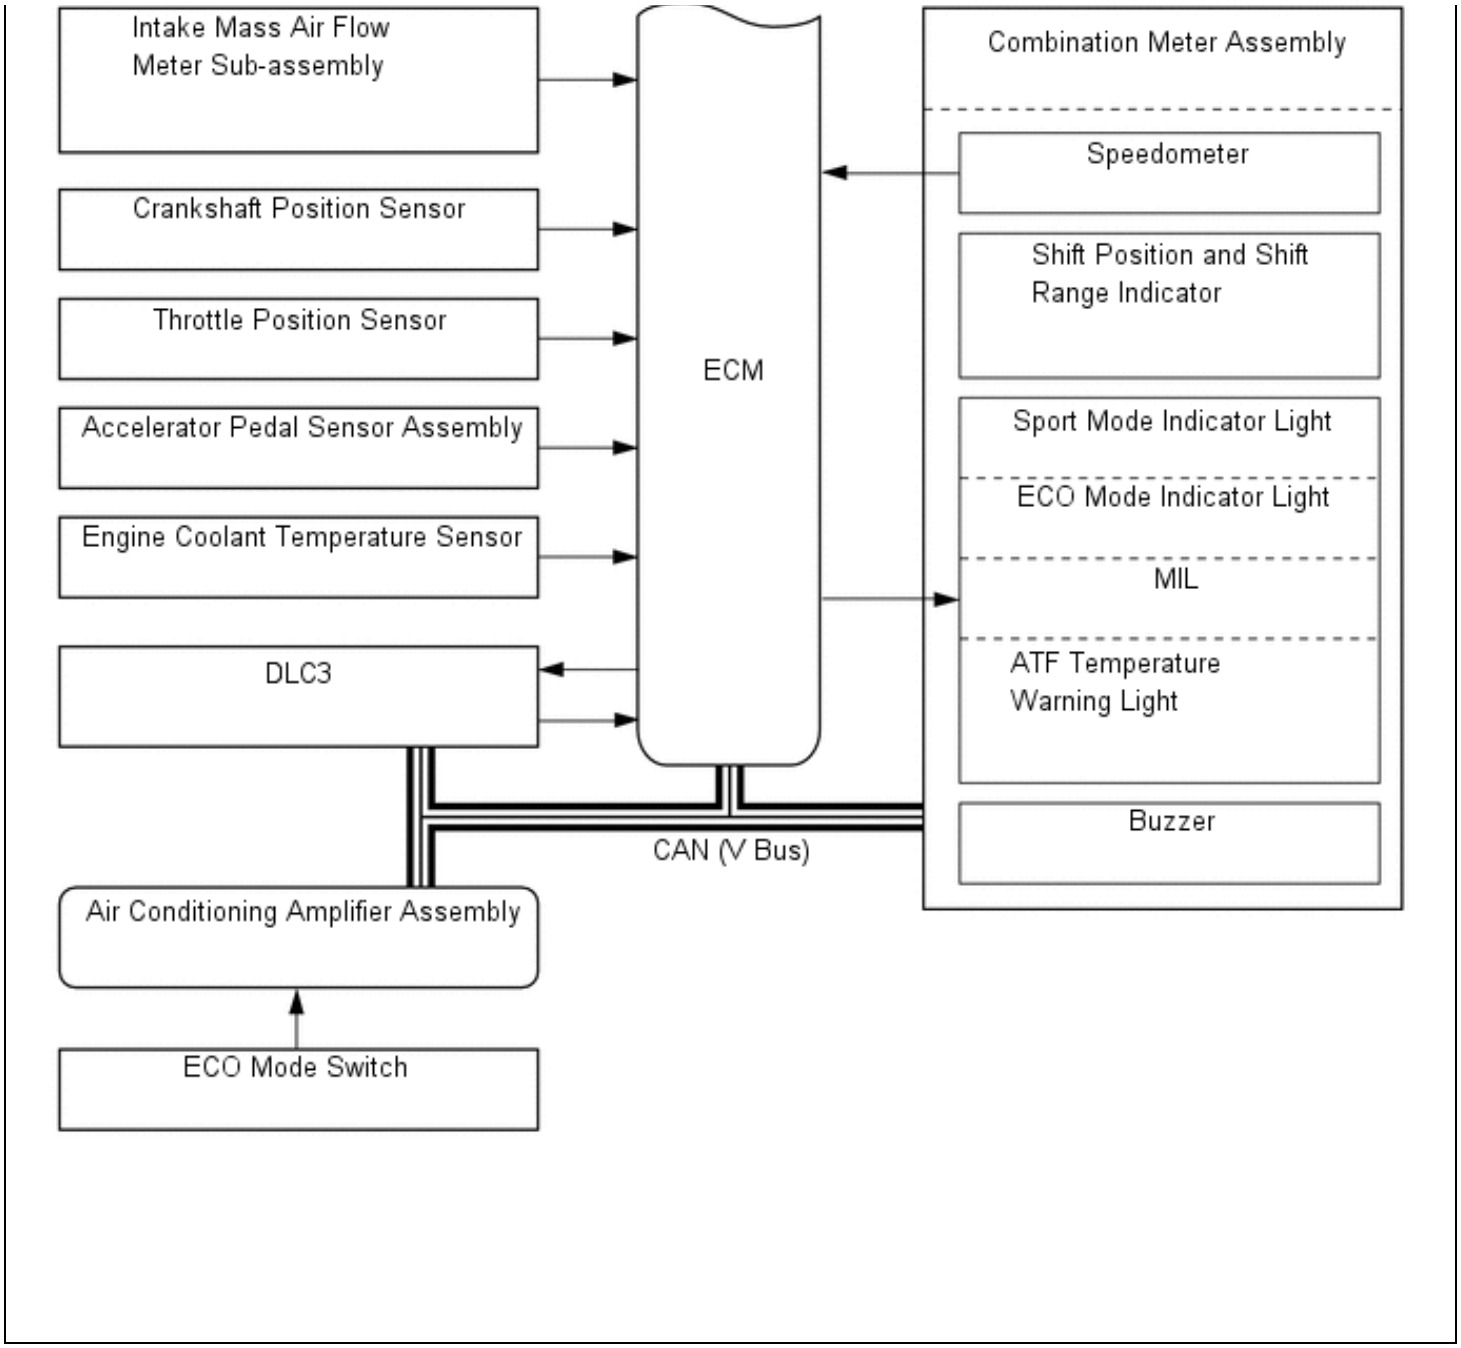
Intake Mass Air Flow Meter Sub-assembly
Crankshaft Position Sensor
Throttle Position Sensor
Accelerator Pedal Sensor Assembly
Engine Coolant Temperature Sensor
DLC3
ECM
Combination Meter Assembly
Speedometer
Shift Position and Shift Range Indicator
Sport Mode Indicator Light
ECO Mode Indicator Light
MIL
ATF Temperature Warning Light
Buzzer
CAN (V Bus)
Air Conditioning Amplifier Assembly
ECO Mode Switch