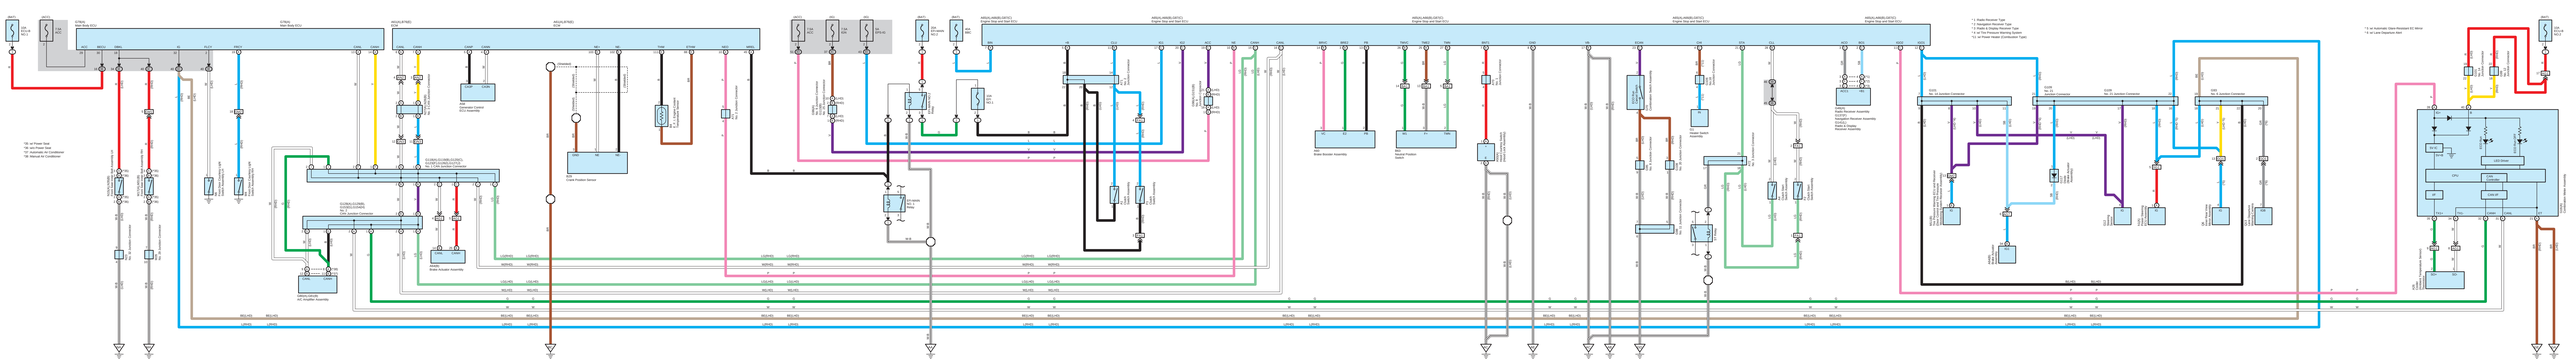

(BAT)
10A ECU-B NO.1
(ACC)
7.5A ACC
G78(A) Main Body ECU
ACC
BECU
DBKL
IG
FLCY
FRCY
CANL
CANH
A61(A),B76(E) ECM
CANP
CANN
NE+
NE-
THW
ETHW
NEO
MREL
(IG)
7.5A IGN
5A EPS-IG
20A EFI-MAIN NO.2
40A BBC
10A EFI NO.1
EFI-MAIN NO.2 Relay
EFI-MAIN NO. 1 Relay
A65(A),A66(B),G87(C) Engine Stop and Start ECU
BIN
+B
CLU
IG1
IG2
NE
BRVC
BRE2
PB
TMVC
TME2
TMN
BNT1
GND
VB-
ECAN
CHI
STA
CLL
ACO
BO1
IGO2
IGO1
N27(A),N28(B) No. 3 CAN Junction Connector
A58 Generator Control ECU Assembly
CA3P
CA3N
(Shielded)
B29 Crank Position Sensor
GND
NE
NE-
B4 E. F. I. Engine Coolant Temperature Sensor
A71 No. 2 Junction Connector
G96(A) No. 9 Junction Connector
G113(B) No. 25 Junction Connector
G96(A),G151(B) No. 9 Junction Connector
(LHD)
(RHD)
N15(A),N35(B) Front Seat Inner Belt Assembly LH
M17(A),M31(B) Front Seat Inner Belt Assembly RH
N23 No. 32 Junction Connector
M26 No. 29 Junction Connector
N6 Front Door Courtesy Light Switch Assembly LH
M4 Front Door Courtesy Light Switch Assembly RH
G118(A),G119(B),G120(C), G123(F),G126(I),G127(J) No. 1 CAN Junction Connector
G128(A),G129(B), G153(G),G154(H) No. 2 CAN Junction Connector
G80(A),G81(B) A/C Amplifier Assembly
A64(B) Brake Actuator Assembly
A1 Clutch Switch Assembly
F1 Clutch Switch Assembly
A60 Brake Booster Assembly
VC
E2
PB
B63 Neutral Position Switch
W1
F+
TMN
A70 No. 1 Junction Connector
A50(A) Hood Courtesy Switch (Hood Lock Assembly)
G70 Combination Switch Assembly
ECO Run Cancel Switch
G95 No. 8 Junction Connector
G108 No. 20 Junction Connector
G98 No. 11 Junction Connector
G106 No. 18 Junction Connector
G1 Heater Switch Assembly
IN
A72 No. 3 Junction Connector
ST Relay
A4 Clutch Start Switch Assembly
F2 Clutch Start Switch Assembly
G46(A) Radio Receiver Assembly
G137(F) Navigation Receiver Assembly
G141(L) Radio & Display Receiver Assembly
ACC1
+B1
G101 No. 14 Junction Connector
G109 No. 21 Junction Connector
G93 No. 6 Junction Connector
M11(B) Tire Pressure Warning ECU and Receiver (Door Control and Tire Pressure Monitoring System Receiver Assembly)
G117 Diode (Brake Actuator Assembly)
A64(B) Brake Actuator Assembly
IG1
G12 Steering Sensor
h1(A) Power Steering ECU Assembly
Q6 Inner Rear View Mirror Assembly
Q13 Lane Departure Warning Camera
IGB
10A ECU-B NO.2
G101 No. 14 Junction Connector
G99 No. 12 Junction Connector
G16(A) Combination Meter Assembly
IG+
B
5V IC
5V+B
ECO Run
ECO Run OFF
LED Driver
CPU
CAN Controller
I/F
CAN I/F
TX1+
TX1-
CANH
CANL
ET
A26 Cooler (Ambient Temperature Sensor) Thermistor
SO+
SO-
GM1
GM2
AN2
GN3
AG1
FA1
BA1
hG1
GQ1
AG7
NA
MA
BC
AA
AC
AE
AB
GD
GE
GA

*35 :w/ Power Seat
*36 :w/o Power Seat
*37 :Automatic Air Conditioner
*38 :Manual Air Conditioner

* 1 :Radio Receiver Type
* 2 :Navigation Receiver Type
* 3 :Radio & Display Receiver Type
* 4 :w/ Tire Pressure Warning System
*11 :w/ Power Heater (Combustion Type)

* 5 :w/ Automatic Glare-Resistant EC Mirror
* 6 :w/ Lane Departure Alert