28 COROLLA VERSO

(Cont. next page)

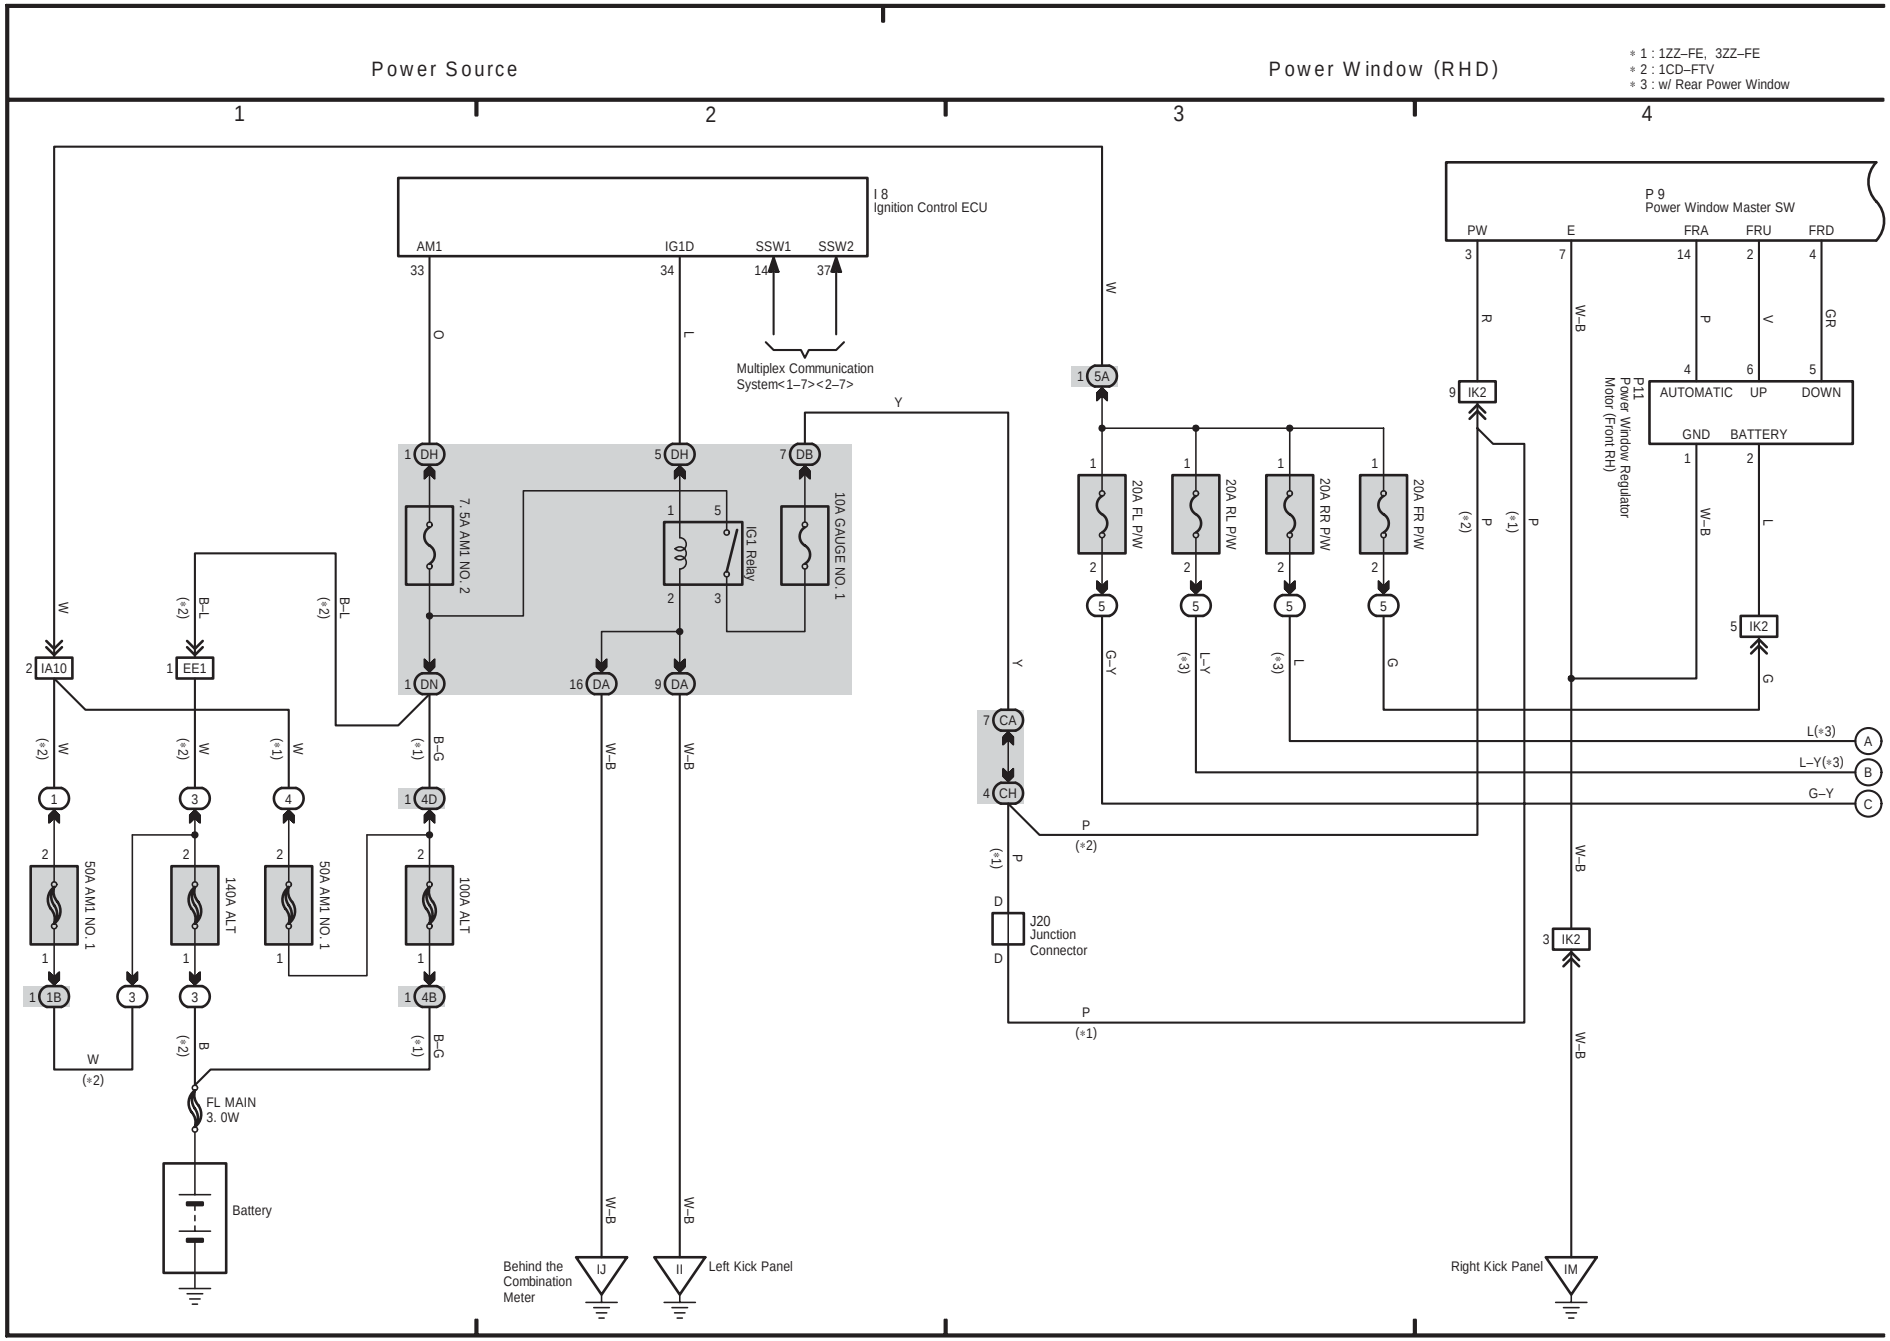

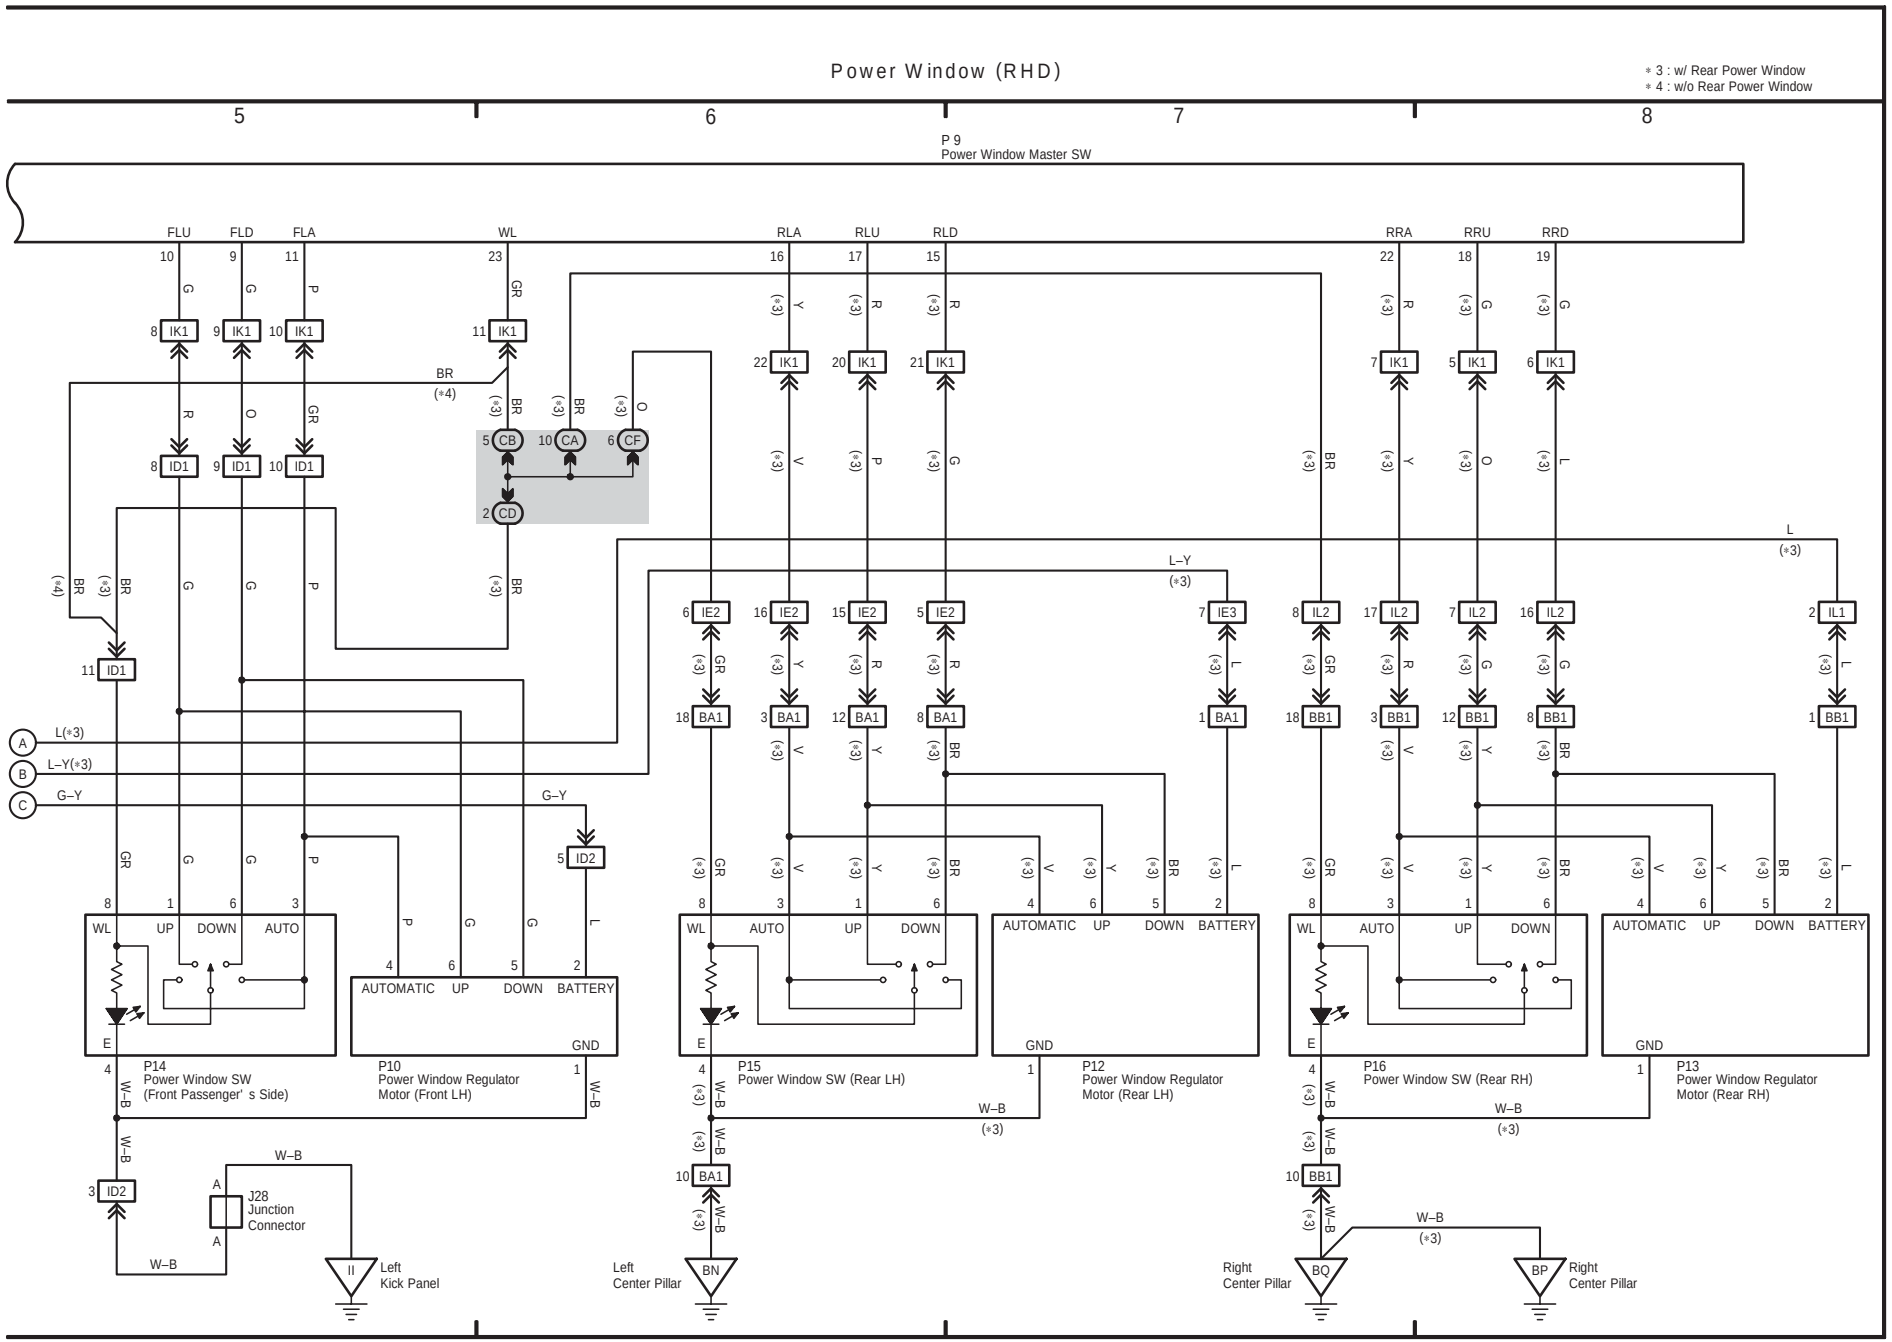
Power Window (RHD)
* 3 : w/ Rear Power Window
* 4 : w/o Rear Power Window
5
6
7
8
P 9
Power Window Master SW
FLU
FLD
FLA
WL
RLA
RLU
RLD
RRA
RRU
RRD
IK1
ID1
CB
CA
CF
CD
IE2
IE3
IL2
IL1
BA1
BB1
ID2
L(*3)
L–Y(*3)
G–Y
WL
UP
DOWN
AUTO
AUTOMATIC
BATTERY
GND
P14
Power Window SW
(Front Passenger' s Side)
P10
Power Window Regulator
Motor (Front LH)
P15
Power Window SW (Rear LH)
P12
Power Window Regulator
Motor (Rear LH)
P16
Power Window SW (Rear RH)
P13
Power Window Regulator
Motor (Rear RH)
J28
Junction
Connector
Left
Kick Panel
Left
Center Pillar
Right
Center Pillar
Right
Center Pillar
W–B