33 COROLLA VERSO

(Cont. next page)

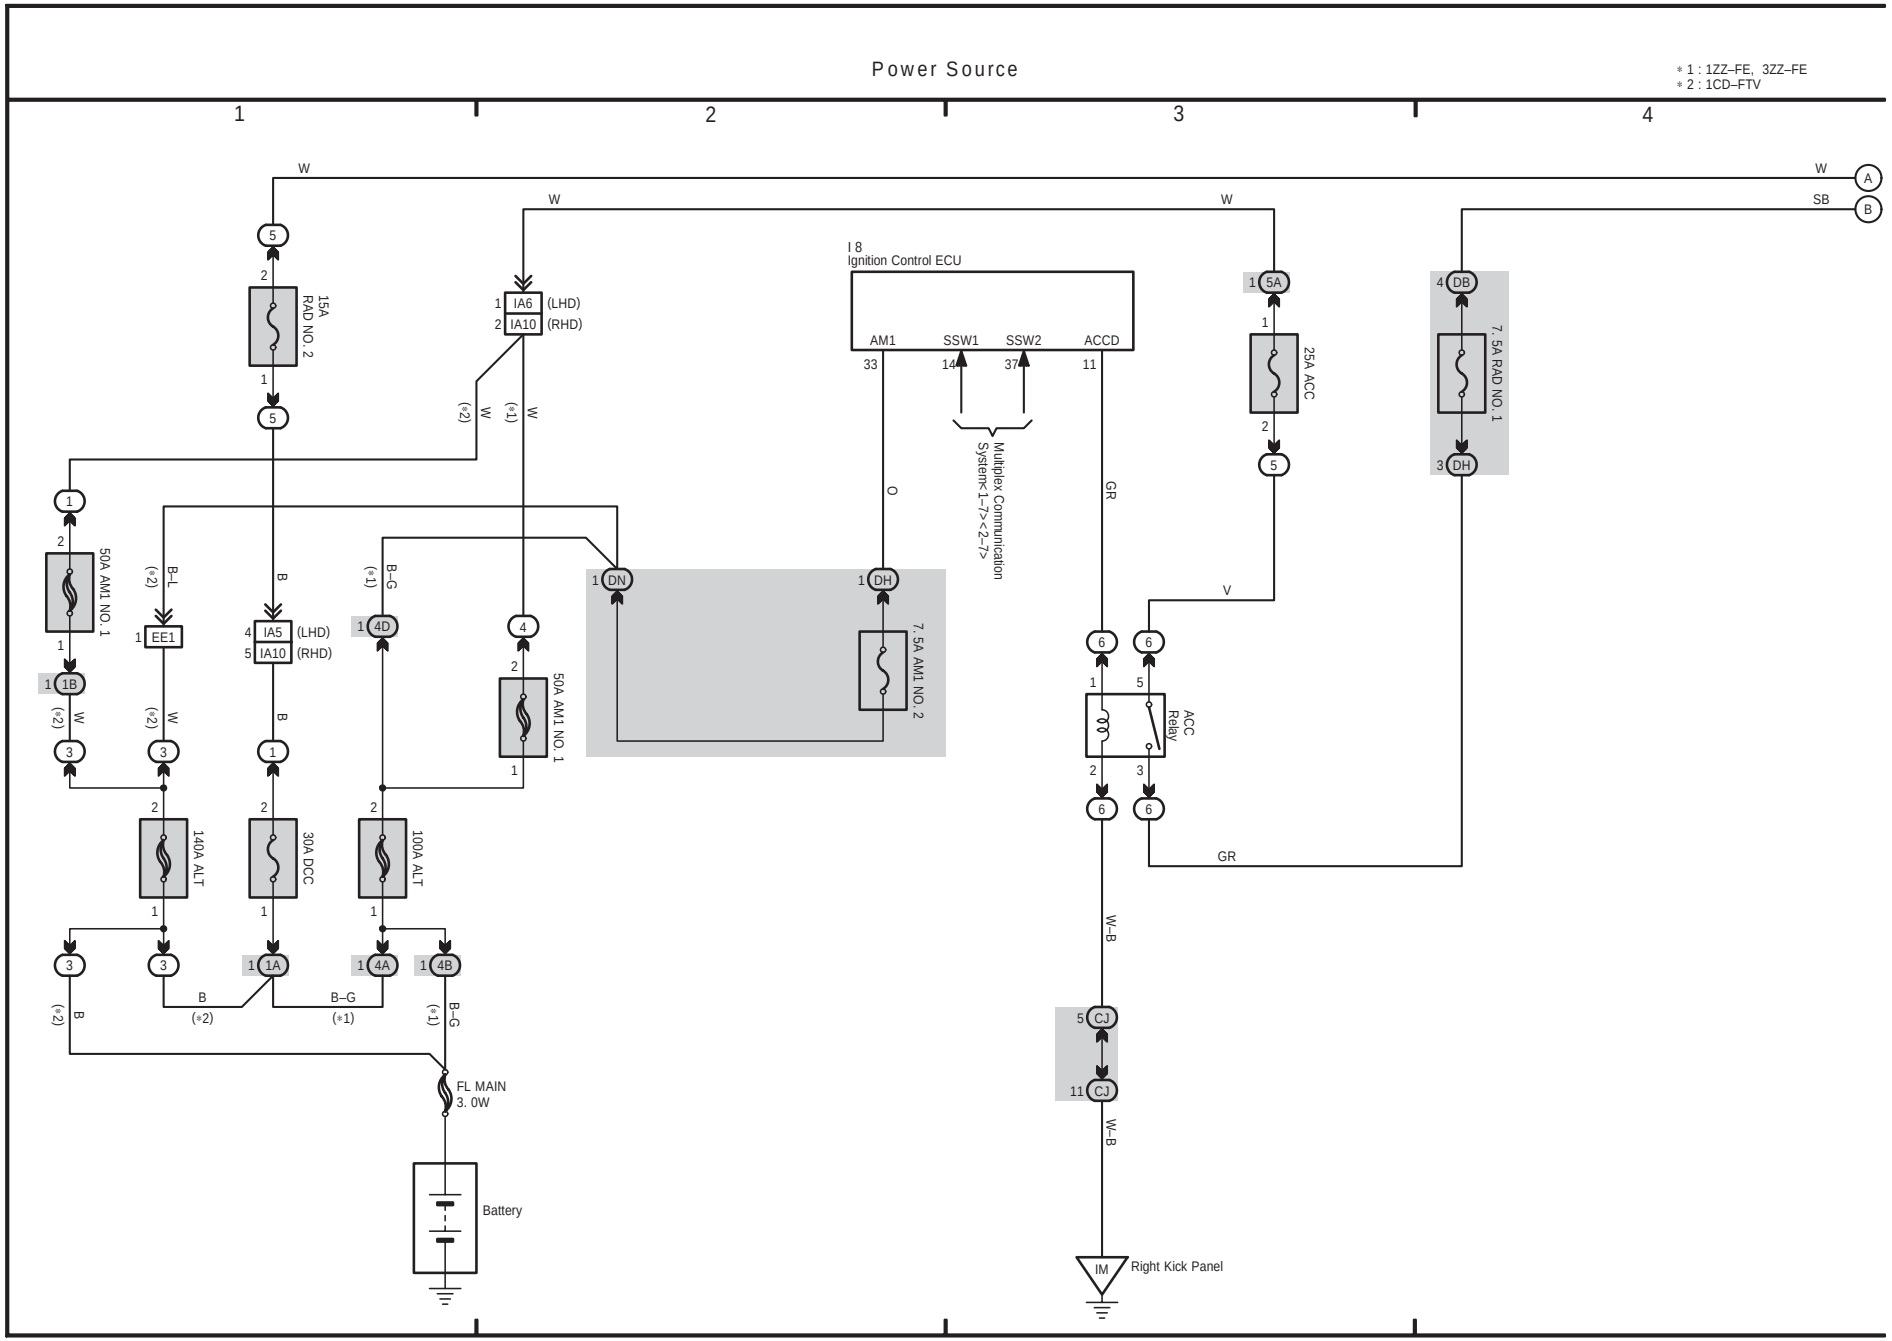

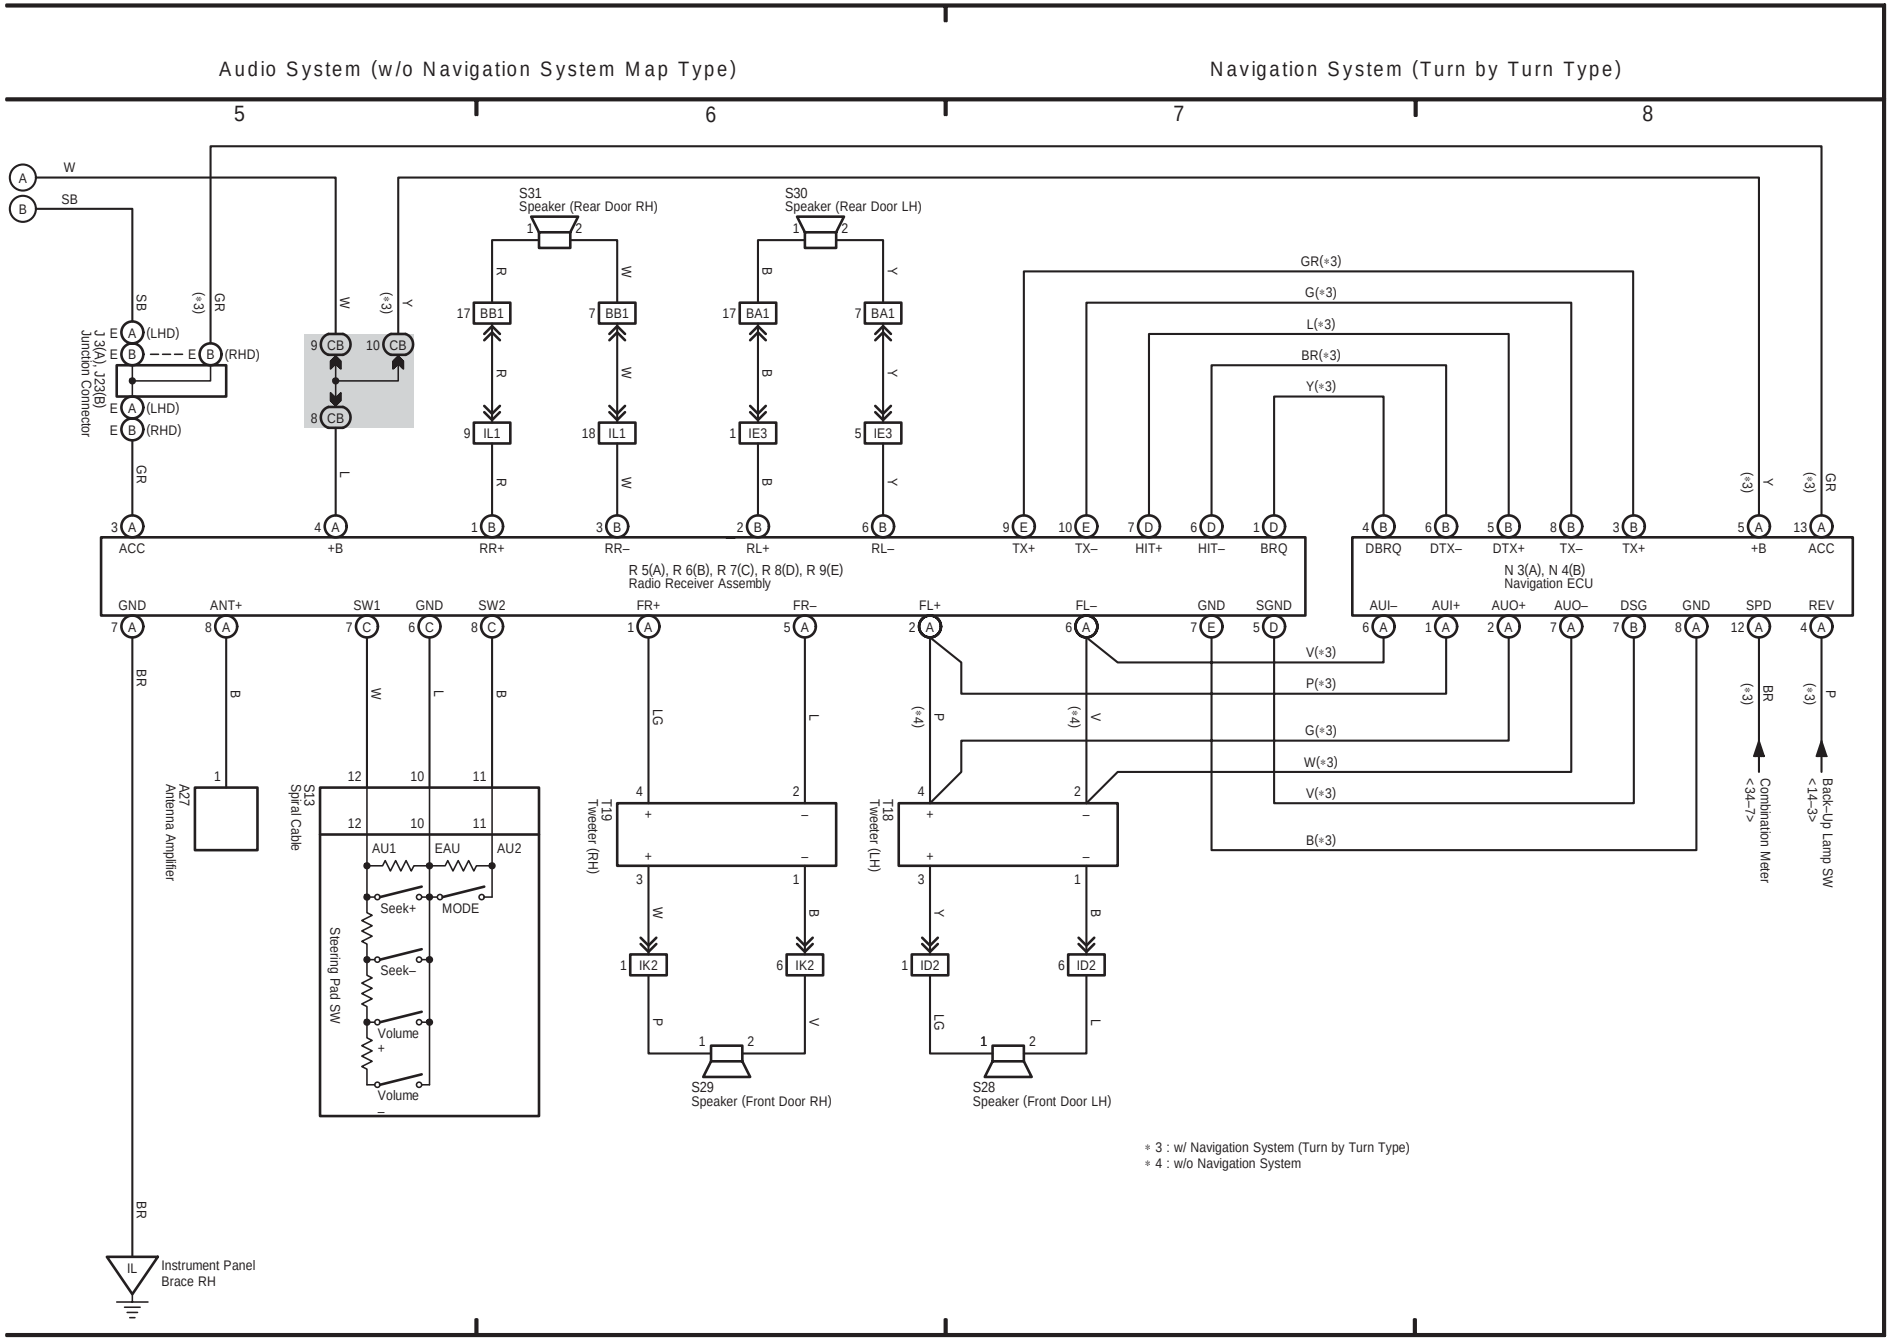
Audio System (w/o Navigation System Map Type)
Navigation System (Turn by Turn Type)
5
6
7
8
S31
Speaker (Rear Door RH)
S30
Speaker (Rear Door LH)
J 3(A), J23(B)
Junction Connector
(LHD)
(RHD)
R 5(A), R 6(B), R 7(C), R 8(D), R 9(E)
Radio Receiver Assembly
N 3(A), N 4(B)
Navigation ECU
ACC
+B
RR+
RR–
RL+
RL–
TX+
TX–
HIT+
HIT–
BRQ
DBRQ
DTX–
DTX+
TX–
TX+
+B
ACC
GND
ANT+
SW1
GND
SW2
FR+
FR–
FL+
FL–
GND
SGND
AUI–
AUI+
AUO+
AUO–
DSG
GND
SPD
REV
A27
Antenna Amplifier
S13
Spiral Cable
AU1
EAU
AU2
Seek+
MODE
Seek–
Volume
+
Volume
–
Steering Pad SW
T19
Tweeter (RH)
T18
Tweeter (LH)
S29
Speaker (Front Door RH)
S28
Speaker (Front Door LH)
Combination Meter
<34–7>
Back–Up Lamp SW
<14–3>
Instrument Panel
Brace RH
GR(∗3)
G(∗3)
L(∗3)
BR(∗3)
Y(∗3)
V(∗3)
P(∗3)
G(∗3)
W(∗3)
V(∗3)
B(∗3)
∗ 3 : w/ Navigation System (Turn by Turn Type)
∗ 4 : w/o Navigation System