



## FRONT FENDER FRONT APRON (ASSY) REPLACEMENT

1. REMOVE RADIATOR UPPER SUPPORT ([See page BP-1](#))
2. REMOVE FRONT FENDER FRONT APRON

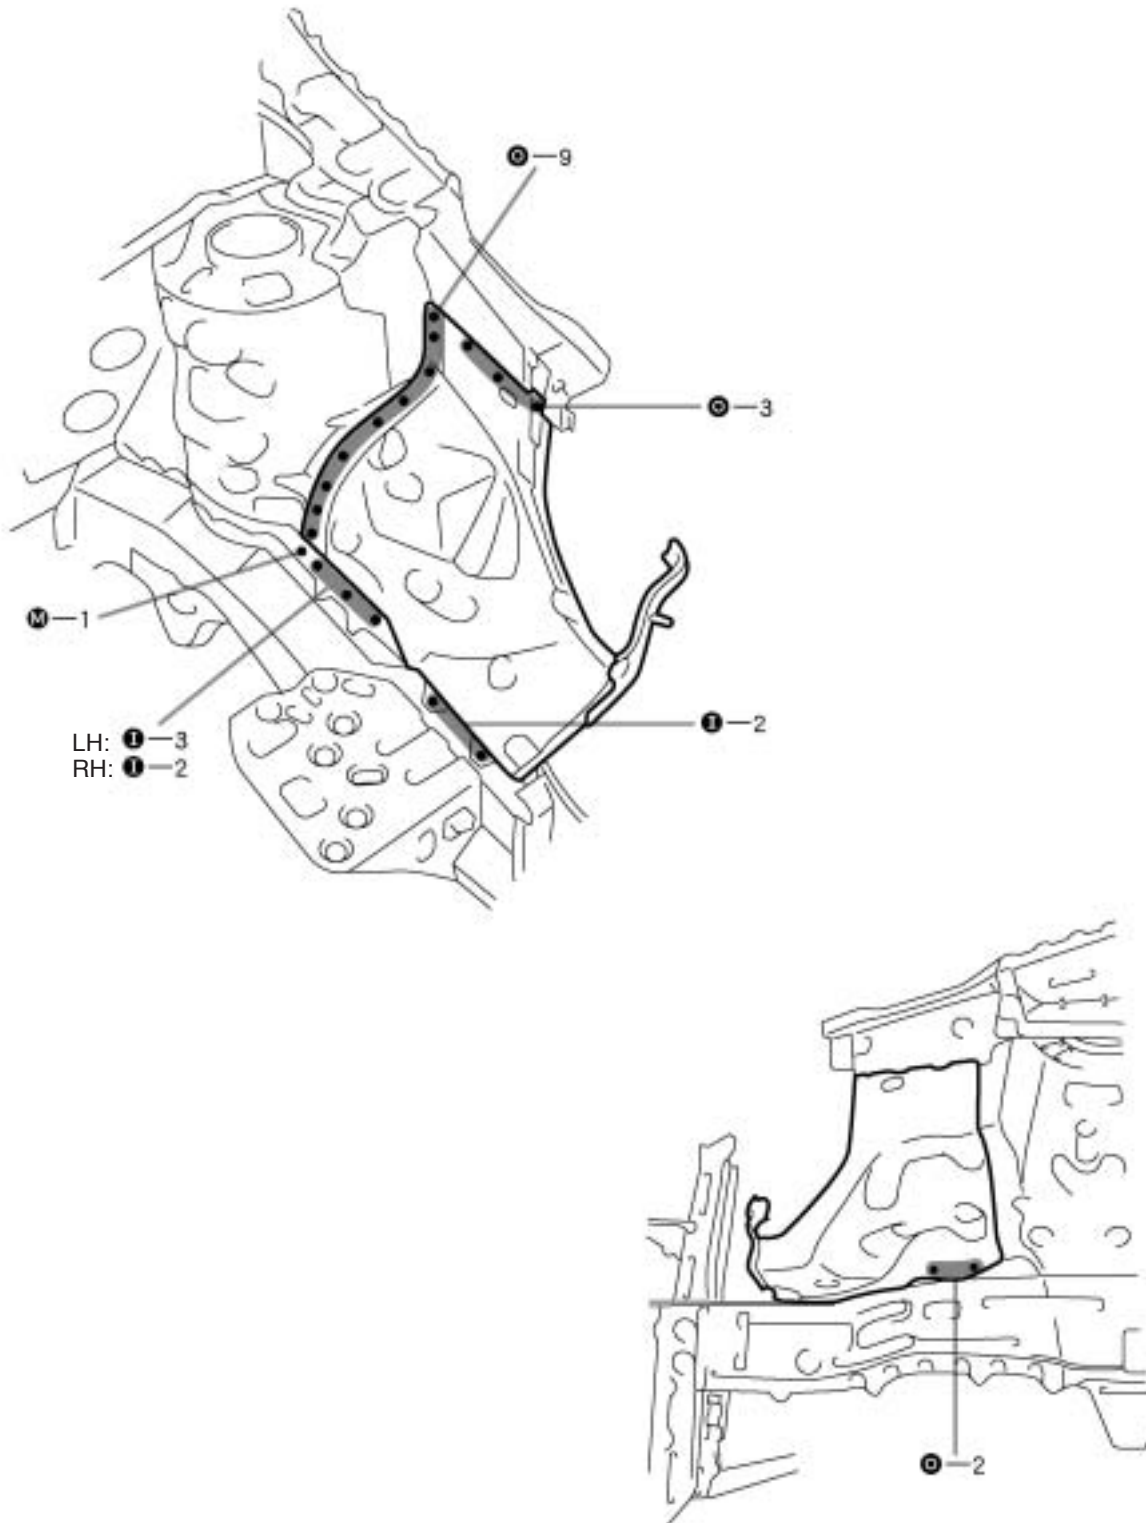

**3. INSTALL FRONT FENDER FRONT APRON**

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

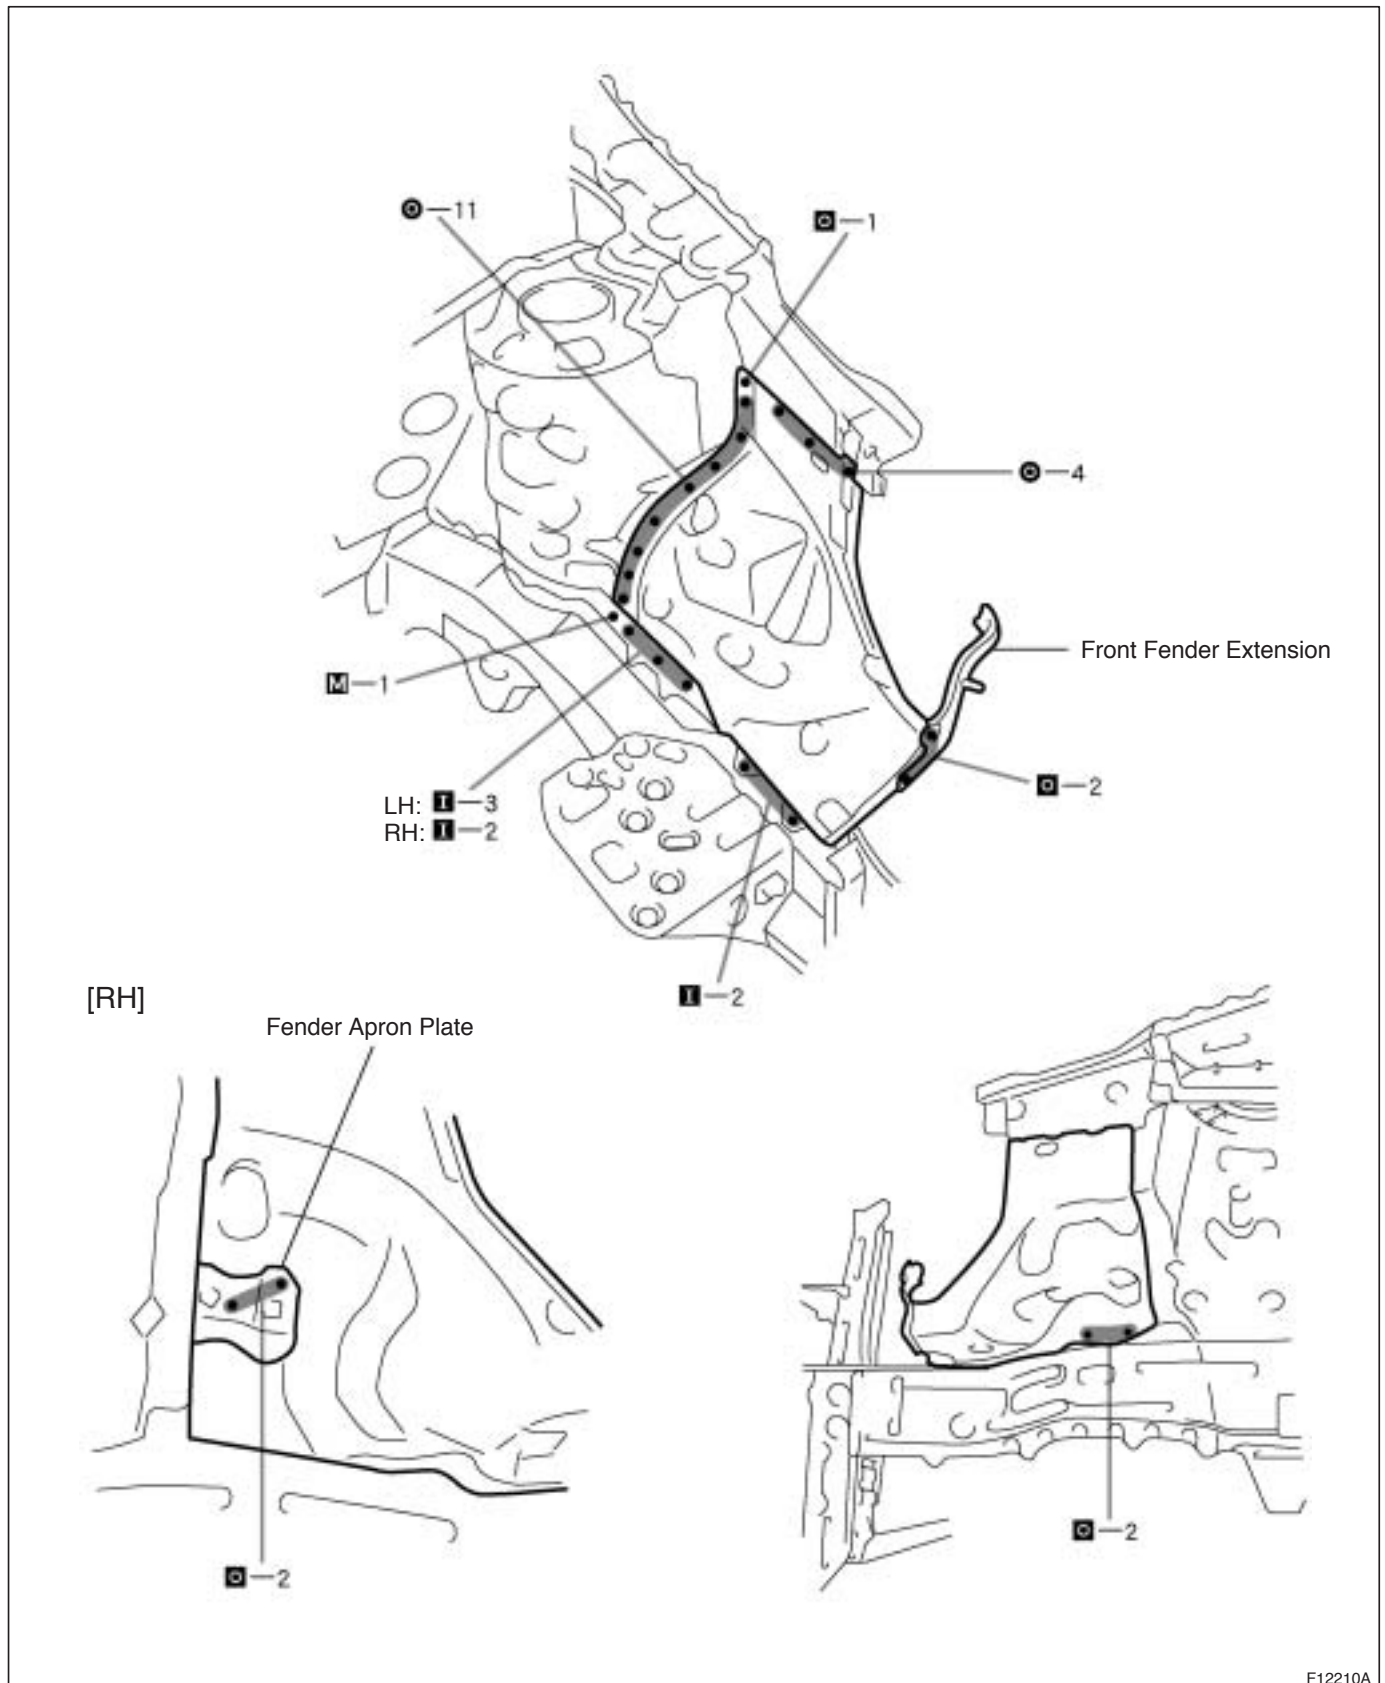

4. MEASURING THE ENGINE COMPARTMENT DIMENSIONS ([See page BP-94](#))
5. INSTALL RADIATOR UPPER SUPPORT ([See page BP-1](#))
6. APPLYING SEALER TO THE ENGINE COMPARTMENT ([See page PC-1](#))
7. APPLYING ANTI-RUST AGENT
  - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.