

REASSEMBLY

1. INSTALL COIL SPRING TO SHOCK ABSORBER

- (a) Using SST, compress the coil spring.
SST 09727-00060, 09727-30021

NOTICE:


To avoid damage to SST:

- Set SST arms to allow clearance to hold a 8-roll coil between them.
- Do not compress the coil spring more than necessary.
- Do not use an impact wrench.

- (b) Install the coil spring to the shock absorber.

HINT:

Fit the lower end of the coil spring into the gap of the spring seat of the shock absorber.

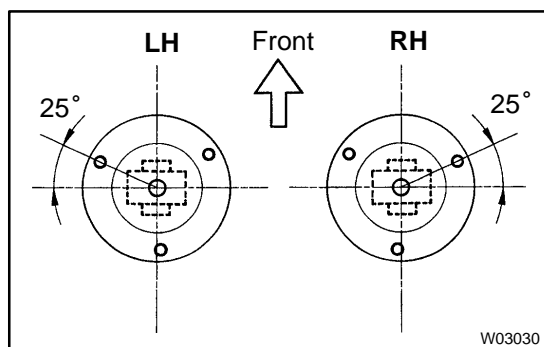

2. INSTALL SUSPENSION SUPPORT

- (a) Install the 2 retainers, suspension support and cushion to the rod.
(b) Temporarily tighten a new suspension support center nut.
(c) Align the suspension support with the shock absorber lower bushing, as shown.

HINT:

Face the lower end of the coil spring to the outside of the vehicle.

- (d) Remove the SST.

SST 09727-00060, 09727-30021

HINT:

After removing the SST, recheck the direction of the suspension support.

- (e) Torque the suspension center nut.

Torque: 25 N·m (250 kgf-cm, 18 ft-lbf)