


FRONT FENDER APRON FRONT WITH SUPPORT (ASSY)



REPLACEMENT

With the radiator upper support removed.

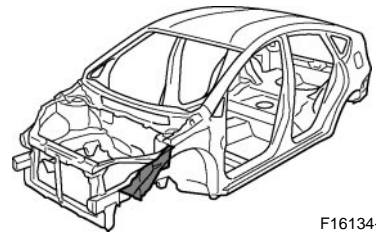

F16134-A



REMOVAL

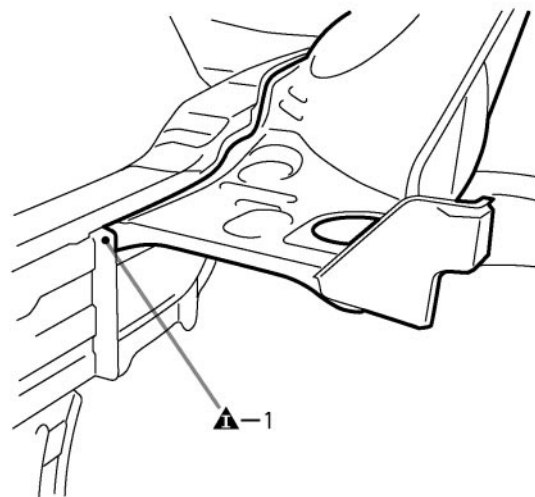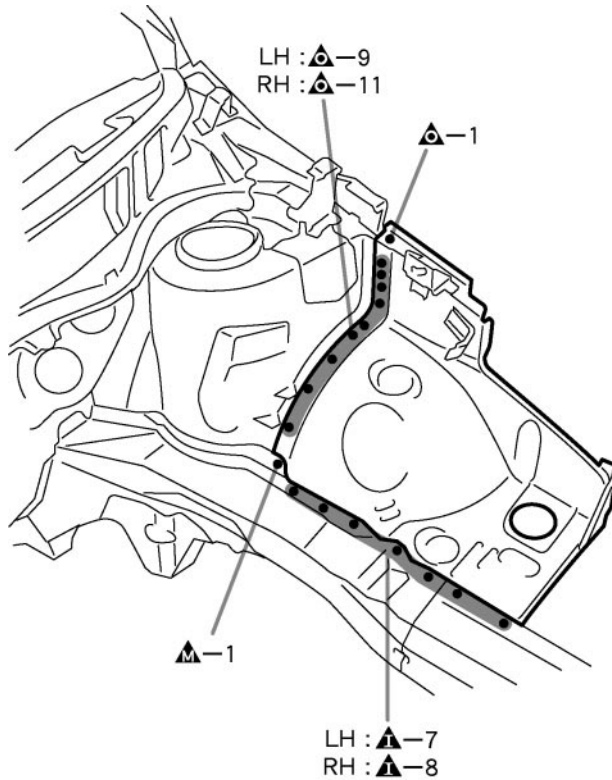

F16134

INSTALLATION





- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

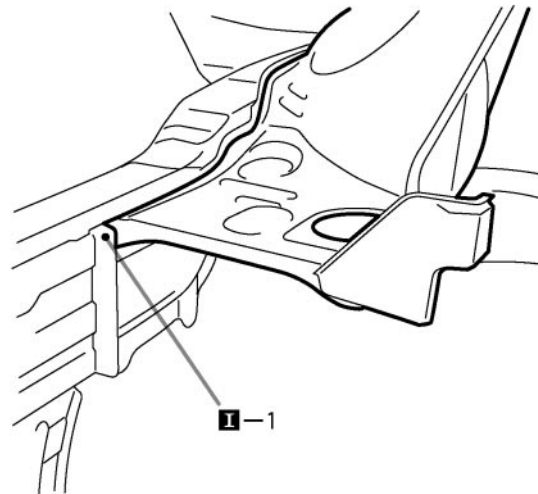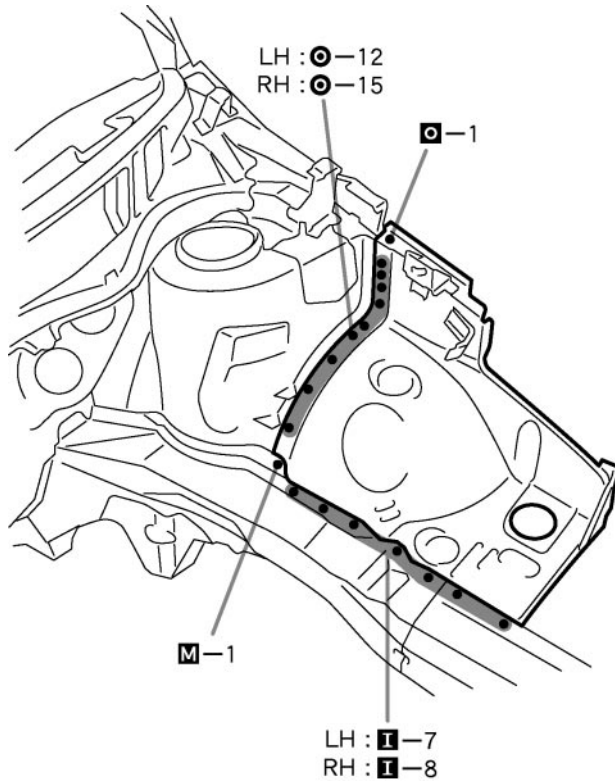

F16135

POINT

- 1 Inspect the fitting of the front fender and hood, etc., before welding, since this affects the appearance of the finish.

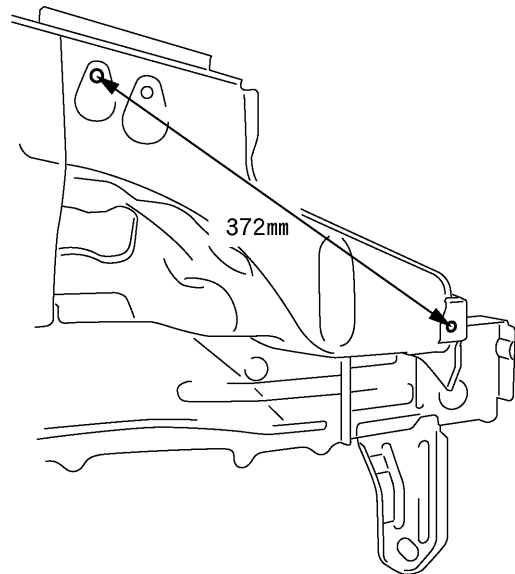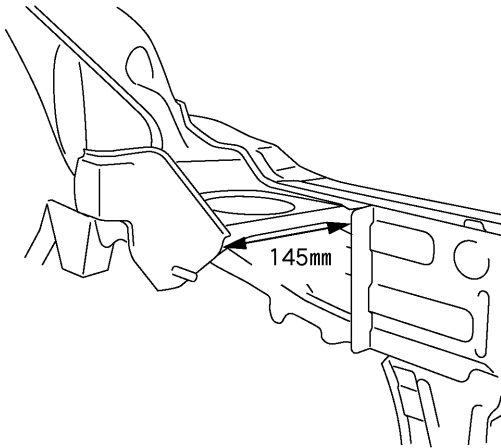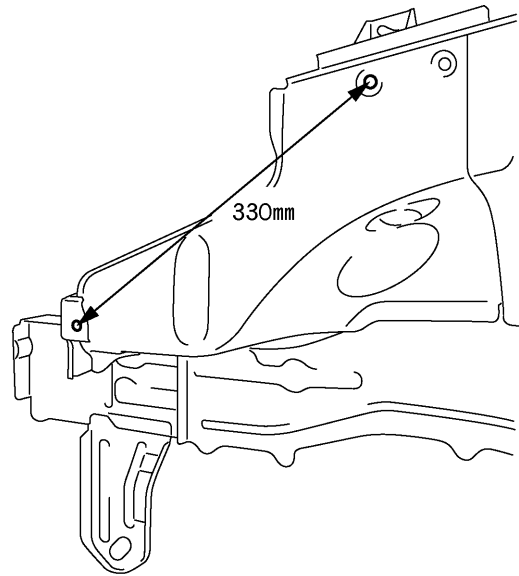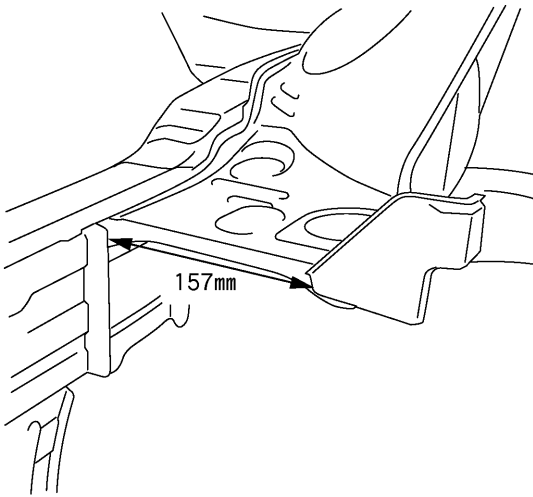

F16136

POINT

1 These values are reference values.

145mm (5.71in.)

157mm (6.18in.)

330mm (12.99in.)

372mm (14.65in.)