






- * 1 : Shielded
- * 2 : w/ Air Suspension
- * 3 : w/o Air Suspension













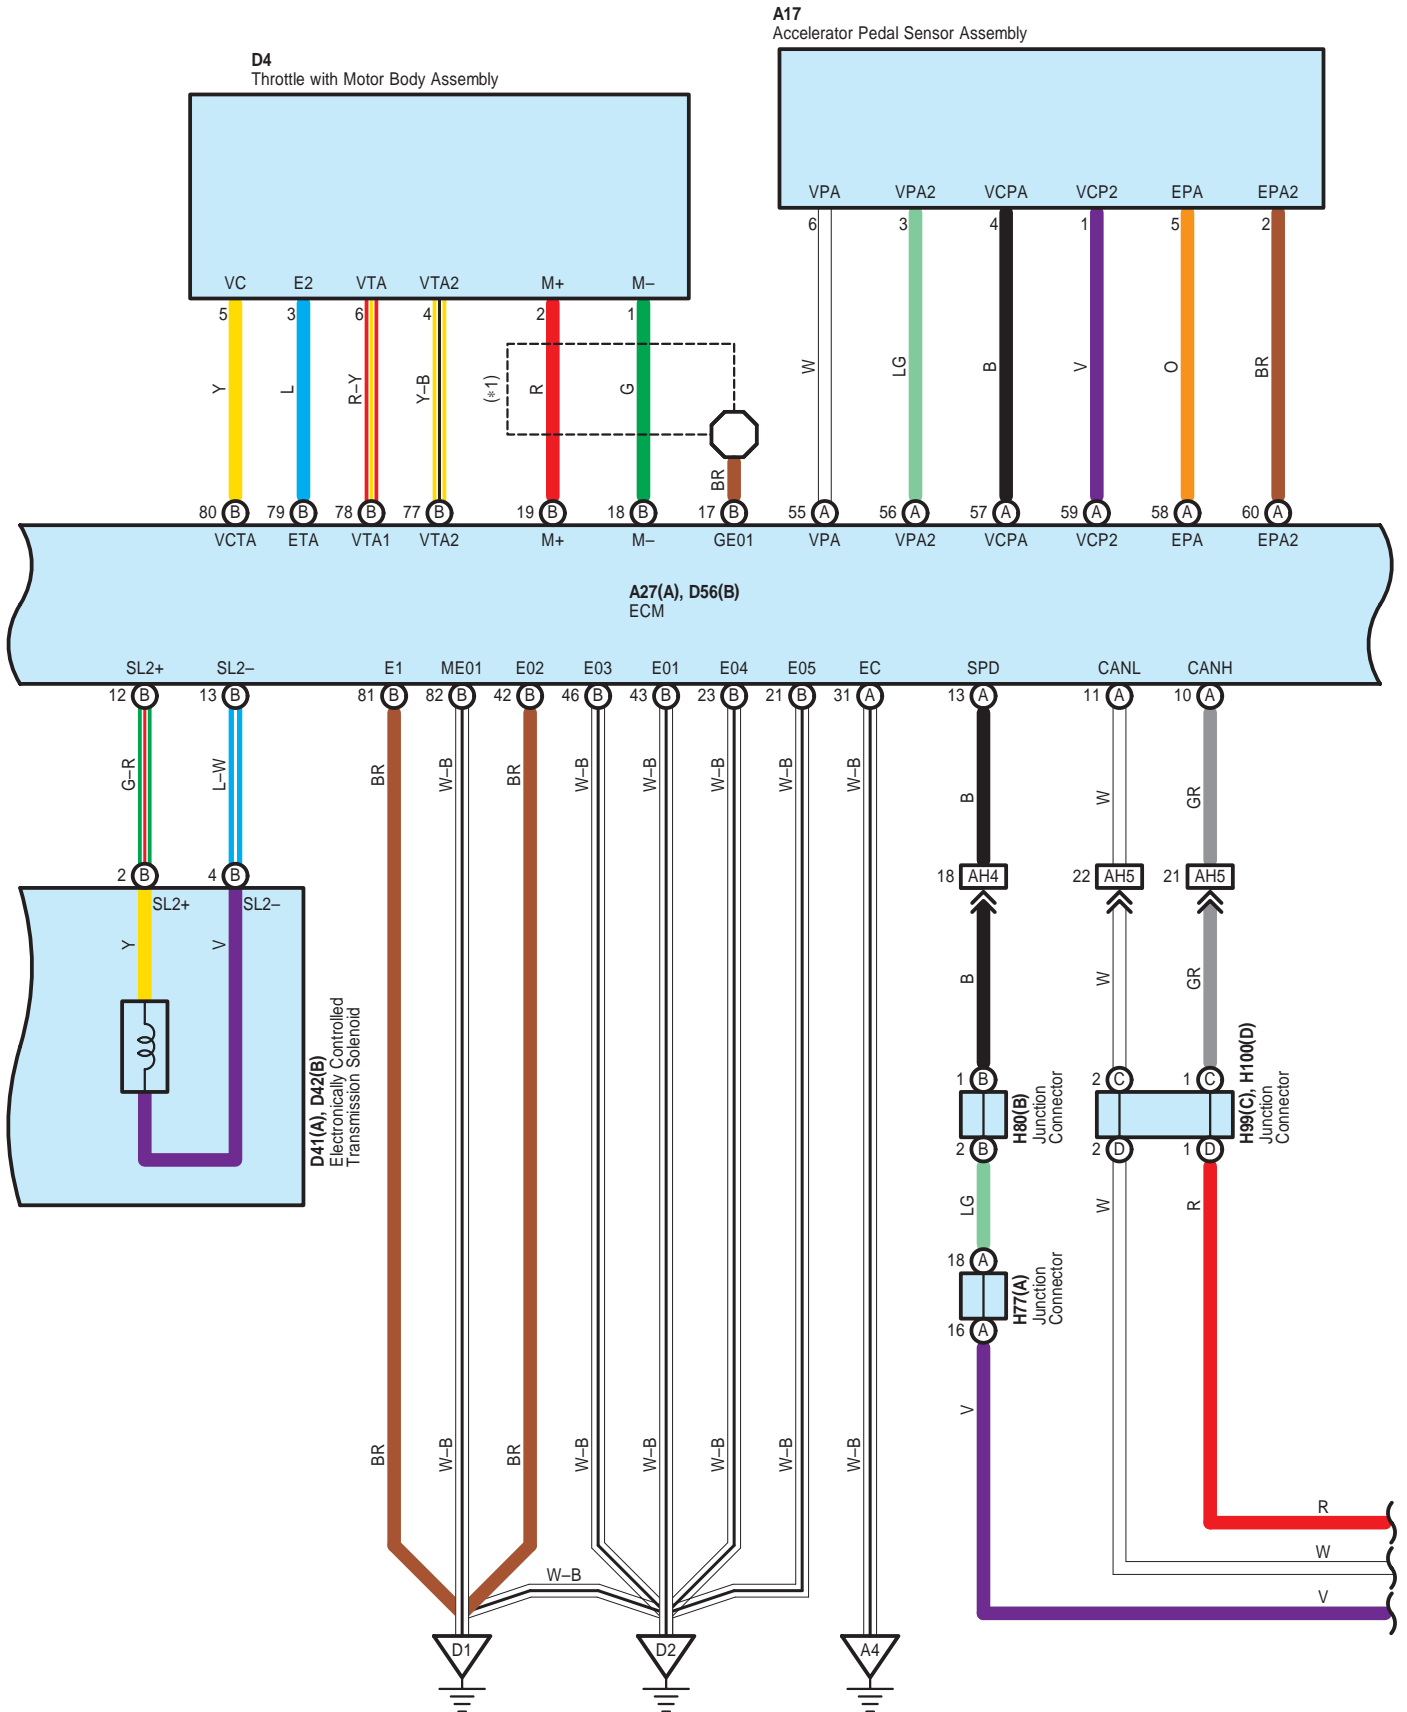


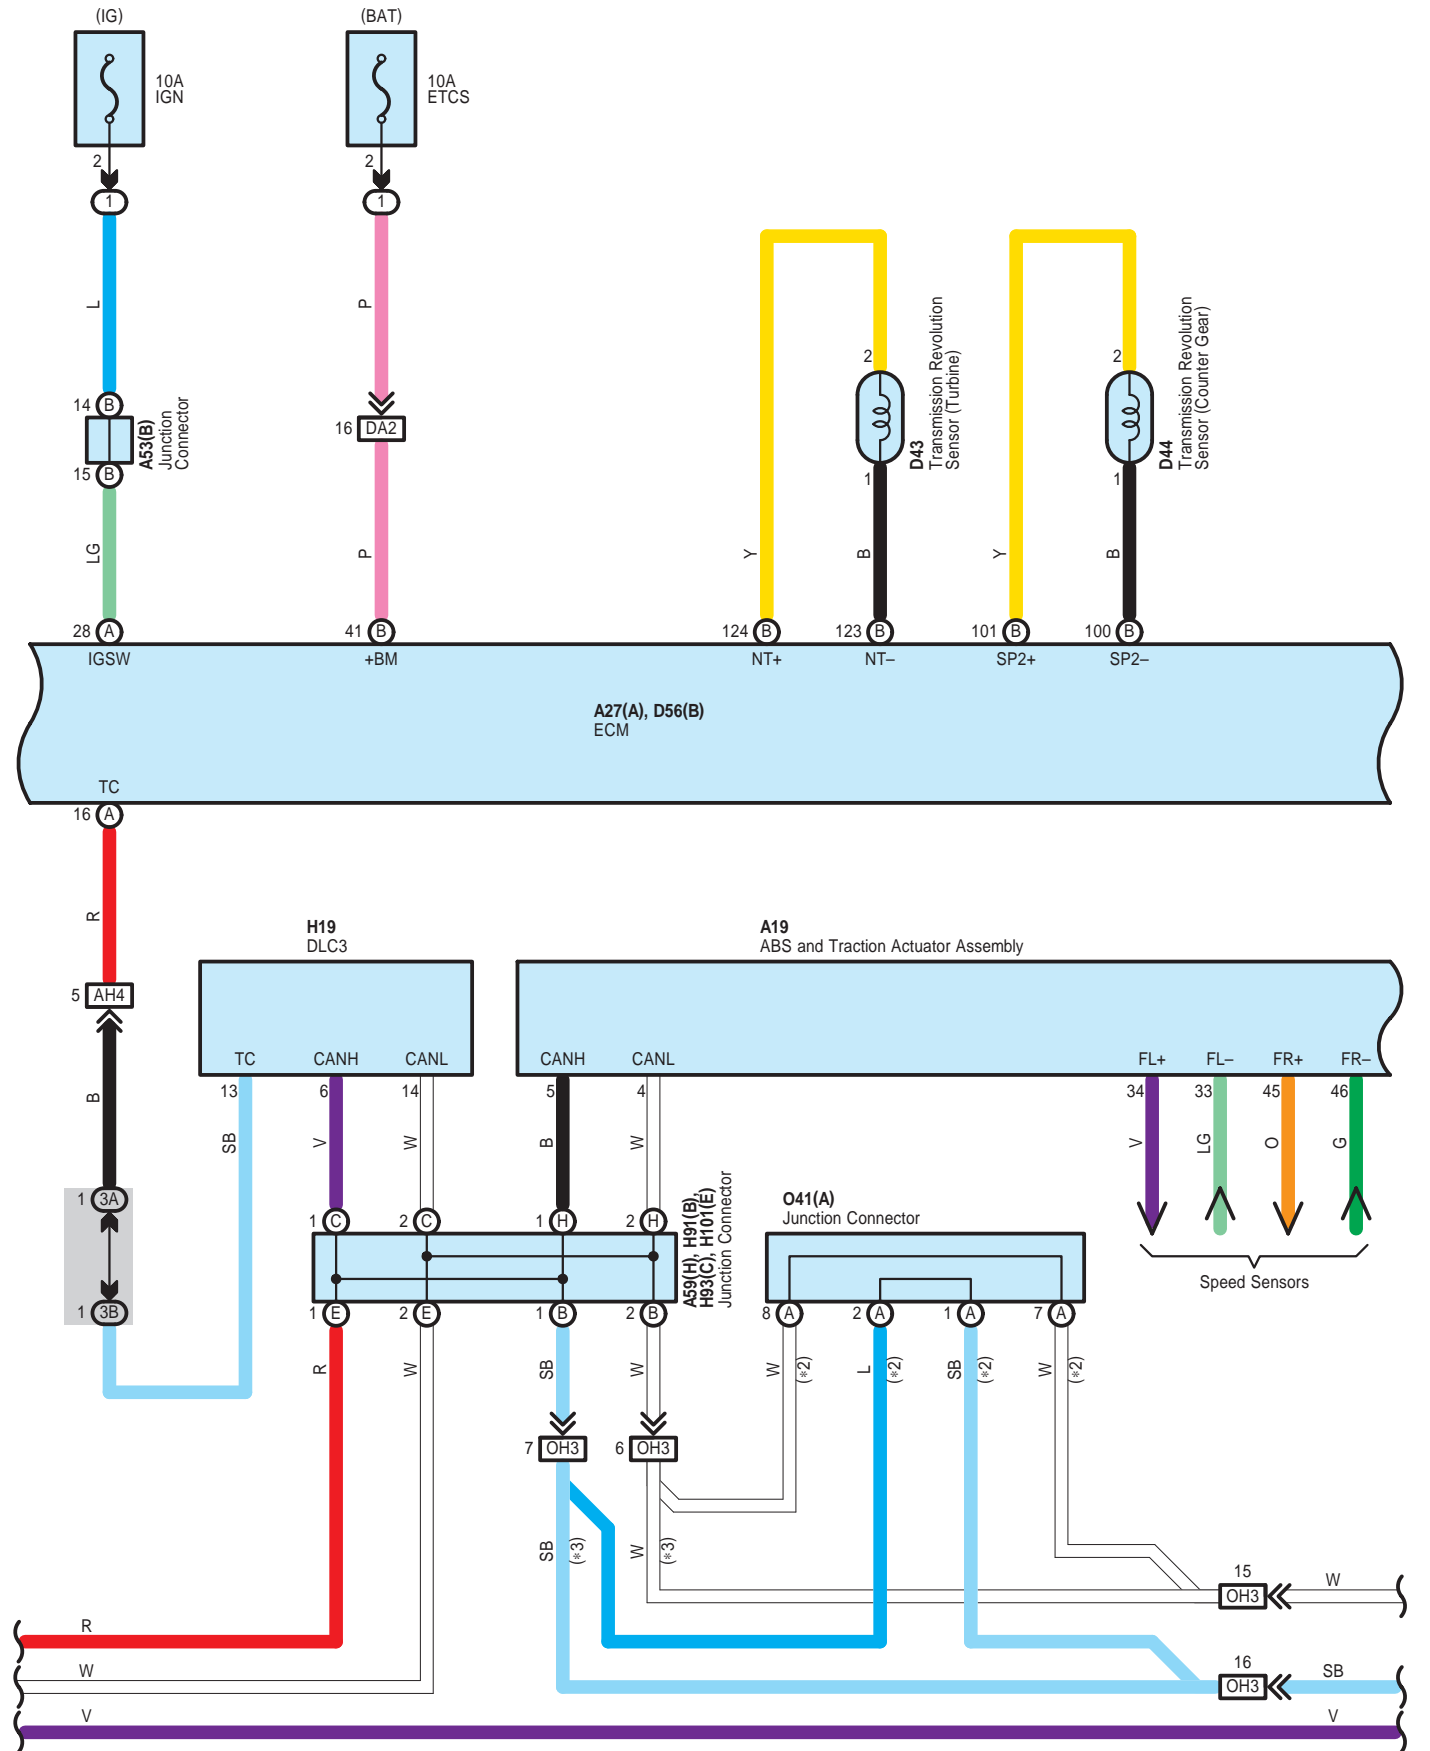

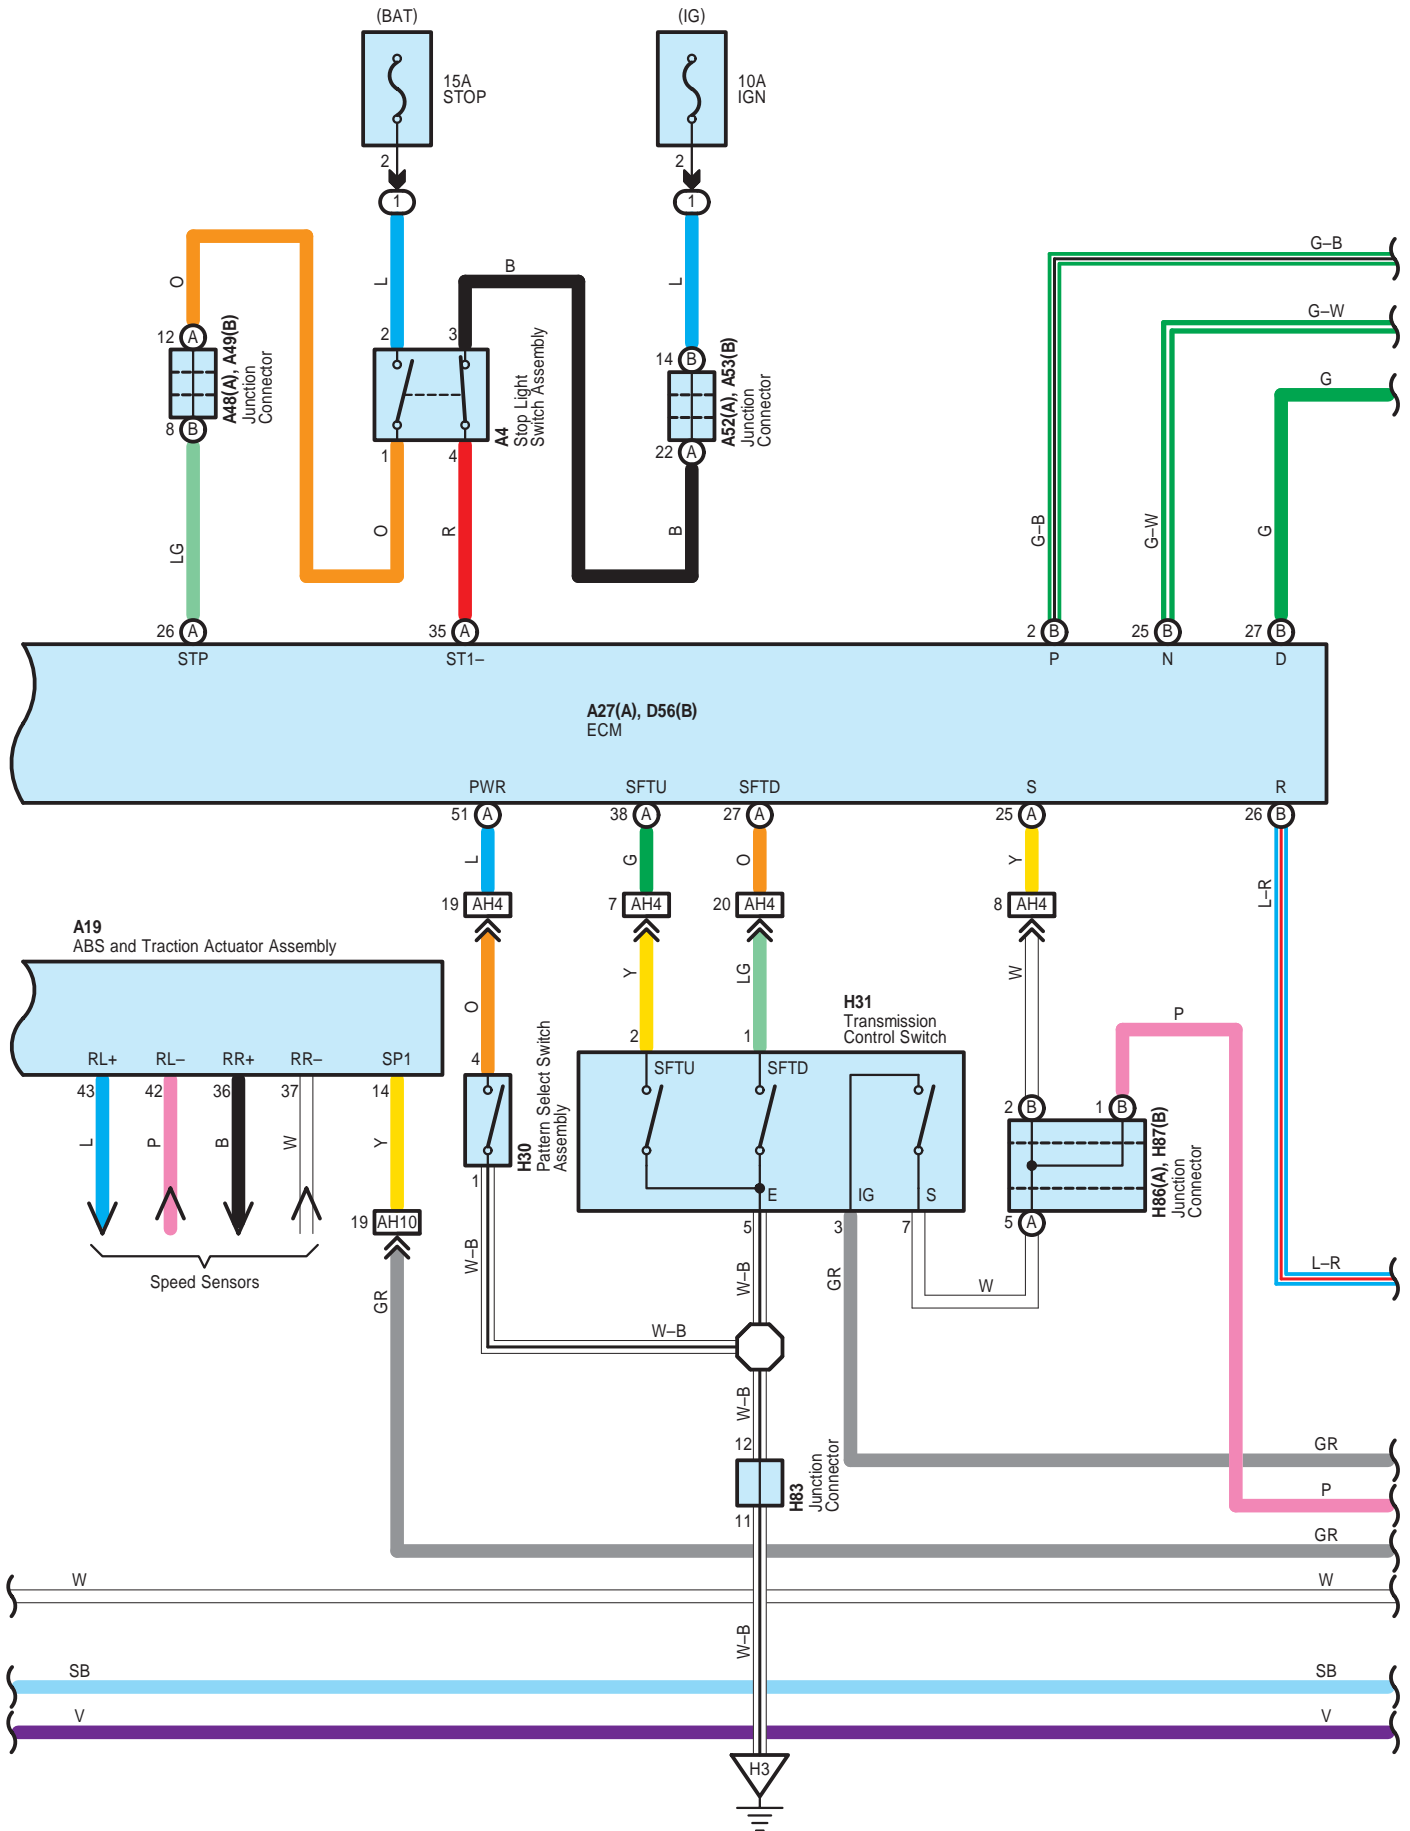

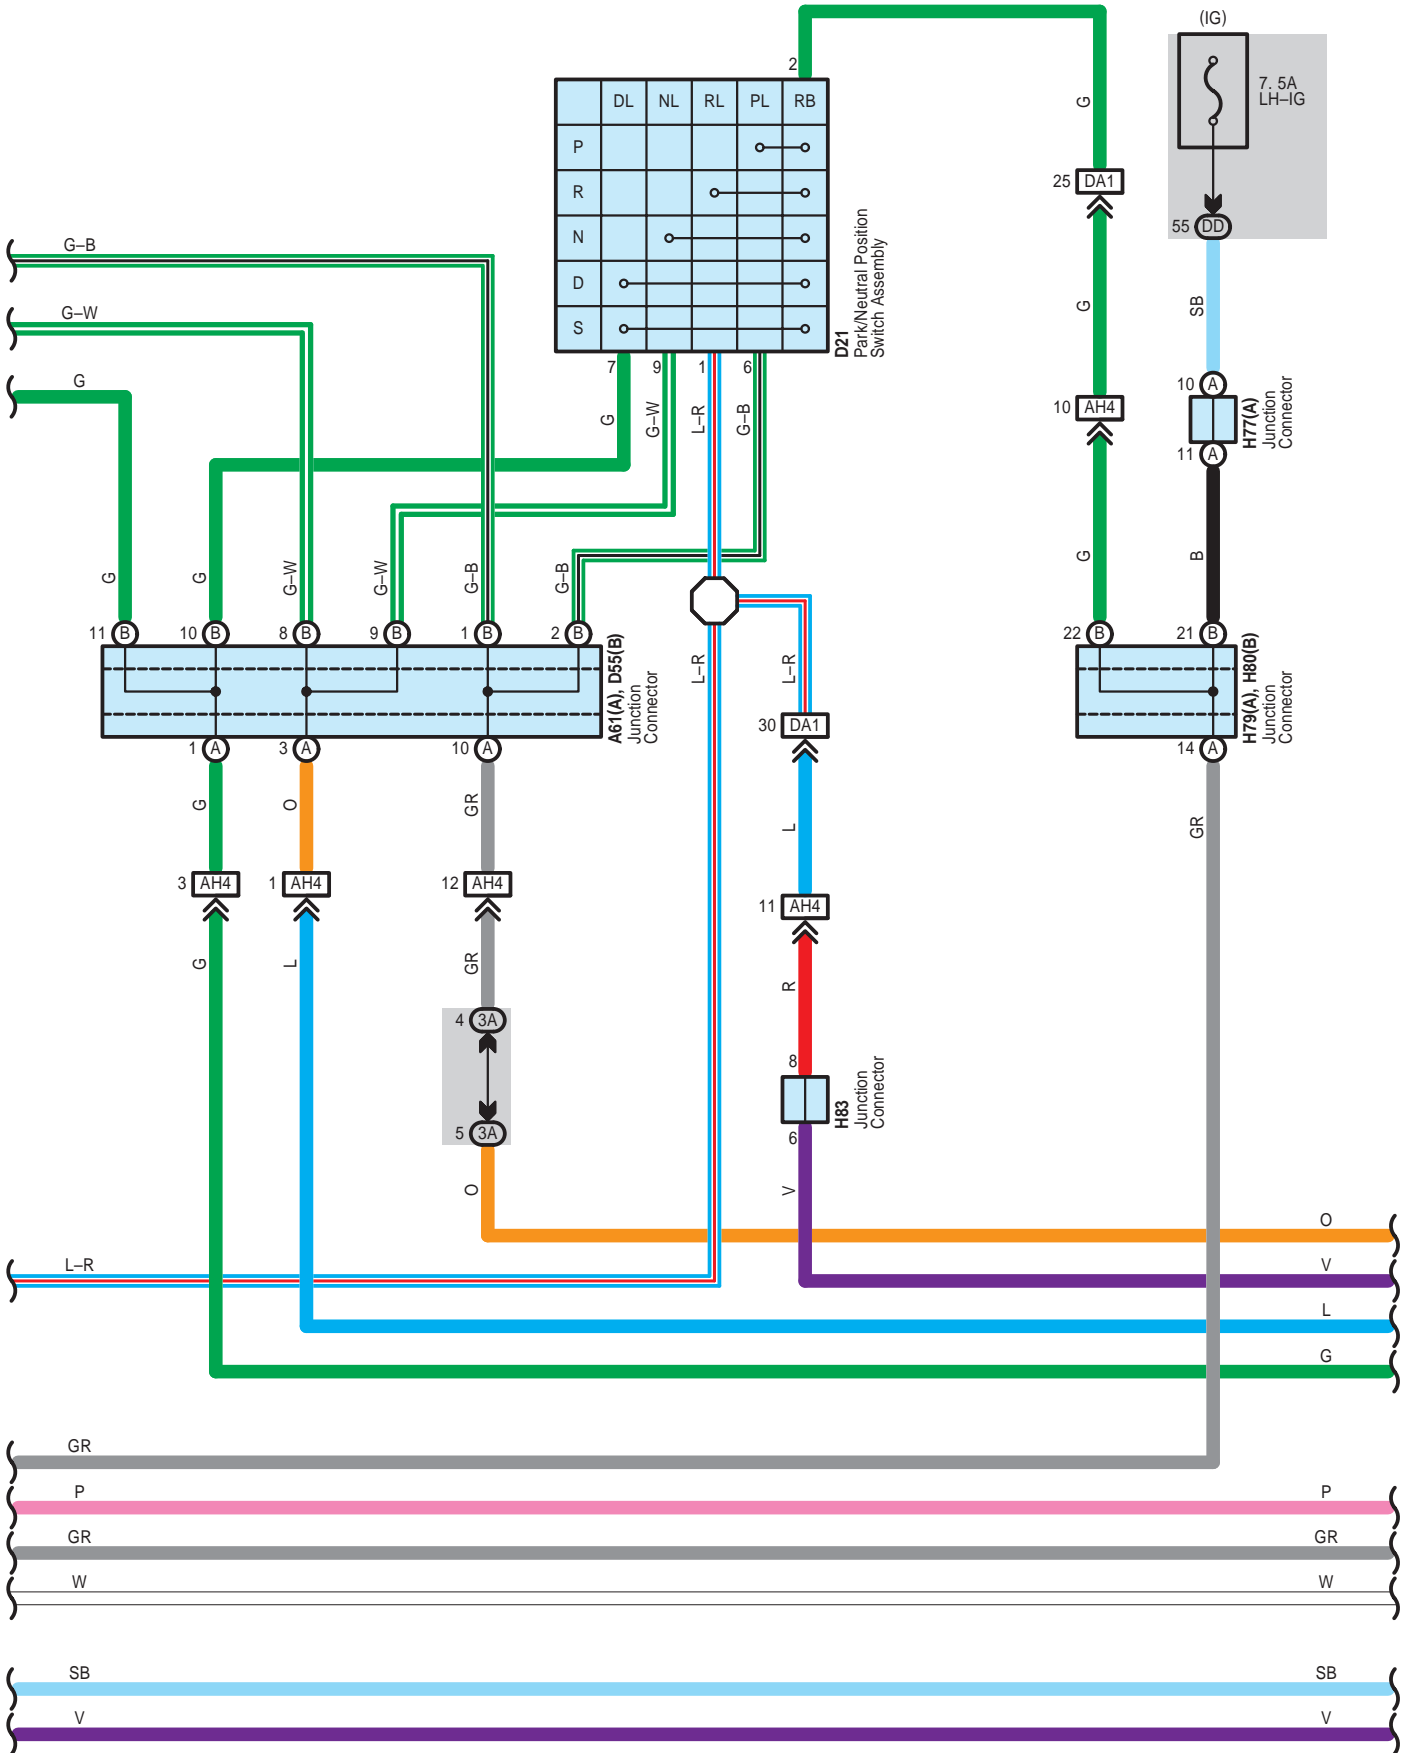


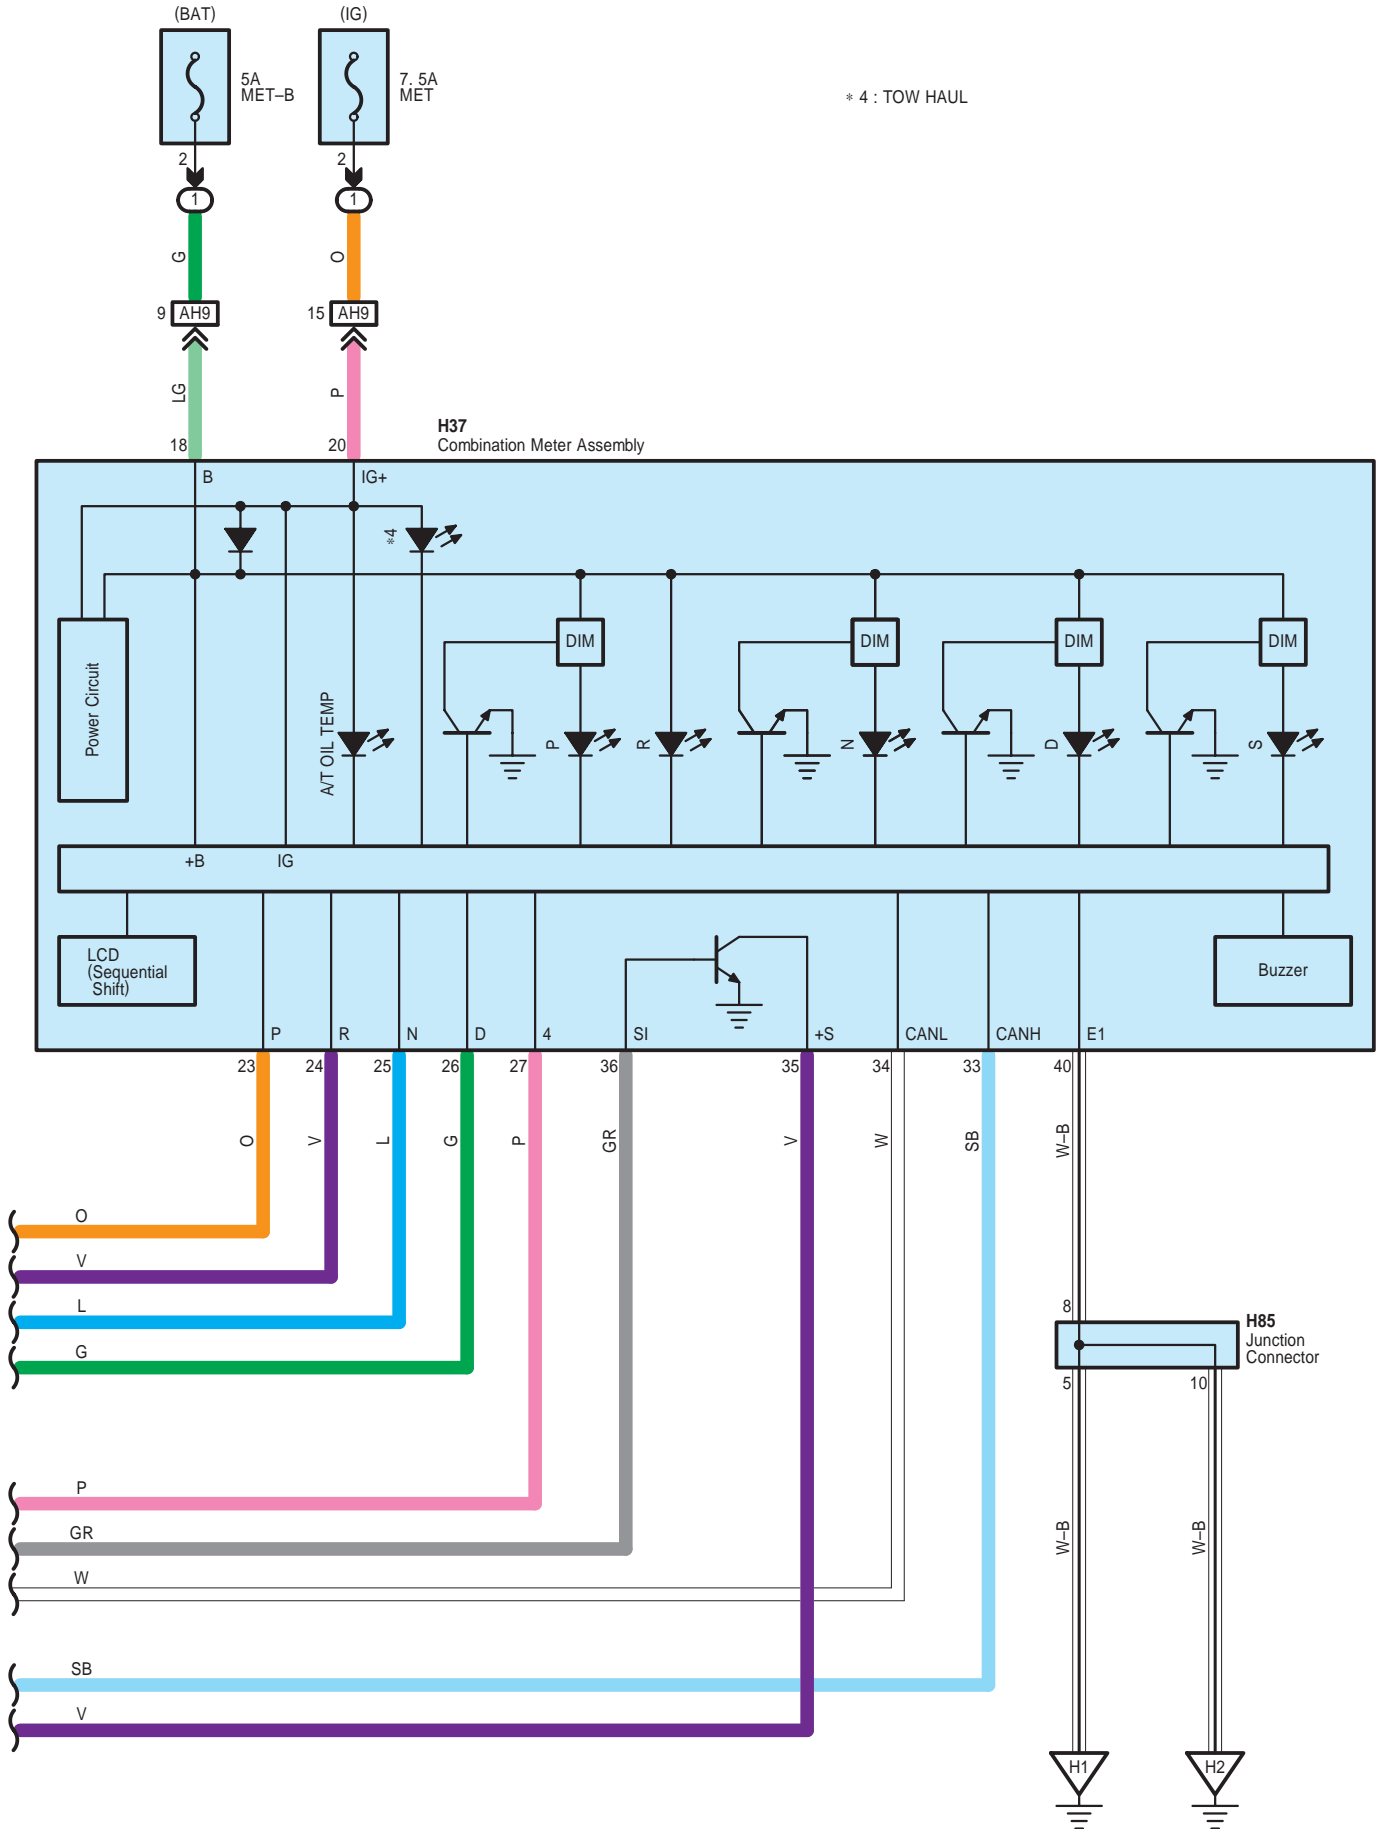

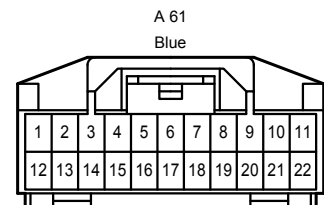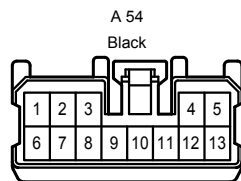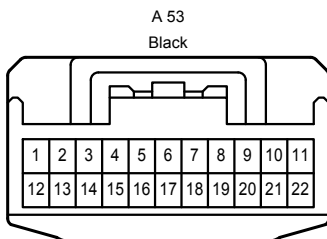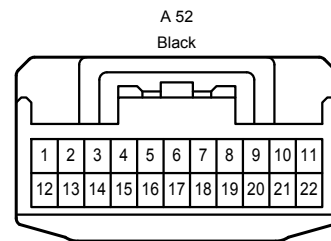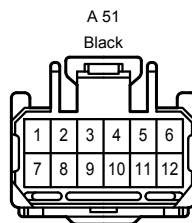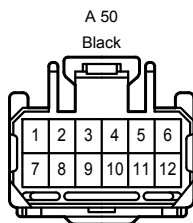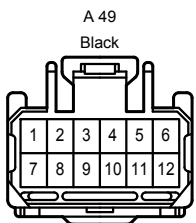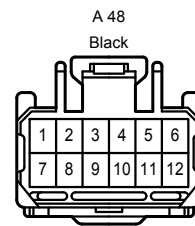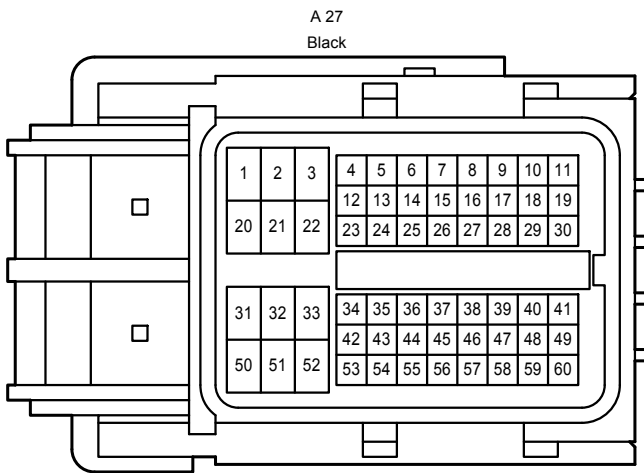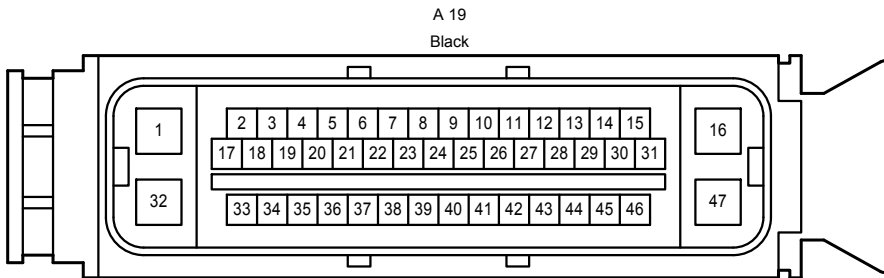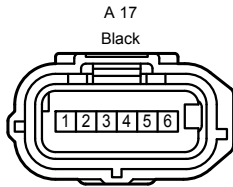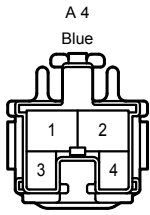


D 1

Black

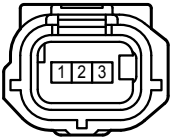

D 4

Black

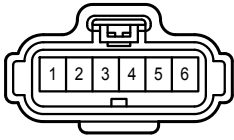


D 15

Dark Gray




D 21

Gray

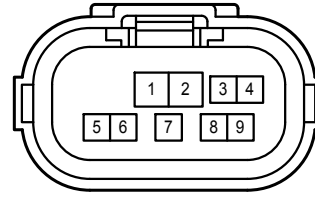


D 41

Gray

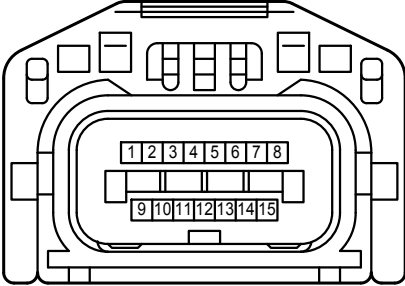


D 42

Gray

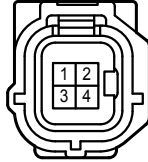


D 43

Black

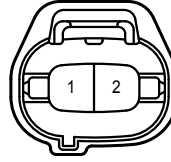


D 44

Black

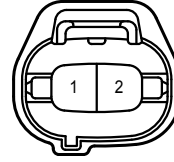


D 55

Blue

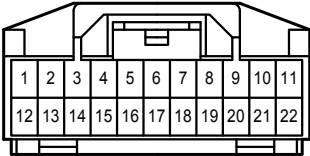


D 56

Black

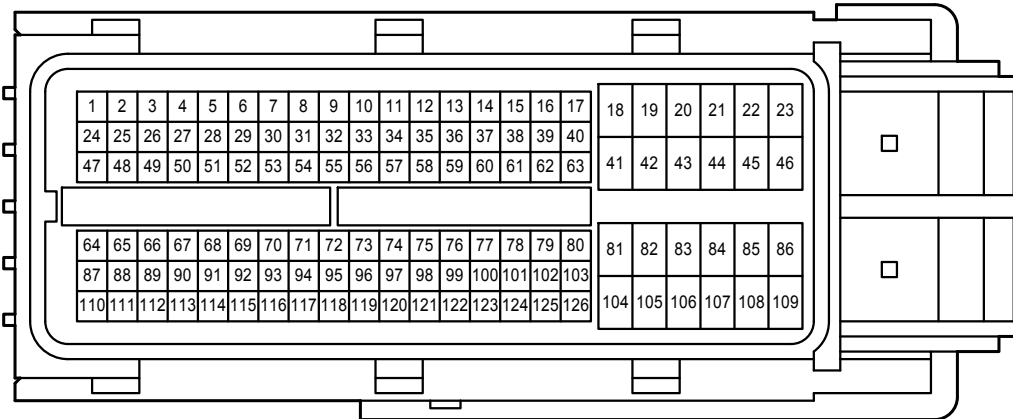


H 10

White

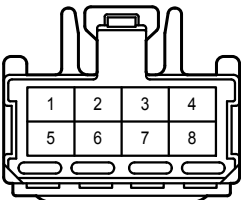


H 19

White

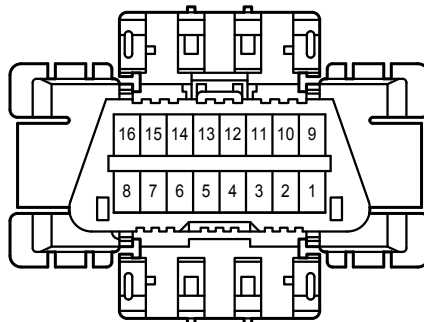


H 30

Black

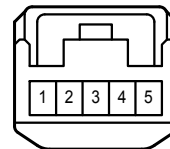


H 31


Black

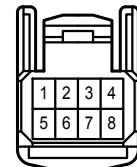


H 37
White

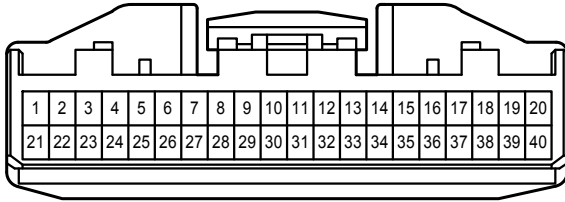


H 77
Black

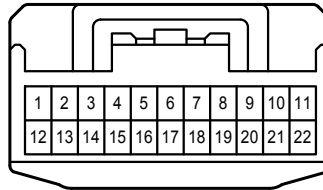


H 79
Black

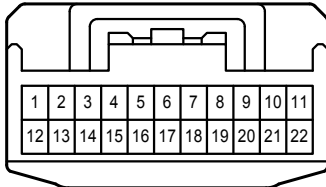


H 80
Black

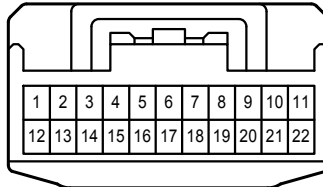


H 83
Gray

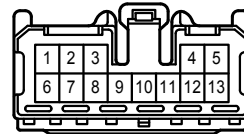


H 85
White

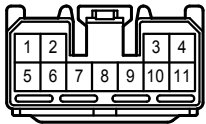


H 86
White

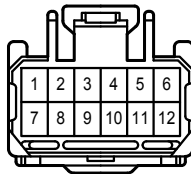


H 87
White

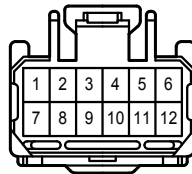


H 91
White




H 93
White




H 99
White




H100
White




H101
White




O 41
White

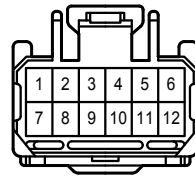


1B
White

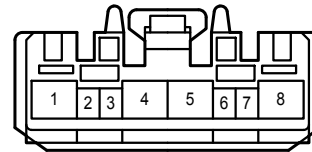


3A
Black

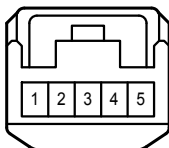


3B
White

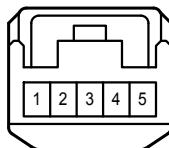


DD
White

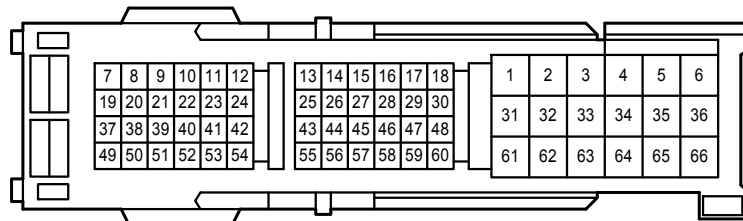


AH4
White

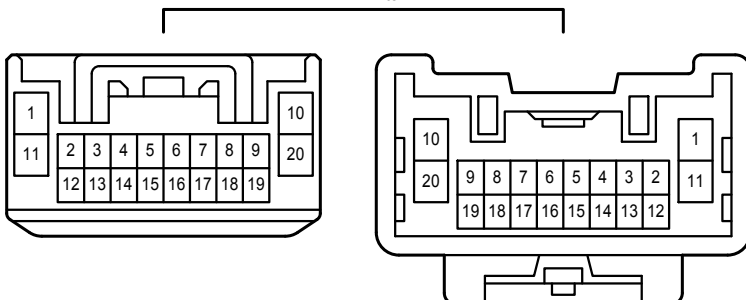


AH5
White

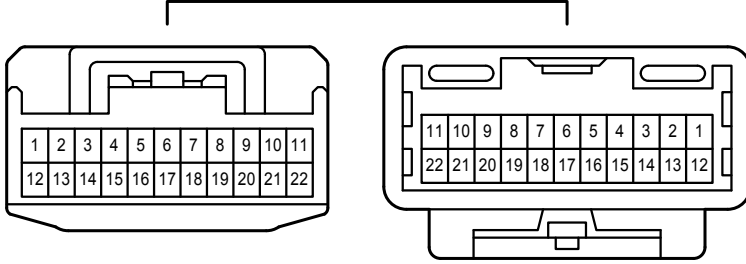


AH8
Gray

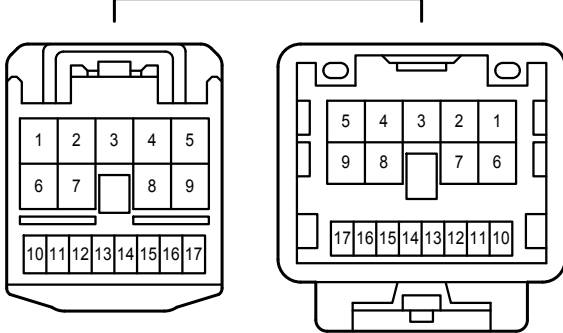


AH9
Gray

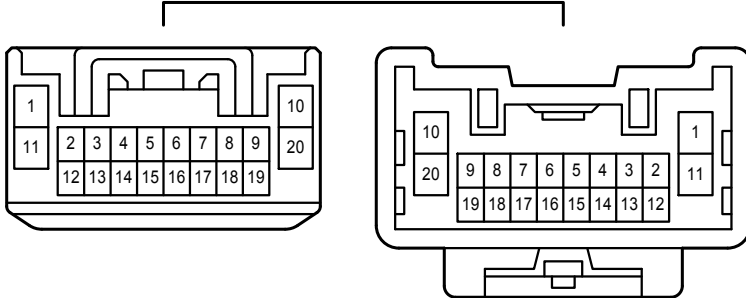


AH10
Gray

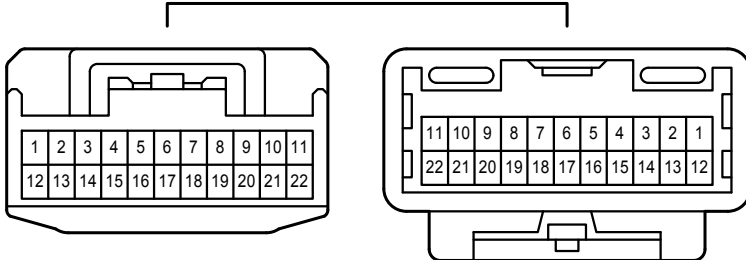

DA1
White

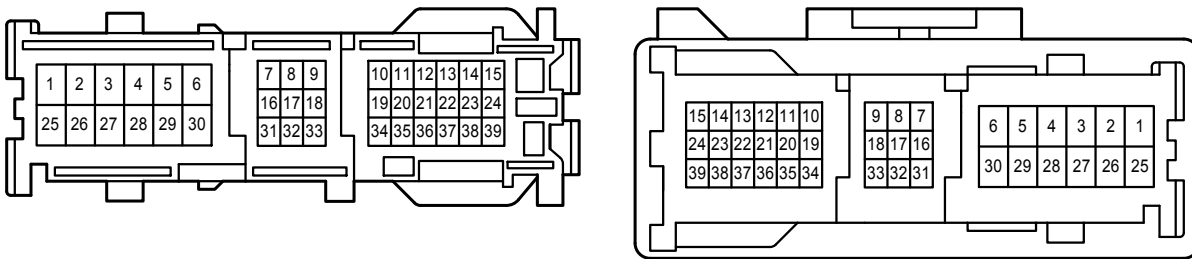

DA2
White

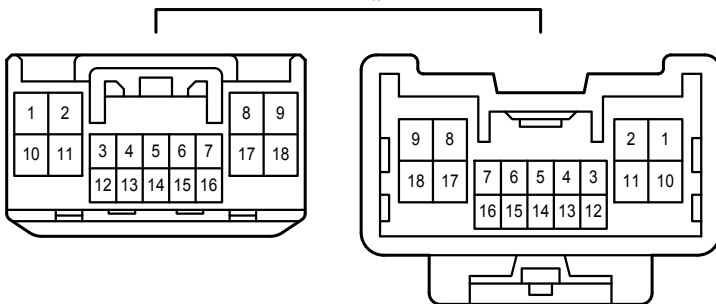

OH3
White

