


PARTIAL ENGINE ASSY (2AZ-FE)


COMPONENTS

141S5-01

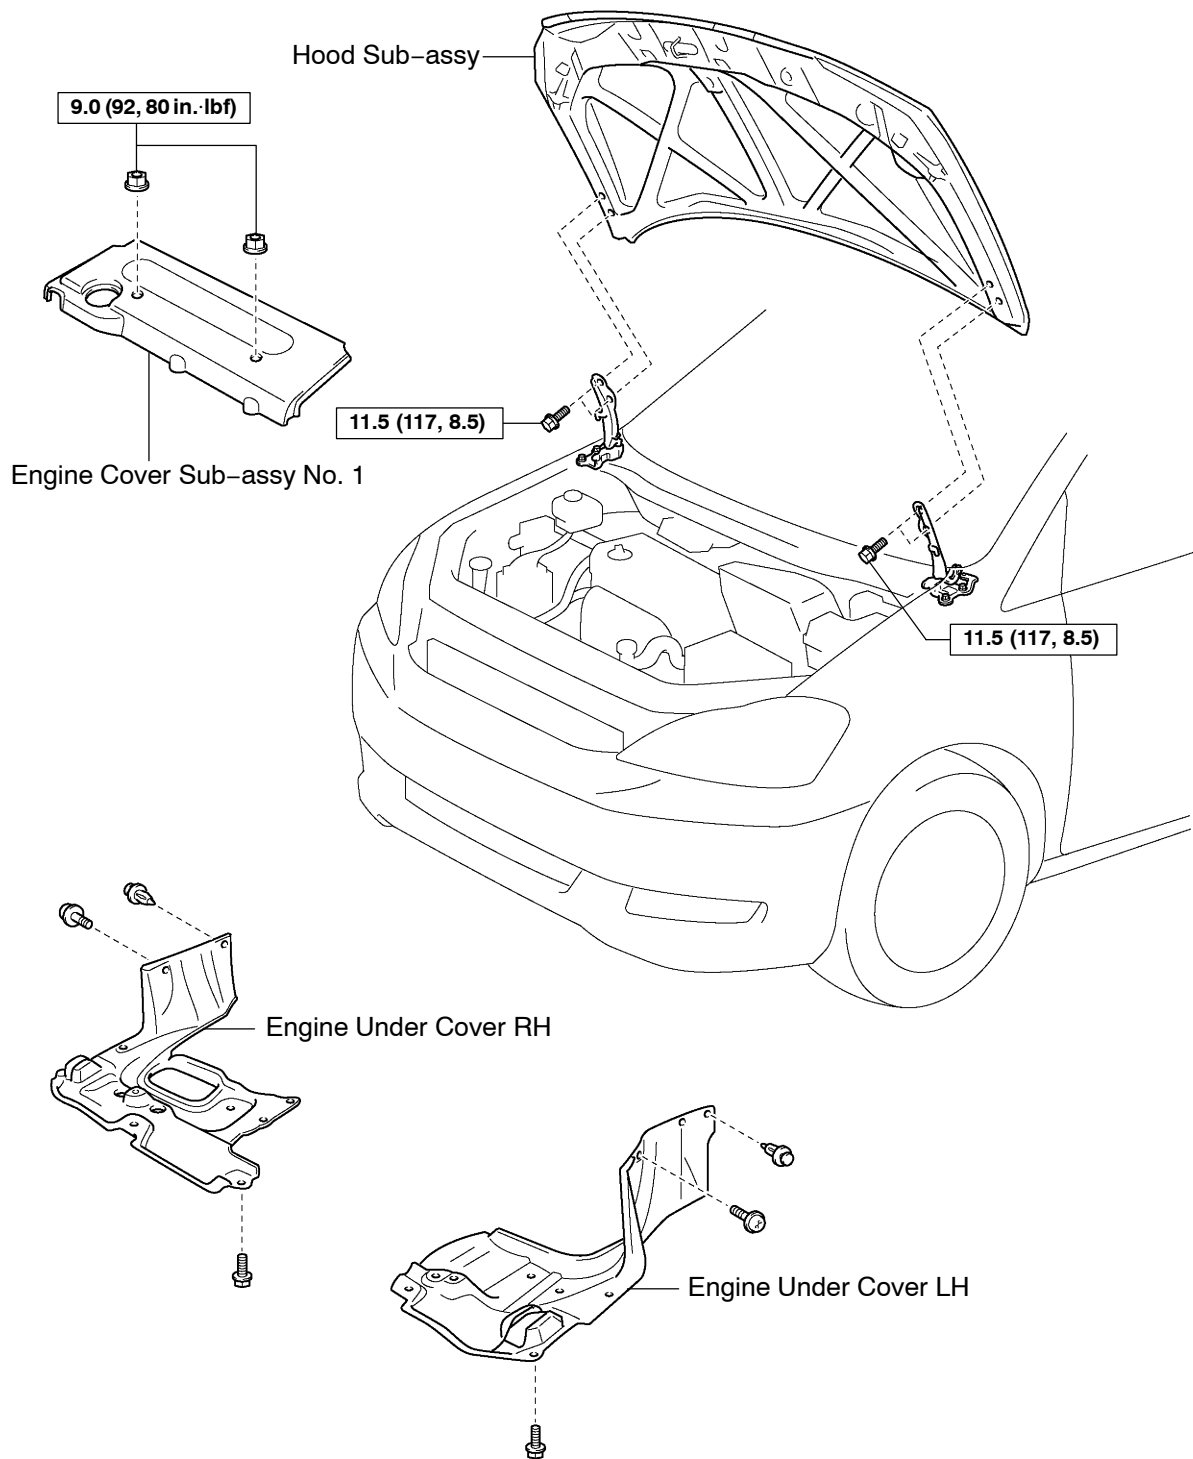


A91998
 γ A91999 **N·m (kgf·cm, ft·lbf) : Specified torque**

A94384

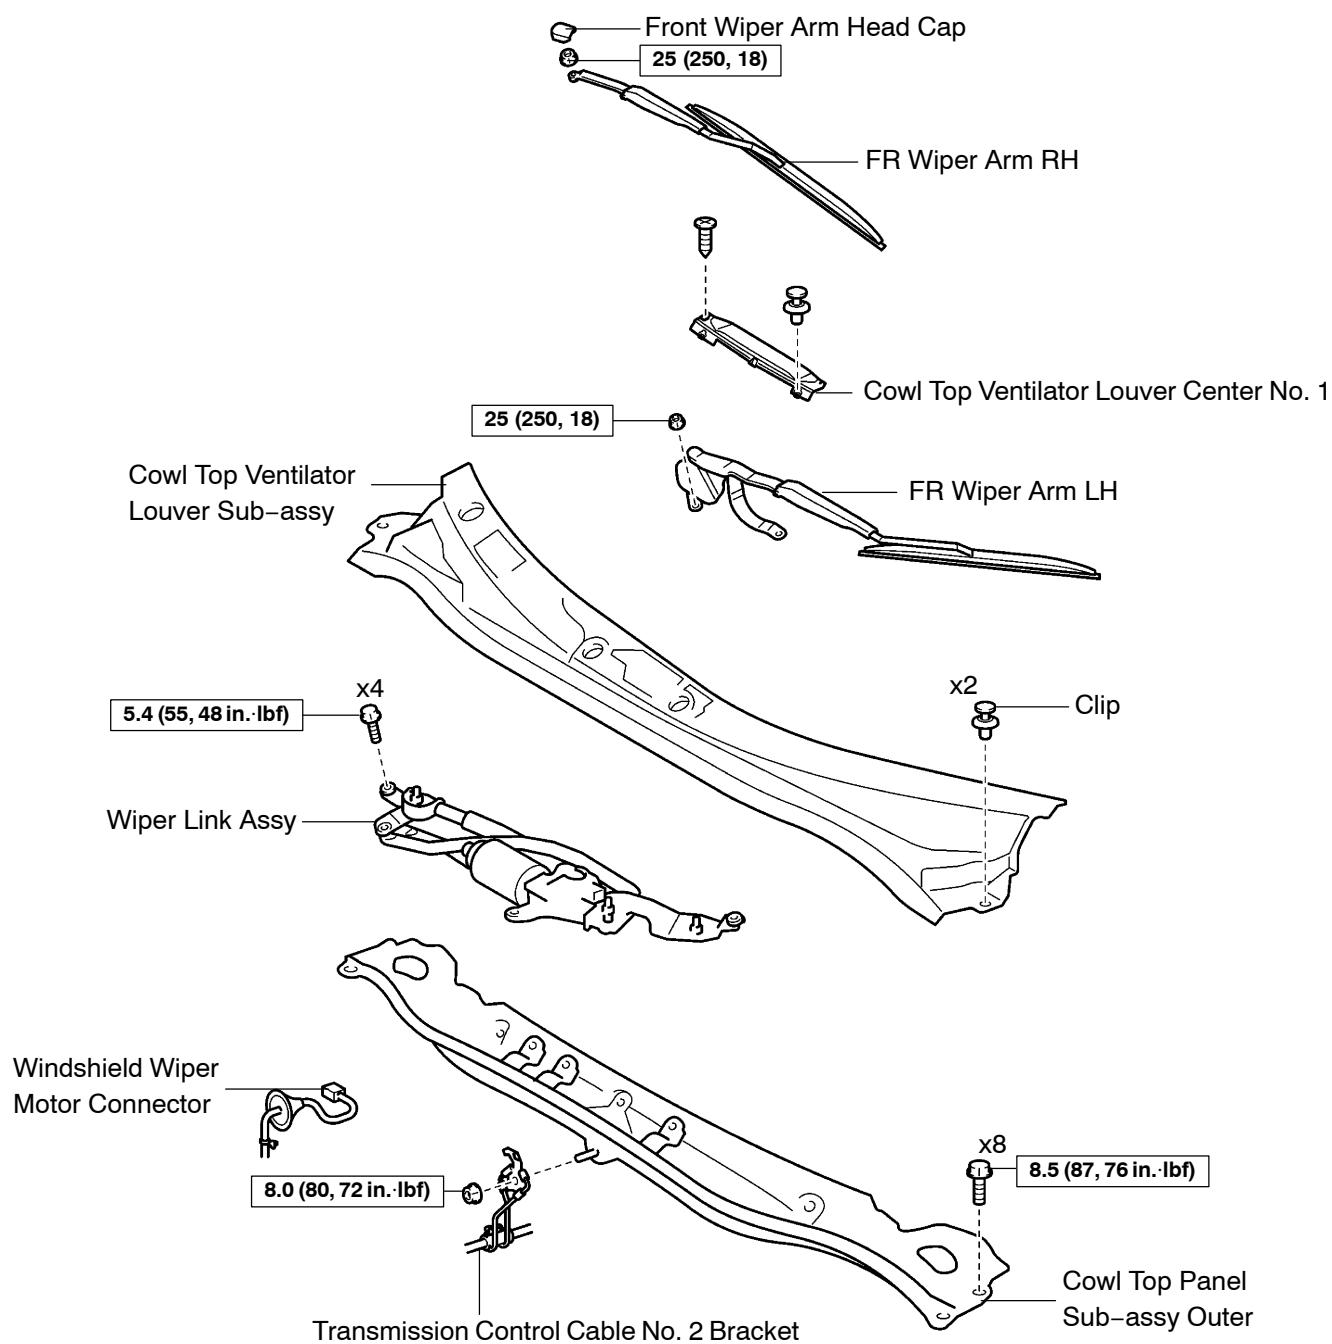



N·m (kgf·cm, ft·lbf) : Specified torque

A90057

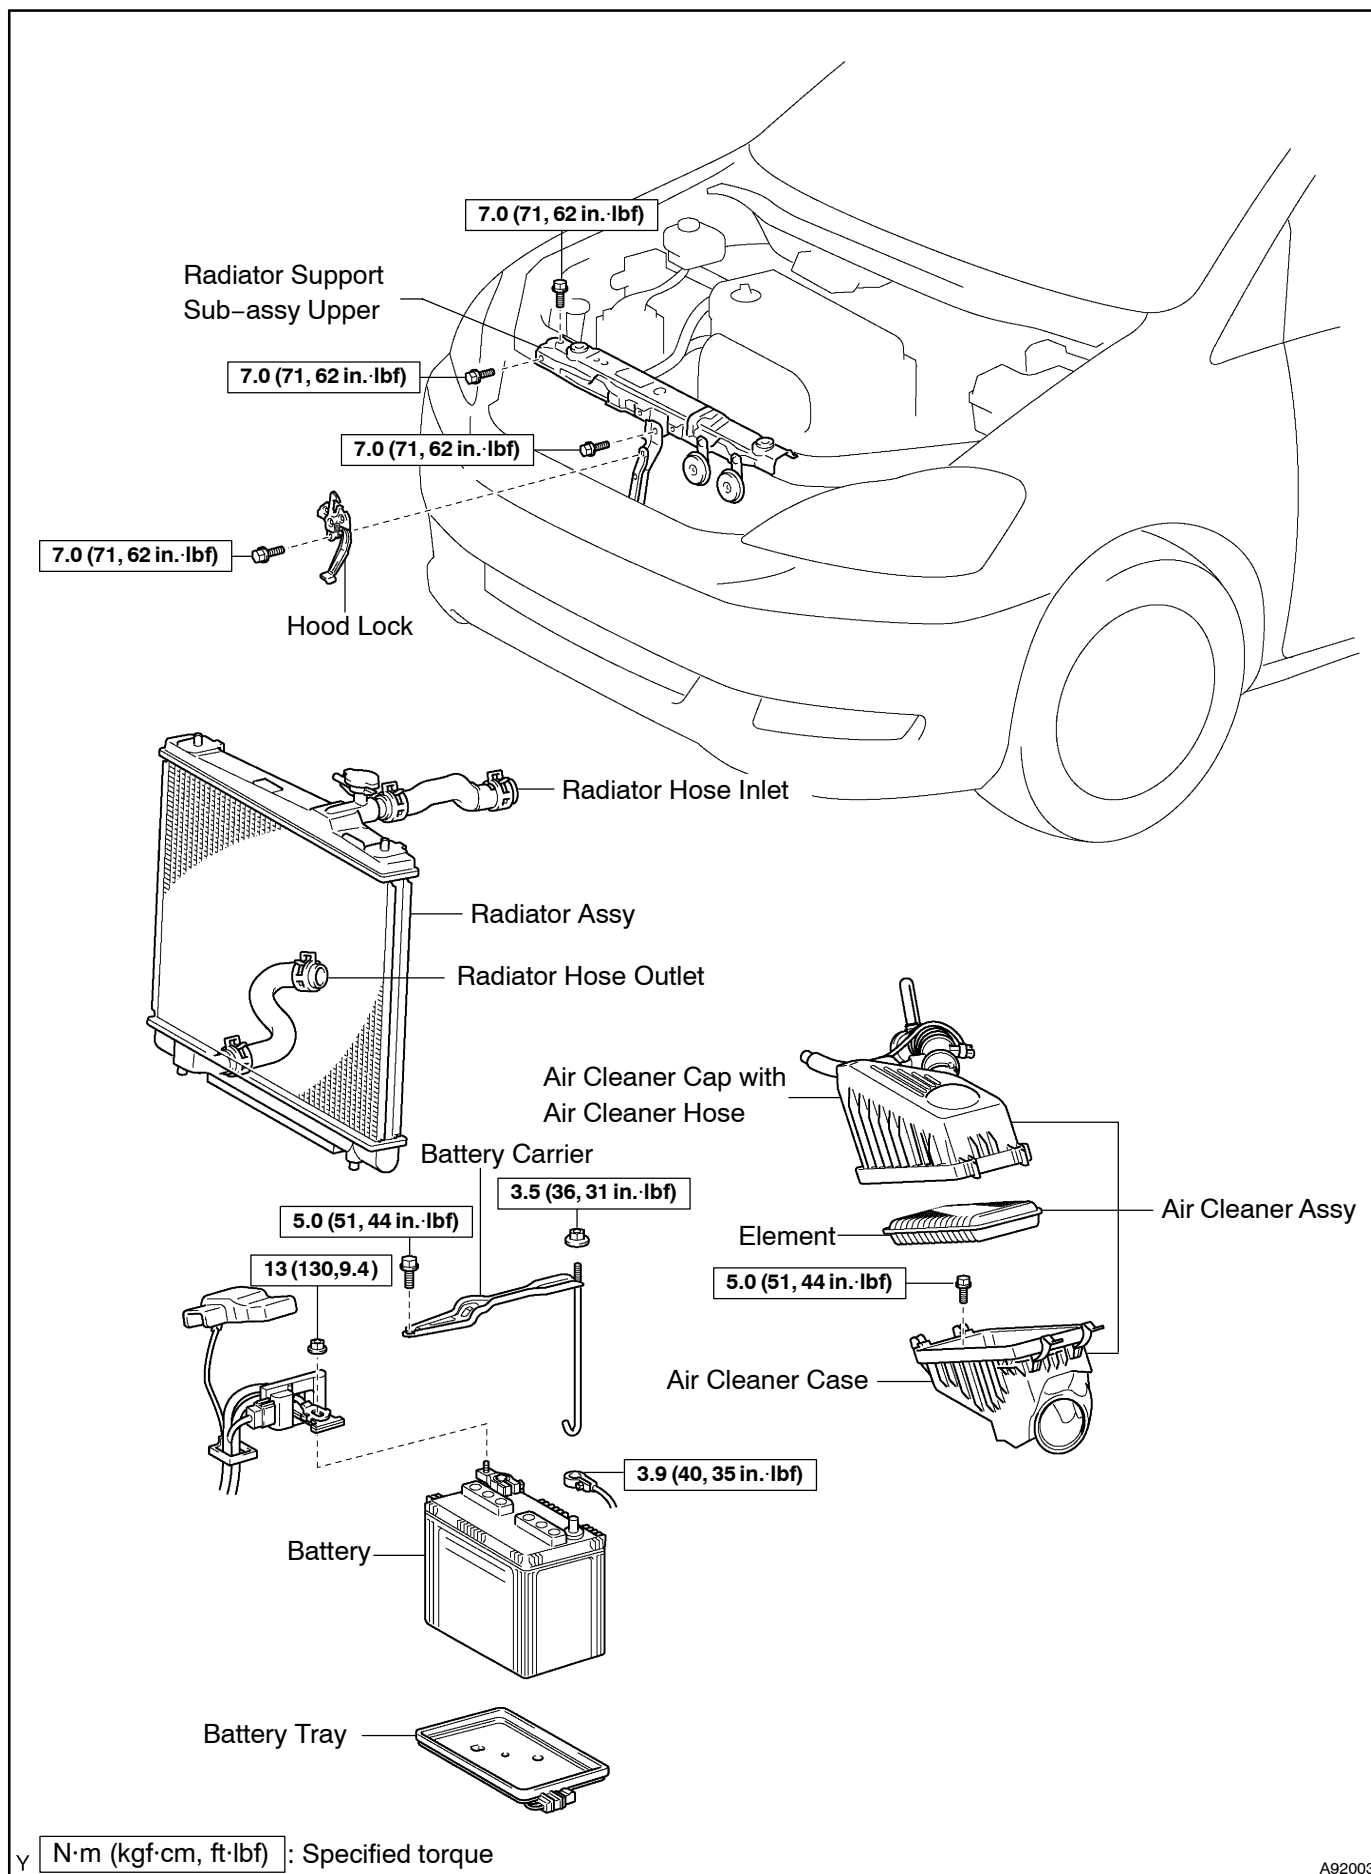

A92003

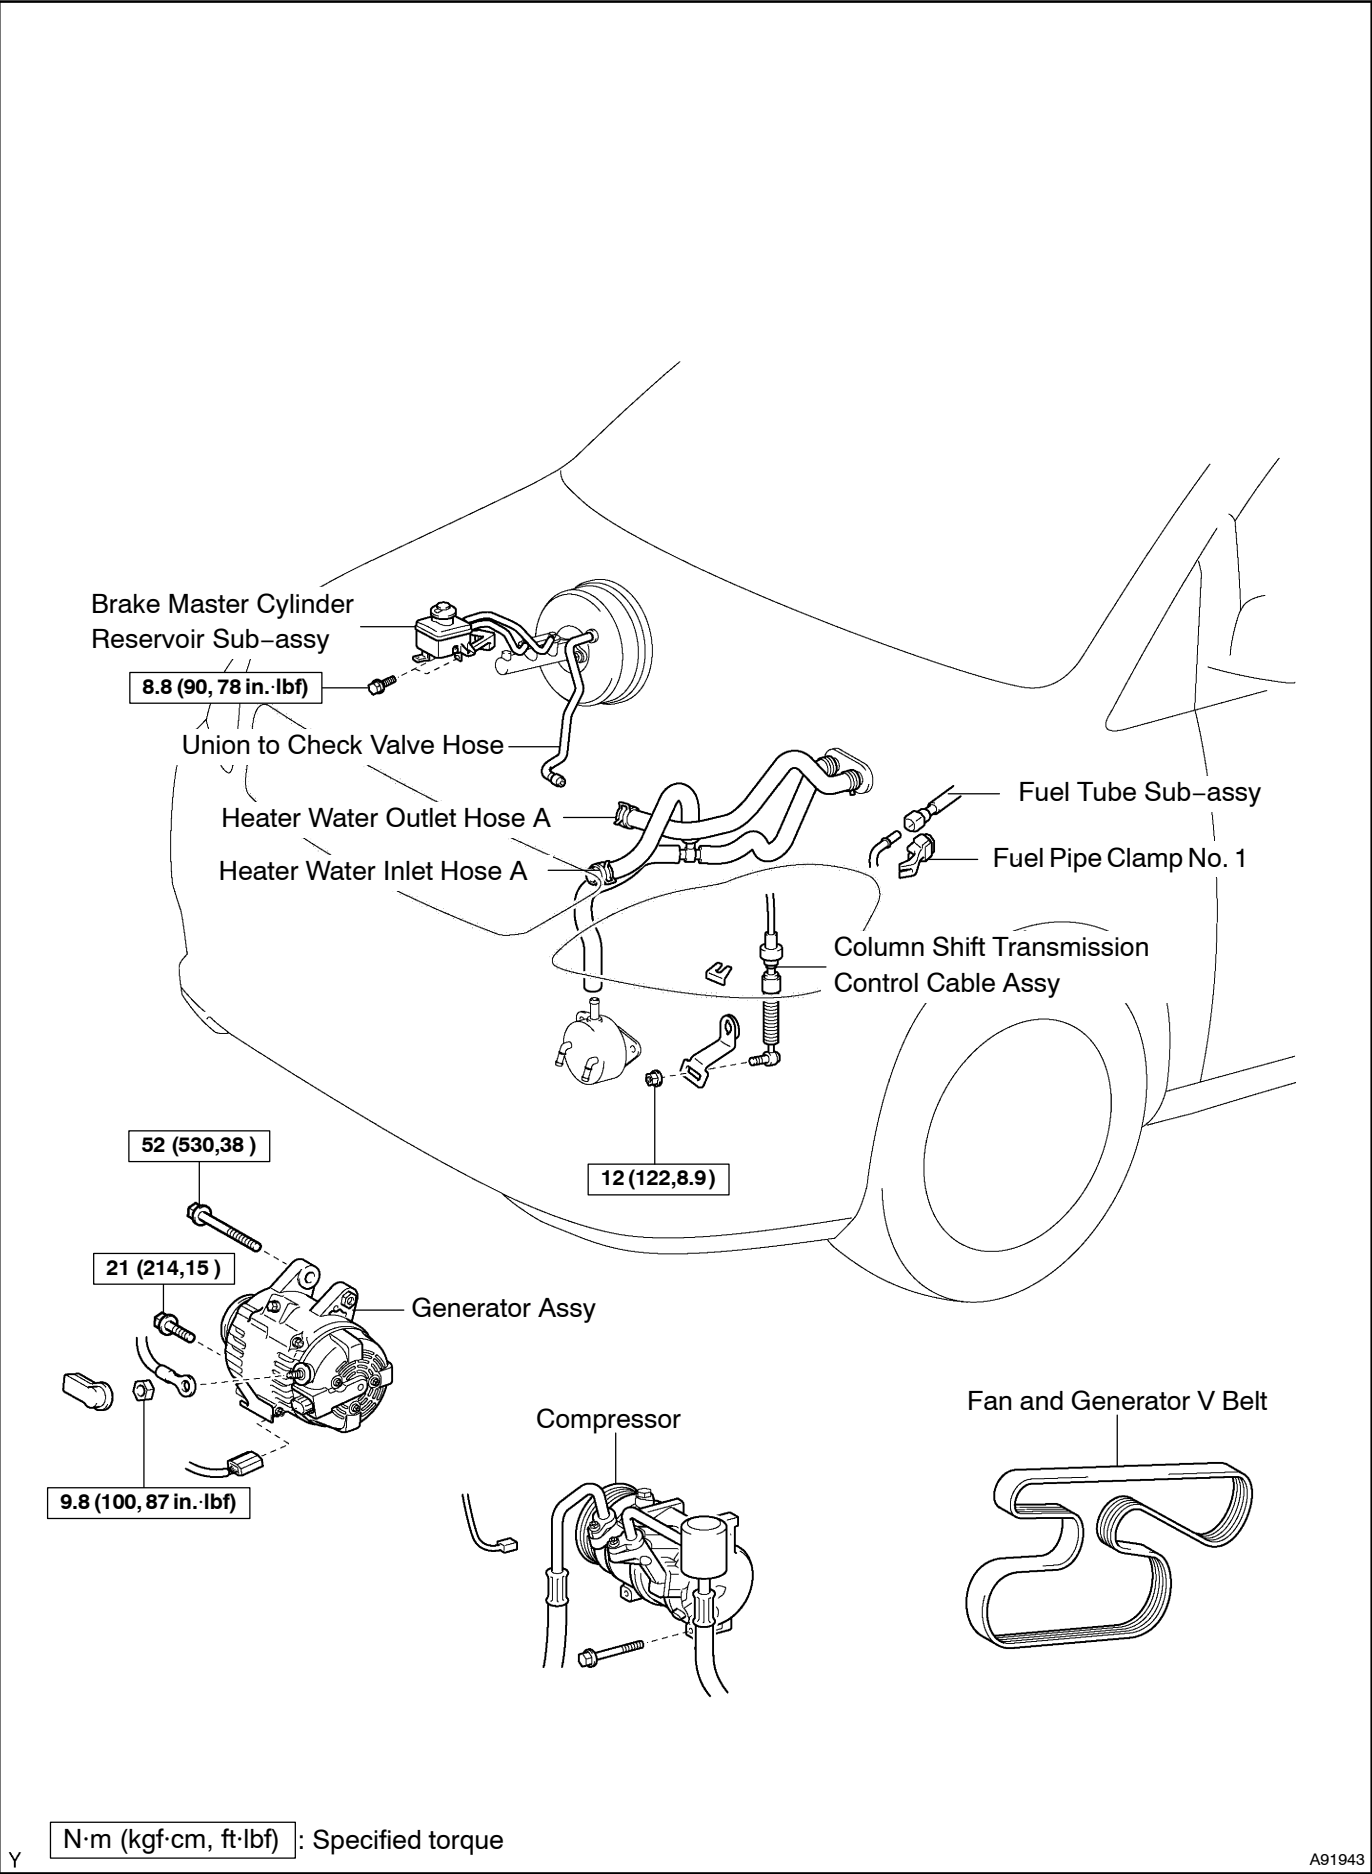


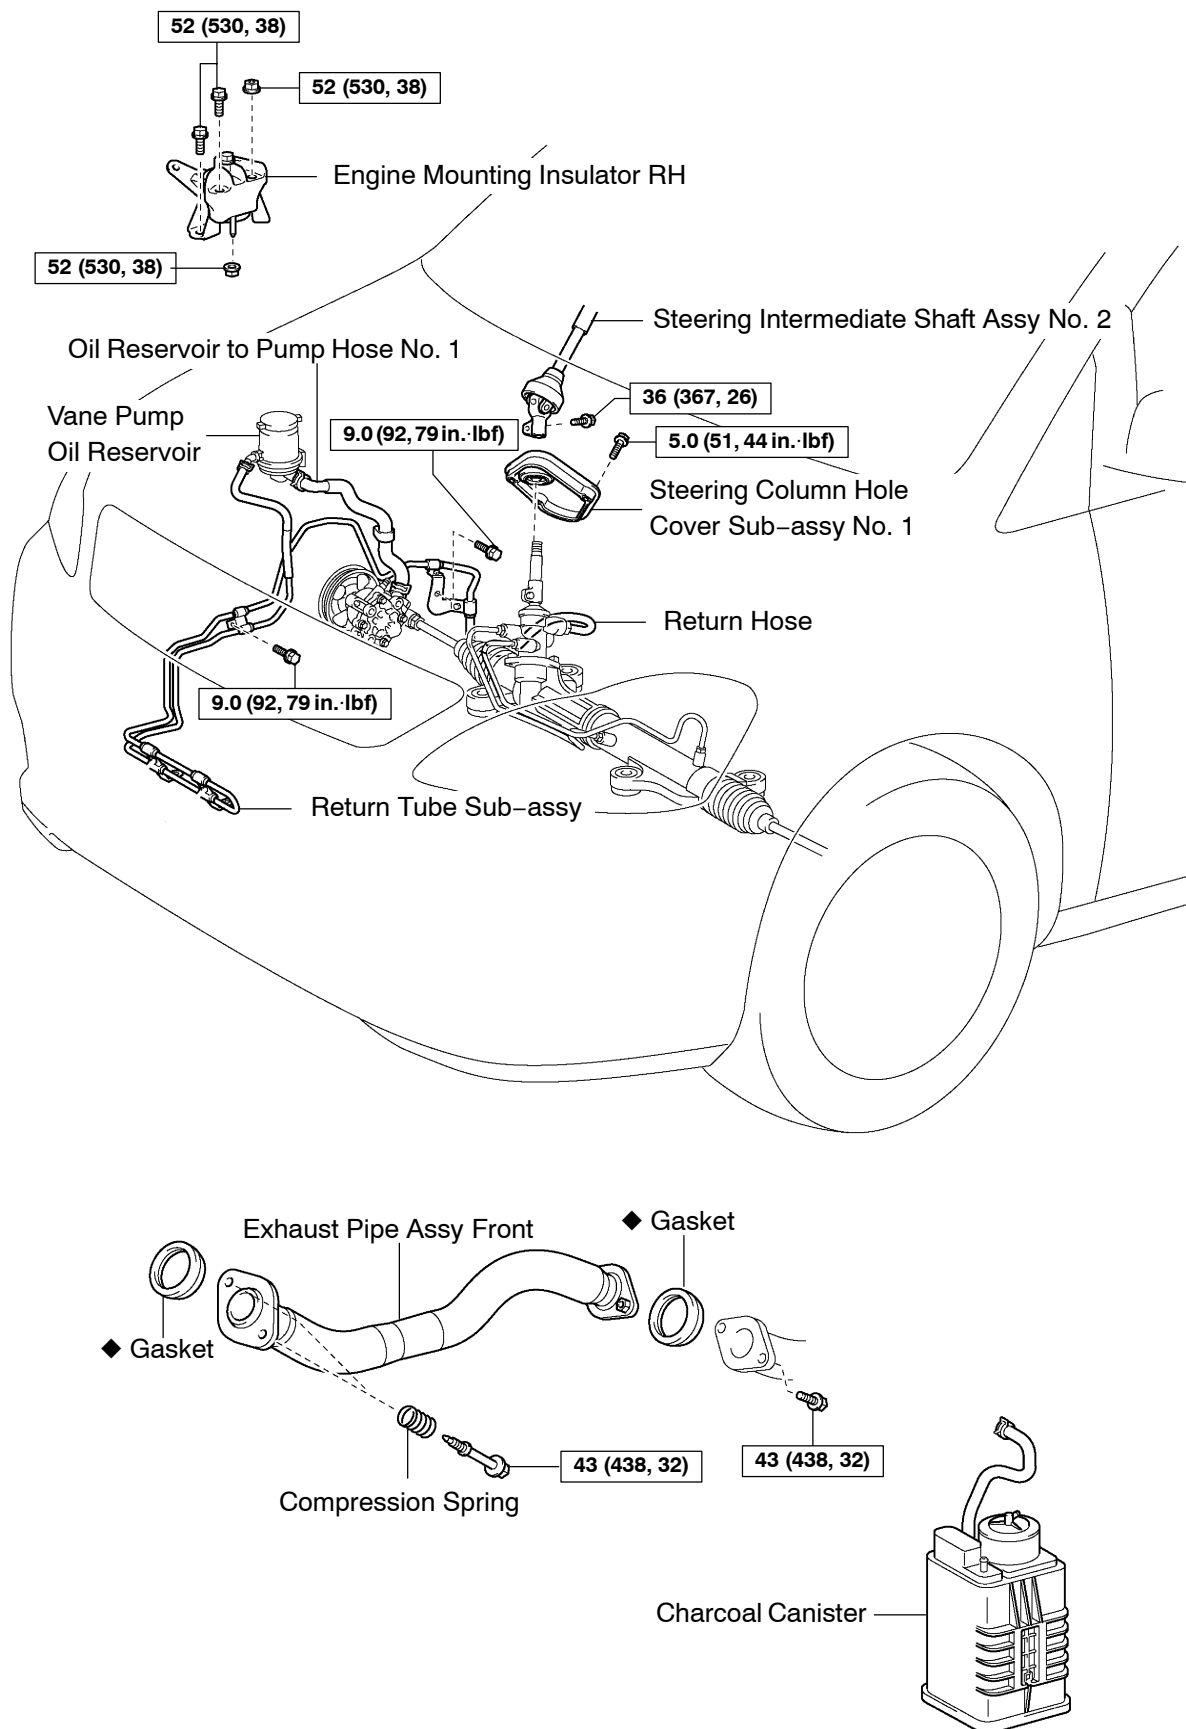



N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

A91997

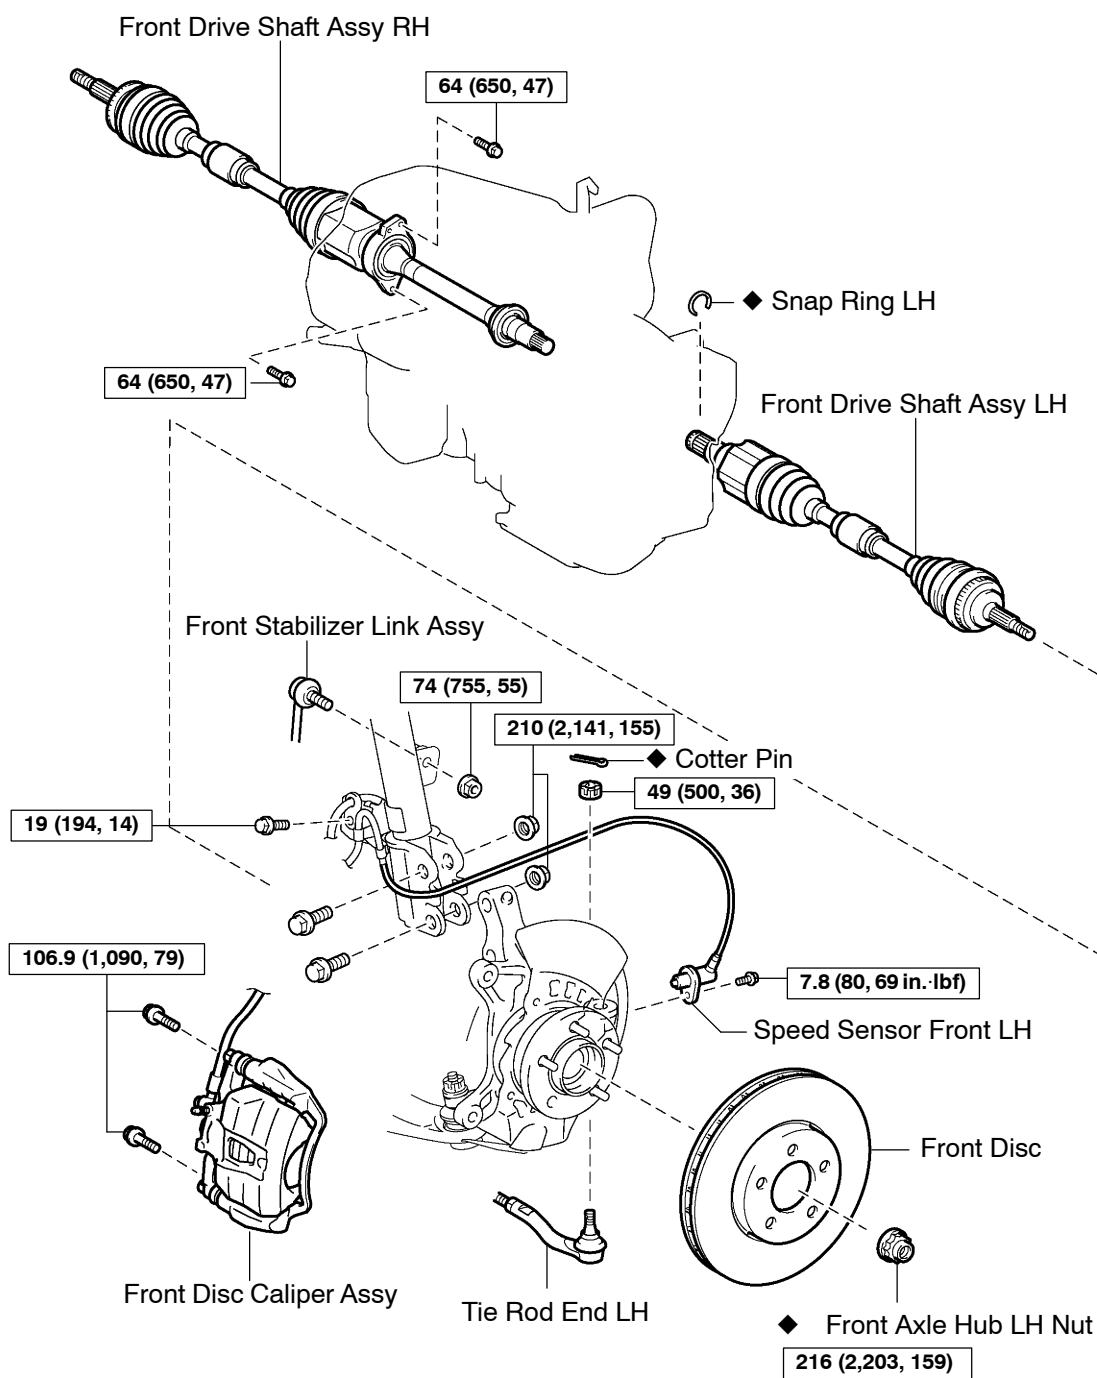


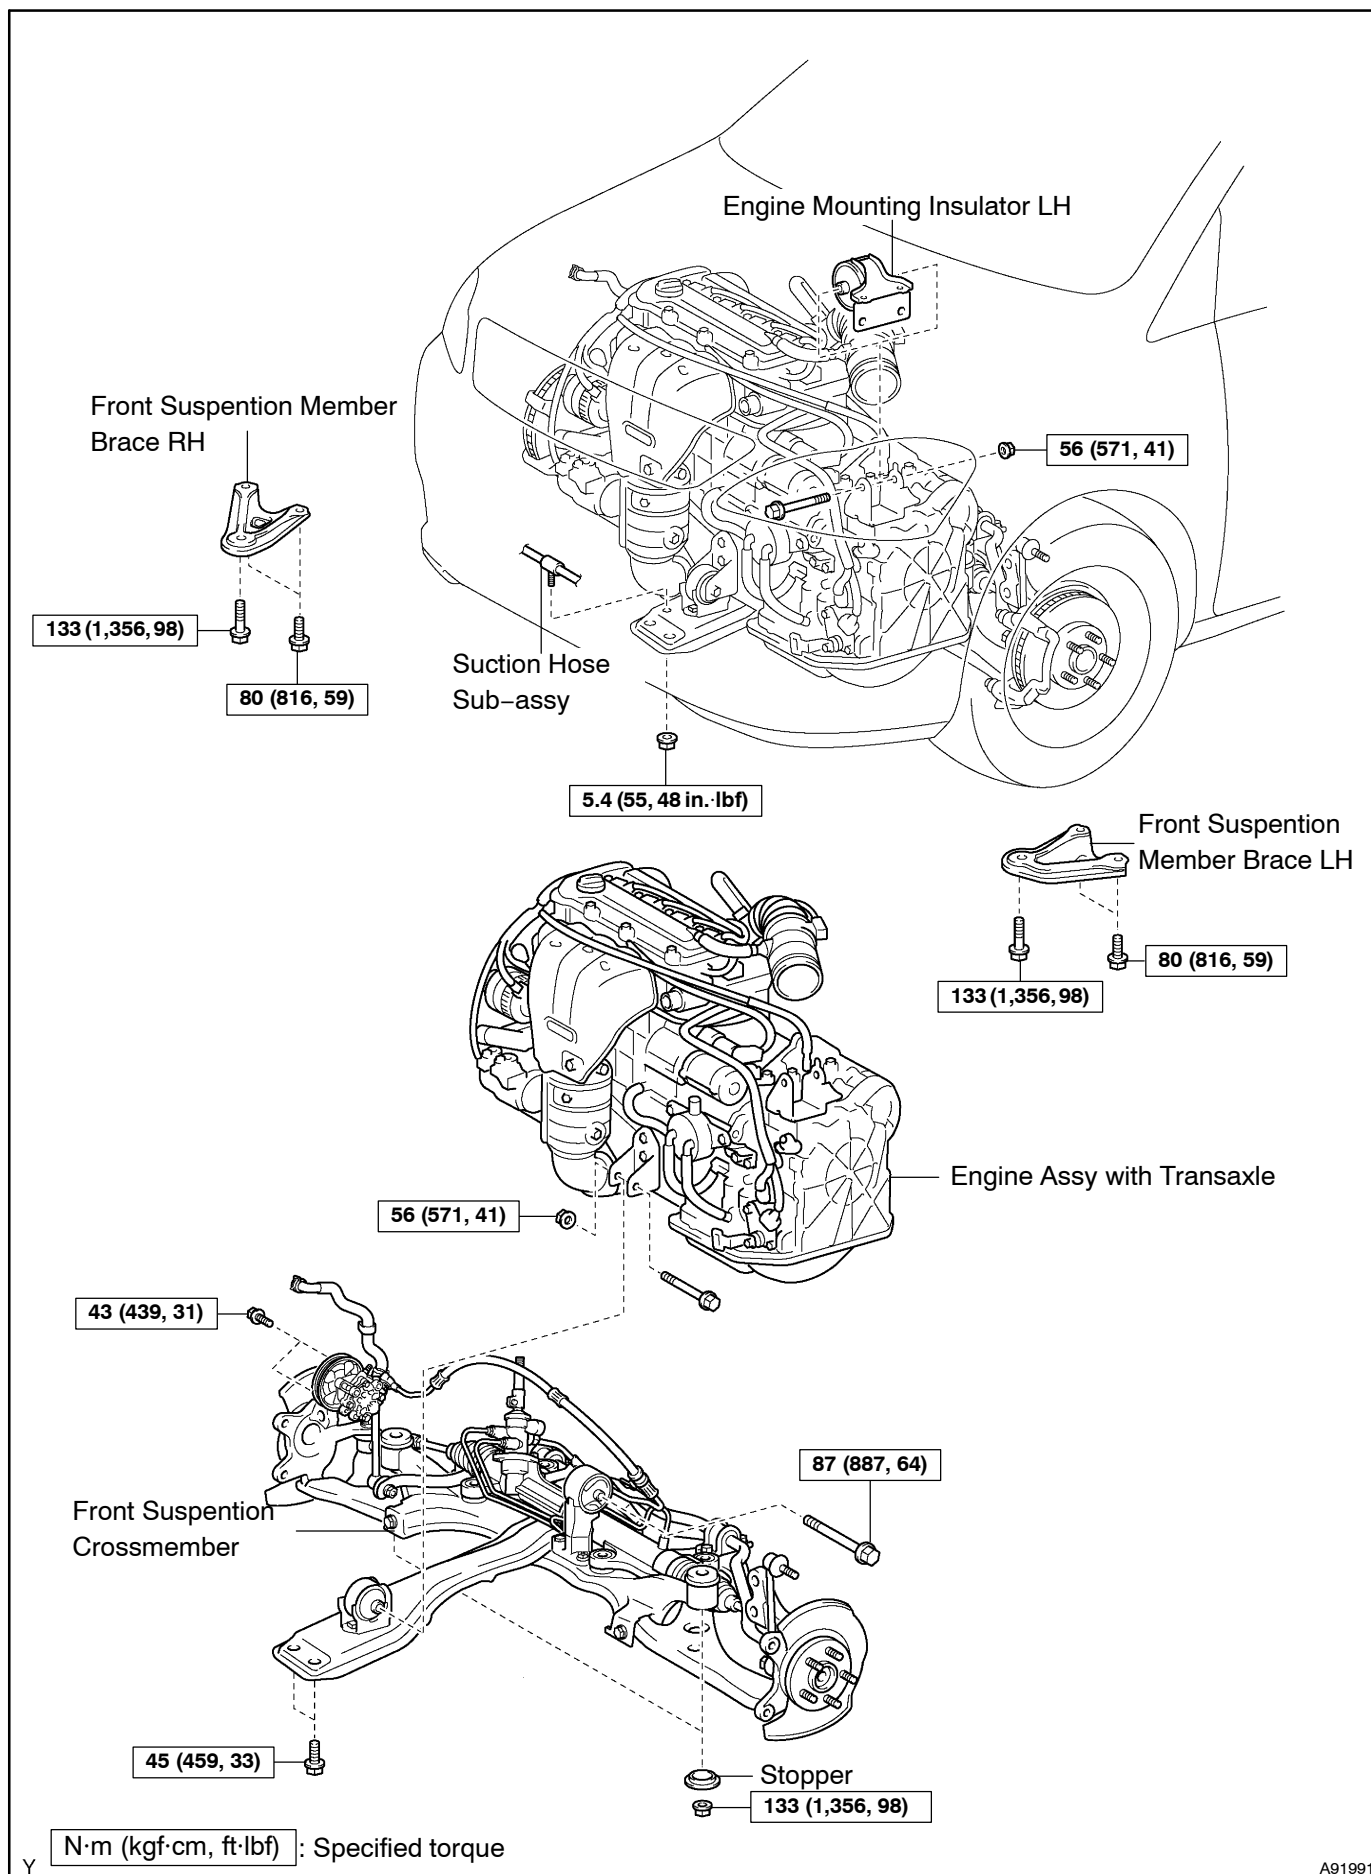

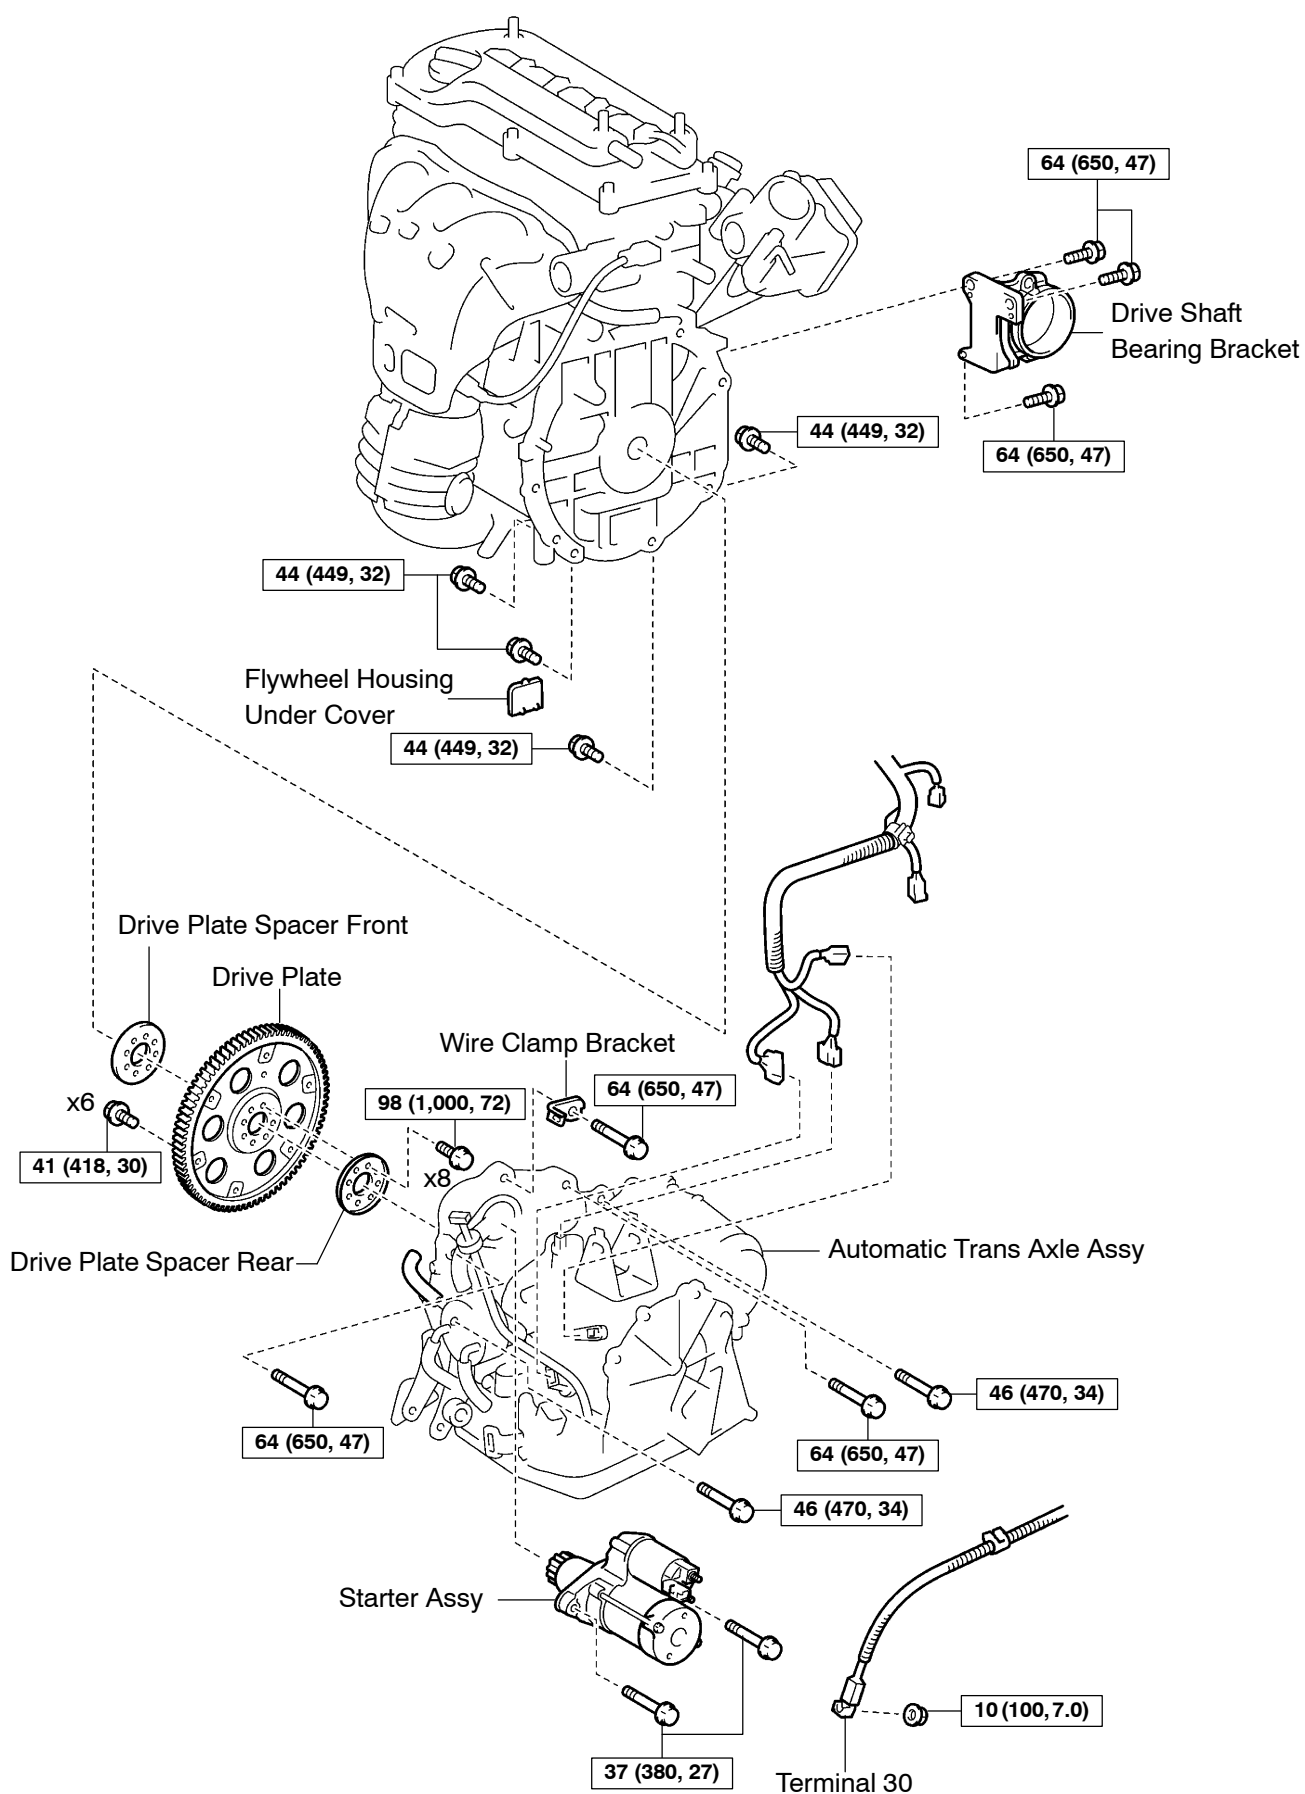


N·m (kgf·cm, ft·lbf) : Specified torque

A89000

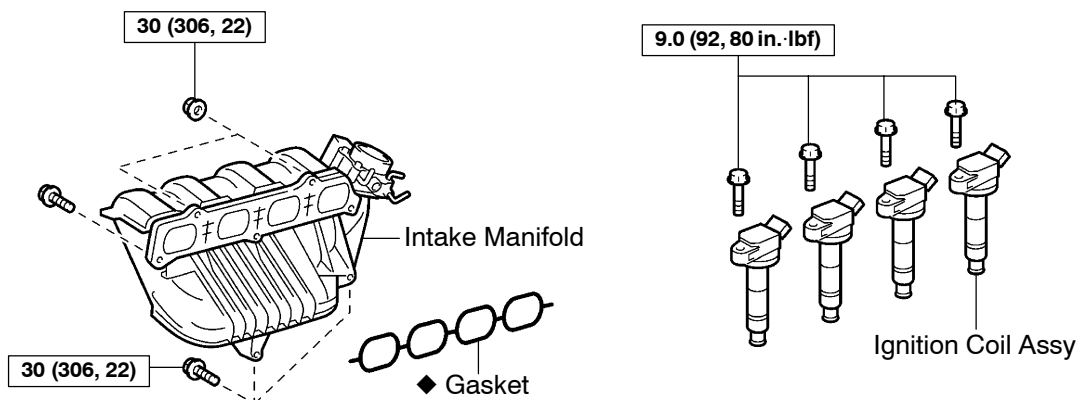

Intake Manifold Insulator No. 1

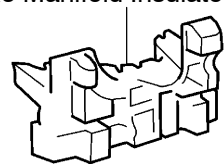


Ventilation Hose No. 2




Ventilation Hose



V-ribbed Belt Tensioner Assy

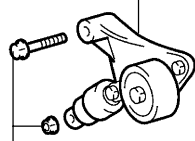


60 (612, 44)

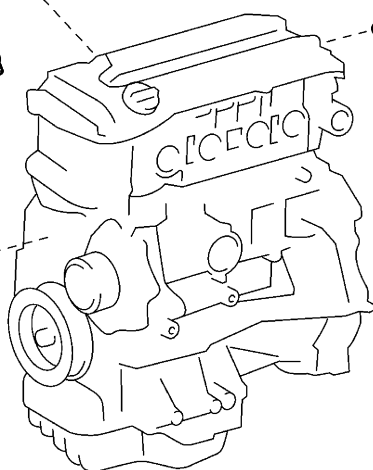


12 (122, 8.9)

Manifold Converter Insulator No. 1

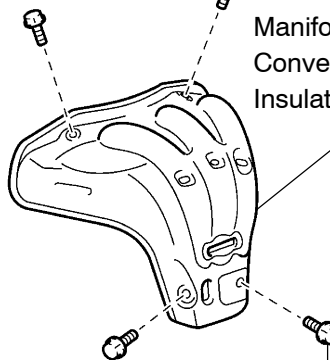


12 (122, 8.9)

◆ Gasket



Exhaust Manifold Converter Sub-assy

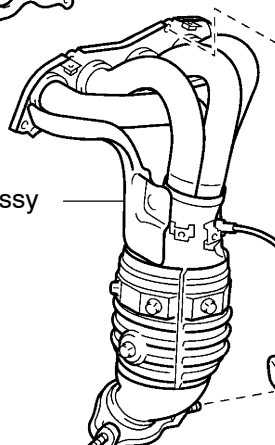

x5

37 (378, 27)

Manifold Stay No. 1

Manifold Stay No. 2




44 (449, 33)

44 (449, 33)

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

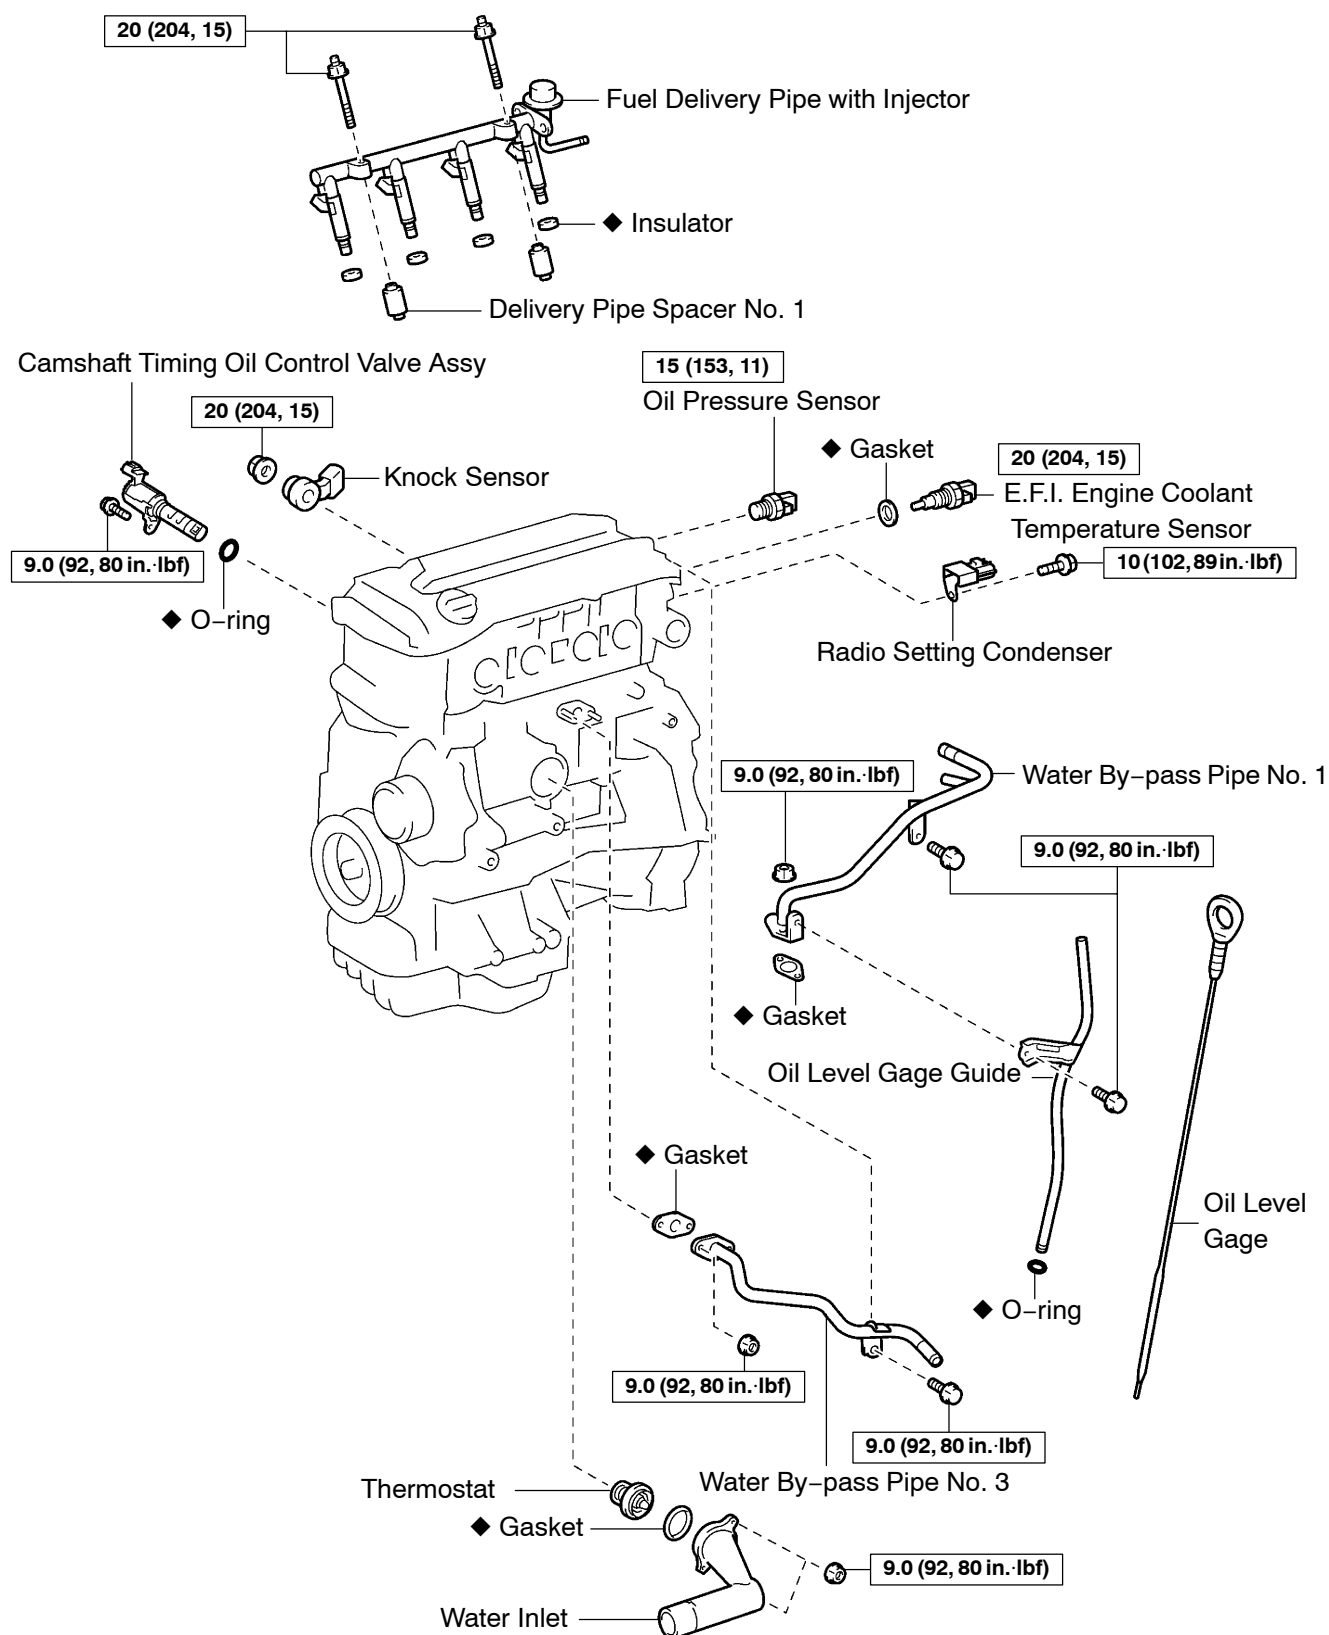

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

A91889