



# TURNING ON LIGHT SWITCH DOES NOT LIGHT UP NIGHT TIME ILLUMINATION OF RADIO RECEIVER

## WIRING DIAGRAM

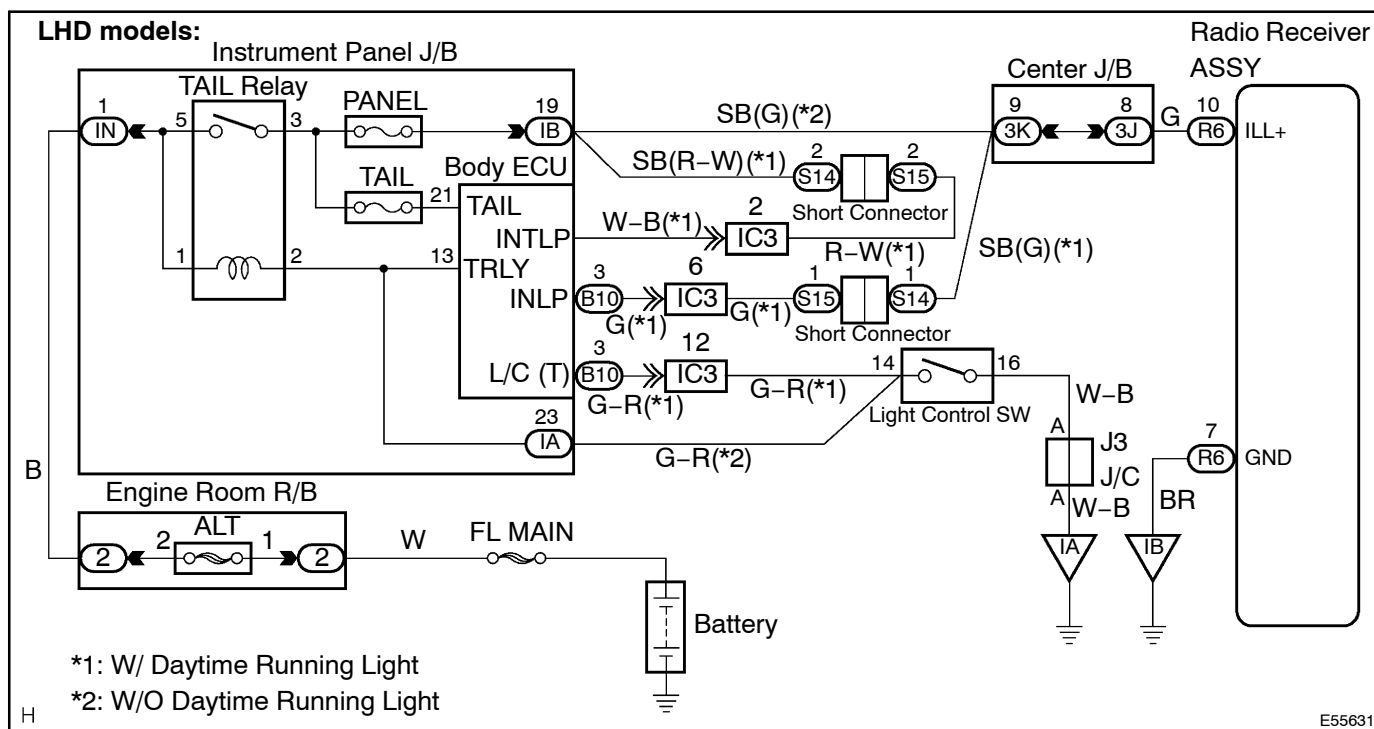


E55631

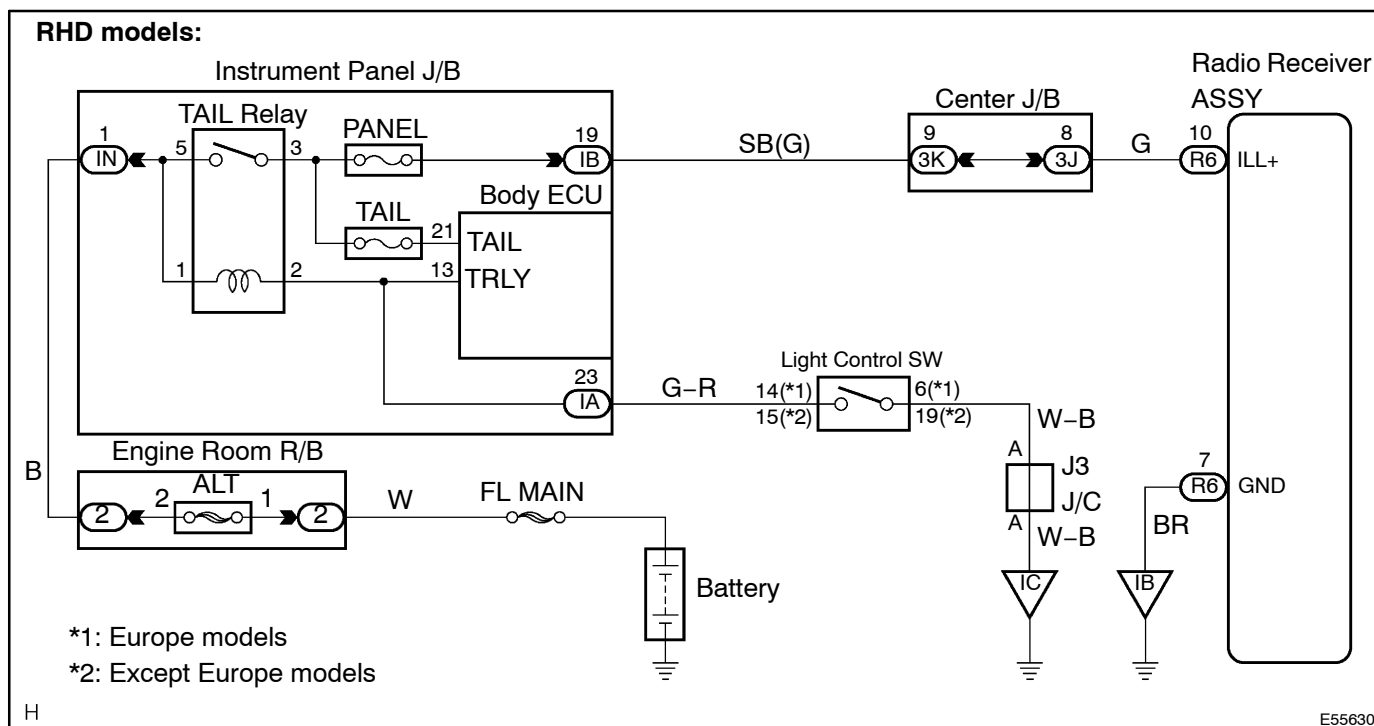

E55630

INSPECTION PROCEDURE

1 INSPECT RADIO RECEIVER ASSY(ILL+)

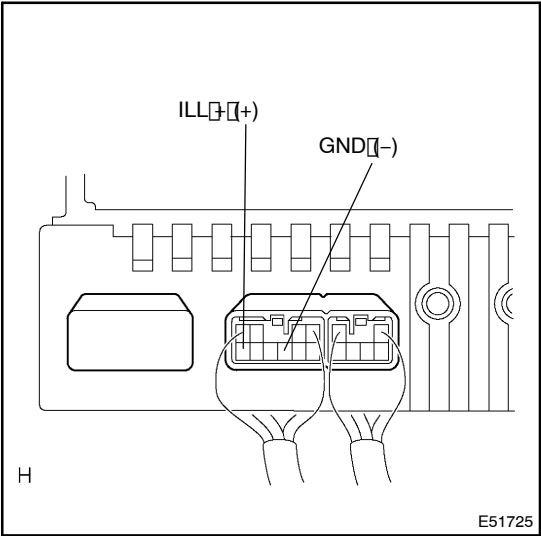

(a) Check that the voltage between terminals at each condition, as shown in the chart.

Standard:

Tester connection	Condition	Specified condition
ILL - GND	Light control switch TAIL or HEAD	10 - 14V

OK CHECK AND REPLACE RADIO RECEIVER ASSY

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR(See page 01-30)