

SOUND QUALITY IS BAD ONLY WHEN PLAYING TAPE

INSPECTION PROCEDURE

1 REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK

- (a) Replace the cassette tape with another and recheck.
- (1) Replace the faulty cassette tape with the normal one to see if the same trouble occurs again.
- Standard: malfunction disappear.**

OK

CASSETTE TAPE FAULTY

NG

2 CHECK FOR ANY FOREIGN OBJECT


- (a) Check for foreign object.
- (1) Check that no foreign material and troubles are detected in the radio receiver assembly cassette tape player.

NG

REMOVE FOREIGN OBJECT

OK

3 CLEAN HEAD AND CHECK OPERATION

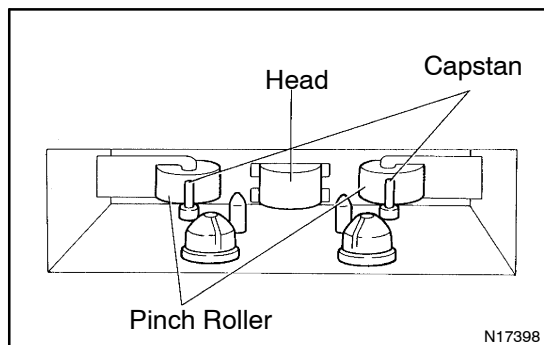

- (a) Head cleaning
- (1) Raise the cassette door with your finger. Next, using a pencil or similar object, push in the guide.
- (2) Using a cleaning pen or cotton applicator soaked in cleaner, clean the head surface, pinch rollers and capstans.
- (3) Check that the same trouble occurs again.

OK

HEAD DIRTY

NG

CHECK AND REPLACE RADIO RECEIVER ASSY