


## PRE-HEATING SYSTEM (1CD-FTV)

### ON-VEHICLE INSPECTION

1906C-01

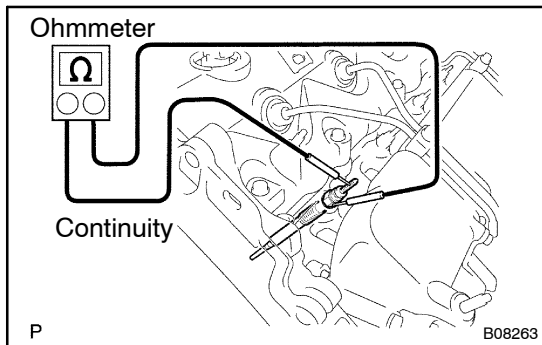

#### 1. INSPECT GLOW PLUGS

- (a) Using an ohmmeter, check that there is continuity between the glow plug terminal and ground.

**Standard resistance: Approx.  $0.72 \Omega$  at  $20^{\circ}\text{C}$  ( $68^{\circ}\text{F}$ )**

#### NOTICE:

- Be careful not to damage the glow plug pipes as it could cause an open circuit or shorten life of the glow plugs.
- Avoid getting oil and gasoline on the glow plug when cleaning.
- During inspection, be sure to wipe any oil of the terminal and bakelite washer with a dry cloth.
- Be careful not to apply more than 11 V to the glow plug as it could cause an open circuit.